



### Electric Citrus Juicer SZP 25 A1



 **Electric Citrus Juicer**  
 Operating instructions



<b>CONTENT</b>	<b>PAGE</b>
<b>Intended use</b>	<b>2</b>
<b>Technical Data</b>	<b>2</b>
<b>Items supplied</b>	<b>2</b>
<b>Important safety instructions</b>	<b>2</b>
<b>Appliance description</b>	<b>3</b>
<b>Set-up and assembly of the appliance</b>	<b>3</b>
<b>Juice extraction</b>	<b>4</b>
<b>Emptying</b>	<b>4</b>
<b>Disassembly</b>	<b>4</b>
<b>Cleaning and Care</b>	<b>5</b>
<b>Storage</b>	<b>5</b>
<b>Disposal</b>	<b>5</b>
<b>Warranty &amp; Service</b>	<b>6</b>
<b>Importer</b>	<b>6</b>

Read these operating instructions carefully before using the appliance for the first time and preserve this manual for later reference. Pass this manual on to whoever might acquire the appliance at a future date.

# ELECTRIC CITRUS JUICER

## ⚠ Important safety instructions

### Intended use

The appliance is intended for the extraction of juices from citrus fruits such as oranges and lemons. Only foodstuffs may be processed with the appliance. All other usages or modifications are regarded as contrary to the operating instructions and contain a great risk of accidents. The manufacturer accepts no liability for damage(s) resulting from usage that is contrary to these instructions. Not for commercial use.

### Technical Data

Mains voltage: 220-240 V~ 50 Hz

Rated output: 25 W

Protection class: II / 

### Items supplied

Electric Citrus Juicer  
Large squeezing cone  
Small squeezing cone  
Fruit pulp sieve (2 parts)  
Operating instructions

### ***To avoid potentially fatal electric shocks:***

- The rating of the local power supply must tally completely with the details given on the rating plate of the appliance.
- Arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department.
- Arrange for damaged or malfunctioning appliances to be inspected and/or repaired by a qualified specialist or the Customer Service Department as soon as possible.
- Do not expose the appliance to rain and never use it in a humid or wet environment. Ensure that the power cable never becomes moist or wet during operation.

### ***To avoid the risks of fire and burn injuries:***

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Provide for a safe and slip-free positioning of the appliance.
- Ensure that the power plug is easily accessible in the event of danger, and that there is no danger of anyone tripping over the power cable.

### **Using the appliance safely:**

- In the event of danger, immediately remove the power plug from the wall socket.
- Never use the appliance for purposes other than those for which it was designed.
- Remove the power plug from the wall socket when the appliance is not in use, when you remove parts and before cleaning the appliance.
- Do not use the appliance outdoors.

## Appliance description

---

- ① Lid
- ② Large squeezing cone
- ③ Small squeezing cone
- ④ Upper fruit pulp sieve
- ⑤ Fruit pulp regulator
- ⑥ Lower fruit pulp sieve
- ⑦ Juice collector
- ⑧ Drive axle
- ⑨ Power cable with power plug
- ⑩ Appliance plinth
- ⑪ Power cable storage

## Set-up and assembly of the appliance

---

### **⚠ Important:**

Ensure that the power plug is not in the power socket before assembling the appliance. Otherwise there is a risk that the appliance could start unintentionally.

1. Unwind the power cable ⑨ completely from the cable storage ⑪ and secure it in the lateral recess on the appliance plinth ⑩.
2. Place the appliance plinth ⑩ on a level and slipfree surface.

### **ⓘ Note:**

Rinse all removable components thoroughly before the first usage of the appliance (see chapter "Cleaning and care").

3. Place the juice collector ⑦ on the drive axle ⑧ of the appliance plinth ⑩ and turn it clockwise as far as it will go.
4. Place both parts of the fruit pulp sieve ④/⑥ into each other so that the fruit pulp regulator ⑤ protrudes through the recess. Both parts must audibly engage.
5. Place the assembled fruit pulp sieve ④/⑥ on the juice collector ⑦. The fruit pulp regulator ⑤ must lie on the grip and catch in the rabbet on the grip.
6. Press the small squeezing cone ③ on the drive axle ⑧ so that it engages.

### **ⓘ Note:**

If you want to press oranges or other larger fruits, place the large squeezing cone ② over the small squeezing cone ③. Ensure that the lobes of the small squeezing cone ③ engage in the recesses of the large squeezing cone ②.

7. Insert the power plug into a wall power socket. The appliance is now ready for use.

## Juice extraction

---

### **i** Note:

When pressing out juice, do not exceed the 600 ml volume marking on the scale of the juice collector **7**.

1. Adjust the fruit pulp regulator **5**, by sliding it, so that the slits in the fruit pulp sieve **4/6** lie exactly above each other if you wish to have fruit juice with fruit pulp. Adjust the fruit pulp regulator **5**, by sliding it, so that the slits in the fruit pulp sieve **4/6** are not lying above each other if you do not wish to have fruit juice with fruit pulp.
2. Cut the fruits in half (orange, lemon etc.)
3. Press the halved fruit lightly onto the squeezing cone **2/3**. The appliance switches itself on automatically as soon as the squeezing cone **2/3** is pressed down.
4. Apply pressure at various parts of the fruit rind with your fingers. Thereby the juice will be evenly squeezed out of the fruit.
5. When no more juice flows from the fruit, stop applying pressure to the squeezing cone **2/3**. The appliance stops.
6. Press the squeezing cone **2/3** down repeatedly to loosen it, until it turns in the opposite direction.
7. When no more juice flows from the fruit, stop applying pressure to the squeezing cone **2/3**. The appliance stops. Remove the fruit skin from the squeezing cone **2/3**.
8. Continue similarly with further fruit-halves until you have squeezed out the desired volume of fruit juice. The current volume squeezed can be read off from the scale on the side of the juice collector **7**.

## Emptying

---

### **⚠** Important:

Remove the power plug from the wall socket when you empty the fruit pulp sieve **4/6** or the juice collector **7**. Otherwise there is a risk that the appliance could start unintentionally.

- Turn the juice collector **7** anti-clockwise until the perceptible resistance desists. You can now lift it from the drive axle **8** and pour the juice out.

## Disassembly

---

If you wish to disassemble the Citrus Press, e.g. for the cleaning of it, proceed as follows:

1. Remove the power plug from the wall socket **9**.
2. Remove the squeezing cone **2/3**.
3. Remove the fruit pulp sieve **4/6**.  
Press the hook on the underside of the upper fruit pulp sieve **4** inwards. At the same time exert light pressure on the fruit pulp sieve **5**. The components allow themselves to be pressed apart.
4. Turn the juice catchment container **7** anti-clockwise until the perceptible resistance diminishes. You can now lift it from the drive axle **8**.

## Cleaning and Care

---

### **Important:**

Always remove the power plug from the wall socket before cleaning the appliance. There is a risk of receiving an electric shock!

### **Important:**

To avoid receiving an electrical shock, NEVER submerge the appliance plinth **10** in water or other fluids.

- Disassemble the Citrus Press as described in the chapter "Disassembly".
- Clean the appliance plinth **10** only with a slightly moistened cloth.
- Clean all other removable parts in a warm mild-detergent solution and dry them carefully.
- To clean the fruit pulp sieve **4/6**, take it apart and clean it with a dishwashing brush under running water.

### **Note:**

Do not use aggressive detergents to clean the appliance. These substances can attack the upper surfaces.

The appliance and its components may not be cleaned in a dishwasher or in boiling water.

## Storage

---

If you do not intend to use the appliance for an extended period, wrap the power cable **9** around the power cable storage **11**, directing the end of the cable through the lateral recess on the appliance plinth **10**. Assemble the appliance completely and close the lid. Store the appliance at a clean and dry location.

## Disposal

---



**Do not dispose of the appliance in your normal domestic waste. This product is subject to the European guideline 2002/96/EC.**

Dispose of the appliance through an approved disposal centre or at your community waste facility. Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.



Dispose of all packaging materials in an environmentally responsible manner.

## Warranty & Service

---

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e.g. buttons or batteries. This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

The warranty period will not be extended by repairs made under warranty. This applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment.

## Importer

---

KOMPERNASS GMBH  
BURGSTRASSE 21  
44867 BOCHUM, GERMANY

[www.kompernass.com](http://www.kompernass.com)

### **GB** DES UK LTD

Tel.: 0871 5000 700 (£ 0.10 / minute)

e-mail: [support.uk@kompernass.com](mailto:support.uk@kompernass.com)

### **IE** Kompernass Service Ireland

Tel.: 1 850 930 412 (0,082 EUR/Min.)

Standard call rates apply. Mobile operators may vary.

e-mail: [support.ie@kompernass.com](mailto:support.ie@kompernass.com)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>