


Popcorn-Maker SPCM 1200 A1



GB **Popcorn-Maker**
IE Operating instructions

KOMPERNASS GMBH
BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com
ID-Nr.: SPCM1200A1-09/10-V1
IAN: 62050

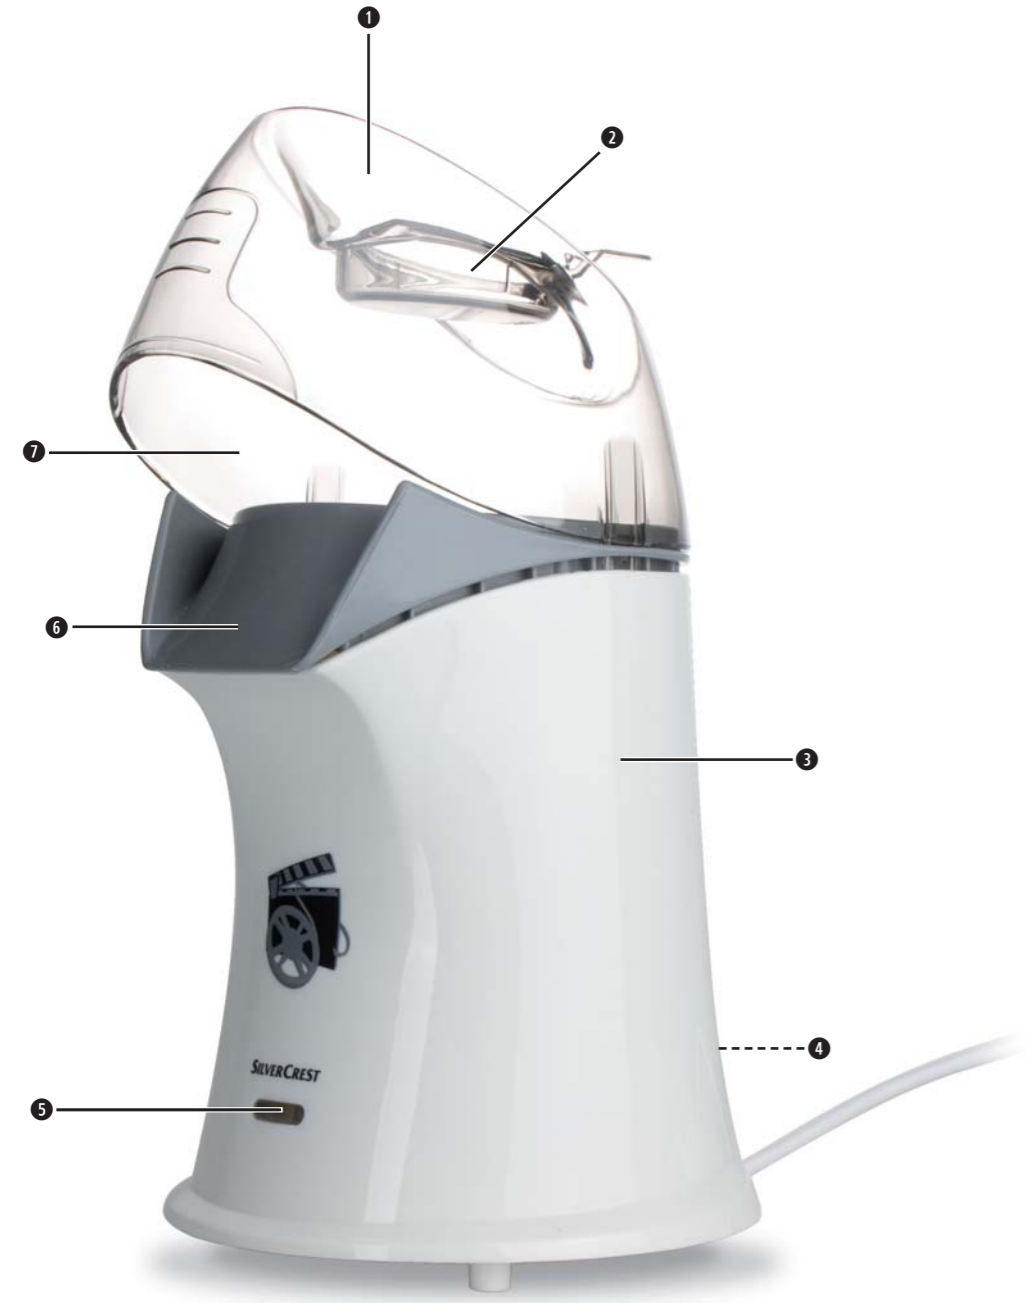

POPCORN MAKER

Intended Use

The popcorn maker is meant solely for preparing popcorn at home. It is not meant for any commercial use.

Description of the Appliance

- 1 Cover
- 2 Measuring cup
- 3 Casing
- 4 ON/OFF switch
- 5 Indication lamp
- 6 Dispensing chute
- 7 Popping chamber

Technical Data

Mains voltage: 230 V ~ /50 Hz
Rated output: 1200 W
KB time: 6 Minutes

CO Time

The CO Time (Continuous Operation Time) details how long an appliance can be operated without the motor overheating and becoming damaged. After the appliance has run for this period it must be switched off until the motor has cooled itself down.

Items Supplied

Popcorn Maker
Measuring beaker
Operating instructions

Safety instructions

- Read the operating instructions carefully before using the appliance for the first time and preserve this booklet for later reference. Hand over the manual to anyone, whom you pass on the appliance to.
- This appliance is not intended for use by persons (including children) with reduced physical, sensorial or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug the power cord after every use and before cleaning, so as to prevent the appliance from switching on inadvertently.
- Check the appliance and all the parts for visible damages. The safety concept can work only if the appliance is in an immaculate condition.
- Use only normal dry maize or popcorn kernels. Otherwise the appliance could be irreparably damaged.
- Do not use an external timing switch or a separate remote control system to operate the appliance.

Danger of electrical shock!

- Connect the appliance to a 230 V/50 Hz rated power plug.
- Arrange for defective power plugs and/or cables to be replaced as soon as possible by a qualified technician or by our Customer Service Department to avoid the risk of injury.



Never immerse the appliance in water. Just wipe it with a damp cloth.

- Do not expose the appliance to rain and never use it in damp or wet surroundings.

- Make sure that the power cord does not become wet during operation.
- Unplug the appliance immediately after use. The appliance is completely disconnected, only when you pull out the power plug from the power socket.
- Do not open or repair the appliance casing yourself. In this case, the device is not safe and the warranty is voided.

Fire hazard!

- Do not use the appliance near hot surfaces.
- Some parts of the appliance become very hot during operation. Therefore, do not touch its surface to avoid burn injuries.
- Do not keep the appliance in places that are exposed to direct sunlight, as this could lead to overheating and cause irreparable damage.
- Do not leave the appliance unattended when in use.
- Do not operate the appliance for more than 6 minutes at a time.
- After every two consecutive quantities of popcorn, allow a pause of at least 10 minutes by switching the appliance off before using it again.
- Do not put ingredients like sugar, oil, butter, salt, margarine etc. into the popping chamber; as such substances can cause damage to the appliance.
- Never operate the appliance without maize corn in the popcorn chamber.


Injury hazard!

- Keep children away from the connecting cable and the appliance. Children frequently underestimate the danger from electrical appliances.
- Make sure to find a safe place for the appliance.
- Do not operate the appliance, if it has fallen off or is damaged. Get the appliance checked and if necessary, repaired by experts.

Operation

Making popcorn

1. Switch the appliance off and remove the cover **1**, before filling the popping chamber **7** with maize kernels.

 *Ensure that you only use dry popcorn maize.*

2. Fill the popping chamber **7** with approximately 120 g (4 measuring cups **2**) of maize kernels.

Caution:

Never fill less than approximately 30 g (1 measuring cup **2**) into the popping chamber **7**. Do not put ingredients like sugar, oil, butter, salt, margarine etc. into the popcorn chamber **7**, as such substances may damage the appliance.

3. Place the cover **1** along with the mounted measuring cup **2** on the casing **3**.
4. Place a heat-resistant serving bowl below or at the dispensing chute **6**, to collect the popcorn when done.
5. Plug in the power cord to mains and use the ON/OFF switch **4** to power up the appliance. Now the indication lamp **5** lights up.
6. Switch the appliance off using the ON/OFF switch **4** once the popcorn is ready. Now the indication lamp **5** is turned off.
7. Remove all residues from the popping chamber **7**, before starting with another quantity of popcorn.

Caution:

During operation the cover ❶ becomes hot. Allow the appliance to cool down for at least 10 minutes after every two consecutive quantities of popcorn.

Serve sweet or salted popcorn

1. Add 2 – 3 teaspoons of butter or margarine into the measuring cup ❷, before switching the appliance on. The butter melts as the popcorn is being prepared.

Caution:

Do not put ingredient like sugar, oil, butter, salt, margarine etc. into the popping chamber ❸. Such substances may stick to the popping chamber ❸ and damage the appliance.

2. Pour melted butter over the popcorn in the serving bowl. Stir the popcorn and sprinkle salt or sugar according to your taste.

Cleaning

Caution:

First pull the power plug out of the power socket and let the device cool off completely. Injury hazard!

Clean the housing and the inside using a slightly wet cloth. In case of stubborn stains, pour a few drops of a mild detergent on the damp cloth.

Caution:

Make sure that moisture does not seep into the casing while cleaning! The appliance could be irreparably damaged.

Disposal



Do not dispose of the appliance in your normal domestic waste. This product is subject to the European guideline 2002/96/EC.

Dispose of the appliance through an approved disposal centre or at your community waste facility. Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.



Dispose of all packaging materials in an environmentally friendly manner.

Importer

KOMPERNASS GMBH
BURGSTRASSE 21
D-44867 BOCHUM, GERMANY

www.kompernass.com

Warranty & Service

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e.g. buttons or batteries. This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

The warranty period will not be extended by repairs made under warranty. This applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment.

GB DES UK LTD

Tel.: 0871 5000 700 (£ 0.10 / minute)

e-mail: support.uk@kompernass.com

IE Kompernass Service Ireland

Tel: 1850 930 412 (0,082 EUR/Min.)

Standard call rates apply. Mobile operators may vary.

e-mail: support.ie@kompernass.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>