





■ PORTABLE DVD PLAYER



GB
IE
CY

PORTABLE DVD PLAYER
Operating instructions

KH 6500

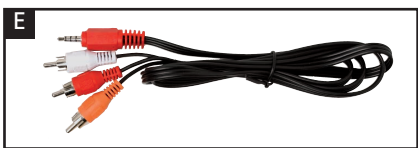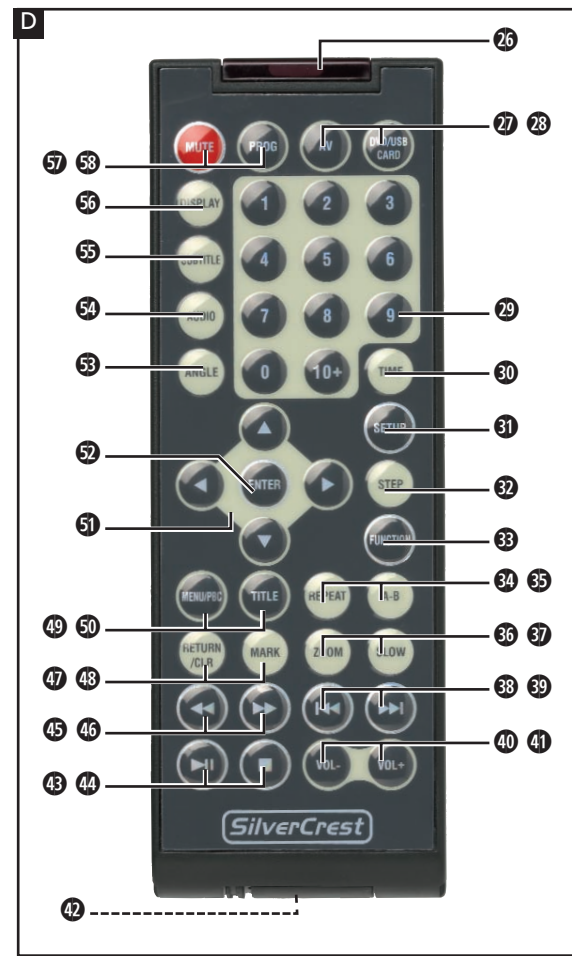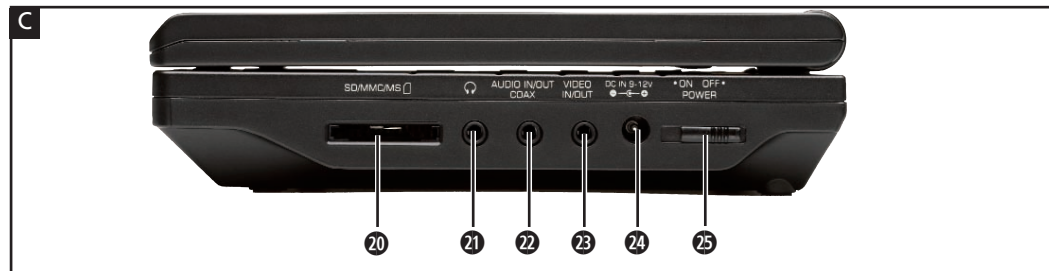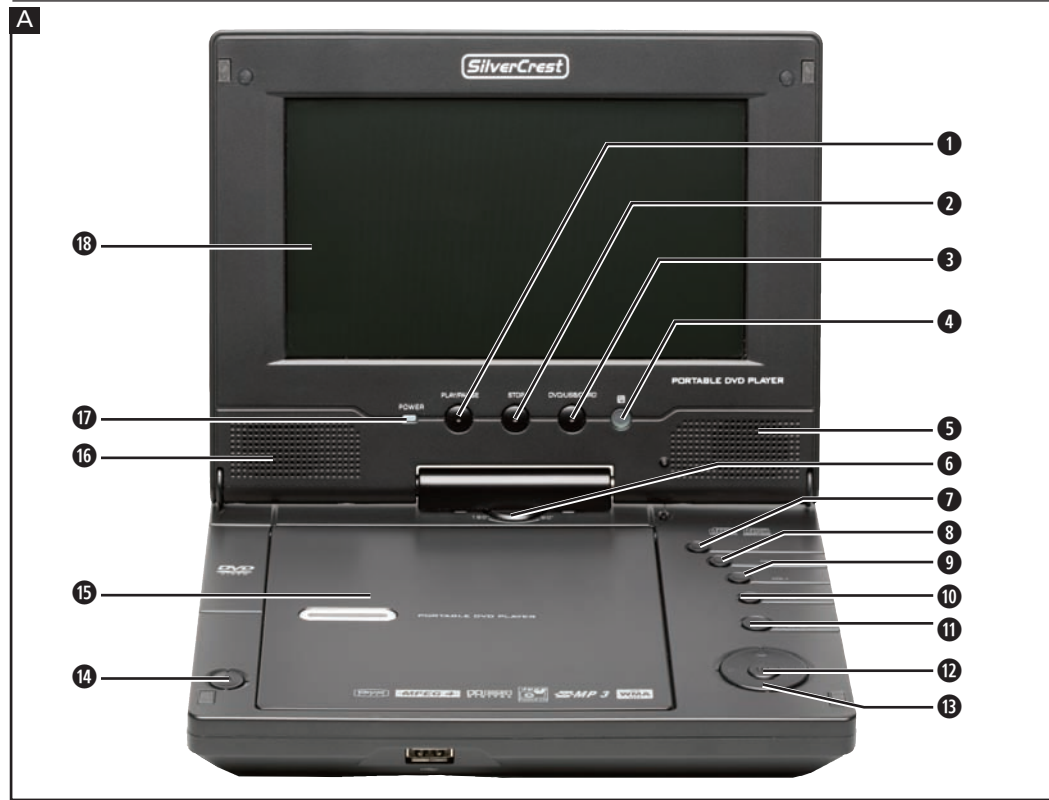

CONTENT	PAGE
1. Technical Data	3
2. Applications and functions	3
3. Safety Instructions	4
4. Appliance description	6
5. Starting Up the Device	7
5.1 Unpacking.....	7
5.2 Check the delivered contents.....	7
5.3 Preparing the remote control.....	7
6. Connections and connection potentials	8
6.1 Mains power connection.....	8
6.2 Rechargeable battery connection	8
6.3 Connection to another device.....	9
6.4 Headphone connection.....	11
6.5 Setting the viewing position.....	12
7. Use	12
8. Menu functions	12
8.1 GENERAL SETUP PAGE.....	13
8.2 DIGITAL AUDIO SETUP PAGE.....	14
8.3 VIDEO SETUP PAGE	15
8.4 PREFERENCE PAGE.....	15
8.5 PASSWORD SETUP PAGE.....	16
8.6 EXIT SETUP	17
9. Sound functions	17
9.1 To control the Volume.....	17
9.2 Mute	17
10. Playback of DVD, SVCD, VCD and CD discs	17
10.1 Inserting the disc.....	17
10.2 Playback functions when playing back DVDs, VCDs, S-VCDs, MPEG or Audio CDs ..	18
10.3 Notice functions.....	22
10.4 Programming function	24

11. Display of MP3/ WMA/JPEG/AVI and MPEG data	24
12. Playback of MP3/ WMA/AVI and MPEG discs	25
12.1 Repeat function with MP3/ WMA/AVI/MPEG/JPEG discs	25
12.2 Replay of JPEG discs	26
12.3 Programmed replay with MP3/WMA/AVI/MPEG/JPEG discs	26
13. Playback of USB/SD/MMC data mediums	26
13.1 Compatible data mediums	26
13.2 Using USB/SD/MMC data mediums	27
14. Cleaning of the DVD player	27
15. Disposal	28
16. Troubleshooting	28
17. Glossary / Key Word Index	30
17.1 What are DVDs, VCDs and S-VCDs?	30
17.2 What are Title and Chapter?	30
17.3 Dolby Surround	30
17.4 What are PAL and NTSC?	31
17.5 MP3, WMA, JPEG and MPEG	31
17.6 What are files?	31
18. Warranty & service	32
19. Importer	32

Read these operating instructions carefully before using the appliance for the first time and preserve this manual for later reference. Pass this manual on to whoever might acquire the appliance at a future date.


KH 6500

MOBILE DVD PLAYER

1. Technical Data

Power consumption :	15 Watt
TV standard:	PAL/NTSC
Operating temperature:	+5 ~ +35°C
Humidity:	5 ~ 90 % (No condensation)



Mains plug

Primary:	AC 100-240 V~50/60 Hz max. 0,6A
Secondary:	DC 12 V  1.5 A
Manufacturer:	Honor Electronic Co., Ltd
Model:	ADS-18E-121218GPB

Vehicle adapter

Type:	KD627
Input:	DC 12 V/max. 10 A
Output:	1500 mA

 Rechargeable battery

Type:	Lithium iron rechargeable battery
Model:	KH6500 Rechargeable battery pack
input:	12V 
Output:	7,4 V  2500 mAh

Video Output

Output level:	1 + 0.2/-0.2 Vp-p (75 Ω)
Horizontal resolution:	> = 500 Lines
Signal-to-noise ratio:	60 dB

Audio Output

Impedance:	10 kΩ
Output level:	1.8 + 0.2/-0.8 Vrms (1kHz 0 dB)
Harmonic distortion:	<0.01 % (JIS-A 1kHz, typical)
Dynamic range:	80 dB (JIS-A 1 KHz, typical)
Signal-to-noise ratio:	95 dB (JIS-A 1 kHz, typical)

Earphones

Model:	HX206-001
Impedance:	32 Ohm
Nominal power:	3 mW

Headphone output





Maximum sound pressure level	85 dB(A)
Wide band characteristic voltage	300 mV
Maximum output voltage	60 mV

Digital audio output

Coaxial output

2. Applications and functions

The Silvercrest KH 6500 DVD player is exclusively intended ...

- as an electronic entertainment device for the playback...
 - ... of DVD videos in the 12 cm (Diameter) format with the country/region code 2 or , marked with the logo .
 - ... of MPEG-4/MPEG-4 ASP video formats
 - ... of video CD's (VCDs) and super video CD's (S-VCDs) in the 12cm (diameter) format, marked with the logo .
 - ... of audio CD's in the 12cm (diameter) format, marked with the logo .
 - ... in general of the MP3 (.mp3), Windows Media Audio (.wma) and JPEG (.jpg) data formats on CD-R and CD-RW storage mediums.
 - ...for stationary operation in enclosed spaces
 - ...for private, non commercial use
- You can connect to the portable DVD player for image outputs during playback of DVDs, VCDs, S-VCDs, Audio CDs and the MP3, Windows Media Audio and JPEG data formats ...
- Stereo and Mono televisions with the formats PAL or NTSC and the picture formats 4:3/16:9.
- The portable DVD player can be used and/or connected to for sound and/or music outputs ...
- From the speaker of one of the televisions connected to the DVD player.

from external audio components such as a HiFi system, receiver or surround sound system (analogue/digital).

Attention!


No liability/warranty will be assumed for damage resulting from improper use of the device!

3. Safety Instructions

- This device is not suitable for use by children or any other persons, whose physical, sensory or mental abilities, without assistance or supervision, impedes the safe operation of the device. Children should be watched-over to ensure that they do not play with the appliance.
- To avoid unintentional switching on, disconnect the power cord after use and before cleaning.
- Check the appliance and all parts for visible damage. The safety concept can work only if the appliance is in a faultless condition.
- The power plug must always be easily accessible, so that the appliance can be quickly separated from the mains in the event of an emergency.

Danger of electrical shocks

- Connect the appliance only to correctly installed and properly earthed power sockets. Ensure that the rating of the local power supply tallies completely with the details given on the rating plate of the appliance.
- Arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department.
- Arrange for customer service to repair or replace connecting cables and/or appliances that are not functioning properly or have been damaged.

 *Never submerge the device or the power cable in water. Wipe it only with a slightly damp cloth.*

- Do not expose the appliance to rain and never use it in a humid or wet environment.
- Make sure that the power cord never becomes wet during operation.

- You may not open the housing or repair the appliance yourself. Should you do so, appliance safety can no longer be assured and the warranty will become void.
- Protect the appliance against drip and spray water. Do not place any water-filled vessels (e.g. flower vases) on the appliance.

Risk of fire!

- Do not use the appliance in the vicinity of hot surfaces.
- Do not keep the appliance in places exposed to direct sunlight, otherwise it may overheat and become irreparably damaged.
- Do not leave the appliance unattended when in use.
- Never cover the ventilation slots of the appliance while it is being used.
- Do not place any open sources of fire, like candles, on the device.

Injury hazard

- Keep children away from the connecting cable and the appliance. Children frequently underestimate the dangers of electrical appliances.
- Ensure that the appliance stands with a safe and secure positioning.
- Do not operate the appliance if it has sustained a fall or is damaged. Arrange for the appliance to be checked and/or repaired by qualified technicians.

Keep batteries away from children. Children can put batteries into their mouths and swallow them.

Danger! Laser Beams!

The appliance is fitted with a „Class 1 Laser

- Never open the device.
- Never attempt to repair the device.
- There is invisible laser radiation inside the device. Do not expose yourself to the laser beam.

⚠ Note:

Some aggressive furniture finishes can have a destructive influence on the device's rubber feet. If necessary, place the device on a nonslip pad.

⚠ Thunderstorms!

Equipment connected to a power supply can be damaged during a thunderstorm. You should therefore always pull the power plug from the power socket when there is a storm.

Notice regarding surge voltages (FEO/ fast electrical overloads):

In a case of malfunction due to an electrical fast transient (power surge) the product must be returned to default settings in order to re-establish normal operation. It is possible that the power supply will have to be disconnected and then reconnected again. The batteries (if present) must be removed and then reinserted.

Notice regarding power disconnection

The POWER switch does not completely disconnect the appliance from the power network. Additionally, the appliance consumes electricity when in standby mode. In order to completely disconnect the device from the power the power plug must be pulled out of the power socket

Notice regarding the handling of batteries/rechargeable battery pack

The remote control is operated by batteries and the device by a rechargeable battery pack. For the handling of batteries/rechargeable battery packs please observe the following:

Risk of Explosion!

Do not throw batteries/rechargeable battery packs into a fire. Do not recharge non-rechargeable batteries.

- Only charge batteries that are specifically marked "rechargeable".
- Charge the supplied battery power pack exclusively with the portable DVD player and the supplied power supply unit. Do not use any other charging device or power supply unit.
- Never open, solder or weld batteries/rechargeable battery packs.
The risk of explosions and injuries exist!
- Regularly check the batteries/rechargeable battery pack. Depleted batteries/rechargeable battery packs can damage the device
- If you do not intend to use the device for a long time then remove the batteries/rechargeable battery pack.
- Put on protective gloves when handling depleted batteries/rechargeable battery packs.
- Clean the battery compartment and the battery contacts with a dry cloth.

4. Appliance description

A Overview

- 1 **PLAY/PAUSE** button:
Start/Suspend playback
- 2 **STOP** button: Stop playback
- 3 **DVD/USB/CARD** button:
Set the DVD, USB or CARD mode
- 4 **IR**: Infrared sensor for the remote control
- 5 Right loudspeaker
- 6 Swivel joint
- 7 **NEXT** button: next Title/chapter
- 8 **PREV** button: previous Title/chapter
- 9 **VOL+** button: Volume increase
- 10 **VOL-** button: Volume decrease
- 11 **SETUP** button: Access the Setup menu
- 12 **OK** button: Confirm input
- 13 Navigation buttons ◀ ▶ ▲ ▼ :
Select menu input
- 14 **OPEN** button: Open the disc tray
- 15 Disc tray
- 16 Left loudspeaker
- 17 **POWER**: Operation LED
- 18 TFT-Display

B Front panel

- 19 USB connection

C Right side

- 20 SD/MMC/MS Card slot
- 21 3,5 mm Headphones output
- 22 **AUDIO IN/OUT COAX**: Audio Input/output,
co-axial output
- 23 **VIDEO IN/OUT**: Video Input/output
- 24 **DC IN 9-12 V**: Input for power adapter
- 25 **POWER** switch: Device on/off switch

D Remote control

- 26 IR Sender
- 27 **AV** button: Select video input
- 28 **DVD/USB/CARD** button:
Set the DVD, USB or CARD mode
- 29 Number buttons 0-9 and button 10+
- 30 **TIME** button: Select a determined Title/chapter or
a determined time on the disc
- 31 **SETUP** button: Access the Setup menu
- 32 **STEP** button: Individual frame playback
- 33 **FUNCTION** button: Access display settings
- 34 **REPEAT** button: Repeat function and random play-
back settings
- 35 **A-B** button: Repeat chapter
- 36 **ZOOM** button: Enlarge/reduce image size
- 37 **SLOW** button: Slow motion setting
- 38 ◀◀ button: previous Title/chapter
- 39 ▶▶ button: next Title/chapter
- 40 **VOL-** button: Volume decrease
- 41 **VOL+** button: Volume increase
- 42 Battery compartment (on the front panel)
- 43 ▶ || button: Start/Suspend playback
- 44 ■ button: Stop playback
- 45 ◀◀ button: Search backwards
- 46 ▶▶ button: Search forwards
- 47 **RETURN/CLR** button: One menu back/input
delete
- 48 **MARK** button: Place a bookmark
- 49 **MENU/PBC** button: Access the disc menu
- 50 **TITLE** button: Access the title menu
- 51 Navigation buttons ◀ ▶ ▲ ▼ :
Select menu input
- 52 **ENTER** button: Confirm input
- 53 **ANGLE** button: Set camera position
- 54 **AUDIO** button: Set the audio language
- 55 **SUBTITLE** button: Set the sub-title
- 56 **DISPLAY** button: Display playback information
- 57 **MUTE** button: Switch off sound
- 58 **PROG** button: Programme playback order

5. Starting Up the Device

5.1 Unpacking

1. Remove the DVD player and its accessories from the packaging
2. Remove all adhesive tapes, foils and transport restraints.

⚠ Attention!

Do not permit small children to play with plastic packaging. There is a risk of suffocation!

5.2 Check the delivered contents

Before putting the appliance into use, check that all items are present and free of visible damage.



- DVD player **A**
- Infrared remote control **D**
- 1 Remote control battery, 3 V, Type CR2025 (Button cell)
- Audio Cinch cable with 3 Cinch plugs **E**
- Video Cinch cable with Cinch plug and socket **F**
- Vehicle adapter cable **G**
- Power supply unit plug **H**
- 1 Rechargeable battery pack **I**
- Headphones **J**
- Carrying case and fastening strap **K**
- This operating manual

5.3 Preparing the remote control

Inserting the battery

For first time activation you only need to pull out the protective foil that protrudes from the battery compartment in order to prepare the remote control for operation.

For future battery changes proceed as follows:

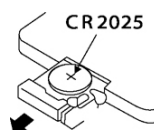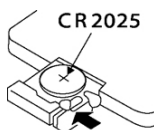

1. Pull the battery compartment out of the remote control.
2. Remove the depleted battery and insert a new battery of the type CR2025 (Button cell) into the battery compartment. Make sure that the battery is inserted in accordance with its correct polarity.
3. Push the battery compartment back into the remote control.

Using the remote control

- Point the remote control to the Infrared sensor on the front panel of the device.
- You can use the remote control for distances of up to approx. 8 m from the device.

6. Connections and connection potentials

In order to use the device you need only to provide a power supply. You can connect it to a power socket via the rechargeable battery or you can run it with the 12V vehicle adapter.

In addition the device can be connected to other input and output devices:


- with a television set
- with a video or DVD recorder
- with a receiver, also, for example, a stereo system
- with a Dolby Digital system

⚠ Attention!

Make sure that all devices are switched off before you connect them. Do not plug the device into the mains power until all connections have been made.


6.1 Mains power connection

Connection with the power supply unit

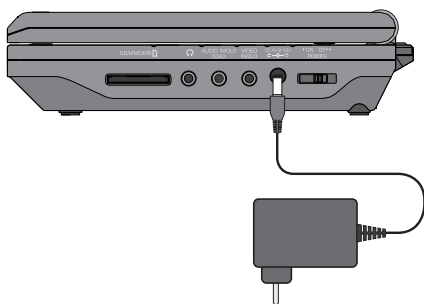

1. Plug the device plug of the supplied power supply unit into the socket on the side of the device.
2. Plug the power supply unit into a power socket.

Connection with the 12V vehicle adapter

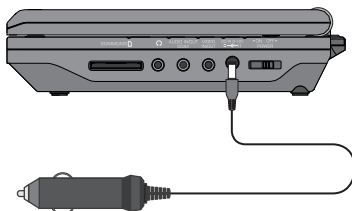

1. Plug the device plug of the 12V vehicle adapter into the socket on the side of the device.
2. Plug the 12V vehicle adapter into a suitable socket, for example, the cigarette lighter connection in the vehicle.

i Note:


- The supplied 12V vehicle adapter may only be used on 12V supply systems.
- The DVD player may only be operated with the supplied 12V vehicle adapter.
- Do not use the supplied 12V vehicle adapter on other devices.
- After use, remove the 12V vehicle adapter from the DVD player and from the vehicles power socket.

6.2 Rechargeable battery connection


The DVD player is supplied with a rechargeable battery, with which you can operate the device if no power source is available.

The rechargeable battery must be charged for approx. 3.5 hours before the first use and for each full charge thereafter. A fully charged battery allows for a playback time of approx. 2 1/2 hours (depending on the type of playback, for example, the volume).

Installing the rechargeable battery

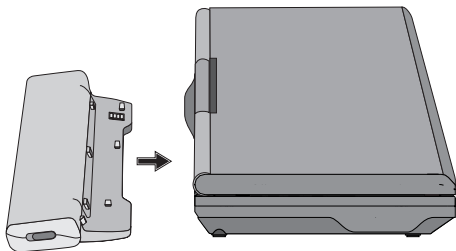

1. Plug the rechargeable battery connections into the connection opening on the rear panel of the device.

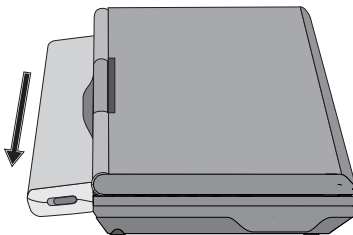


2. Slide the rechargeable battery slightly sideways in the direction indicated on the battery until it audibly locks into place.

Charging the battery with the power supply unit

1. Plug the device plug of the power supply unit or the 12V vehicle adapter into the socket on the side of the device.
2. Plug the power plug of the power supply unit into the power socket or the 12V vehicle adapter into the Vehicles cigarette lighter socket.
 - While the battery is charging the operation light on the side of the battery is illuminated red.
 - When the battery is fully charged the operation light on the side of the battery turns green.

Removing the rechargeable battery

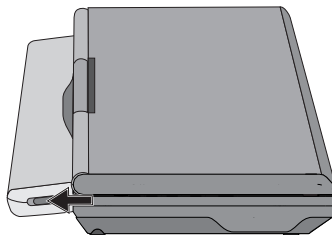


1. Slide the locking tab on the side of the rechargeable battery in the direction of the arrow and hold in this position.
2. Pull the rechargeable battery in the opposite direction to the arrow and then pull backwards.

6.3 Connection to another device

The DVD player can be connected to televisions which operate with the PAL or NTSC standards. In this way you can transmit the display onto the television screen. If you want to use the DVD player on a television operating under the NTSC standard you may have to select the NTSC television standard in the video settings of the DVD players so called "OSD Menu" (see chapter 8.4. "Special settings: TV TYPE")


Video connection to the television

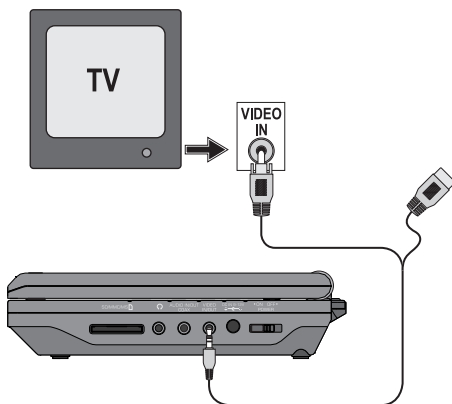

1. Switch off the DVD player and the television.
2. Insert the yellow jack plug of the video cinch cable in the VIDEO IN/OUT socket of the DVD player.

3. Insert the cinch plug of the video cinch cable in the television's corresponding video input.


Audio connection to the television or to a stereo system

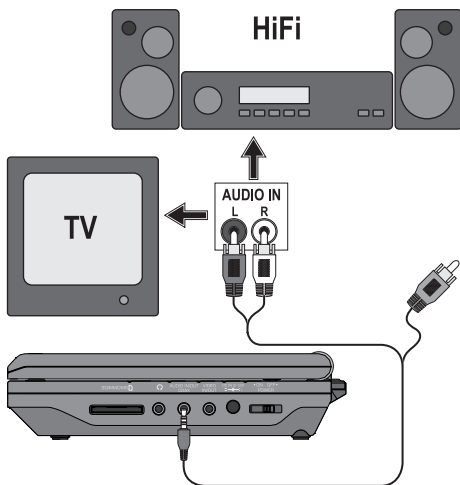

1. For sound transmissions insert the red jack plug of the audio cinch cable into the **AUDIO IN/OUT COAX** socket of the DVD player.
2. Insert the white and red cinch plugs of the audio cinch cable into the corresponding audio input L/R of the television or stereo system.

In the same way you can also connect the DVD player with a video or DVD recorder in order to transmit the DVD player's video and audio signals to these devices.


Connection to a Dolby Digital system

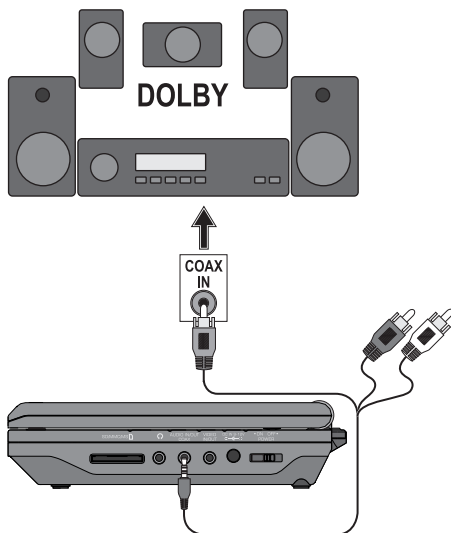

You can also playback the sound via a connected Dolby Digital system. A prerequisite however is that this system is equipped with a coaxial input.

1. For sound transmissions insert the red jack plug of the audio cinch cable into the **AUDIO IN/OUT COAX** socket of the DVD player.
2. Insert the orange coloured cinch plug of the audio cinch cable into the corresponding coaxial input of the Dolby Digital system.
3. Switch on the DVD player and the Dolby Digital system.

Playback of an external devices audio and video signals with the DVD player

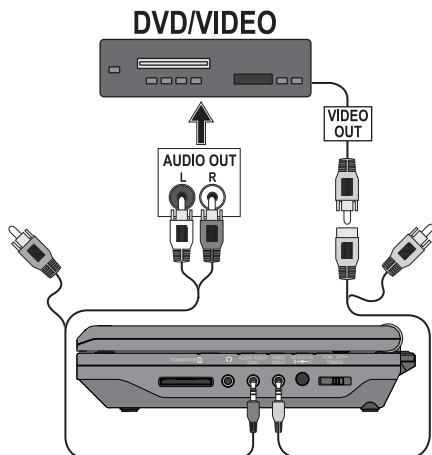

You can playback images and sound from an external device via the DVD player.

1. For sound transmissions insert the red jack plug of the audio cinch cable into the **AUDIO IN/OUT COAX** socket of the DVD player.
2. Insert the white and red cinch plugs of the audio cinch cable into the corresponding audio output of the external device.
3. Insert the yellow jack plug of the video cinch cable in the **VIDEO IN/OUT** socket of the DVD player.
4. Connect the cinch socket of the video cinch cable with the corresponding video output of the external device.
5. Switch on the DVD player and the external device.
6. In order to playback the external devices audio and video signals press the **AV** button on the remote control.
7. In order to switch back to the DVD's display, press the button **DVD/USB/CARD**.

Note:

Depending on the data carrier the display can remain black for a few seconds until the DVD players image is again displayed.

Note:

The sound of an external device connected to the DVD players audio input will also playback if the device is set to an operating mode other than AV.

6.4 Headphone connection

Attention!

Only use the supplied earphones, type HX206-001.



You can connect headphones with a 3.5 mm stereo jack plug to the DVD player. The headphone connection is located on the side of the device. When you connect the headphones the loudspeaker will be switched off and you will only hear sound from the headphones.

- Insert the jack plug of the headphones into the headphone connection.

Important!

Listening to music over long periods with full volume on headphones can lead to hearing damage

6.5 Setting the viewing position

Your portable DVD player is equipped with a pivoting swivelling TFT display screen. In the event that you find the image quality of a DVD to be insufficient, slightly turn the device to optimize the viewing angle.

The TFT display screen will turn 180° and fold down in this position thus allowing the display to operate when the device is closed up.

7. Use

- Carry out the required connections as described in chapter 5 and provide a power supply.
- Lift up the TFT display screen.

Switching the DVD player on and off

- Set the **POWER** switch to the "ON" position to switch the DVD player on.

The TFT display screen switches on and the background image appears.

If no disc is inserted into the disc tray the notice "READING" will appear briefly followed by the prompt "NO DISC".

- To switch the DVD player off set the **POWER** switch to the position "OFF".

Buttons on the device and the remote control

Most of the functions described in this manual can be set using the buttons on the device or also the buttons on the remote control. When both buttons are possible for operation then both numbers will be specified after the button designation (for example **DVD/USB/CARD** button).

Display settings


- Press the **FUNCTION** button to access the display settings. The settings can be accessed at any time.
- Select with the navigation buttons ▲ ▼ one of the inputs **Brightness (Bri)**, **Contrast (Con)** and **Saturation (Sat)**.

- With the navigation buttons ◀ ▶ change the value.
- To exit the settings press the **FUNCTION** button again.
- To reset the settings select the input **Reset** and press the button **OK/ENTER**.

8. Menu functions

Navigating in the menu


1. Press the **SETUP** button to access the setup menu. The main menu appears **GENERAL SETUP PAGE**.
- With the navigation buttons ◀ ▶ ▲ ▼ and the button **OK/ENTER** you can carry out all settings in the menu.

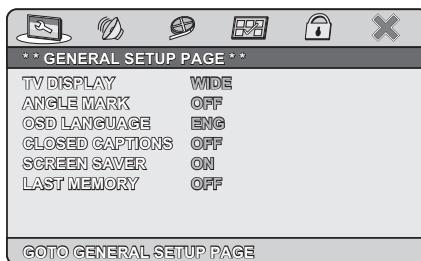

2. With the navigation buttons ◀ ▶ you select a menu by moving the yellow highlighting under the corresponding menu symbol.
3. With the navigation buttons ▲ ▼ you select an input in a menu by moving the yellow bar over an input.
4. With the navigation button ▶ you change an input in the sub menu and with the navigation button ◀ you move back to the previous menu level.
5. To confirm a selection press the button **OK/ENTER**.
 - All navigation possibilities in a current menu are displayed at the lower edge of the menu.
 - To exit the setup menu either press the button **SETUP** or select the last symbol "EXIT SETUP" and press the button **OK/ENTER**.

8.1 GENERAL SETUP PAGE

TV DISPLAY

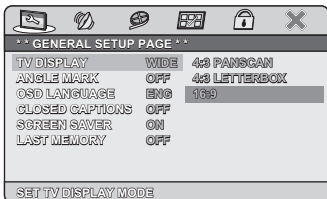

Here you can match the vertical and horizontal image display to the playback device in use.


4:3 PANSKAN: Select this setting to display broadcasts in the usual 4:3 format on a 4:3 television set. Broadcasts in the 16:9 format will be displayed in full screen without the distracting bars although the side edges of the image will be trimmed.

4:3 LETTERBOX: Display of a film in 16:9 format on a traditional 4:3 format television.

The image is displayed with black bars on the lower and upper edges of the screen.

16:9 WIDE: The output of the image on a wide screen television in 16:9 format


ANGLE MARK

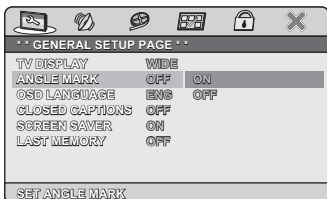

On some DVDs particular scenes are recorded from various camera positions.


- Select the input **ON** in order to switch to the next camera position by pressing the **ANGLE** button during playback of the film.
- To deactivate this function select the input **OFF**.

OSD LANGUAGE

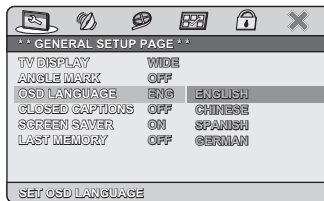

Here you set the language, in which the OSD Menu will be displayed on the television screen.

CLOSED CAPTIONS

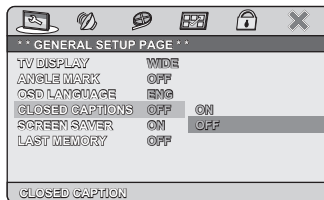


You set this if by every playback of a DVD the subtitle (if present) is to be automatically displayed on the television screen.

- For this purpose set the function to **ON**.
- If you want to activate the subtitles manually set this function to **OFF**.


The subtitles can be set, during playback, with the **SUBTITLE** button.

SCREEN SAVER

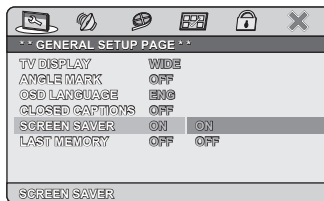

- To activate the screen saver set this function to **ON**. The screen saver will now switch on when the playback is stopped and no activity takes place for several minutes.
- To switch the screen saver off set the function to **OFF**.

LAST MEMORY

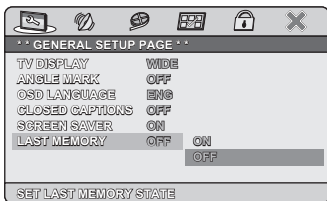


- Select the setting **ON** to playback a disc from the previous halted position after removal and re-insertion.
- with the setting **OFF** disc playback starts from the beginning.

i Note:

When the DVD player is switched off the saved position is not retained.


8.2 DIGITAL AUDIO SETUP PAGE

DIGITAL OUTPUT

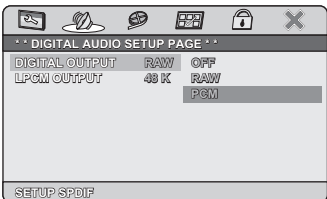

Select the input **DIGITAL OUTPUT** to set the SPDIF audio output signal.

- OFF:** Select **OFF** when there is to be no digital signal output.
- PCM:** Select **PCM** (Pulse Code Modulation) when a connection to a digital amplifier/receiver exists. Your DVD player transmits, through the PCM signal, the same audio formats that are rendered on the disc. In addition there will be an audio signal output via the left/right connection.
- RAW:** The DVD player outputs the raw data of the Dolby Digital sound (default setting).

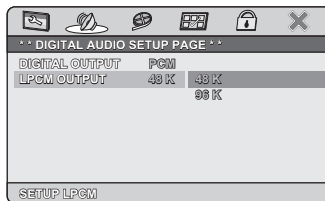


Select the input **LPCM OUTPUT** to set the sampling frequency for the processing of the raw data.

- 48 K:** Default setting.
- 96 K:** Only for DVDs with the corresponding sampling frequency.


i Note:

The **LPCM OUTPUT** function is only available if you have set the **SPDIF** audio output signal to **PCM**.

DOLBY DIGITAL SETUP

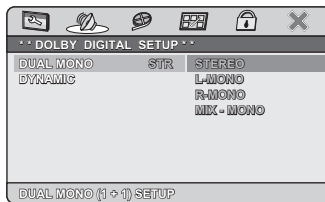

- Select the input **DUAL MONO** to set the Dolby Digital output either to **STEREO**, **L-MONO**, **R-MONO** or **MIX-MONO**.

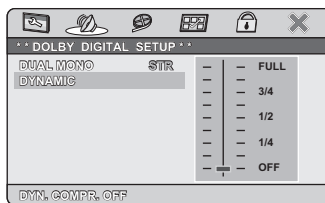


- Select the input **DYNAMIC** to enable an optimal sound replay with reduced volume.
- In the setting **FULL** the louder passages will be suppressed and the softer passages will be played back louder.

i Note:

This function is only possible when using a digital audio component.

DOWNMIX

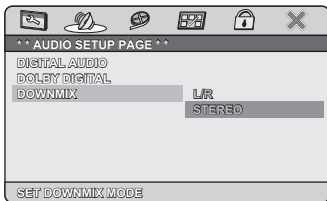


L/R: Select this setting if the film was recorded in Pro Logic Dolby Digital and you want to hear the sound in cinema quality.

STEREO: Select this option to output the left and right sound channels of the DVD. The output with CD playback is a traditional stereo signal.

8.3 VIDEO SETUP PAGE


VIDEO OUTPUT

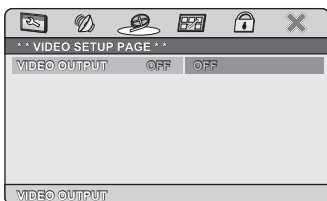

The standard setting of this function is **CVBS** and can not be changed.

8.4 PREFERENCE PAGE

TV TYPE

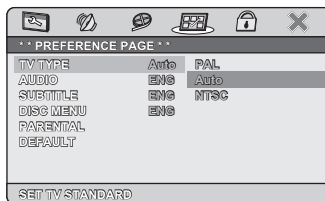


- Set this function to **PAL** to output the video signal via the video output in the PAL television standard.
- Set this function to **AUTO** and the DVD player will automatically recognise which television standard should be used for the video output.
- Set this function to **NTSC** to output the video signal via the video output in the NTSC television standard.

AUDIO




Set the audio language here, which should be used as standard when playing back the film.

SUBTITLE

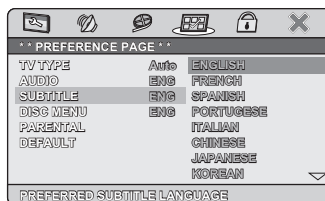


Set the sub title language here, which should be used as standard when playing back the film.

DISK-MENU

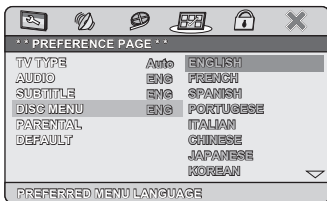

Set the disc menu language here, which should be used as standard when playing back the film.

PARENTAL

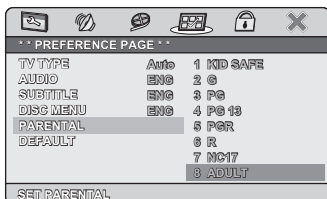

Some DVDs and CDs are encoded with an encryption signal. In this way DVDs can be divided into eight different approval classes. Select one of the following approval classes to protect the playback of this media class with a password request:

- 8 ADULT:** for adults only;
- 7 NC 17:** not for teenagers under 18 years of age;
- 6 R:** for teenagers under 16, adult supervision is strongly recommended;
- 5 PGR:** for teenagers under 16, adult supervision is recommended;
- 4 PG 13:** adult supervision strongly recommended; some scenes are not suitable for children under 12;
- 3 PG:** adult supervision recommended;
- 2 G.:** for all age groups;
- 1 KID SAFE.:** also suitable for small children.

Example

If a DVD was encoded with, for example, approval class 7 or 8 and you have an approval class setting between 1 and 6 then a message follows and the password must be entered.


Also only parts of the DVD, that is to say certain film scenes, may be encoded with an approval class or various approval classes.

- To activate the age approval select an approval class and then enter your password with the number buttons in the password request box that follows. The factory default password is **888888**.
- Confirm your entry by pressing the button **OK/ENTER**.

Note:

In the **PASSWORD SETUP PAGE** you can change the factory default password and enter a new password for the child lock.


DEFAULT

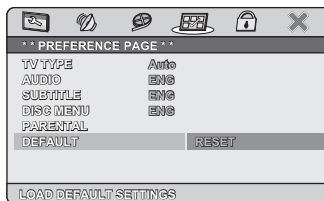

Here you reset the DVD player's factory default settings.

8.5 PASSWORD SETUP PAGE


PASSWORD MODE

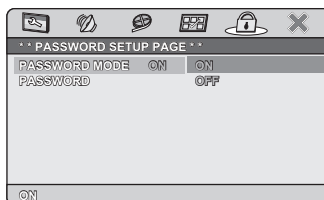

- Set this entry to **OFF** to switch off the child lock setting password request.
- To reactivate the password request set this entry to **ON**.

PASSWORD

Here you can change the preset password (888888) and enter your own password. Only the numbers 0-9 can be used.

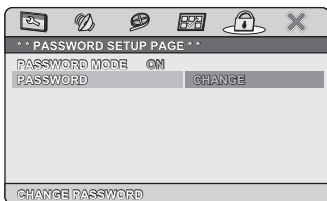

- To change the password select the entry **CHANGE**.



- Enter in the line **OLD PASSWORD** the valid password with the number buttons. The tab changes to the next line **NEW PASSWORD**.
- Enter the new password with the number buttons. The tab changes to the next line **CONFIRM PW**.
- Enter the new password with the number buttons. The tab changes to the **OK** field.
- Press the button **OK/ENTER**. The password has now been changed.

Note:

In the event that you forget your password you can use the factory default password (888888).

8.6 EXIT SETUP



- Select the last menu in the toolbar and press the button **OK/ENTER** to exit the setup menu.

9. Sound functions

9.1 To control the Volume


Press the button **VOL+** to increase the volume. Press the button **VOL-** to decrease the volume.

9.2 Mute

Press the **MUTE** button to switch off the sound. To switch the sound on again press the **MUTE** button once more or press one of the buttons **VOL+** or **VOL-**.

10. Playback of DVD, SVCD, VCD and CD discs

10.1 Inserting the disc


- Open the disc tray of the DVD player by pressing the **OPEN/CLOSE**  button. "OPEN" will now appear in the display.
- Place a DVD/VCD/S-VCD with the inscribed/labelled side facing up in the disc tray.
- Close the flap of the disc tray. "LOAD" will appear in the display.
- The contents of the inserted DVD/VCD/S-VCD will now be loaded; this may take a few seconds.
- Playback of the inserted DVD/VCD/S-VCD starts automatically.

Note:

DVDs, that you want to playback with the DVD player may possibly have a country code, which is printed on the DVD jacket.

The DVD player can only playback DVDs with the country code 2.

If no country code is printed on the jacket of a DVD...

- but instead the symbol  then the DVD can be played back on the DVD player.
- the DVD may possibly not play back on the DVD player. You can check this by attempting to play back the DVD.

Depending on the inserted DVD/VCD/S-VCD it is possible that the contents of the DVD/VCD/s-VCD will not playback immediately, rather first a selection menu appears on the television screen.

In this case select with the Navigation buttons

◀ ▶ ▲ ▼ the menu item, which will start the playback of the film.

- To start the playback of the film...
- Press the button **OK/ENTER** or press the button **PLAY/PAUSE**.

10.2 Playback functions when playing back DVDs, VCDs, S-VCDs, MPEG or Audio CDs

During the playback of a DVD/VCD/S-VCD you can use the following DVD player functions.

Pause playback

To pause the playback:

- During playback press the button; **PLAY/PAUSE**.

The prompt " II " appears in the display.

The display shows a freeze frame of the scene you have just paused.

- To continue with playback of the film press the button **PLAY/PAUSE**.

Stop playback

To stop playback press the button **STOP**.


Resume function

If you stopped playback of the inserted DVD/VCD/S-VCD by pressing the **STOP** button once then the DVD player automatically saves the position, at which playback was stopped. This function is called "Resume function". The display will show **TO RESUME: PRESS PLAY BUTTON**. As soon as you press the **PLAY/PAUSE** button again playback will continue from the saved position.

If you press the **STOP** button a second time the saved position, at which you stopped playback is deleted. As soon as you press the **PLAY/PAUSE** button again playback of the inserted DVD/VCD/S-VCD starts from the beginning.

Skip to beginning of chapter (SKIP)

Note:


This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out a function that is not available the symbol  will be displayed on the television screen.

- With the buttons **SKIP▶▶ FORWARD** and **SKIP◀◀ BACKWARDS** you can, during playback, skip within the film on the inserted DVD/VCD/S-VCD to the beginning of the next chapter or skip back to the previous chapter

The respectively selected chapter will immediately playback without you having to press the **PLAY/PAUSE** button. The number of the respectively selected chapter will be displayed on the front panel of the DVD player to the left of the played back so far time.

Entry of the title number via number keys

Note:


This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out a function that is not available the symbol  will be displayed on the television screen.

Instead of using the skip function you can also access a title from within the film of an inserted DVD/VCD/S-VCD directly by entering the title number via the number buttons 0 to 9 on the remote control.

- For entry of two digit numbers first press the button 10+ and then enter one after the other the two digits of the number.
- Then press the button **OK/ENTER** on the remote control. Playback of the entered number title will now start automatically.


Direct chapter or time selection using the search function (Search)

Note:

This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out functions that are not available the symbol  will be displayed on the television screen.

Entry of the time position via the search function DVD, VCD and S-VCD:

- During playback press the **TIME** button on the remote control. The time menu is superimposed on the television screen:

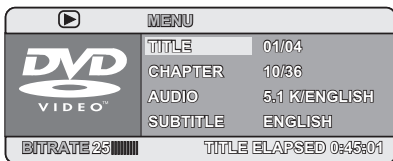

- The entry field **TITLE** is automatically selected first. Press the button **OK/ENTER** and enter the desired title with the number buttons 0 to 9. On DVDs title 01 is most often the main film.
- Press the navigation button to select the entry field **CHAPTER**. Press the button **OK/ENTER** and enter the desired chapter with the number buttons 0 to 9.
- Press the navigation button to select the entry field **AUDIO**. Press the button **OK/ENTER** and select with the navigation button an audio language.

- Press the navigation button to select the entry field **SUBTITLE**. Press the button **OK/ENTER** and select with the navigation buttons a subtitle language.
- To fade out the time menu press the button **TIME** again.

Audio CD

- During playback press repeatedly the button **TIME** on the remote control. One after the other the following notifications appear, in which you can enter a time position using the number buttons 0 to 9:

DISC GOTO: Enter here a time position on the disc from where playback should start.

TRACK GOTO: Enter here a time position for the current playback title from where playback should start.

GOTO TRACK: Enter here a title number from where playback should start.

 
MPEG CD

SELECT: Enter here a title number on the disc from where playback should start.

GOTO: Enter here a time position for the current playback title from where playback should start.

Search forward/backwards

- Press the button **SEARCH** or **SEARCH** during playback to start a search forwards/ backwards.
- Press the button **SEARCH** or **SEARCH** repeatedly in order to apply the following search speeds:




Note:

During the search no sound will play.

- To continue playback of the film at normal speed from the selected position, during the search press the button **PLAY/PAUSE**.

Slow motion function (DVD, VCD, S-VCD only)

- Press the button **SLOW** to set playback to slow motion. Press the button **SLOW** repeatedly to apply the following slow motion speeds:

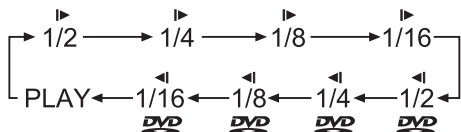


Note:

During slow motion playback no sound will be played.

- To continue playback at normal speed, during slow motion playback press the button **PLAY/PAUSE**.

Frame by frame playback (Step) (DVD, VCD, S-VCD only)


Note:

This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out functions that are not available the symbol  will be displayed on the television screen.

- During playback press the button **STEP** to stop playback. The display shows a freeze frame of the scene you have just paused.
- With each additional press of the button **STEP** the paused image advances by one frame.
- To continue playback press the button **PLAY/PAUSE**.


Image enlargement (Zoom) (DVD, VCD, S-VCD and MPEG only)





Note:

 This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out functions that are not available the symbol  will be displayed on the television screen.

During playback of an inserted DVD/VCD/S-VCD you can enlarge and reduce the image on the television screen in three stages.


- Press repeatedly the button **ZOOM** to apply the following enlargement and/or reduction:



With the navigation buttons     the section of the enlargement can be shunted.

Camera position (DVD only)

Note:

This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out functions that are not available the symbol  will be displayed on the television screen.

Many films on DVD contain chapters, which were recorded from different camera perspectives simultaneously. With films that have such chapters available you can view the same chapter from different perspectives.

- For this, during playback of the inserted DVD, press the button **ANGLE** on the remote control. Each press on the button **ANGLE** will switch to one of the available camera perspectives.

Repeat function for DVDs, VCDs, S-VCDs and Audio CDs

With the repeat function you can...

... in the case of DVDs, selectively repeat title, chapter or the entire DVD.

... in the case of VCDs/S-VCDs individual titles and/or the entire VCD/S-VCD repeatedly playback.

... in the case of audio CDs, playback repeatedly a particular track and/or the entire CD.

To switch on the repeat playback ...

- During playback press repeatedly the button **REPEAT**.

The repeat symbol  appears in the display with one of the following notifications:

CHAPTER Select **CHAPTER** to continuously repeat the current playback chapter until playback repeat is switched off or playback is stopped by pressing the button **STOP** twice.

TITLE Select **TITLE** to continuously repeat the current playback title until playback repeat is switched off or playback is stopped by pressing the button **STOP** twice.


ALL Select **ALL** to continuously repeat all available titles on the disc, thus the entire disc, until playback repeat is switched off or playback is stopped by pressing the button **STOP** twice.


Display off To switch off repeat playback press the button **REPEAT** repeatedly during playback until no more notifications appear in the display.

Repeat sequence (A – B)

With this function you can repeat playback of a favourite sequence within a chapter of the current playback disc.

To do this ...





- During playback press the button **A-B** on the remote control as soon as the desired sequence begins to playback. On the television screen the repeat symbol  appears with the notice **A**.
- Press the button **A-B** again as soon as the end of the desired sequence has played back. Bear in mind that the beginning and end of a sequence must be located in the same chapter.

On the television screen the repeat symbol  appears with the notice **AB**.

Repeat playback of the selected sequence begins immediately without having to press the button **PLAY/PAUSE**. The sequence will continuously repeat until you press the button **A-B** again to switch off the function.

Bookmark function

During the playback of a DVD/VCD/S-VCD you can place so called bookmarks in order to watch selected passages of a film again later. You can set up to 12 bookmarks.


1. During playback of a film press the button **MARK** on the remote control. In the display the following notice appears:
2. As soon as the passage, on which you want to place a bookmark, is reached press the button **OK/ENTER**. The title and chapter, in which the position is located, as well as the exact time position of this passage within the film will now be displayed in hours, minutes and seconds under bookmark 1.
3. If you want to place another bookmark then with the navigation buttons     select an unoccupied field and press once again the button **OK/ENTER** as soon as the passage is reached, on which you want to place the second bookmark.
4. Proceed in the same manner to place further bookmarks. Once you have placed all the desired bookmarks press the button **MARK** to fade out the bookmark menu from the screen.

5. Later if you want to skip to the passages, on which you have placed bookmarks press the button **MARK** again.
6. Select with the navigation buttons ◀ ▶ ▲ ▼ the desired bookmark.
7. Confirm the selection by pressing the button **OK/ENTER**. Playback of the selected chapter will now start automatically from the location, on which you placed the selected bookmark.
8. To delete placed bookmarks press the button **RETURN/CLR**.

10.3 Notice functions

Activate the DVD menu (Menu)

Note:

This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out functions that are not available the symbol  will be displayed on the television screen.

With many films on DVD there is a main menu on the disc that apart from the option of playing the main film enables you, for example...

- to choose the language for subtitles and film dialogue
- to select direct from chapters
- to playback the films bonus material (Background information, "Making of" etc.)

If such a menu is present on the DVD that is inserted into the DVD player then you can access it during playback by pressing the button **MENU/PBC**.

You select particular menu items by pressing the navigation buttons ◀ ▶ ▲ ▼ to confirm the selected menu item press...

- the button **PLAY/PAUSE**

or

- the button **OK/ENTER**.

To return to playback press the button **MENU/PBC** again.

Note:

*If you cancel playback by pressing the button **■ "STOP"** twice (Playback stop without Resume function) activation of the main menu on the disc is not possible.*

Playback Control (PBC) with VCDs/S-VCDs

Many VCDs/S-VCDs have Playback Control (in short "PBC"). Playback Control indicates a main menu that allows operation of several functions of the VCD/S-VCD.

If PCB is available on a VCD/S-VCD inserted in the DVD player you must first activate it in order to be able to superimpose the menu.

To activate PBC ...


- During playback or when playback is stopped press the button **MENU/PBC**. In the display the notice **PBC OFF** appears.
- Press the button **MENU/PBC** again. In the display the notice **PBC ON** appears. PBC is now switched on and the disc's main menu can be accessed with the buttons **RETURN/CLR**, **MENU/PBC** or **TITLE**.

Note:

If you switch on PBC during playback then it is possible that playback will stop and start again from the beginning and/or with the main menu.

Superimpose/fade out subtitles

Note:

This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out a function that is not available the symbol  will be displayed on the television screen.

In the event that the film on the inserted DVD/VCD/S-VCD has subtitles available then you can superimpose these on the television screen during playback by pressing the button **SUBTITLE**.

- With the first press of the button **SUBTITLE** the subtitle of the first available language will be superimposed on the television screen.


- With each further press of the button **SUBTITLE** the subtitles in subsequent available languages, one after the other, will be superimposed on the television screen.

The number of the currently superimposed subtitle language will be superimposed on the television screen (i.e. "1/10" for the first of ten available subtitle languages).

- When the last of the available subtitle languages is superimposed (i.e. "10/10" for the tenth of ten available subtitle languages) then you can switch off the subtitle function by pressing the button **SUBTITLE** again. **OFF** is superimposed on the television screen.

Change playback language

Note:


This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out a function that is not available the symbol  will be displayed on the television screen.

- With many films on DVD/VCD/S-VCD you can select another playback language during playback by pressing the button **AUDIO**.
- With the first press of the button **AUDIO** the first available playback language will be switched on. With each further press of the button **AUDIO** the subsequent available playback languages, one after the other, will be switched on.

The currently switched on playback language will be superimposed on the television screen.

Superimpose disc information

Note:

This function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out a function that is not available the symbol  will be displayed on the television screen.

With this function you can superimpose all the available information from a DVD/VCD/S-VCD inserted into the DVD player onto the television screen during playback.

To do this ...

- During playback press repeatedly the button **DISPLAY** to superimpose, one after the other, the following information:

In the case of DVDs:

- the current title number/the total number of titles
- the current chapter number/the total number of chapters
- the played back so far time in hours, minutes and seconds (**TITLE ELAPSED**)
- the time to the end of the film in hours, seconds and minutes (**TITLE REMAIN**)
- the played back so far time of the chapter in hours, minutes and seconds (**CHAPTER ELAPSED**)
- the time to the end of the chapter in hours, seconds and minutes (**CHAPTER REMAIN**)

In the case of VCDs/S-VCDs:

- the current title number/the total number of titles
- the played so far time of the current playback title on the VCD/SVCD in hours, minutes and seconds (**SINGLE ELAPSED**)
- the time to the end of the current playback title in hours, seconds and minutes (**SINGLE REMAIN**)

For audio CDs:


- the current title number/the total number of titles
- the total elapsed time
- the played back so far time of the current playback track on the CD in minutes and seconds (**SINGLE ELAPSED**)
- the time to the end of the current playback track in minutes and seconds (**SINGLE REMAIN**)
- the total played back time of the CD in minutes and seconds (**TOTAL ELAPSED**)
- the time to the end of the CD in minutes and seconds (**TOTAL REMAIN**)
- To fade out the disc information press the button **DISPLAY** again.

10.4 Programming function

You can programme a playback sequence for the titles and chapters that are available on the DVD, VCD, S-VCD disc.

For this, during playback, you press the button **PROG** to superimpose the following window:

Programming window

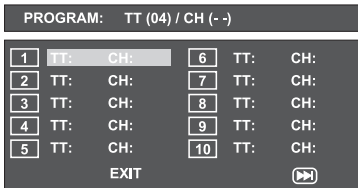

The upper line shows the total number of titles (TT):available on the disc.

Under this the programme positions 1-10 are listed, programme position 1 is highlighted.

1. Enter with the number buttons the number of the title, which shall be played back first.

The upper line will now show the chapters available in this title (CH:).

2. Enter with the number buttons the number of the chapter that shall be played back. The highlighting moves to the programme position 2.
3. Select with the navigation buttons further programme positions and enter title and chapter numbers for these programme positions.
 - To show the next 10 programme positions select with the navigation buttons the field and press the button **OK/ENTER**. You can allocate up to 20 programme positions.
 - To delete entries in a programme position select the programme position and press the button **RETURN/CLR**.
 - To cancel the programming function select the field **EXIT** and press the button **OK/ENTER**. All allocated programme positions are deleted.
4. Start playback of the programme position by selecting the field **START** and pressing the button **OK/ENTER**.

During the programmed playback the notice **PROGRAM** appears in the display.

The programme list will be deleted as soon as you press the **STOP** button.

11. Display of MP3/WMA/JPEG/AVI and MPEG data


- Insert a storage medium.

The contents of the data medium will be shown on the display:


Display of MP3 data



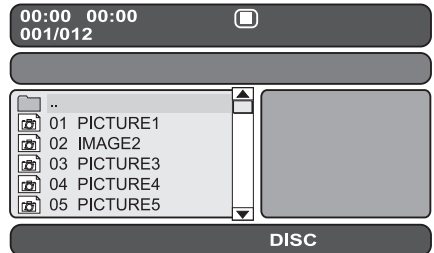

Display of JPEG data

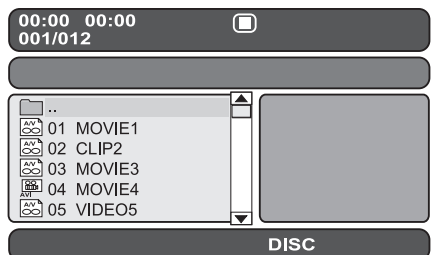

Display of AVI and MPEG data



- The data is listed on the left (Data window). Folders will be depicted with the symbol .
 - To superimpose the folders available on the disc press repeatedly the button **PROG** until the notice **FOLDER** appears at the bottom of the display.
 - Press the button **PROG** again repeatedly until the notice **FILELIST** appears at the bottom of the display. Folders will now be faded out and all data on the disc is represented in a list.
 - The area on the right is intended for the previewing of JPEG images. A preview appears as soon as you highlight a JPEG data in the data window.
 - At the bottom is located the information bar, in which is displayed the image size (JPEG Image) as well as the medium (DISC, USB or SD/MMC), on which the data is located.
 - Select a data with the help of the navigation buttons **◀ ▶ ▲ ▼**. By pressing the button **OK/ENTER** confirm your selection. The data will be played back and/or the JPEG Foto displayed.
1. To open a folder, select the folder and press the button **OK/ENTER**. The contents of the folder will be listed.
 2. To reach a higher folder level select the symbol  with the entry ".." and press the button **OK/ENTER**.

12. Playback of MP3/WMA/AVI and MPEG discs

- Select a data with the help of the navigation buttons **◀ ▶ ▲ ▼**. By pressing the button **OK/ENTER** confirm your selection. Playback starts immediately.

With the playback of music or video data the following functions can be used:

Play/Pause

See "10. Playback of DVD, S-VCD and VCD discs"

Stop

See "10. Playback of DVD, S-VCD and VCD discs"

Skip

See "10. Playback of DVD, S-VCD and VCD discs"

Search

See "10. Playback of DVD, S-VCD and VCD discs"

Slow (with AVI and MPEG data only)

See "10. Playback of DVD, S-VCD and VCD discs"

Step (with AVI and MPEG data only)

See "10. Playback of DVD, S-VCD and VCD discs"

Zoom (with JPEG-, AVI and MPEG data only)

See "10. Playback of DVD, S-VCD and VCD discs"

AB Repeat

See "10. Playback of DVD, S-VCD and VCD discs"

12.1 Repeat function with MP3/WMA/AVI/MPEG/JPEG discs

During playback press repeatedly the button **REPEAT** to apply the following repeat functions (the set function appears in the display):

REPEAT	Endless repeat of the current title/image.
REP FOLDER	Repeat of the current folder.
FOLDER	Repeat all folders.
SHUFFLE1	Random playback of all titles/images.
SHUFFLE2	Random playback of all titles/Images whereby each title/Image will playback only once.
ONCE	One time playback of the current title/Image (Repeat function off).

12.2 Replay of JPEG discs

- Highlight with the navigation buttons **▲ ▼** an image and press the button **OK/ENTER** or **PLAY/PAUSE** to open the image.

The image is shown on the display

Subsequently change the view to the next available image on the disc/in the folder.

- To show the currently displayed image longer press the button **PLAY/PAUSE**.
- To continue playback press the button **PLAY/PAUSE** again.
- You can access an image direct by entering the data number of the image with the number buttons and subsequently confirm with the button **OK/ENTER**.
- With the navigation buttons **◀ ▶ ▲ ▼** you can rotate the image, during playback, in 90° steps.
- During playback press the button **STOP** to display a miniature view of all the images in the folder/on the disc. 12 miniatures will be displayed on each page.
- Select with the navigation buttons **◀ ▶ ▲ ▼** an image and start playback with **OK/ENTER** or **PLAY/PAUSE**.
- Select with the navigation buttons **◀ ▶ ▲ ▼** one of the following entries from the bottom display line and confirm with **OK/ENTER**:

Slide Show	Starts a slide show of the images in the folder/on the disc
Menu	Shows the available button functions for JPEG playback. Press the button OK/ENTER until this summary has faded out.
Prev	changes to the previous page
Next	changes to the next page
	<ul style="list-style-type: none">• Press the button MENU/PBC , to change back to the data list again

12.3 Programmed replay with MP3/WMA/AVI/MPEG/JPEG discs

You can programme a playback sequence, in which the titles on a disc shall be played back.

- Switch, if necessary, to the data list by repeatedly pressing the button **PROG** until **FILE LIST** shows at the bottom in the display.
- Select with the navigation buttons **◀ ▶ ▲ ▼** the title that shall be played back first.
- Press the button **MARK** to move the title to the play list.
- In the same manner highlight further titles and move these to the play list.
- To display the play list press repeatedly the button **PROG** until the notice **PLAYLIST** appears at the bottom in the display.
- Start playback from the play list by highlighting a title and then press the button **PLAY/PAUSE** and/or the button **OK/ENTER**.
- To delete a title from the play list highlight the title and press the button **MARK**. The title will be removed from the play list.

13. Playback of USB/SD/MMC data mediums

13.1 Compatible data mediums

With your device you can playback MP3/WMA/JPEG/AVI/MPEG data from USB data mediums (Universal Serial Bus = universal interface for data transfer) like, for example, a USB Stick or Flash memory card in the SD/MMC format.


Note:

Due to the vast number of available storage mediums there can be no guarantee of compatibility with all current and future storage mediums. Do NOT connect to the device any hard discs that are equipped with a USB connection! This can result in the loss of data!


13.2 Using USB/SD/MMC data mediums

1. Insert the USB plug of the USB data medium in the USB connection of the DVD player and/or an SD or MMC card in the SD/MMC card slot.


USB plug

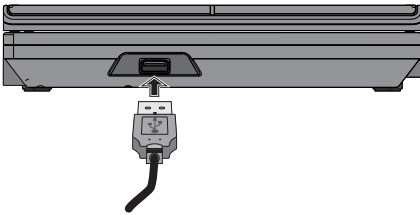

SD memory card

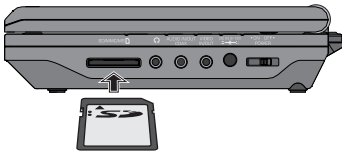

MMC memory card

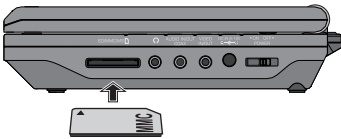

2. Press repeatedly the button **DVD/USB/CARD** until at the bottom in the display the notice **USB** and/or **CARD** appears.

The playback of MP3/WMA/AVI/MPEG/JPEG/data is exactly the same as playback from a disc.

- To switch back to the disc playback again press repeatedly the button **DVD/USB/CARD** until at the bottom in the display the notice **DISC** appears.

14. Cleaning of the DVD player

- Clean the housing of the DVD player exclusively with a soft damp cloth and a mild washing-up liquid. While cleaning make sure that no moisture gets inside the DVD player!

Clean the inside of the disc tray – if necessary – with a clean, dry brush only (e.g. lens cleaning brush, available from camera stores). Never use moisture to clean the inside of the disc tray!

Warning!

Moisture penetrating into the DVD player creates the risk of an electric shock! Besides which, moisture can cause irreparable damage to the DVD player!

15. Disposal



Do not dispose of the appliance in your normal domestic waste. This product is subject to the European guideline 2002/96/EC.

Dispose of the appliance through an approved disposal centre or at your community waste facility. Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.

Battery disposal!

Batteries may not be disposed of with normal domestic waste. All consumers are statutorily obliged to dispose of batteries at the collection point in their community/district or with the original supplier. The purpose of this obligation is to ensure that batteries can be disposed of in an environmentally friendly manner. Only dispose of batteries when they are fully discharged.



Dispose of all packaging materials in an environmentally friendly manner.

16. Troubleshooting

Display is blank/DVD player shows no functions even though it is switched on

- A Check to see that the power cord is properly plugged into the power socket.
- B Check to see if the power socket, in which you have plugged the power cord of the power supply unit/vehicle adapter, is supplying power by connecting to it another device. If necessary plug the power cord of the power supply unit/vehicle adapter into another power socket.
- C Switch off the DVD player by pressing the "Power" button and wait for ten seconds. Then switch the DVD player back on by pressing the "Power" button.

The display shows "No Disc" even though there is a disc inserted

- A The disc is dirty, scratched or damaged. Clean the disc or insert another disc.
- B The Country/Region code on the inserted DVD/VCD/S-VCD does not correspond to the Country/Region code of the DVD player. In this case the DVD/VCD/S-VCD can not be played back with the DVD player.

Inserted disc will not playback

It is possible that a layer of condensation has built up on the DVD players laser scan lens. This can be the case especially if the DVD player has been subjected to strong temperature fluctuations. If this is the case place the DVD player in a dry environment at normal room temperature. First remove the currently inserted disc from the disc tray. Subsequently allow the DVD player to sit switched on for at least an hour without using it until the layer of condensation has dissipated.

No image or Black/White image only

- A Check to make sure that all connection cables between the DVD player and the television (or Video projector) are firmly inserted into the corresponding sockets
- B Check to make sure that the settings in the OSD menu match the connections variant, with which you have connected the DVD player to the television (or Video projector).
- C Check by means of the televisions (or Video projectors) operating instructions to see if settings to the television (or Video projector) may be necessary in order to use the DVD player with the television.

No sound

- A Check to see if the DVD player is possibly switched to mute (MUTE button).
- B Check to see that all connecting cables between the DVD player and potentially connected audio components are firmly plugged into the corresponding sockets
- C Check to make sure that the settings in the OSD menu match the connections variant, with which you have connected the audio component to the DVD player.
- D Check by means of the televisions operating instructions to see if settings to the television may be necessary in order to use the DVD player with the television.
- E Check by means of the operating instructions for a potential connected audio component if settings to it are necessary in order to use it with the DVD player.

No 4:3 or 16:9 image

- A Check by means of the televisions operating instructions, which image formats the television has at its disposal.
- B Check to see if the settings in the OSD menu match the available image format of the television.


Remote control not functioning

- A Check to make sure that the remote control batteries have been inserted into the battery compartment with the correct polarity.
- B Check to see if the remote control batteries are exhausted and, if necessary, change both batteries.
- C Make sure that there are no obstacles located between the remote control and the DVD player.
- D Be situated no more than five meters from the DVD player when using the remote control.

Playback language/ Subtitle language do not correspond to the settings in the OSD menu

The playback language/Subtitle language setting in the OSD menu is not available on the inserted disc.

One or several functions can not be switched on


The selected function may not be available on all DVDs/VCDs/S-VCDs! If you attempt to carry out a function that is not available the symbol  will be displayed on the television screen.

None of the buttons on the appliance or on the remote control are functioning/other malfunctions

- A Switch off the DVD player by pressing the POWER button. Wait ten seconds, then press the "Power" button again once to switch the DVD player back on.
- B If the malfunction is still present: Reset the DVD player to its default settings.

Contact one of our service partners in your area if ...

- the stated function defect can not be resolved as described or
- other functional defects arise.

 For this see chapter 18. "Warranty & Service".

17. Glossary / Key Word Index

17.1 What are DVDs, VCDs and S-VCDs?

DVDs

DVD is the abbreviation for "Digital Versatile Disc". DVDs are a storage medium for audio and video data; they are available in 8 cm and 12 cm (Diameter) formats. Because of the much higher storage capacity as compared to CD-Rs/CD-RWs DVDs can provide a playback duration of up to eight hours for the audio and video data stored on them.

VCDs/S-VCDs

"Video CD" (VCD) and "Super Video CD" (S-VCD) are designations for two processes of compressed storage, thus space saving, of films on CDs. VCDs and S-VCDs are available in 8 cm and 12 cm (Diameter) formats. Their storage capacity is a great deal lower than that of DVDs. For this reason they only offer a playback duration, for the saved audio and video data on them, of 20 minutes (8 cm format) and/or 74 minutes (12 cm format).

VCDs are available in two versions:

- With version 1.1 VCDs/S-VCDs only audio and video data can be played back.
- With version 2.0 VCDs/S-VCDs, PBC (Playback Control) functions are available. In addition still images can be played back in a higher resolution.

Playback Control (PBC)

Version 2.0 VCDs/S-VCDs have Playback Control (in short "PBC") at their disposal. Then on the VCD/S-VCD a main menu is available, by which various functions of the VCD/S-VCD are allowed to be operated.

17.2 What are Title and Chapter?

Title is the name given to the largest units of image and sound units on DVDs; on many DVDs the (Main) film has the title number 01. For bonus material (i.e. Film trailer, background information etc.), that is available on many DVDs, other possible title numbers can be used.

Chapter is the name given to the next smaller image and sound units beneath title. If the title or titles on a DVD/VCD/S-VCD are subdivided into chapters, they are assigned numbers that can be entered to select the chapters directly.

Bear in mind that not on all DVDs ...

- are the DVD or the title divided into (numbered) chapters
- Chapters are also designated as "Scenes" (i.e. in the main menu of DVDs)

17.3 Dolby Surround

Dolby Surround is an analogue sound format, by which the two channels of a stereo sound signal are used in order to accommodate room sound information for further channels. With a Dolby Surround decoder the signals are again converted into sound and/or music and are fed to two additional loudspeakers, which are to be situated behind the listening area.

Dolby Prologic

In comparison to Dolby Surround sound format, with Dolby Prologic an additional channel in the stereo signal is used; this is the so called "Centre" channel. The corresponding centre loudspeaker is to be situated in the middle between the stereo loudspeakers. The deepest sounds are fed to a bass loudspeaker, the so called "Subwoofer". The subwoofer can be placed in any desired location in the room; the logic for this is that the bass sounds that the subwoofer puts out can scarcely be localized exactly by the human ear

Dolby Digital (5.1)

Dolby Digital, also designated as AC3, is a digital sound format, by which up to six separate audio channels can be transported. With most of the current DVDs, the sound is stored in the so called "Dolby Digital 5.1" format; the "5" in the title "5.1" stands for three front and two rear surround sound channels, the "1" for the bass sound channel.

DTS

DTS is the abbreviation for "Digital Theatre System" and refers to one of the most common surround sound formats for DVDs. As with Dolby Digital 5.1, DTS uses three front and two rear surround sound channels as well as a bass sound channel.

17.4 What are PAL and NTSC?

PAL

PAL is the abbreviation for "Phase Alternation Line". PAL is the mid and west Europe (Exception: France, see the heading "SECAM") customary and most wide spread colour television standard.


NTSC

NTSC is the abbreviation for "National Television System Committee". NTSC is a colour television standard that is primarily used in the USA and Japan.

17.5 MP3, WMA, JPEG and MPEG

MP3

MP3 denotes a process and/or format developed by the Fraunhofer Institute for the compression of audio data. In the MP3 format compressed music pieces are only a fraction of their original size, which, for example, on CD-Rs/CD-RWs allows for storage of a considerably greater volume of music than on commercially available audio CDs, on which audio data is stored in the CDA format. The structure of an MP3-CD can, for example, appear as follows, if the MP3 data is stored in files:

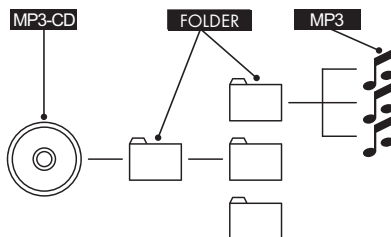

WMA

WMA ("Windows® Media Audio") is a data format developed by Microsoft® for audio data.

JPEG

JPEG ("Joint Photographics Expert Group") denotes a wide spread graphic format, developed by the organization with the same name, with which image data of the colour and grey scales are compressed.

MPEG

MPEG ("Moving Picture Experts Group") refers to a video compression format.

17.6 What are files?

As opposed to audio CDs the title on a CD-R/CD-RW with MP3-, WMA- or JPEG data can be stored in files, for example, in order to file titles from different genres.

18. Warranty & service

You receive a 3-year warranty on this device from the date of purchase. If, in spite of our high quality standards, you have reason to complain about this device, please contact our service hotline.

If it is not possible to deal with your complaint by phone, they will provide

- a processing number (RMA number) and
- an address where you can send your product for repairs under the warranty.

If you send the device please enclose a copy of the proof of purchase (bill receipt). The device must be packaged securely for transport and the RMA number must be directly visible. Shipments without an RMA number can not be processed.

i Note:

The warranty applies to material or manufacturing faults.

The warranty does not apply to

- *parts subject to wear and tear.*
- *damage to breakable parts such as switches and rechargeable batteries.*

The product is only designed for private and not commercial use. Improper handling and usage not in accordance with the intended purpose, use of force and any interventions that are not carried out by our authorised service centre will render the warranty null and void. This warranty does not affect your legal rights.

19. Importer

KOMPERNASS GMBH
BURGSTRASSE 21
D-44867 BOCHUM
www.kompernass.com

Portable DVD-Player KH 6500

In order to guarantee a cost free repair procedure please get in touch with the service hotline. Make sure you have your sales slip handy.

GB DES Ltd
Tel.: 0870/787-6177
Fax:0870/787-6168
e-mail: support.uk@kompernass.com

IE Irish Connection
Tel: 00353 (0) 87 99 62 077
Fax:00353 18398056
e-mail: support.ie@kompernass.com

www.mysilvercrest.de

Sender, please write clearly:

Last name _____

First name _____

Street _____

Postcode/Place _____

Country _____

Telephone _____

Date/Signature _____

Description of fault:



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>