



Rechargeable Floor Sweeper SAB 4.8 A1

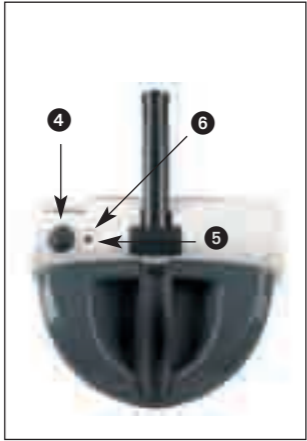

GB **Rechargeable Floor Sweeper**
IE Operating instructions

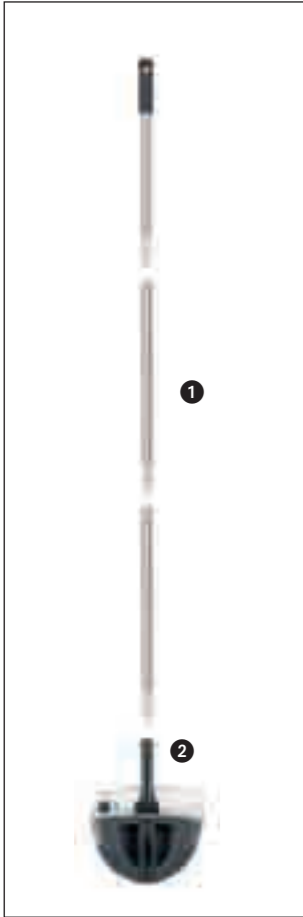

Rechargeable Floor Sweeper

Read the operating instructions carefully before using the appliance for the first time and preserve this booklet for later reference. Pass the manual on to whomsoever might acquire the appliance at a later date.


Proper Use

This rechargeable battery floor sweeper is intended for the sweeping of dry dirt in dry enclosed rooms and only for private use. It must only be operated with the enclosed accessories.

The rechargeable battery floor sweeper is not intended for the sweeping of gravel-faced concrete, gravel and similar surfaces, not for deeppile carpets and wet floor coverings or for commercial use. Use only as described in this manual. Do not allow the appliance to be used as toy. Do not let children use this devices unsupervised.

Technical data

Battery Charger

input:	100 - 240 V ~ 50 / 60 Hz 150 mA
Output:	9 V = 200 mA
Manufacturer:	Kings Electric Co. Ltd.
Type designation:	CTR06-090-0200B
Protection class:	II / 

Battery brush

Battery - working voltage	4.8 V
Batteries:	NiMH, Type C 4 x 1.2 V, 1300 mAh

Operating time on a full battery charge
(depending on
floor covering) approx. 30 min

Charging time for
an empty battery 12 - 16 hours.

Items supplied

Rechargeable Floor Sweeper
Battery charger with cable
Broomstick (3 Elements)
Wall bracket
3 Screws
3 Wallplugs
Operating instructions

Prior to initial use

Before starting the device satisfy yourself that...

- the floor sweeper, the charger and its cable are in perfect condition and ...
- all packaging materials have been removed from the device.

Safety information

- Do not allow individuals (including children) to use the appliance whose physical, sensorial or mental abilities or lack of experience and knowledge hinder their safe usage of it if they have not previously been supervised or instructed in its correct usage.
- Tell children about the appliance and its potential dangers so that they do not play with it.

Danger of Electrocution!

- Arrange for defective power plugs and/or cables to be replaced as soon as possible by a qualified technician or by our Customer Service Department to avoid the risk of injury.

Assembling the floor sweeper

The numbers before the operating steps refer to the illustrations on the fold-out page.

- 1 Assemble the broomstick by inserting the 3 elements into each other and turn to secure.
- 2 Screw the stick in the device mounting.
- 3 Attach the wall bracket with the enclosed screws.

Battery charging

The rechargeable battery floor sweeper is supplied with an empty Ni-MH rechargeable battery. To ensure that the battery will receive its full efficiency it is necessary to charge the battery for 16 hours prior to initial use. Charging processes thereafter take 12 - 16 hours.

With fully charged battery the device provides an operating time of 30 minutes before recharging becomes necessary.

To charge the battery, ensure that the battery brush is switched off.

- 4 if necessary, switch it off at the switch,
- 5 insert the plug of the charger into the charging socket of the appliance and then the mains plug into a mains power socket.
- 6 The red charging lamp is illuminated during the charging process. If this is not the case, check the plug connections.

Once the charging process is over, the device switches over to the charge maintenance position (management function). However, it is not advisable to leave the device permanently connected to the mains charging device so as to prevent the batteries from possibly getting damaged.

⚠ Caution:

- Only use the enclosed charger (9V = 200 mA). Other charging devices could irreparably damage the appliance!
- Only operate the device with the enclosed rechargeable battery. It could otherwise get damaged.
- Do not attempt to remove the rechargeable battery for charging.
- Do not attempt to open the rechargeable battery jacket or dismantle the battery, this would destroy it.

Working with the floor sweeper

⚠ Caution:

- Never use the device with the dirt container removed. The dirt would only be swirled around!
 - Keep end of rotating brush, wands and other openings away from your face and body. Risk of injury!
- 4 Press the switch to start the rechargeable battery floor sweeper. Press again to switch off the device.
- Guide the rechargeable battery floor sweeper over the floor.
 - You can leave the floor sweeperstick locked in vertical position during work interruptions.

i Note:

With some types of carpet the rechargeable battery floor sweeper could rattle or bounce. In this case work slowly and in the opposite direction.

Cleaning

How to clean the dirt container:

To maintain the efficiency of the rechargeable battery floor sweeper, empty the dirt container after every use.

- 7 Press the unlocking button of the dirt container to detach it from the device.
 - 8 With a slight upward movement, pull the dirt container horizontally from the device.
- Empty the dirt container and re-insert.

How to clean the brush:

If the brush roller cannot be turned any longer because of accumulated coarse dirt or threads, proceed as follows:

- Turn over the rechargeable battery floor sweeper and hold it so that the flat side with the brush roller faces you.
- 9 Remove the small cover on the right-hand side.
 - Loosen the drive belt by pushing it to the right.
 - 10 Lift the brush roller on the right-hand side and remove the guide bushing with the washer 10b.
 - 11 Now pull the brush roller from the device to the right-hand side.
- Remove the dirt (on both sides of the bristle) and clean the brush.

After cleaning, proceed as follows to re-install the brush roller:

- Insert the drive belt in the compartment and place it around the motor drive pulley.
- Place the washer on the guide bushing and insert the brush roller into the left guide channel.
- Pull the drive belt over the guide bushing and re-insert the brush roller into the right channel.
- Now pull the drive belt over the drive cog of the brush roller.
- Fit the brush cover by first introducing the lower lugs in the recesses and press the cover in at the top.

⚠ Caution:

- Ensure that the device is not inadvertently switched on with the dirt container removed or while cleaning the brush. Risk of Injury!
- Do not clean the device during the charging process. Risk of Injury!

Storage

Use the supplied wall bracket for practical and space-saving storage or when charging the device.



⚠ Caution:

- Do not expose the rechargeable battery floor sweeper to extreme temperatures or moisture.
- Do not therefore store it near ovens, heating elements, burners or in the bathroom.
- Never leave the device without it having been switched off - the rechargeable battery could be damaged through depletion.

Disposal



Do not dispose of the appliance in your normal domestic waste. This product is subject to the European guideline 2002/96/EC.

Dispose of the appliance through an approved disposal centre or at your community waste facility. Observe the currently applicable regulations.

In case of doubt, please contact your waste disposal centre.

Battery disposal!

Batteries may not be disposed of with normal domestic waste. All consumers are statutorily obliged to dispose of batteries at the collection point in their community/district or with the original supplier. The purpose of this obligation is to ensure that batteries can be disposed of in an environmentally friendly manner. Only dispose of batteries when they are fully discharged.



Dispose of all packaging materials in an environmentally friendly manner.

Warranty & Service

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e.g. buttons or batteries. This product is for private use only and is not intended for commercial use. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

The warranty period will not be extended by repairs made under warranty. This applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment.

Service Great Britain

Tel.: 0871 5000 720 (£ 0.10/Min.)

E-Mail: kompernass@lidl.gb

Service Ireland

Tel.: 1890 930 034

(0,08 EUR/Min., (peak))

(0,06 EUR/Min., (off peak))

E-Mail: kompernass@lidl.ie

Importer

KOMPERNASS GMBH
BURGSTRASSE 21
44867 BOCHUM, GERMANY

www.kompernass.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>