


# LCD Digital Color TV

**Setup Guide** (Operating Instructions)

Setting up your TV

To watch TV

Additional Information

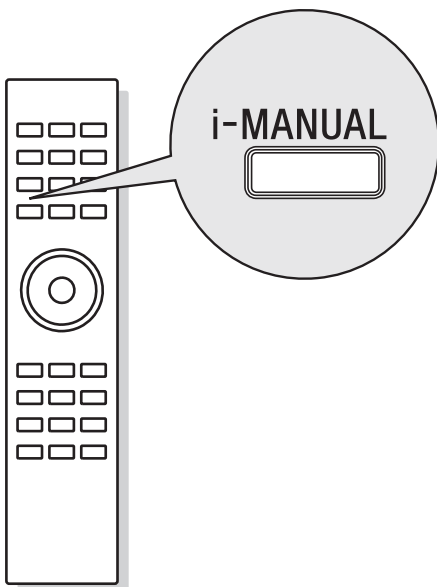

# BRAVIA

## Sony Customer Support

U.S.A.: [www.sony.com/tvsupport](http://www.sony.com/tvsupport)

Canada: [www.sony.ca/support](http://www.sony.ca/support)

United States

Canada

1.800.222.SONY

1.877.899.SONY

Please Do Not Return  
the Product to the Store

## Owner's Record

The model and serial numbers are located at the side and rear of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this TV.

Model Name

\_\_\_\_\_

Serial No.

\_\_\_\_\_

## CAUTION

To prevent electric shock and blade exposure, do not use this polarized AC plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted.

- 120 V AC, 60 Hz
- Avoid operating the TV at temperatures below 41°F (5°C).

## Licensing Information

Macintosh is a trademark of Apple Inc., registered in the U.S. and other countries.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.

Ferguson Patent Properties, LLC:  
U.S. Patent No. 5,717,422  
U.S. Patent No. 6,816,141

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

 
In the United States, TV Guide and TV Guide On Screen are registered trademarks of TV Guide Entertainment Group, Inc. and/or its subsidiaries or affiliates, and are used under a license by Gemstar-TV Guide International, Inc. and/or its subsidiaries. In Canada, TV Guide is a registered mark of Transcontinental Inc., and is used under a license by Gemstar-TV Guide International, Inc. and/or its subsidiaries.

The TV Guide On Screen system is manufactured under license from Gemstar-TV Guide International, Inc. and/or its subsidiaries.

The TV Guide On Screen system is protected by one or more of the following United States patents 6,498,895; 6,850,693; 6,396,546; 5,940,073; 6,239,794 to Gemstar-TV Guide International, Inc. and/or its subsidiaries.

Gemstar-TV Guide International, Inc. and/or its related affiliates are not in any way liable for the accuracy or availability of the program schedule information or other data in the TV Guide On Screen system and cannot guarantee service availability in your area. In no event shall Gemstar-TV Guide International, Inc. and/or its related affiliates be liable for any damages in connection with the accuracy or availability of the program schedule information or other data in the TV Guide On Screen system.

Blu-ray Disc is a trademark.

“BRAVIA” and BRAVIA, S-Force, Motionflow, BRAVIA Sync, and  are trademarks or registered marks of Sony Corporation.

“XrossMediaBar” is a trademark of Sony Corporation. “XMB” is a trademark of Sony Corporation and Sony Computer Entertainment Inc.

“PlayStation” is a registered trademark and “PS3” is a trademark of Sony Computer Entertainment Inc.

DLNA®, the DLNA Logo and DLNA CERTIFIED™ are trademarks, service marks, or certification marks of the Digital Living Network Alliance.



Your BRAVIA TV is ENERGY STAR® qualified in the “Home” mode. It meets strict energy efficiency guidelines set by the U.S. Environmental Protection Agency and Department of Energy. ENERGY STAR is a joint program of these government agencies, designed to promote energy efficient products and practices.

Changes to certain features, settings, and functionalities of this TV (i.e. TV Guide, Picture/Sound, Light Sensor, Power Savings) can increase or change the power consumption.

Depending upon such changed settings, the power consumption may exceed the limits required for the ENERGY STAR qualification in the “Home” mode.

The 22 class has a 21.6 inch viewable image size, the 32 class has a 31.5 inch viewable image size and the 55 class has a 54.6 inch viewable image size (measured diagonally).



- The illustrations of the remote control used in this manual are of the RM-YD033 unless otherwise stated.

## The BRAVIA® Full HDTV Experience

Thank you for choosing Sony! Your new BRAVIA® TV opens the door to the “Full HDTV Experience.” This document will help you get the most out of your TV.

Please take a moment to register your TV at:

**U.S.A.:** <http://productregistration.sony.com>

**Canada:** <http://www.SonyStyle.ca/registration>

### Four Steps to a Full HD Experience

Set, Source, Sound, and Setup.

#### 1 Set

Now that you have made the best selection in LCD TV technology, be sure to remove all accessory contents from the packaging before setting up your TV.

#### 2 Source

To experience the stunning detail of your BRAVIA TV, you need access to HD programming.

- Upgrade your signal or content source to high-definition (HD) by contacting your HD service provider.

- Receive over-the-air HD broadcasts with an HD-quality antenna connected directly to the back of your TV.

Visit [www.antennaweb.org](http://www.antennaweb.org) for more information on antenna selection and setup.

- Discover the wealth of entertainment now available on super-high resolution Blu-ray Disc™ player and other Sony HD equipment.

#### 3 Sound

Complete the high-definition experience with a BRAVIA Sync™ surround sound system or A/V receiver from Sony.

#### 4 Setup

Install your TV and connect your sources. See page 7 for sample connection diagrams.

To help assure the highest quality for your HD experience, use Sony HDMI (High-Definition Multimedia Interface) cables.

**To learn more about HDTV, visit:**

**U.S.A.:** <http://www.sony.com/HDTV>

**Canada:** <http://www.SonyStyle.ca/hd>

This TV displays all video input signals in a resolution of 1,920 dots × 1,080 lines.

---

# Table of Contents

|   |    |
|---|----|
| Checking the accessories.....                           | 4  |
| Inserting batteries into the remote control .....       | 4  |
| <b>Setting up your TV</b>                               |    |
| Attaching the Table-Top Stand.....                      | 5  |
| Connecting the TV.....                                  | 7  |
| Securing the TV.....                                    | 11 |
| Organizing the AC power cord .....                      | 12 |
| Running initial setup .....                             | 12 |
| Detaching the Table-Top Stand from the TV.....          | 12 |
| Using a Wall-Mount Bracket.....                         | 13 |
| Installing the TV Against a Wall or Enclosed Area ..... | 13 |
| <b>To watch TV</b>                                      |    |
| To watch programs.....                                  | 14 |
| To use the TV features .....                            | 14 |
| To use i-Manual.....                                    | 15 |
| <b>Additional Information</b>                           |    |
| Troubleshooting.....                                    | 16 |
| Specifications .....                                    | 18 |

- |   |
|---|
| <ul style="list-style-type: none"><li>• Operating instructions are built into your <b>BRAVIA</b> TV. Refer to “To use i-Manual” for operation (page 15).</li><li>• Retain this manual for future reference.</li></ul> |
|---|

---

## Checking the accessories

### AC power cord (1)

(for KDL-55HX701/KDL-46HX701 models)

### Table-Top Stand (1)\*<sup>1</sup>

#### Fixing screws for Table-Top Stand

(M5 × 16) (4)

#### Assembling Screws for Table-Top Stand

(M5 × 16) (4) (for KDL-40HX701 model)

#### Assembling Screws for Table-Top Stand

(M4 × 10) (3)

(for KDL-32EX308/KDL-22EX308 models)

### Remote control (1)\*<sup>2</sup>

### Size AAA batteries (2)

### USB Wireless LAN Adapter UWA-BR100 (1)


(for KDL-32EX308/KDL-22EX308 models)

\*1 The 22", 32" and 40" models require assembling. Refer to other leaflet to assemble the Table-Top Stand.

\*2 Please refer to the model name printed on the remote control.


## Guidelines for Remote Control

- Point your remote control directly at the IR sensor located on your TV.
- Make sure that no objects are blocking the path between the remote control and the IR sensor on your TV.
- Fluorescent lamps can interfere with your remote control; try turning off the fluorescent lamps.
- If you are having problems with the remote control, reinsert or replace your batteries and make sure that they are correctly inserted.

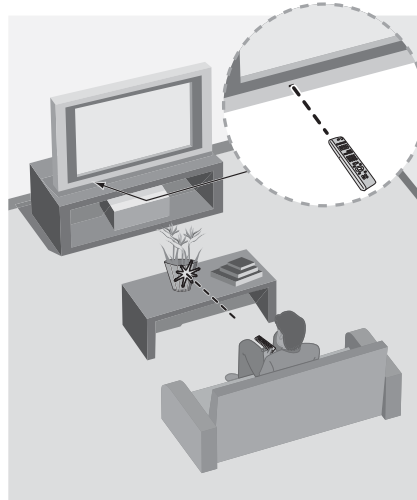

---

## Inserting batteries into the remote control

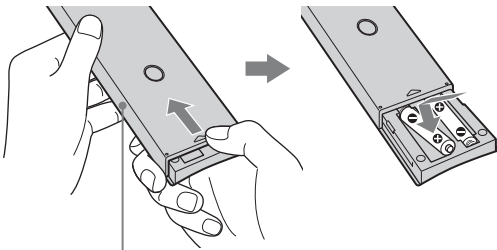


Slide the cover to open.

# Setting up your TV

Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand. You will need a Phillips screwdriver and the supplied screws to complete the task. Look for the attachment instructions provided with the TV.

Be sure to consider the following while setting up your TV:

- Disconnect all cables when carrying the TV.
- Carry the TV with the adequate number of people; larger size TVs require two or more people.
- Correct hand placement while carrying the TV is very important for safety and to avoid damage.

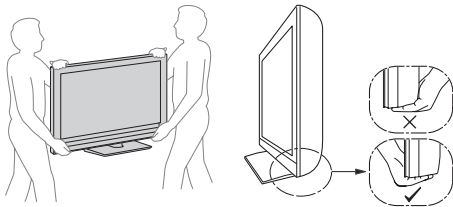

- Ensure your TV has adequate ventilation, see page 13.
- For best picture quality, do not expose the screen to direct illumination or sunlight.
- Avoid installing the TV in a room with reflective wall and floor materials.
- Avoid moving the TV from a cold area to a warm area. Sudden room temperature changes may cause moisture condensation. This may cause the TV to show poor picture and/or poor color. Should this occur, allow moisture to evaporate completely before powering the TV on.


## Attaching the Table-Top Stand

Refer to the supplied Table-Top Stand instruction leaflet for proper attachment for some TV models.

- 1 Gently slide the TV unit onto the Table-Top Stand and align the screw holes.




- Do not put stress on the LCD panel or the frame around the screen.
- Be careful to not pinch your hands or the AC power cord when you install the TV unit to the Table-Top Stand.

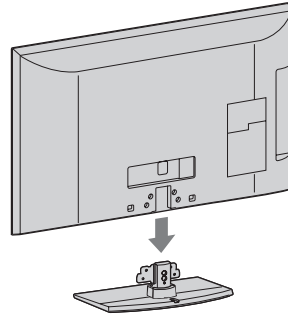


- 2 Use the supplied screws to attach the TV unit to the Table-Top Stand.

Except KDL-22EX308 model

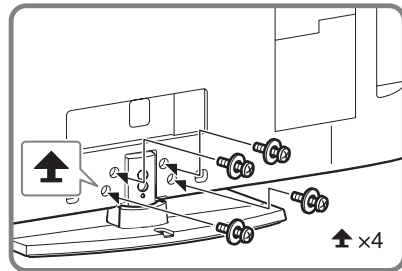

KDL-22EX308 model only

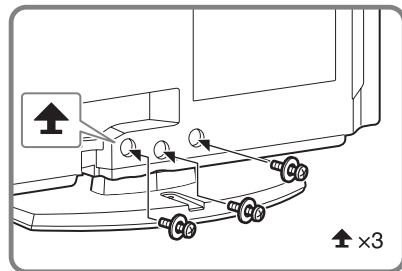


- If you use an electric screwdriver, set the tightening torque at approximately 1.5 N·m {15 kgf·cm}.

## Adjusting the viewing angle

 
This TV can be adjusted within the angles shown below (except KDL-32EX308 model).

### For KDL-55/46/40HX701

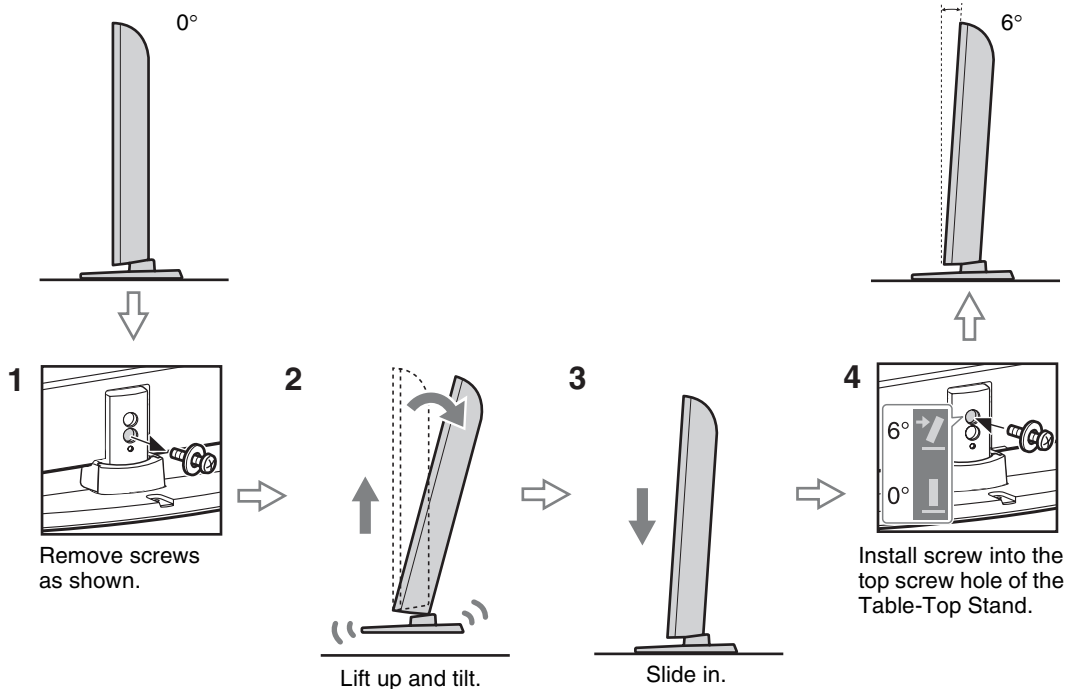








- Reverse the steps when readjusting the angle back to 0 degree.

### For KDL-22EX308




## Connecting the TV

The following chart shows the high-definition (HD) and standard-definition (SD) video formats supported by your **BRAVIA** TV inputs.

|    | INPUT                                | VIDEO   | AUDIO  | SUPPORTED FORMATS |       |       |      |      |      |     |
|----|--------------------------------------|---|--|-------------------|-------|-------|------|------|------|-----|
|    |                                      |   |  | 1080/24p          | 1080p | 1080i | 720p | 480p | 480i | PC* |
| HD | HDMI 1<br>HDMI 2<br>HDMI 3<br>HDMI 4 |                                | When HDMI is connected to DVI with an adapter, a separate Audio L/R is necessary.              | ✓                 | ✓     | ✓     | ✓    | ✓    | ✓    | ✓   |
|    | COMPONENT 1<br>COMPONENT 2           |                                | <br>Audio L/R |                   | ✓     | ✓     | ✓    | ✓    | ✓    |     |
| SD | VIDEO 1                              | <br>Composite video connection | <br>Audio L/R |                   |       |       |      |      |      | ✓   |
|    | VIDEO 2                              | <br>Composite video connection | <br>Audio L/R |                   |       |       |      |      |      | ✓   |

\* For supported PC formats refer to the i-Manual.

 
### Recommendation of the F type plug




1.5 mm

Projection of the inner wire from the connection part must be less than 1.5 mm.


**Shown with a Set Top Box with HDMI connection**

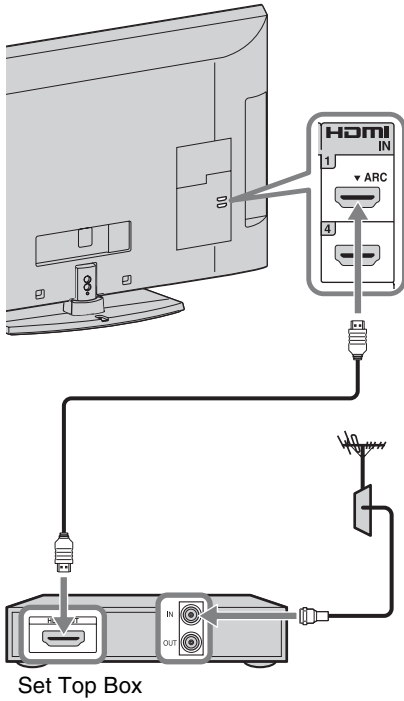

**Shown with a Set Top Box with COMPONENT connection**

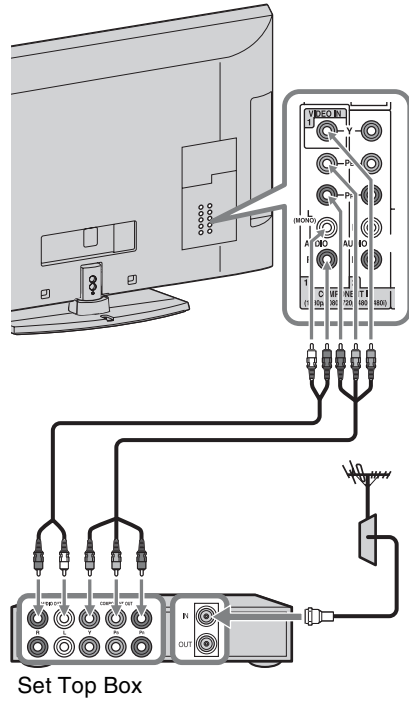


**Cable System or VHF/UHF Antenna System**

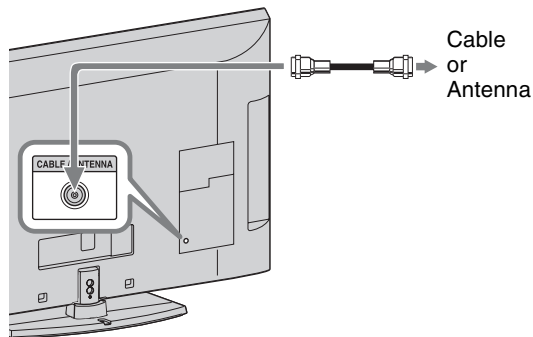




Shown with HD BRAVIA® Sync™ Basic Connection

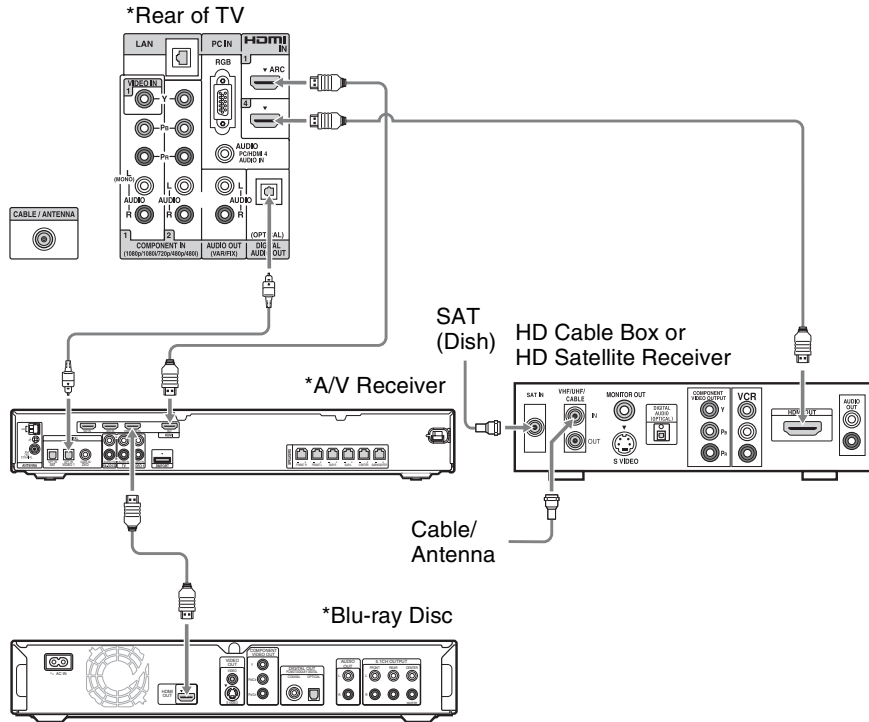


\* Signifies a BRAVIA Sync capable device.

Shown with HD Basic Connection with Home Theater System

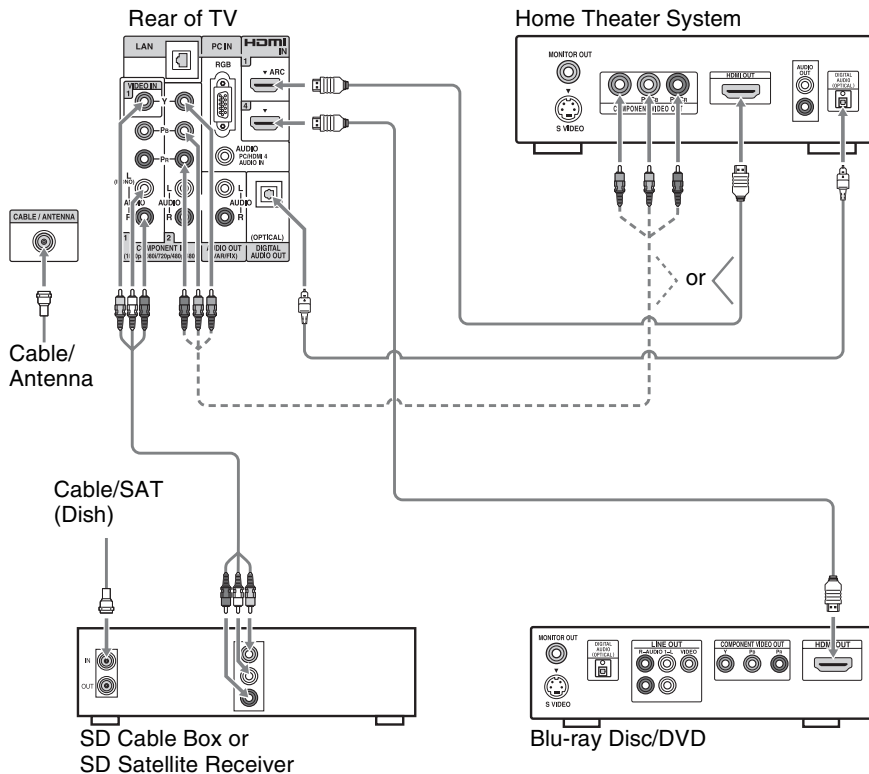

# Shown with PC Connection with SD VCR/DVD

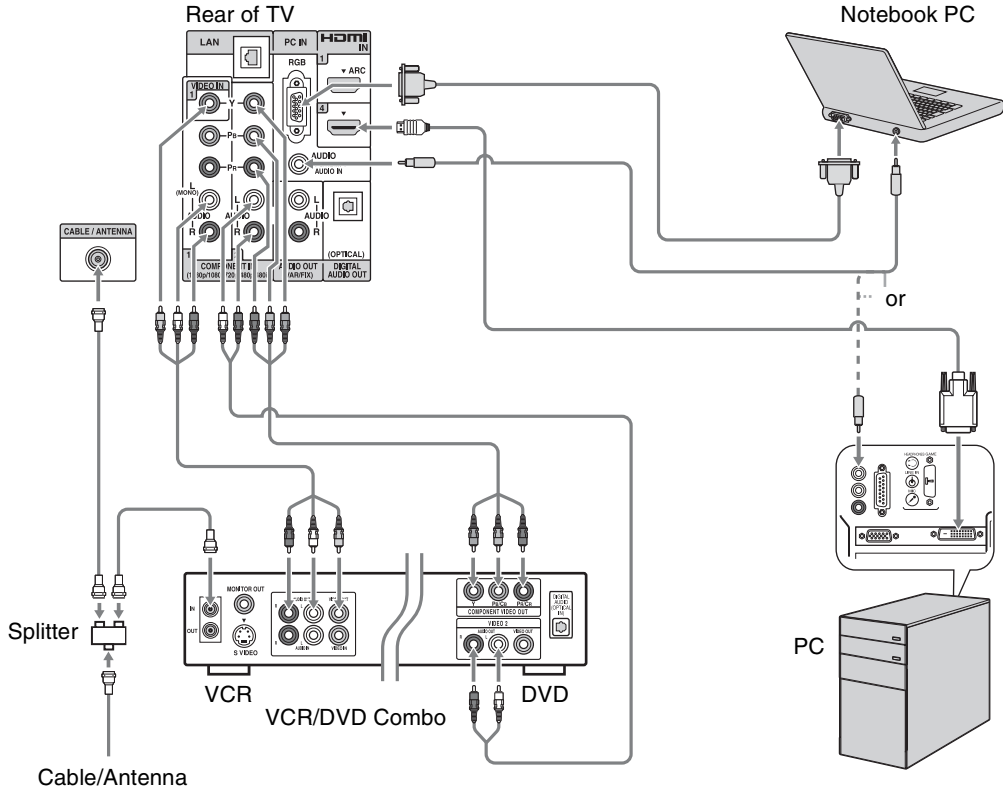

## Securing the TV



Sony strongly recommends taking measures to prevent the TV from toppling over. Unsecured TVs may topple and result in property damage, serious bodily injury or even death.

## Preventing the TV from Toppling

- Secure the TV to a wall and/or stand.
- Do not allow children to play or climb on furniture and TV sets.
- Avoid placing or hanging items on the TV.
- Never install the TV on:
  - slippery, unstable and/or uneven surfaces.
  - furniture that can easily be used as steps, such as a chest of drawers.
- Install the TV where it cannot be pulled, pushed, or knocked over.
- Route all AC power cords and connecting cables so that they are not accessible to curious children.


## Recommended Measures to Secure the TV

Consider the following measures when securing your TV to a TV stand (not supplied).

### 1 Secure the Stand for the TV

Make sure the TV stand can adequately support the weight of the TV. Use two angle braces (not supplied) to secure the stand. For each angle brace use the appropriate hardware to:

- Attach one side of the angle brace to the wall stud.
- Attach the other side to the TV stand.

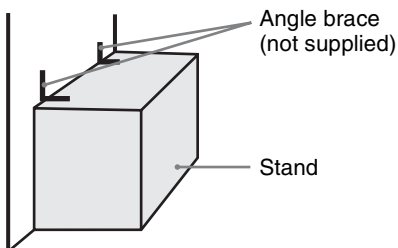


### 2 Secure the TV to the Stand

Use the optional hardware listed below (not supplied):

- M4 × 16 machine screw (screwed into the TV's Table-Top Stand)
- A screw or similar (attach it to the TV stand)
- Rope or chain (strong enough to support the weight of the TV). Make sure that there is no excess slack in the rope or chain.

An alternative way to secure the TV is with an optional Sony Support Belt Kit.

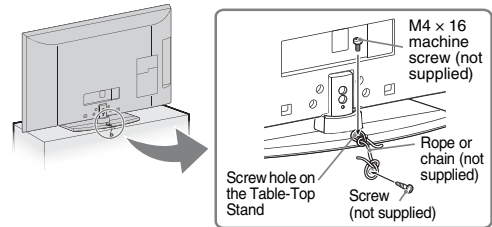

Contact Sony Customer Support to obtain the optional Support Belt Kit by providing your TV model name.



- For United States call: 1-800-488-7669 or visit: [www.sony.com/accessories](http://www.sony.com/accessories)
- For Canada call: 1-877-899-7669

### 3 Anchor the TV to the Wall


Anchor the TV to the wall by using bolts, wall anchor and chain (or rope).



- Securing the TV to the stand without securing the TV and the stand to the wall provides minimum protection against the TV toppling over. For further protection, be sure to follow the three measures recommended.

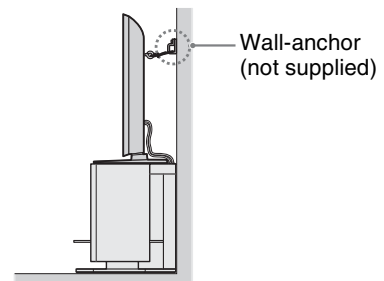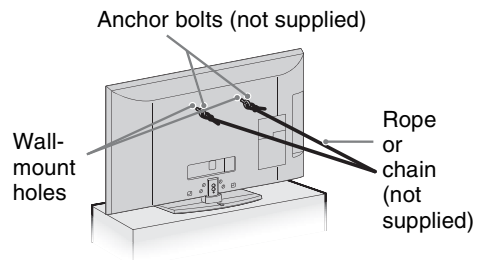


## Organizing the AC power cord

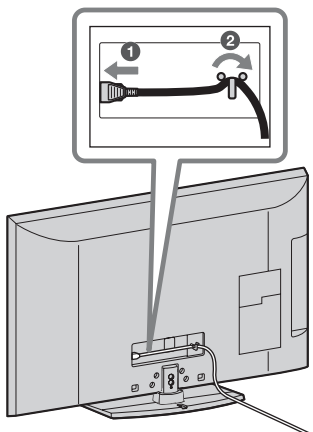


- ❶ For KDL-55HX701/KDL-46HX701 models only
- ❷ For all models

## Running initial setup

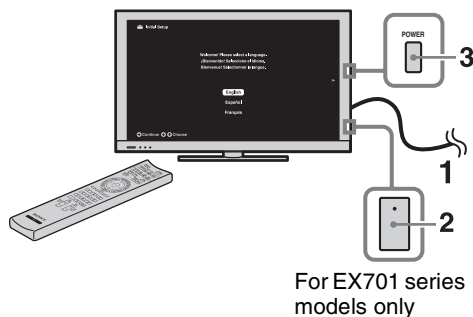

- 1 Complete your cable connections before proceeding with the **Initial Setup**.  
Connect the TV to your nearest power outlet.
- 2 For HX701 series models, check the **ENERGY SAVING SWITCH** setting is on (●).
- 3 Press **POWER** on the TV.  
When you switch the TV on for the first time, the **Language** menu appears on the screen.

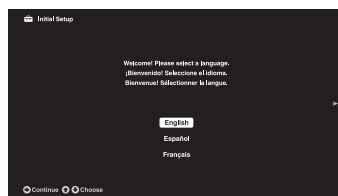

- 4 Follow the instructions on the screen.




- The **ENERGY SAVING SWITCH** must be on (●) to set the clock and obtain program information for the TV Guide.
- **Home** mode sets the TV to display the settings optimized for home viewing (this setting is ENERGY STAR compliant).

- 5 Select **Continue** to scan for available channels and enable the **TV Guide On Screen®** feature. If you receive channels from a cable box or satellite receiver and do not wish to use the TV's built-in tuner, select **Skip**.  
Selecting **Skip** will disable the **TV Guide On Screen** feature, which is only available when the TV's tuner is used.




- If you skip the channel scan while in the setup menus, TV Guide will be disabled.

## Detaching the Table-Top Stand from the TV

Remove only the screws marked with  on the TV.



- Do not remove the Table-Top Stand for any reason other than to install corresponding accessories on the TV.

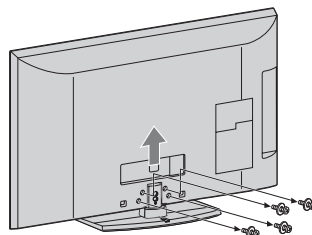

## Using a Wall-Mount Bracket

Your TV can be mounted on a wall using a Wall-Mount Bracket (not supplied) out of the box as packaged. Some larger size TV may require detaching the Table-Top Stand; see “Detaching the Table-Top Stand from the TV” (page 12).

Prepare the TV for the Wall-Mount Bracket before making cable connections.


**For product protection and safety reasons, Sony strongly recommends that you use the Wall-Mount Bracket designed for your TV and the installation should be performed by a Sony dealer or licensed contractor.**

- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV’s weight.

- Be sure to use the screws supplied with the Wall-mount bracket when attaching the mounting hooks to the TV set.

The supplied screws are designed so that they are 8 mm to 12 mm in length when measured from the attaching surface of the mounting hook.

The diameter and length of the screws differ depending on the Wall-mount bracket model. Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc.

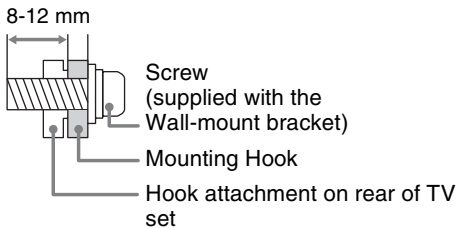

- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.




- Read the supplied Safety Booklet for additional safety information.

## Installing the TV Against a Wall or Enclosed Area


Make sure that your TV has adequate ventilation. Allow enough space around the TV as shown below. Avoid operating the TV at temperatures below 41 °F (5 °C).

### Installed with stand

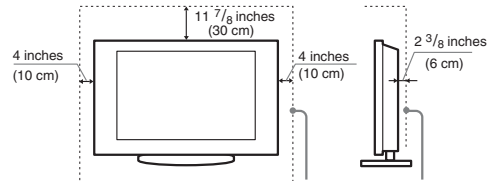

Leave at least this much space around the set.


### Installed on the wall

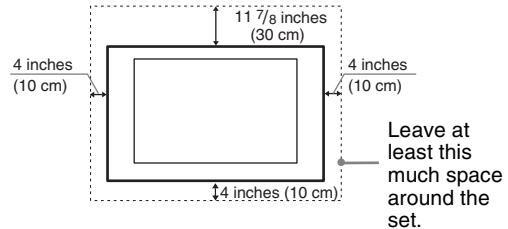

Leave at least this much space around the set.

Never install the TV set as follows:


Air circulation is blocked.      Air circulation is blocked.

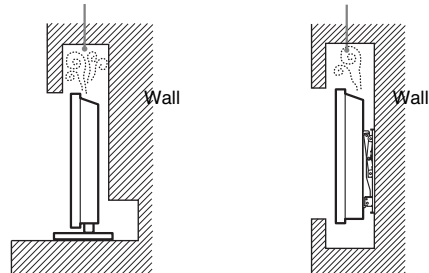


- Inadequate ventilation can lead to overheating of the TV and may cause damage to your TV or cause a fire.


# To watch TV

## To watch programs

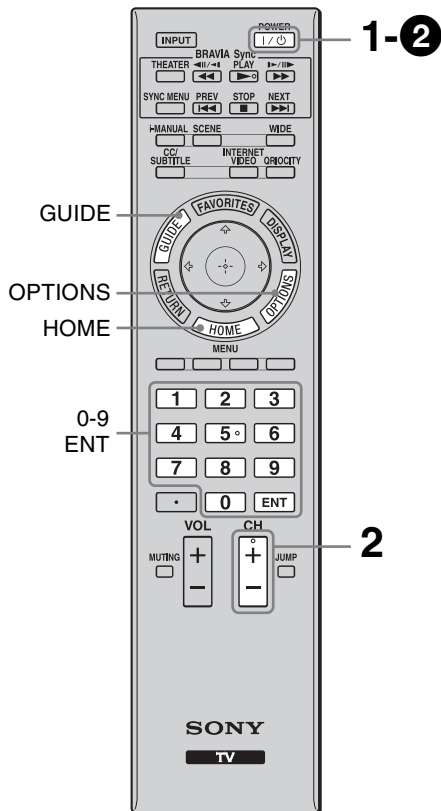

### 1 Turn on the TV.

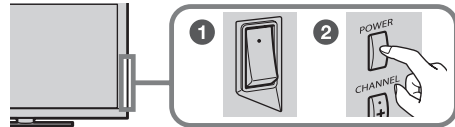

 


- 1 For HX701 series models, check the **ENERGY SAVING SWITCH** setting is on (●).
- 2 Press **POWER** on the TV or on the remote control to turn on the TV. (You may use the  button located on the front or back of the remote control.)

### 2 Select a TV channel.




#### To use the Guide

Press **GUIDE** to display the **TV Guide On Screen** to view scheduled programs or to select a program to watch. Press again to exit the Guide. Use with **0-9** and **ENT** to select digital channels. For example, to enter 2.1, press , ,  and **ENT**.




## To use the TV features


Press **HOME** to display **TV Home Menu/XMB™** to access TV **Settings** and other media and network related content.

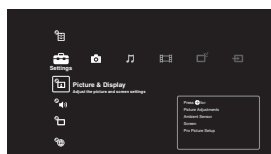

 Press **OPTIONS** to display a list of convenient functions and menu shortcuts. The Options menu items vary based on current input and/or content.



# To use i-Manual

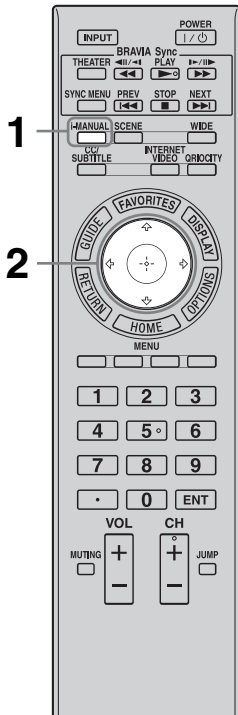


Your **BRAVIA** TV comes with an on-screen manual. You can browse your i-Manual anytime you need to find the varieties of convenient functions.

## 1 Press i-MANUAL.



## 2 Press $\uparrow/\downarrow/\leftarrow/\rightarrow/\oplus$ to navigate and select items.

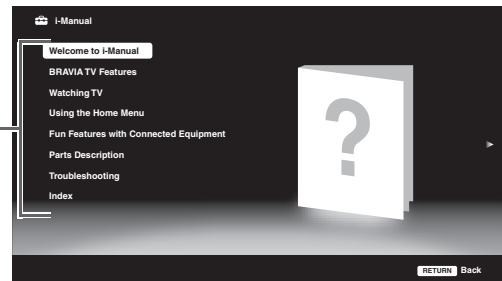

### ■ Welcome to i-Manual

### ■ BRAVIA TV Features

### ■ Watching TV

Introduces convenient features such as TV Guide, Favorites, etc.

### ■ Using the Home Menu

You can find how to customize your TV settings, etc.

### ■ Fun Features with Connected Equipment

Introduces how to connect and enjoy optional equipment.

### ■ Parts Description

### ■ Troubleshooting

You can find solutions for your problems.

### ■ Index



- Images and illustrations may differ from what you are watching on this TV.

# Troubleshooting

The TV will indicate any problems with the **STANDBY** indicator flashing in red.

## When the **STANDBY** indicator is flashing

The self-diagnosis function is activated.

- 1 Count how many times the **STANDBY** indicator flashes between each three second break.  
For example, the indicator may flash three times, go off for three seconds, then flash again three times.
- 2 Press **POWER** on the TV to turn it off, disconnect the AC power cord, and inform your dealer or Sony service center of how the indicator flashes (number of flashes).

## When the **STANDBY** indicator is not flashing

- 1 Check the items in the tables below. (Also refer to “Troubleshooting” in the i-Manual.)
- 2 If the problem persists, contact Sony Customer Support (information provided on the front cover).

| Condition  | Explanation/Solution   |
|--|--|
| <b>Picture</b>   |  |
| There is no picture (screen is dark) and no sound.                 | <ul style="list-style-type: none"><li>• Check the antenna/cable connection.</li><li>• Connect the TV to the AC power, and press <b>POWER</b> on the TV.</li><li>• If the <b>STANDBY</b> indicator lights up in red, press <b>POWER</b> on the remote control.</li></ul>  |
| Tiny black dots and/or bright dots appear on the screen.           | <ul style="list-style-type: none"><li>• The screen is composed of pixels. Tiny black dots and/or bright dots (pixels) on the screen do not indicate a malfunction.</li></ul>   |
| <b>General</b>   |  |
| The TV's power cannot be turned on. (for HX701 series models only) | <ul style="list-style-type: none"><li>• Check to see the (●) mark on the <b>ENERGY SAVING SWITCH</b> is pressed.</li></ul>   |
| The TV turns off automatically (the TV enters standby mode).       | <ul style="list-style-type: none"><li>• Check if the <b>Sleep Timer, Timer, or Idle TV Standby</b> is activated.</li><li>• The <b>Auto Shut-off</b> function may be set to <b>On</b>. If <b>Auto Shut-off</b> is activated and TV receives no signal, the TV will automatically enter standby mode in 15 minutes. Check <b>Auto Shut-off</b> is activated under <b>Eco</b> feature of this TV.</li></ul> |
| The remote does not function.                                      | <ul style="list-style-type: none"><li>• Replace the batteries.</li><li>• Your TV may be in <b>SYNC</b> mode. Press <b>SYNC MENU</b>, select <b>TV Control</b> and then select <b>Home (Menu)</b> or <b>Options</b> to control the TV.</li></ul>  |
| The “Parental Lock” password has been forgotten.                   | <ul style="list-style-type: none"><li>• Enter 4357 for the PIN code. (PIN code 4357 is always accepted.)</li></ul>   |



---

## How to Care for Your BRAVIA

Safety is very important, please read and follow the safety documentation (Safety Booklet) separately provided.

Unplug the TV and other connected equipment from the wall outlet before you begin cleaning your TV.

- Wipe the LCD screen gently with a soft cloth.
- Stubborn stains may be removed with a cloth slightly moistened with a solution of mild soap and warm water.
- If using a chemically pretreated cloth, please follow the instruction provided on the package.
- Never use strong solvents such as a thinner, alcohol or benzine for cleaning.
- Do not plug in the TV into the wall outlet until the moisture from cleaning has evaporated.

The TV should also be placed on a stable surface to prevent it from toppling over (see page 11). If you have young children or pets at home, check regularly to insure the TV is securely fastened.



# Specifications

| Model name KDL-                          | 55HX701  | 46HX701  | 40HX701  | 32EX308  | 22EX308   |
|--|--|--|--|--|---|
| <b>System</b>                            |  |  |  |  |   |
| Television system                        | NTSC: American TV standard<br>ATSC (8VSB terrestrial): ATSC compliant 8VSB<br>QAM on cable: ANSI/SCTE 07 2000 (Does not include CableCARD functionality)   |  |  |  |   |
| Channel coverage                         | Analog terrestrial: 2 - 69 / Digital terrestrial: 2 - 69<br>Analog Cable: 1 - 135 / Digital Cable: 1 - 135   |  |  |  |   |
| Panel system                             | LCD (Liquid Crystal Display) Panel   |  |  |  |   |
| Speaker output                           | 10 W + 10 W  |  |  |  |   |
| <b>Input/Output jacks</b>                |  |  |  |  |   |
| CABLE/ANTENNA                            | 75-ohm external terminal for RF inputs   |  |  |  |   |
| VIDEO IN 1/2                             | VIDEO / AUDIO  |  |  |  |   |
| COMPONENT IN 1/2                         | YPBPR (Component Video) / Signal format: 480i, 480p, 720p, 1080i, 1080p / AUDIO  |  |  |  |   |
| HDMI IN 1/2/3/4                          | HDMI: Video: 480i, 480p, 720p, 1080i, 1080p, 1080/24p<br>Audio: Two channel linear PCM 32, 44.1 and 48 kHz, 16, 20 and 24 bits, Dolby Digital AUDIO (HDMI IN 4)  |  |  |  |   |
| AUDIO OUT                                | 500 mVrms (typical)  |  |  |  |   |
| DIGITAL AUDIO OUT (OPTICAL)              | PCM/Dolby Digital optical signal   |  |  |  |   |
| PC IN                                    | D-sub 15-pin, analog RGB   |  |  |  |   |
| PC/HDMI 4 AUDIO INPUT                    | Stereo mini jack   |  |  |  |   |
| LAN                                      | 10BASE-T/100BASE-TX connector (Connection speed may differ depending on the network environment. 10BASE-T/100BASE-TX communication rate and communication quality are not guaranteed for this TV.) <sup>*1</sup> |  |  |  |   |
| USB/DLNA                                 | Refer to the i-Manual for supported format.  |  |  |  |   |
| <b>Power and others</b>                  |  |  |  |  |   |
| Power requirement                        | 120 V AC, 60 Hz  |  |  |  |   |
| Power consumption                        | 253 W  | 210 W  | 172 W  | 113 W  | 61 W  |
| in use                                   |  |  |  |  |   |
| in DAM <sup>*2</sup>                     | 13 W   | 12 W   | 11 W   | 11 W   | 9 W   |
| in standby                               | (You may hear a clicking noise during the download but this is normal.)<br>All models less than 0.12 W   |  |  |  | Less than 0.2 W   |
| Screen size (inches measured diagonally) | 54.6 inches (55 class)   | 46 inches  | 40 inches  | 31.5 inches (32 class)   | 21.6 inches (22 class)  |
| Display resolution                       | 1,920 dots (horizontal) × 1,080 lines (vertical)   |  |  | 1,366 dots (horizontal) × 768 lines (vertical)   |   |
| Speaker Full range with speaker box (2)  | 45 × 120 mm (1 <sup>13</sup> / <sub>16</sub> × 4 <sup>3</sup> / <sub>4</sub> inches)   | 34 × 105 mm (1 <sup>3</sup> / <sub>8</sub> × 4 <sup>1</sup> / <sub>4</sub> inches)   | 45 × 130 mm (1 <sup>13</sup> / <sub>16</sub> × 5 <sup>1</sup> / <sub>8</sub> inches)   | 40 × 100 mm (1 <sup>5</sup> / <sub>8</sub> × 4 inches)   |   |
| Dimensions withstand                     | 1,363 × 862 × 400 mm (53 <sup>3</sup> / <sub>4</sub> × 34 × 15 <sup>3</sup> / <sub>4</sub> inches)   | 1,154 × 741 × 370 mm (45 <sup>1</sup> / <sub>2</sub> × 29 <sup>1</sup> / <sub>4</sub> × 14 <sup>5</sup> / <sub>8</sub> inches) | 1,023 × 665 × 310 mm (40 <sup>3</sup> / <sub>8</sub> × 26 <sup>1</sup> / <sub>4</sub> × 12 <sup>1</sup> / <sub>4</sub> inches) | 800 × 532 × 220 mm (31 <sup>1</sup> / <sub>2</sub> × 21 × 8 <sup>3</sup> / <sub>4</sub> inches)                            | 551 × 402 × 215 mm (21 <sup>3</sup> / <sub>4</sub> × 15 <sup>7</sup> / <sub>8</sub> × 8 <sup>1</sup> / <sub>2</sub> inches) |
| without stand                            | 1,363 × 825 × 105 mm (53 <sup>3</sup> / <sub>4</sub> × 32 <sup>1</sup> / <sub>2</sub> × 4 <sup>1</sup> / <sub>4</sub> inches)  | 1,154 × 704 × 102 mm (45 <sup>1</sup> / <sub>2</sub> × 27 <sup>3</sup> / <sub>4</sub> × 4 <sup>1</sup> / <sub>8</sub> inches)  | 1,023 × 628 × 100 mm (40 <sup>3</sup> / <sub>8</sub> × 24 <sup>3</sup> / <sub>4</sub> × 4 inches)                              | 800 × 497 × 97 mm (31 <sup>1</sup> / <sub>2</sub> × 19 <sup>5</sup> / <sub>8</sub> × 3 <sup>7</sup> / <sub>8</sub> inches) | 551 × 367 × 82 mm (21 <sup>3</sup> / <sub>4</sub> × 14 <sup>1</sup> / <sub>2</sub> × 3 <sup>1</sup> / <sub>4</sub> inches)  |
| wall-mount hole pattern                  | 400 × 300 mm   |  |  | 200 × 200 mm   |   |
| wall-mount screw size                    | M6 (length: refer to diagram on page 13.)  |  |  |  | M4  |
| Mass with stand                          | 40.2/88.5 kg/(lb.)   | 28.4/62.6 kg/(lb.)   | 22.4/49.4 kg/(lb.)   | 11.0/24.3 kg/(lb.)   | 6.6/14.6 kg/(lb.)   |
| without stand                            | 34.4/75.8 kg/(lb.)   | 24.3/53.5 kg/(lb.)   | 19.2/42.3 kg/(lb.)   | 9.5/21.0 kg/(lb.)  | 6.0/13.3 kg/(lb.)   |
| Supplied accessories                     | See "Checking the accessories" (page 4).   |  |  |  |   |
| Optional accessories                     | Connecting cables / Support Belt Kit / Wall-Mount Bracket  |  |  |  |   |

\*1 For LAN connections, use a Category 7 10BASE-T/100BASE-TX cable (not supplied).

\*2 Download Acquisition Mode (DAM) is used for software updates and/or collecting data for TV Guide On Screen.

- Optional accessories availability depends on its stock.
- Design and specifications are subject to change without notice.

## Declaration of Conformity

Trade Name: SONY  
Model: KDL-55HX701/KDL-46HX701/KDL-40HX701/  
KDL-32EX308/KDL-22EX308  
Responsible Party: Sony Electronics Inc.  
Address: 16530 Via Esprillo,  
San Diego, CA 92127 U.S.A.  
Telephone Number: 858-942-2230

This device complies with part 15 of the FCC rules.  
Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received,  
including interference that may cause undesired  
operation.

## For customers in Canada

This Class B digital apparatus complies with Canadian  
ICES-003.

## FCC Related Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Pursuant to FCC regulations, you are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

## Safety and Regulatory

To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

Only use Wireless LAN indoors when using it with IEEE 802.11a/n (5 GHz).

High power radars are allocated as primary users (meaning they have priority) of 5250-5350 MHz and 5650-5850 MHz and these radars could cause interference and/or damage to this device.

This device uses 5 GHz band for wireless LAN communication and the maximum gain of the antenna in this device is 6 dBi.

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body (excluding extremities: hands, wrists and feet). This device and its antenna(s) must not be colocated or operating with any other antenna or transmitter except Grant condition.

## Note

This television includes a QAM demodulator which should allow you to receive unscrambled digital cable television programming via subscription service to a cable service provider. Availability of digital cable television programming in your area depends on the type of programming and signal provided by your cable service provider.

## Compatible Wall-Mount Bracket Information

Use the following Sony Wall-Mount Bracket with your TV model.

| Sony TV Model No.  |             |          |
|--|-------------|----------|
| KDL-55HX701<br>KDL-46HX701<br>KDL-40HX701<br>KDL-32EX308 | KDL-22EX308 |          |
| Sony Wall-Mount Bracket Model No.                        | SU-WL500    | SU-WL100 |

Use with other Wall-Mount Brackets may cause instability and could result in property damages or injury.

## To Customers

Sufficient expertise is required for TV installations. Be sure to subcontract the installation to a Sony dealer or licensed contractor and pay adequate attention to safety during the installation.

## For Customers in the United States

Lamp in this product contains mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance ([www.eiae.org](http://www.eiae.org)).









## For Your Convenience

|                             |   |
|-----------------------------|---|
| <b>Online Registration:</b> | Be sure to register your TV.<br><b>United States</b> <a href="http://productregistration.sony.com">http://productregistration.sony.com</a><br><b>Canada</b> <a href="http://www.SonyStyle.ca/registration">http://www.SonyStyle.ca/registration</a>   |
| <b>Software Updates:</b>    | Your TV is capable of receiving software updates. For the latest information about software updates for your TV, visit:<br><b>United States</b> <a href="http://www.sony.com/tvsupport">http://www.sony.com/tvsupport</a><br><b>Canada</b> <a href="http://www.sony.ca/support">http://www.sony.ca/support</a><br><br>NOTE: If your TV is connected to the Internet, you can check for software updates by selecting <b>Settings, Product Support</b> and then <b>Automatic Software Update</b> . |



### Mixed Sources

Product group from well-managed forests, controlled sources and recycled wood or fiber

Cert no. SCS-COC-001395  
[www.fsc.org](http://www.fsc.org)

© 1996 Forest Stewardship Council

<http://www.sony.net/>

© 2010 Sony Corporation Printed in U.S.A.



4 176 350 131



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>