

# SONY®

## KD-32NX200U KD-36NX200U

# Quick Start Guide

Thank you for choosing this Sony Trinitron Television.

This step by step guide will help you to:

Insert batteries into the remote control.


Connect the aerial to your TV.

Connect a video cassette recorder (VCR) to your TV.

Switch on your TV.

Tune your TV.

View TV programmes.

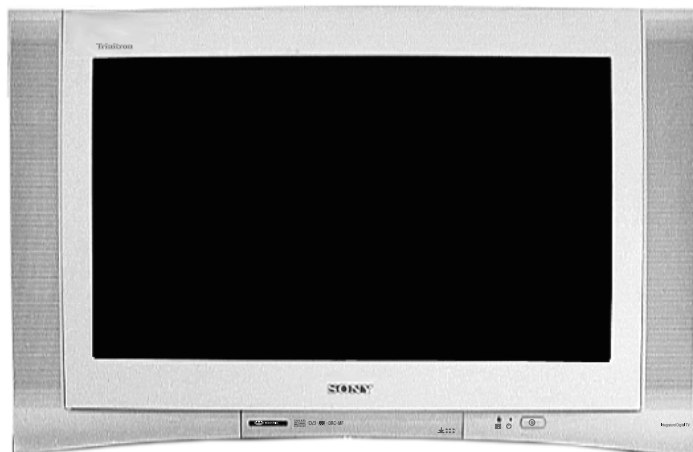


### FD Trinitron WEGA

# 1

## Checking the supplied accessories



Remote Control

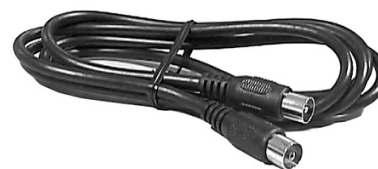

RF Loopthrough cable



Batteries

# 2

## Inserting batteries into the remote control




1

Place a coin in the slot at the bottom of the remote control. Turn anti clockwise to release the battery compartment.



2

Insert the batteries as indicated in the battery compartment.

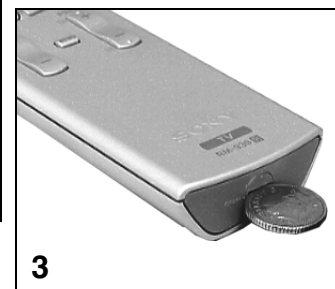

3


Replace the battery compartment and lock in place by twisting the coin clockwise in the slot.

 
 

Always remember to dispose of batteries in an environmentally friendly way.

# 3


## Connecting the TV

 
 

 
### Connecting an aerial only

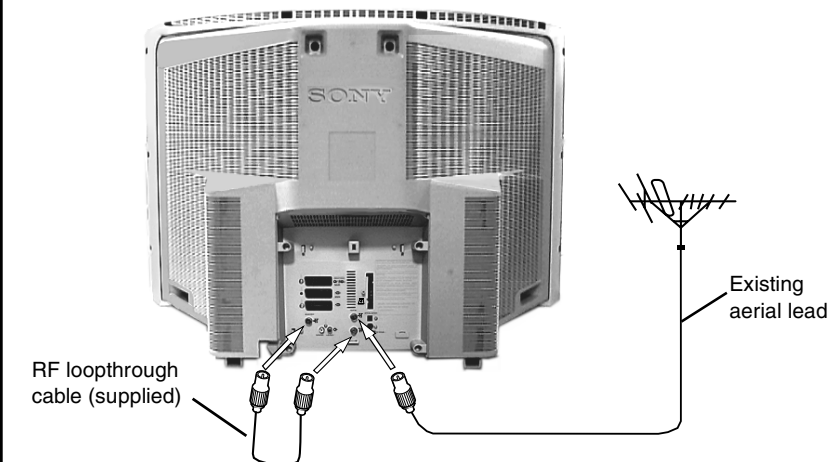

1. Connect your existing aerial lead to the digital socket marked  on the rear of the TV as shown.
2. Connect the supplied RF loopthrough cable from the socket marked  to the analogue socket marked .


### Connecting an aerial and VCR

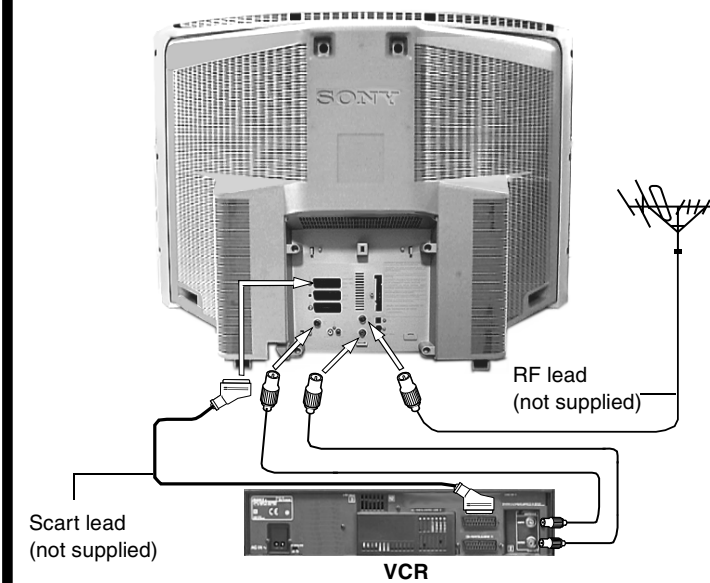

1. Connect your existing aerial lead to the digital socket marked  on the rear of the TV as shown.
2. Connect the supplied RF loopthrough cable from the lower socket marked  on the TV to the RF IN socket on your VCR.
3. Connect a lead from the RF OUT socket of your VCR to the analogue socket marked  on the TV.
4. Connect a scart lead from the socket marked  on the rear of the TV to the scart socket on your VCR (refer to your VCR instruction manual).
5. Connect the VCR to the mains socket and switch on.
6. Insert a pre-recorded tape into the VCR and press the 'PLAY' button. This enables the TV to locate and store the video channel during the 'Automatically tuning the TV' procedure.

 
# 4

 
## Switching on the TV

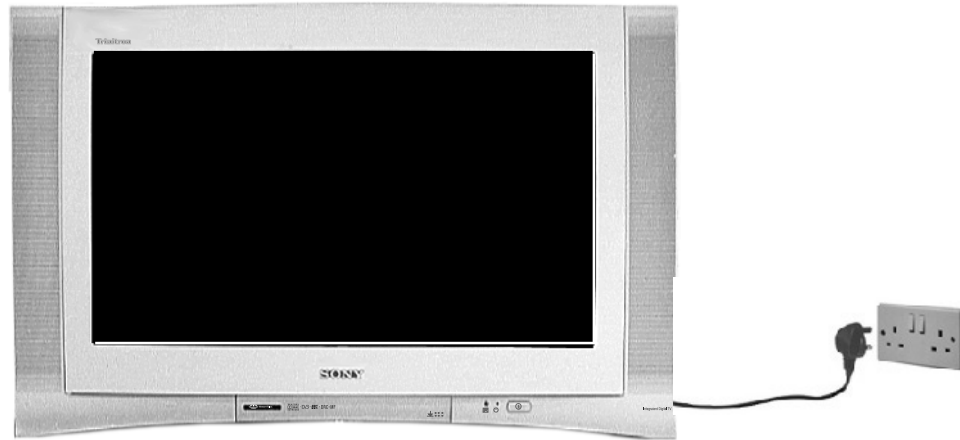

1. Connect the TV plug to your mains socket and switch on.




1. Push in the on/off button (labelled ) on the front of the TV.


 
 

**Note:** If the red indicator on the front of the TV is lit the TV is in standby mode. Press the TV  button on the remote control to switch on the TV. Please be patient as the picture may take a few moments to appear on screen.

# 5

## Automatically tuning the TV

 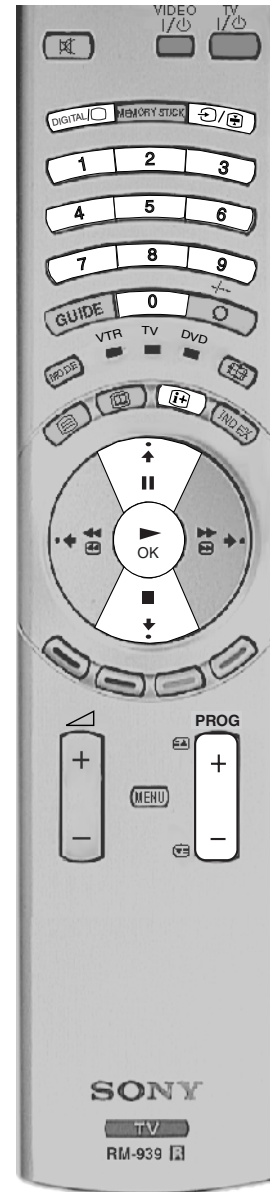


When you first switch on your new TV you need to tune in all the available channels. The 'Auto Tune' feature automatically searches for and stores all the available channels for you. The following instructions and illustrations guide you through this procedure.



1. When you switch on the TV for the first time, the Sony logo appears on the TV screen followed by the 'Memory Stick' logo, then the Language/Country menu with the word 'English' highlighted. Press the  or  buttons on the remote control to highlight your required language. Press the **OK** button to confirm your choice. From now on all menus appear in your chosen language.
2. The word Country is now highlighted. Press the  or  buttons to highlight the country in which you are using the TV. Press the **OK** button to confirm your choice.

**Note:** The digital features of this set are designed for use in Great Britain only.

The picture rotation prompt appears. Sometimes the Earth's natural magnetism can cause the screen to look tilted.

- a) If no correction is required, press the  button.
- b) If some correction is required, press the **OK** button. Press the  or  button to rotate the picture over a range of -5 to +5. Press the **OK** button to store.

The autotune prompt screen appears. Press the **OK** button to select Yes and begin the digital autotune procedure. When all the available digital programmes are found, the analogue tuning display appears and all the analogue signals are captured and stored.


If no digital and no analogue signals are found, a display appears on screen asking you to confirm your aerial is connected. Check your aerial is connected then press the **OK** button to repeat the tuning procedure.

Once all signals have been captured and stored, the TV returns to normal operation and displays the digital programme captured on programme number 1.

**Note:** If no digital signals are captured, then the analogue programme stored on programme number 1 is displayed.

3. To view programmes, press the **PROG+/-** button or the numbered buttons on the remote control.

### Switching between digital and analogue mode

 
1. Press the **DIGITAL/**  button on the remote control to switch between digital and analogue mode.

**Notes:** If the TV is in digital mode an information banner appears briefly on screen when you change channels.

 

If the TV is in analogue mode the channel number appears in green lettering when you change channels.

### Finding your video channels

If you connected a VCR to your TV when following the 'Connecting the TV' instructions, you now need to find your video channel.


1. Ensure the TV is in analogue mode. If not press the **DIGITAL/**  button on the remote control.
2. Press the **PROG+/-** button on the remote control until the picture from the pre-recorded tape appears on screen.

**Notes:** If you wish to move your video channel to a different programme number, refer to the 'Rearranging your channels' section of this manual.

If you have connected your VCR using a Scart lead, press the  /  button repeatedly on the remote control until the picture from the pre-recorded tape appears on the TV screen.

**The TV has now tuned in all the available channels and is ready for use.**

Language/Country menu

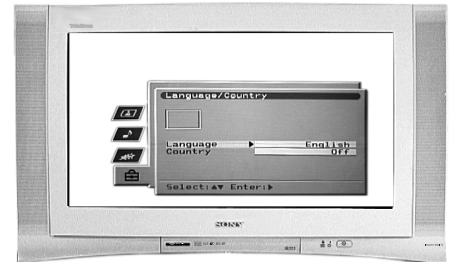

Picture Rotation prompt



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>