 


Radio Cassette-Corder

Operating instructions
使用說明書



Sony Corporation ©2000 Printed in Malaysia

WALKMAN is a registered trademark of Sony Corporation.

Sony online http://www.world.sony.com/

The CE mark on the unit is valid only for products marketed in the European Union.

機器上的 CE 標誌限在歐洲聯盟出售的產品有效。

This warranty is valid only in the United States.
本保証限在美國有效。

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

警告

為防火災或觸電危險，切勿讓機器暴露於雨中或潮濕處。

 
For the customers in the United States

Owner's Record
The model number is located at the front and the serial number is located inside the tape holder. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. This limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


A

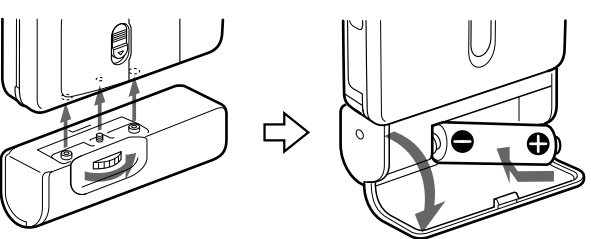


B




 
C

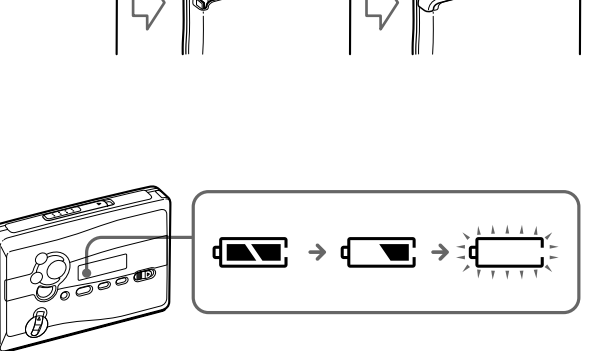


D

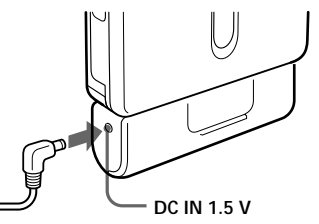 

E

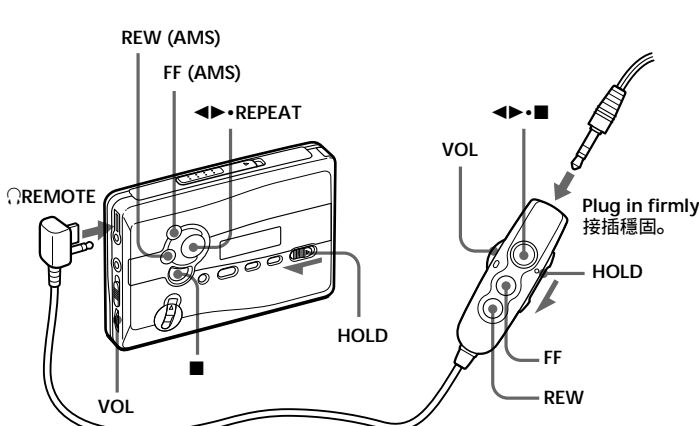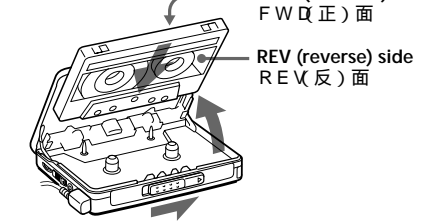  

F

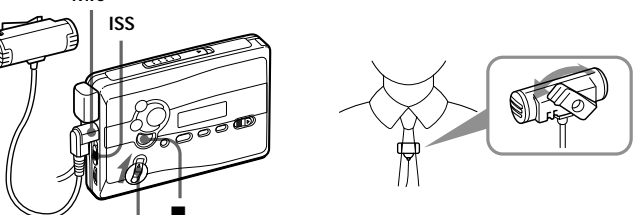 

G



English

Preparations

Prepare a dry battery (not supplied) or the rechargeable battery (supplied).

Dry Battery A

Attach the supplied battery case, and then insert one R6 (size AA) battery with correct polarity.

Note

- For maximum performance we recommend that you use a Sony alkaline battery.

Rechargeable Battery B

- Insert the supplied rechargeable battery (NC-6WM) into the charger with correct polarity. See the ⊕ and ⊖ indications on your charger.
- Plug in the charger to the house current (mains). Full charging time depends on the model and the voltage of your mains.

Full charging time (Approx. hours)

U.K., Australian, and Hong Kong model	3.5
U.S.A., Canadian, European Continent, and Saudi Arabian model	2.5
Korean model	110 V: 10 220 V: 2.5
Other models	120 V: 10 220 - 240 V: 2.5

- If the plug does not fit to your mains, attach the supplied AC plug adaptor (Saudi Arabian model only).
- Insert the fully charged battery into the rechargeable battery compartment.

You can charge the battery about 300 times.

When to replace/charge the battery C

Replace or charge the battery when "□" flashes in the display.

Battery life (Approx. hours) (EIA)**

Sony alkaline LR6 (SG)**	
Tape playback	31.5
Radio reception	32
MIC recording	10
Radio recording	6.5

Rechargeable battery (NC-6WM)

Tape playback	8.5
Radio reception	10
MIC recording	4
Radio recording	3

Sony alkaline LR6 (SG)** and Rechargeable NC-6WM

Tape playback	40
Radio reception	42
MIC recording	13
Radio recording	9

 
* Measured value by the standard of EIAJ (Electronic Industries Association of Japan). (Using a Sony HF series cassette tape)
**When using a Sony LR6 (SG) "STAMINA" alkaline dry battery (produced in Japan).

Note

- The battery life may be shorter depending on the operating condition, the surrounding temperature and battery type.

House Current D

Remove the rechargeable battery if inserted. Attach the battery case and connect the AC power adaptor AC-E15HG (not supplied) to the DC IN 1.5 V jack of the battery case and to the wall outlet. Do not use any other AC power adaptor. Specifications for AC-E15HG vary for each area. Check your local voltage and the polarity of the plug before purchasing.



Playing a Tape E

- Insert a cassette and if the HOLD function is on, slide the HOLD switch in the opposite direction of the arrow to unlock the controls.
- Press ◀▶(play) •■(stop) on the remote control and adjust the volume with VOL. (On the main unit, press ◀▶•REPEAT.)

When adjusting the volume on the remote control
Set the VOL control on the main unit to around 6.

When adjusting the volume on the main unit
Set the VOL control on the remote control at maximum.

Operation on the remote control

To	Press
Switch playback to the other side	◀▶•■ for 2 seconds or more
Stop playback	◀▶•■ once during playback

Operation on the main unit

To	Press
Switch playback to the other side	◀▶•REPEAT during playback
Stop playback	■ (stop)

To cancel the A-B Repeat playback
Press ◀▶•REPEAT on the main unit.
On the remote control, press ◀▶•■.

Other tape operations

To	Press
Fast forward	FF during stop* or during playback During playback, the tape is fast-forwarded as long as FF is pressed ("Free Search").
Rewind	REW during stop* or during playback During playback, the tape is rewound as long as REW is pressed ("Free Search").

Play the next track/succeeding 9 tracks from the beginning (AMS**)

Play the current track/previous 8 tracks from the beginning (AMS**)

Play the other side from the side from the beginning (skip Reverse function)

Play the same side from the beginning (Rewind Auto Play function)

* If ◀▶•■ on the remote control is pressed during fast forward or rewind, the Walkman switches to playback.

**Automatic Music Sensor

A-B Repeat

A-B Repeat plays back repeatedly any portion of the tape you specified. Specify by tagging the beginning (point A) and the end (point B) of the portion during playback.

On the main unit

- Press ◀▶•REPEAT for 2 seconds or more during playback to tag point A. "A" will flash in the display of the main unit.
- Press ◀▶•REPEAT again to tag point B. "A-B" will flash and the tape will be rewound to point A. Then "REP" appears in the display and the specified portion is played repeatedly.

On the remote control

- Press ◀▶•■ twice quickly during playback to tag point A.
- Press ◀▶•■ once more to tag point B. The tape will be rewound to point A. Then the specified portion is played repeatedly.

To cancel the A-B Repeat playback
Press ◀▶•REPEAT on the main unit.
On the remote control, press ◀▶•■.

Notes

- You cannot specify a repeat portion to include both sides of the tape.
- You cannot specify a repeat portion of shorter than 2 seconds.
- After repeated operation, the actual portion that is played back may shift off somewhat from the exact portion specified with the tags due to tape slack.
- A-B Repeat will repeat 50 times before returning to normal playback if not canceled manually.
- Do not use the A-B Repeat function with tapes longer than 90 minutes. If you do, the tape may be damaged.

Recording F

You can record radio programs from the built-in radio, or record with the supplied microphone. In either case, use a new or fully charged battery.

Note

- If the record-protect tab is broken, you cannot record on that side.
- Insert a normal (TYPE I) tape.
To record on both sides
Insert the cassette with the side to be first recorded on as the FWD (forward) side*.
* Make sure that "FWD" is displayed. If not, press and hold ■ until "REV" changes to "FWD".
- To record on one side only
Insert the cassette with the side to be recorded on as the REV (reverse) side**.
**Make sure that "REV" is displayed. If not, press and hold ■ until "FWD" changes to "REV".
- To avoid noise interference, do not place it near a lamp cord or a fluorescent lamp when recording with the microphone.
- If a howling effect occurs, turn down the volume.
- All other operation cannot be made while recording. For other operation, stop recording first.

To prevent a tape from being accidentally recorded over G

Break off the tabs from side A and/or B. To reuse the tape for recording, cover the tab hole with adhesive tape.

To record from the radio

Tune in to the station you want to record (see "Listening to the Radio").

- Slide REC. "REC" appears in the display and recording starts after about two seconds. If you have started recording from the FWD side, recording will switch to reverse side automatically at the end of the FWD side.

To stop recording

Press ◀ (on the remote control, press ◀▶•■) to stop recording).

To reduce noise while recording AM programs

Set the ISS (Interference Suppress Switch) to the position that reduces noise the most.

To monitor the recording sound

You can monitor the recording sound through headphones/earphones. Adjust monitoring level using VOL.

Note

- You may hear some noise in the monitor sound in the RV, MB, or GRV mode, but this does not affect recording.

Notes on recording

- The recording level is fixed.
- Sound emphasis (RV, MB, or GRV), AVLS and Dolby B NR settings do not affect recording.
- Actual recording will start about 2 seconds after you slide REC. Slide REC about 2 seconds before the moment you want to start recording, or you will miss the beginning of your recording.
- When recording on both sides, recording will not be made for about 10 seconds while the tape is switching sides.
- Do not use a high-position (TYPE II) or metal (TYPE IV) tape. If you do, the sound may be distorted when you play back the tape, or the previous recording may not be erased completely.
- Do not connect or disconnect the headphones/earphones to/from REMOTE while recording from the radio. The recording condition may change abruptly, or noise may be recorded.

When adjusting the volume on the remote control

Set the VOL control on the main unit to around 6.

When adjusting the volume on the main unit

Set the VOL control on the remote control at maximum.

Operation on the remote control

To	Press
Switch playback to the other side	◀▶•■ for 2 seconds or more
Stop playback	◀▶•■ once during playback

Operation on the main unit

To	Press
Switch playback to the other side	◀▶•REPEAT during playback
Stop playback	■ (stop)

To cancel the A-B Repeat playback
Press ◀▶•REPEAT on the main unit.
On the remote control, press ◀▶•■.

中文

準備工作

準備乾電池 (無附帶) 或充電電池 (附帶)。

乾電池 A

安裝附帶的電池盒，然後對正確極性裝入一節 R6 (A-A, 3號) 電池。

註

- 為獲得最佳效果，建議您使用 Sony 牌乾電池。

充電電池 B

- 以正確極性將附帶的充電電池 (NC-6WM) 裝入充電器。請注意充電器上的 ⊕、⊖ 指示。
- 把充電器插接到家庭用電源插座。充滿電時間因機器型號和電源電壓而異。

其他型號	大約時數
英國、澳大利亞、和香港型號	3.5
美國、加拿大、歐洲大陸和沙地阿拉伯型號	2.5
朝鮮型號	110 V: 10 220 V: 2.5
其他型號	120 V: 10 220-240 V: 2.5

如果插頭不適合電源插座，即請裝用附帶的 A C 插頭轉接器 (僅限於沙地阿拉伯型號)。

何時更換電池 / 給電池充電 C

"□" 在顯示窗中閃爍時，即請更換電池或給電池充電。

電池壽命 (大約時數) (EIA)**

Sony 城電池 LR6 (SG)**	
錄音帶收音機	31.5
收音機錄音	6.5

充電電池 (NC-6WM)

錄音帶收音機	8.5
MIC 錄音	4
收音機錄音	3

同時使用 Sony 城電池 LR6 (SG)** 和充電電池 NC-6WM

錄音帶收音機	40
MIC 錄音	13
收音機錄音	9

其他磁帶操作

要	請按
快速繞	停止中* 或播放中，請按 FF 播放中，只要按 FF，磁帶便將繼續快速繞 ("自由尋找")。

重繞

停止中* 或播放中，請按 REW
播放中，只要按 REW，磁帶便將繼續進行重繞 ("自由尋找")。

從頭播放下一曲 / 按下 9 首曲子 (AMS)

從頭播放現在收音中曲子 / 前面 8 首曲子 (AMS)

從頭播放另外一面 (跳越倒繞功能)

從頭播放同一面 (重繞自動以上播放功能)

* 如果在快速繞或重繞過程中按了遙控器上的 ◀▶•■，Walkman 將轉接為收音。

**自動樂曲探測

A-B 反復

A-B 反復功能反復播放您所指定的錄音帶的任一部份。請在收音中標記該部分的始點 (A 點) 和終點 (B 點)。

在主機上

- 在收音中按 ◀▶•REPEAT 鍵 2 秒鐘以上標記 A 點。
"A" 將閃爍於主機的顯示窗中。
- 再按一下 ◀▶•REPEAT 鍵標記 B 點。
"A-B" 將閃爍，錄音帶被捲繞到 A 點。隨後 "REP" 出現在顯示窗中，反復播放所指定的部分。

在遙控器上的操作

要	請按
換播放另一面	播放中按 ◀▶•■ 2 秒以上

停止播放

播放中按一次	◀▶•■
--------	------

在主機上的操作

要	請按
換播放另一面	播放中按 ◀▶•REPEAT

停止播放

按前 ■ (停止)	
-----------	--

同時使用 Sony 城電池 LR6 (SG)** 和充電電池 NC-6WM
錄音帶收音機 40
MIC 錄音 13
收音機錄音 9

要

要	請按
快速繞	停止中* 或播放中，請按 FF 播放中，只要按 FF，磁帶便將繼續快速繞 ("自由尋找")。

重繞

停止中* 或播放中，請按 REW
播放中，只要按 REW，磁帶便將繼續進行重繞 ("自由尋找")。

從頭播放下一曲 / 按下 9 首曲子 (AMS)

從頭播放現在收音中曲子 / 前面 8 首曲子 (AMS)

從頭播放另外一面 (跳越倒繞功能)

從頭播放同一面 (重繞自動以上播放功能)

* 如果在快速繞或重繞過程中按了遙控器上的 ◀▶•■，Walkman 將轉接為收音。

**自動樂曲探測

A-B 反復

A-B 反復功能反復播放您所指定的錄音帶的任一部份。請在收音中標記該部分的始點 (A 點) 和終點 (B 點)。

在主機上

- 在收音中按 ◀▶•REPEAT 鍵 2 秒鐘以上標記 A 點。
"A" 將閃爍於主機的顯示窗中。
- 再按一下 ◀▶•REPEAT 鍵標記 B 點。
"A-B" 將閃爍，錄音帶被捲繞到 A 點。隨後 "REP" 出現在顯示窗中，反復播放所指定的部分。

在遙控器上的操作

要	請按
換播放另一面	播放中按 ◀▶•■ 2 秒以上

停止播放

播放中按一次	◀▶•■
--------	------

在主機上的操作

要	請按
換播放另一面	播放中按 ◀▶•REPEAT

停止播放

按前 ■ (停止)	
-----------	--

要解除 A-B 反復收音時
請按主機上的 ◀▶•REPEAT 或按遙控器上的 ◀▶•■。

註

- 您不能指定跨越錄音帶兩面的重複部分。
- 您不能指定短於 2 秒鐘的重複部分。
- 在反復操作之後，由於錄音帶的鬆弛，實際播放的部分可能和所標記指定的部分稍有不同。
- 在恢復普通收音之前，如果不手動取消 A-B 反復將重複 5 次。
- 請勿用長度 9 分鐘以上的磁帶來使用 A-B 反復功能。否則，該磁帶可能會損壞。

錄音 G

您可以從內置的收音機錄製廣播節目，也可以使用附帶的麥克風進行錄音。不管是哪種情況，都請使用新的或充足了電的電池。

註

- 如果在 RV MB 或 GRV 方式下，您可能在監聽的聲音中聽到一些噪音，但這並不影響錄音。

錄音須知

- 錄音電平被固定。
- 聲音增強功能 (RV MB 或 GRV AVLS 和 Dolby B NR) 不影響錄音。
- 實際錄音將在您滑動 REC 的 2 秒鐘之後開始。請在您要開始錄音時刻的約 2 秒鐘之前滑動 REC 否則您將錯過錄音的開始部分。
- 在兩面錄音時，在錄音帶換面過程中，錄音將有約 10 秒鐘不進行。
- 請勿用高位 (TYPE I) 或金屬 (TYPE II) 型的錄音帶錄音。否則播放錄音帶時聲音可能會失真，以前的錄音內容也可能不會被完全抹消。
- 從收音機錄音時，請勿將耳機接到 / 拔出 REMO 插孔。否則錄音條件可能會突然改變，也可能錄下噪音。
- 用麥克風錄音時，請勿將麥克風靠近電燈線或日光燈，以避免噪音干擾。
- 如果發生嘔吐，請調低音量。
- 在錄音時所有其他操作都無法進行。要進行其他操作，請先停止錄音。

要防止錄音帶被誤錄時 H

請折斷 A 面和 / 或 B 面的防誤抹小翼。要重新用該錄音帶錄音，用膠帶蓋住折斷防誤抹小翼後的缺口。

要從收音機錄音時

請調入您想錄音的電臺 (參見 "聽收音機")。

滑動 REC

"REC" 即出現於顯示窗中，約 2 秒鐘之後，開始錄音。如果您是從 FW 面開始錄音的，在錄完 FW 面時，錄音將自動轉換到反面。

要解除 A-B 反復收音時

請按主機上的 ◀▶•REPEAT 或按遙控器上的 ◀▶•■。

要停止錄音時

請按 ■ (或按遙控器上的 ◀▶•■) 以停止錄音。

 
要在錄 A M 節目時減小噪聲

請將 ISS 干擾抑制開關設定於能將噪聲減至最小的位置。

要監聽錄音中的聲音

您可以用頭戴式耳機 /

H

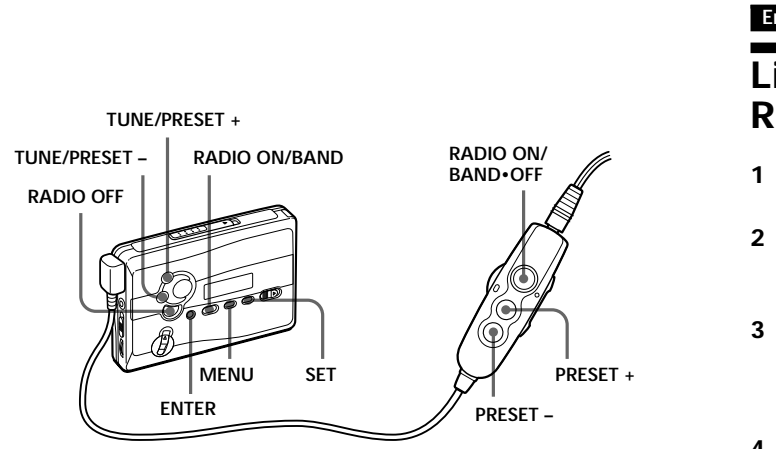

English

Listening to the Radio

- Press RADIO ON/BAND to turn on the radio.
- Press RADIO ON/BAND repeatedly to select AM, FM1, or FM2.
- Press MENU on the main unit repeatedly and set " " (the cursor) in the display to TUNE MODE.

For manual tuning

- Press SET to choose MANUAL.
- Press TUNE/PRESET+ or - repeatedly to tune in to the desired station. Hold down TUNE/PRESET+ or - for a few seconds to scan for stations.

For preset tuning

- Press SET to choose PRESET.
- Press TUNE/PRESET+ or - repeatedly to recall the desired preset station. To use preset tuning, preset stations first (see "Presetting Radio Stations").

To turn off the radio

Press RADIO OFF.

To improve the broadcast reception

- For AM:** Reorient the unit itself.
- For FM:** Extend the remote control cord (antenna). If the reception is still not good, press MENU repeatedly to set the cursor in the display to FM MODE. Then press SET to choose from "MONO" (monaural), "LOCAL" or none (stereo) for best reception.

To operate from the remote control

To turn on the radio, press RADIO ON/BAND•OFF for more than one second (while the tape is in stop mode only). To select the band, press RADIO ON/BAND•OFF for more than one second while the radio is on. To tune in or recall a preset station, press PRESET+ or -. To turn off the radio, press RADIO ON/BAND•OFF.

Presetting Radio Stations

You can store radio stations into the unit's memory. You can preset up to 32 stations—12 each for FM1 and FM2 and 8 for AM (for the Jp area*, up to 16 stations—8 each for FM and AM).

* See "Receiving Stations Outside Your Country" (Excluding European, Saudi Arabian, and Chinese model).

Tuning in to and Storing Radio Stations Automatically (Auto-Memory Scanning function)

- Press RADIO ON/BAND to turn on the radio.
- Press RADIO ON/BAND repeatedly to select AM, FM1, or FM2.
- Press ENTER until "A" appears in the display. The Walkman starts searching and storing stations. Then the preset number appears.

Note

- Do not remove the power sources until all the stations are stored.

Storing Radio Stations Manually (Manual-Memory function)

You can preset the stations in any order.

- Press RADIO ON/BAND to turn on the radio.
- Press RADIO ON/BAND repeatedly to select AM, FM1, or FM2.
- Press ENTER. The frequency digits will flash in the display.
- Press TUNE/PRESET+ or - repeatedly to tune in to the desired station and press ENTER. The preset number will flash in the display.
- Press TUNE/PRESET+ or - repeatedly to select the desired preset number and press ENTER. The station is preset to the number of your choice.

Notes

- If you cannot complete step 4 or 5 while the indications are flashing, repeat from step 3.
- If you preset a new station to the same preset number, the previously stored station will be erased.

To cancel the stored station

Follow the procedure above and in step 4, instead of tuning in to a station, press and hold TUNE/PRESET+ or - until "----" is displayed. Press ENTER while "----" is flashing. The preset number will flash in the display. Press TUNE/PRESET+ or - repeatedly to select the preset number you want to cancel and press ENTER.

Receiving Stations Outside Your Country (Excluding European, Saudi Arabian, and Chinese model)

- Press RADIO ON/BAND to turn on the radio.
- Press ENTER. The frequency digits will flash in the display.
- Press and hold RADIO ON/BAND until "Eur", "Jp", or "USA" flashes.
- Press RADIO ON/BAND repeatedly to select "Eur", "Jp", or "USA" and press ENTER.
- Tune in to and store stations as necessary following the procedure of "Listening to the Radio" and "Presetting Radio Stations".

Area indication and frequency range

Area*	Frequency range FM (MHz)	AM (kHz)
Eur	87.5 - 108	531 - 1 602
Jp	76 - 90	531 - 1 710
USA	87.5 - 108	530 - 1 710

* Eur :European and other countries
Jp :Japan
USA :USA, Canada, and Central and South America

Using the Menu

Adjusting playback modes

To select playback direction mode Press MENU repeatedly to set the cursor in the display to PB MODE. Then press SET to select the desired mode.

To play	Select
both sides repeatedly	↔
both sides once	↔

To play a tape recorded with Dolby® B NR system

Press MENU repeatedly to set the cursor in the display to PB NR (Dolby noise reduction). Then press SET to show "NR".

* Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Emphasizing Sound

- Press MENU repeatedly to set the cursor in the display to SOUND.
- Press SET repeatedly to select the sound emphasis of your choice.
 - RV : Sound Revitalizer. Emphasizes treble sound.
 - MB : Mega Bass. Emphasizes bass sound (moderate effect).
 - GRV : Groove. Emphasizes bass sound (strong effect).
- no message : normal (no effect).

Note

- If the sound is distorted with the mode "GRV", turn down the volume of the main unit or select other modes.

Protecting Your Hearing — AVLS (Automatic Volume Limiter System)

Press MENU repeatedly to set the cursor to AVLS in the display. Then press SET to show "AVLS".

To cancel the AVLS function

Press SET so that "AVLS" disappears.

Note

- The AVLS setting will be canceled when you replace the battery.

Using Other Functions

Locking the Controls — HOLD Function

Slide the HOLD switch in the direction of the arrow to lock the controls of the Walkman or the remote control.

To use the tape counter

The tape counter is displayed on the main unit during playback, recording, fast forward, rewind, and stop (except when the radio is turned on). The number will increase when playing back the FWD side, and decrease when playing back the REV side. To reset the counter to "000", press ENTER/COUNTER RESET.

Notes

- The tape counter may show some deviation.
- The tape counter will not be displayed when the cassette compartment is empty.

Precautions

For the customers in the U.S.A. and Canada RECYCLING NICKEL-CADMIUM BATTERIES

Nickel-Cadmium batteries are recyclable. You can help preserve our environment by returning your unwanted batteries to your nearest point for collection, recycling or proper disposal.

Note: In some areas the disposal of nickel-cadmium batteries in household or business trash may be prohibited. RBRC (Rechargeable Battery Recycling Corporation) advises you about spent battery collection by the following phone number: Call toll free number: 1-800-822-8837 (United States and Canada only) (United States: Do not handle damaged or leaking nickel-cadmium batteries.)

On rechargeable battery and charger

- Remove the charger unit from the wall outlet as soon as possible after the rechargeable battery has been charged. Overcharging may damage the rechargeable battery.
- The battery charger and the rechargeable battery may become warm during charging, but this is not a problem.
- Do not tear off the film on the rechargeable battery.
- Use only the supplied battery charger to charge the supplied rechargeable battery.
- Be sure not to short-circuit the battery.
- When you carry it with you, use the supplied carrying case. If you are not using the case, do not carry the battery with other metallic objects such as keys, rings in your pocket.
- If the rechargeable battery is new or has not been used for a long time, it may not be charged completely until you use it several times.
- The nameplate indicating the operating voltage, power consumption, etc. is located on the bottom exterior of the battery charger.

On batteries

- Do not charge a dry battery.
- Do not carry the dry or rechargeable batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.
- When you do not use the Walkman for a long time, remove the battery to avoid any damage caused by battery leakage and subsequent corrosion.

On the unit

- Do not drop the unit or give a shock to the unit, or it may cause a malfunction.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or in a car with its windows closed.
- The LCD display may become hard to see or slow down when using the unit at high temperatures (above 40°C/104°F) or at low temperatures (below 0°C/32°F). At room temperature, the display will return to its normal operating condition.
- If the unit has not been used for long period of time, set it in the playback mode and warm it up for a few minutes before you start using again.

On tapes longer than 90 minutes

We do not recommend the use of tapes longer than 90 minutes except for a long continuous recording or playback. They are very thin and tend to be stretched easily.

On the remote control

Use the supplied remote control only with this unit.

On headphones/earphones

Do not use headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

Do not use headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use. You should exercise extreme caution or discontinue use in potentially hazardous situations.

On maintenance

To clean the tape head and path

Use the cleaning cassette CHK-1W (not supplied) every 10 hours of use. Use only the recommended cleaning cassette.

To clean the exterior

Use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner. Clean the headphones/earphones and remote control plugs and the terminals periodically with a cotton swab or a soft cloth as illustrated.

Troubleshooting

The sound drops out or comes with excessive noise.

- Clean the headphones/earphones and remote control plugs.

The unit does not operate at all.

- Charge the battery or replace the dry battery with a new one.
- HOLD is activated. Deactivate HOLD.

Tape operation is not possible.

- Insert a cassette tape.

The volume cannot be turned up.

- If AVLS is on, turn it off.

A beep sounds and recording is not possible when REC is slid.

- If the tab of the tape is broken off, cover the tab hole with adhesive tape.

The display and the operations are not normal.

- Remove the power sources for 15 seconds or more, and then set them again.

The radio and playback operates but recording is not possible.

- This condition may occur when the battery becomes weak. Replace or charge the battery.

Specifications

Radio section
Frequency range
FM: 87.5 - 108 MHz
AM: 530 - 1 710 kHz (North, Central, and South America)
531 - 1 602 kHz (other countries)

Tape section

Frequency response
(Dolby NR off)
Playback: 40 - 15 000 Hz
Recording/playback: 100 - 8 000 Hz

Output

Headphones (REMOTe) jack
Load impedance: 8 - 300 Ω

Input

Microphone (MIC) jack

General

Power requirements
1.5 V
Rechargeable battery
One R6 (size AA) battery

Dimensions (w/h/d)

Approx. 108.4 × 77.7 × 23.0 mm (4 1/4 × 3 1/4 × 1 inches)

Design and specifications are subject to change without notice.

聽收音機

- 按 RADIO ON/BAND 打開收音機。
- 反復按 RADIO ON/BAND 選擇 AM FM 或 FM2
- 反復按主機上的 MENU 將主機顯示窗中的 " " (光標) 設為 TUNE MODE
- 要手動調臺時
 - 按 SE 選擇 MANUAL
 - 反復按 TUNE/PRESET 或 - 調入所要的電臺。

要預約電臺時

- 按 SE 選擇 PRESET
- 反復按 TUNE/PRESET 或 - 選出所要的預約電臺。

要使用預約電臺時，請先預約電臺 (參見 " 預約電臺 ")。

要關掉收音機時

按 RADIO OFF

要改善廣播接收效果時

- 收聽 AM 節目時：調轉機器方位。
- 收聽 FM 節目時：請拉長遙控器導線 (天線)。如果接收效果仍不好，請反復按 MEN 將主機顯示窗中的遊標設為 FM MODE 然後按 SE 從 " MONO (單耳聲) "、" LOCAL 或無 (立體聲) " 方式中進行選擇以獲最佳接收效果。

要從遙控器進行操作時

要打開收音機時，請按 RADIO ON/BAND•OFF 秒以上 (限當錄音帶處於停止狀態時)。

要關掉收音機時，請按 RADIO ON/BAND•OFF

要選擇波段時，請在打開收音機時，按下 RADIO ON/BAND•OFF 秒以上。

要調入或選出預約電臺時，請向上/向下逐漸調整 PRESET 或

要關掉收音機時，請按 RADIO ON/BAND•OFF

要取消已儲存的電臺時

請按照上述步驟操作，在步驟 4 不調入電臺而按 TUNE/PRESET 或 - 直到 "----" 顯示出來。在 "----" 閃爍時按 ENTER 鍵。預約號碼將閃爍於顯示窗中。反復按 TUNE/PRESET 或 - 選擇您要取消的預約號並按 ENTER 鍵。

接收國外電臺 (歐洲、沙地阿拉伯和中國型號除外)

- 按 RADIO ON/BAND 打開收音機。
- 反復按 RADIO ON/BAND 選擇 AM FM 或 FM2
- 按 ENTER 直到 "A" 出現於顯示窗中。
- 按住 RADIO ON/BAND 直到 "Eur"、"Jp" 或 "USA" 閃爍。
- 按照 " 聽收音機 " 和 " 預約電臺 " 的步驟操作，調入並儲存所要的電臺。

地區指示和頻率範圍

地區*	頻率範圍 FM (MHz)	AM (kHz)
Eur	87.5 - 108	531 - 1 602
Jp	76 - 90	531 - 1 710
USA	87.5 - 108	530 - 1 710

* Eur :歐洲和其他國家
Jp :日本
USA :美國、加拿大和中南美

Design and specifications are subject to change without notice.

預約電臺

您可以在本機的存儲器中儲存廣播電台。您最多可以預調 32個電臺 - FM1 FM 各 12個，AM 個 (在 Jp 地區)，最多 16個電臺 - FM 和 AM 各 8個)。

自動調入和儲存廣播電臺 (自動儲存掃描功能)

- 按 RADIO ON/BAND 打開收音機。
- 反復按 RADIO ON/BAND 選擇 AM FM 或 FM2
- 按 ENTER 直到 "A" 出現於顯示窗中。
- 按住 RADIO ON/BAND 直到 "Eur"、"Jp" 或 "USA" 閃爍。
- 按照 " 聽收音機 " 和 " 預約電臺 " 的步驟操作，調入並儲存所要的電臺。

增強聲音

- 反復按 MEN 顯示器中的游標設定於 SOUND
- 反復按 SE 以選擇所喜歡的聲加強模式。
 - RV: Sound Revitalizer (聲音再生器)。
 - MB: Mega Bass (強低頻)。
 - GRV: Groove (最佳狀態)。
 - 增強低音 (中等效果)。
 - 增強低音 (強烈效果)。
 - 無信息：普通 (無效果)。

電池須知

- 別試圖給乾電池充電。
- 請勿將乾電池與硬幣或其他金屬小件混在一起攜帶。如果電池的正極和負極意外地接觸了金屬小件，將意外生熱。
- 長期不用 Walkman 時，請取出電池以避免因電池洩漏而腐蝕受損。

保護您的聽覺—AVLS (自動音量限制系統)

按 MEN 顯示器中的游標設定於 AVLS 然後按 SET 以顯示 "AVLS"。

要解除 AVLS 功能時

按 SE 使 "AVLS" 消失顯示。

要更換電池時，AVLS 設定將被抹去。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

要清潔磁殼外表時

請用軟布蘸清水擦拭。不可使用酒精、油精或稀鹼清潔。

請定期用圖示 標棒或軟布擦拭清潔頭戴耳機 / 耳機和遙控器插頭和端子部分。

要更換電池時，AVLS 設定將被抹去。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

要更換電池時，AVLS 設定將被抹去。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

要更換電池時，AVLS 設定將被抹去。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

使用項目單

調整收音方式

要選擇播放方向時
在主機上：

請反復按 MEN 顯示器中的游標設定於 PB MODE 然後按 SET 以選擇所要模式。

要播放比 "B" 減噪系統錄的錄音帶時

反復按 MEN 顯示器中的游標設定於 PB NR (標比減噪)，然後按 SE 以顯示 "NR"。

增強聲音

- 反復按 MEN 顯示器中的游標設定於 SOUND
- 反復按 SE 以選擇所喜歡的聲加強模式。
 - RV: Sound Revitalizer (聲音再生器)。
 - MB: Mega Bass (強低頻)。
 - GRV: Groove (最佳狀態)。
 - 增強低音 (中等效果)。
 - 增強低音 (強烈效果)。
 - 無信息：普通 (無效果)。

電池須知

- 別試圖給乾電池充電。
- 請勿將乾電池與硬幣或其他金屬小件混在一起攜帶。如果電池的正極和負極意外地接觸了金屬小件，將意外生熱。
- 長期不用 Walkman 時，請取出電池以避免因電池洩漏而腐蝕受損。

保護您的聽覺—AVLS (自動音量限制系統)

按 MEN 顯示器中的游標設定於 AVLS 然後按 SET 以顯示 "AVLS"。

要解除 AVLS 功能時

按 SE 使 "AVLS" 消失顯示。

要更換電池時，AVLS 設定將被抹去。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

要更換電池時，AVLS 設定將被抹去。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

要更換電池時，AVLS 設定將被抹去。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

請保持適當的音量，使您能聽到外界的聲音，而且不騷擾周圍的人。

利用其他功能

鎖定控制器—HOL 功能

沿箭頭所指方向滑動 HOL 開關以鎖定 Walkman 遙控器上的控制器。

要利用磁帶計數器時

在收音、錄音、快進、倒帶和停止 (收音機打開時除外) 時，磁帶計數器顯示在主機上。播放 FWD 面時數字增加，播放 RE 面時數字減少。要將計數器重調為 "000" 時，

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>