

FM/AM CD Clock Radio

Operating Instructions

Owner's Record

The model number and the serial number are located on the bottom. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. ICF-CD814
Serial No. _____

For customers who purchased this product in the USA
Please register this product on line at
<http://www.sony.com/productregistration>.
Proper registration will enable us to send you periodic mailings about new products, services, and other important announcements. Registering your product will also allow us to contact you in the unlikely event that the product needs adjustment or modification. Thank you.

DREAM MACHINE

Dream Machine is a trademark of Sony Corporation.

ICF-CD814



Printed on 100% recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink.

© 2006 Sony Corporation Printed in China



<http://www.sony.net/>

IMPORTANT SAFEGUARDS

For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference.

Carefully observe all warnings, precautions and instructions on the appliance and in the operating instructions, and adhere to them.

INSTALLATION

Water and Moisture

Do not use powerline operated appliances near water - for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

Heat

Do not place the appliance near or over a radiator or heat register, or where it is exposed to direct sunlight.

Ventilation

The slots and openings in the cabinet are provided for necessary ventilation. To ensure reliable operation of the appliance, and to protect it from overheating, these slots and openings must never be blocked or covered.

-Never cover the slots and openings with a cloth or other materials.

-Never block the slots and openings by placing the appliance on a bed, sofa, rug or other similar surface.

-Never place the appliance in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.

Accessories

Do not place the appliance on an unstable cart, stand, tripod, bracket, or table. The appliance may fall, causing serious injury to a child or an adult, and serious damage to the appliance. Use only a cart, stand, tripod, bracket, or table recommended by Sony.

-An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

Wall or Ceiling Mounting

If your appliance can be mounted to a wall or ceiling, mount it only as recommended by Sony.

USE

Power Source

This appliance should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those appliances designed to operate from battery power, or other sources, refer to the operating instructions.

Grounding or Polarization

This appliance is equipped with a polarized AC power cord plug (a plug having one blade wider than the other), or with a three-wire grounding type plug (a plug having a third pin for grounding). Follow the instructions below:

-For the appliance with a polarized AC power cord plug:

This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the polarized plug by forcing it in.

-For the appliance with a three-wire grounding type AC plug:

This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the grounding plug.

Overloading

Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.

When not in use

Unplug the power cord of the appliance from the outlet when left unused for a long period of time. To disconnect the cord, pull it out by grasping the plug. Never pull the plug out by the cord.

Power-Cord Protection

Route the power cord so that it is not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the plugs, receptacles, and the point where the cord exits from the appliance.

Lightning

For added protection for this appliance during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the appliance due to lightning and powerline surges.

Object and Liquid Entry

Never push objects of any kind into the appliance through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the appliance.

Cleaning

Unplug the appliance from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the appliance. Clean the appliance only as recommended by Sony.

Attachments

Do not use attachments not recommended by Sony, as they may cause hazards.

ANTENNAS

 
Outdoor Antenna Grounding

If an outdoor antenna or cable system is installed, follow the precautions below.

An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits. WHEN INSTALLING AN OUTDOOR ANTENNA SYSTEM, EXTREME CARE SHOULD BE TAKEN TO KEEP FROM CONTACTING SUCH POWER LINES OR CIRCUITS AS CONTACT WITH THEM IS ALMOST INVARIABLY FATAL.

Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Antenna Grounding According to the National Electrical Code

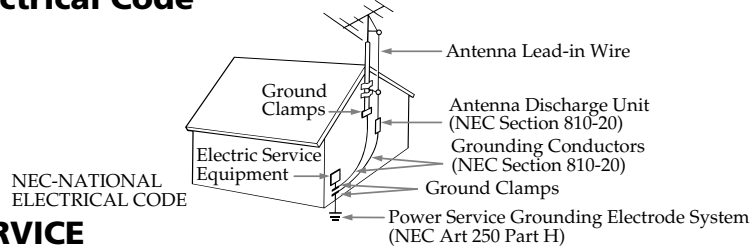

SERVICE

Damage Requiring Service

Unplug the appliance from the wall outlet and refer servicing to qualified service personnel under the following conditions:

-When the power cord or plug is damaged or frayed.

-If liquid has been spilled or objects have fallen into the appliance.

-If the appliance has been exposed to rain or water.

-The appliance does not appear to operate normally or exhibits a marked change in performance.

-This indicates a need for service.

-If the appliance does not operate normally when following the operating instructions, adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work

by a qualified technician to restore the appliance to normal operation.

-If the appliance has been subject to excessive shock by being dropped, or the cabinet has been damaged.

Servicing

Do not attempt to service the appliance yourself as opening or removing covers may expose you to dangerous voltage or other hazards.

Refer all servicing to qualified service personnel.

Replacement parts

When replacement parts are required, be sure the service technician has used replacement parts specified by Sony that have the same characteristics as the original parts.

Unauthorized substitutions may result in fire, electric shock, or other hazards.

Safety Check

Upon completion of any service or repairs to the appliance, ask the service technician to perform routine safety checks (as specified by Sony) to determine that the appliance is in safe operating condition.

SONY®

Tape Cassette Player/Recorder/CD Player/Mini Disc
DAT/Radio/Head Phone/Speaker/MIC/Personals

Portable Audio

LIMITED WARRANTY

Sony Electronics Inc. ("Sony") warrants this Product (including any accessories) against defects in material or workmanship as follows:

1. LABOR: For a period of one (1) year from the date of purchase, if this Product is determined to be defective, Sony will repair or replace the Product, at its option, at no charge, or pay the labor charges to any Sony authorized service facility. After the Warranty Period, you must pay for all labor charges.

2. PARTS: In addition, Sony will supply, at no charge, new or rebuilt replacements in exchange for defective parts for a period of one (1) year. After the warranty period, you must pay for all parts costs.

3. ACCESSORIES: Parts and labor for all accessories are for one (1) year.

To obtain warranty service, you must take the Product, or deliver the Product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, to any authorized Sony service facility.

This warranty does not cover customer instruction, installation, set up adjustments or signal reception problems.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of, or to any part of the Product, including the antenna. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Sony to service the Product. This warranty does not cover Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses or batteries). This warranty is valid only in the United States.

Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service.

This warranty is invalid if the factory applied serial number has been altered or removed from the Product.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract with the Sony Partnership within 90 days of the date of sale, the limitation on how long an implied warranty lasts does not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

 
For your convenience, Sony Electronics Inc. has established telephone numbers for frequently asked questions:

To locate the servicer or dealer nearest you, or for service assistance or resolution of a service problem, or for product information or operation, call:

Sony Customer Information Services Center
1-800-222-7669
or visit the Sony Web Site:
www.sony.com


For an accessory or part not available from your authorized dealer, call:

1-800-488-SONY (7669)

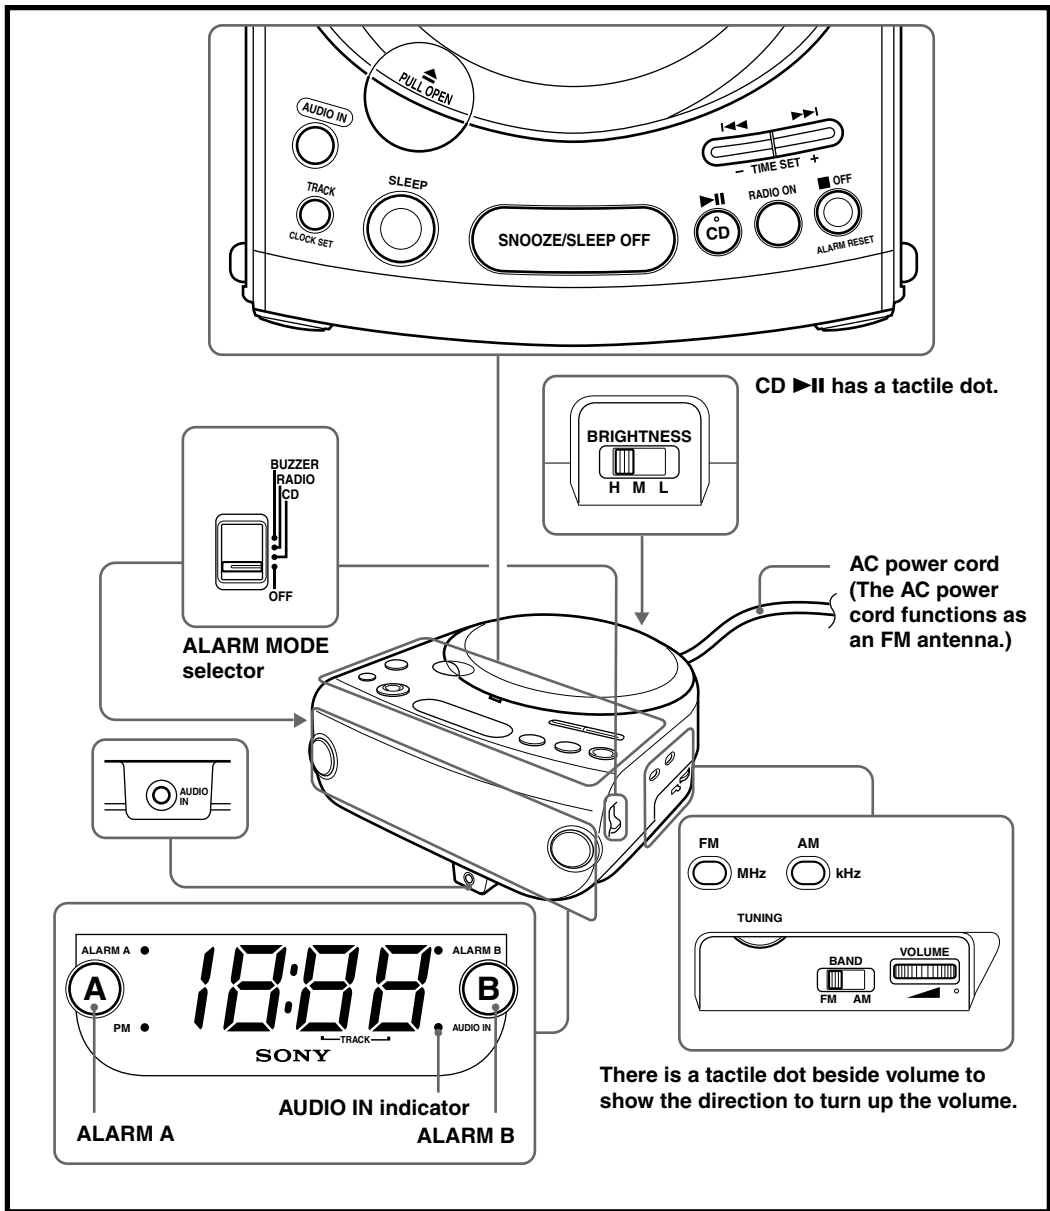

WARNING

 To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

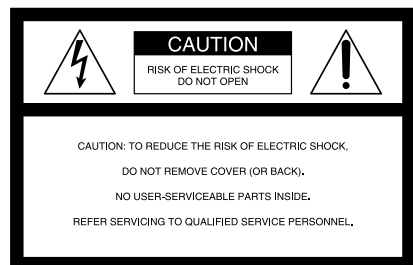

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

* The graphical symbols are on the bottom of the enclosure.

INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

CAUTION

The use of optical instruments with this product will increase eye hazard.

Features

- Easy to see large green LED display with three brightness control position (high/mid/low)
- Built-in jack for portable music players
- Built-in CD player with CD-R/RW playback function
- Wake to any track of a CD, RADIO or Buzzer (dual alarm)
- Extendable snooze time from 10 to 60 minutes

Precautions

- Operate the unit on the power source specified in the "Specifications."
- The nameplate indicating operating voltage, etc. is located on the bottom of the unit.
- To disconnect the AC power cord (mains lead), pull it out by the plug, not the cord.
- Do not leave the unit in a location near a heat source such as a radiator or air duct, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock.
- To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place lighted candles on the apparatus.

- Allow adequate air circulation to prevent internal heat build-up. Do not place the unit on a surface (a rug, a blanket, etc.) or near materials (a curtain) which might block the ventilation holes.
- Should any solid object or liquid fall into the unit, unplug the unit and have it checked by a qualified personnel before operating it any further.
- To clean the casing, use a soft cloth dampened with a mild detergent solution.

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

Troubleshooting

Should any problem persist after you have made the following checks, consult your nearest Sony dealer.

The clock does not show the correct time.

- Has an electrical power outage occurred?

The CD, radio or buzzer alarm does not sound at the preset alarm time.

- Is the **ALARM** indicator light on?

The radio alarm is activated but no sound comes on at the preset alarm time.

- Is the **TUNING** dial set to a receivable radio station?
- Has **VOLUME** been adjusted?

The CD player does not operate.

- Did you close the CD lid?
- Did you place the disc correctly? The disc should be placed with the labeled side up.
- Dusty or defective disc — Clean the disc with an optional cleaning cloth. Wipe the disc from the center out.
- Take out the CD and leave the CD compartment open for about an hour to remove moisture condensation.

Sporadic loss of sound in CD operation.

- Dusty or defective disc — Clean or replace the disc.
- Volume too high — Reduce the volume.
- Strong vibration.

There is no sound or sound output is low by pressing the AUDIO IN button.

- Is the **AUDIO IN** indicator light on?
- If the volume of the optional component is low, turn up the volume on the component.

The radio gets interference.

- When used near electrical devices, move them away or turn off their power.

Specifications

CD player section

System: Compact disc digital audio system

Laser diode properties:

Emission duration: Continuous
Laser output: Less than 44.6 μ W
(This output is the value measured at a distance of about 200 mm from the objective lens surface on the optical pick-up block with 7mm aperture.)

Frequency response: 20 - 20 000 Hz \pm 1 dB

Wow and flutter: Below measurable limit

Radio section

Frequency range:

FM: 87.5-108 MHz

AM: 530-1 710 kHz

General

Time display:

12-hour system

Speaker:

57 mm (2 $\frac{1}{4}$ inches) dia., 8 Ω

Power outputs:

0.7 W + 0.7 W (at 10% harmonic distortion)

Power requirements:

120 V AC, 60 Hz

Dimensions:

Approx. 190 x 93 x 222 mm (w/h/d)

(Approx. 7 $\frac{1}{2}$ x 3 $\frac{2}{3}$ x 8 $\frac{3}{4}$ inches) incl. projecting parts and controls

Mass:

Approx. 1.5 kg (3 lb 5 oz)

Design and specifications are subject to change without notice.



Lead-free solder is used for soldering.
Halogenated flame retardants are not used in printed wiring boards.

Download from Www.Somannuals.com. All Manuals Search And Download.

Changing the Brightness of the clock display

Slide **BRIGHTNESS** to select H(high), M(middle) or L(low) for the display according to your preference.

Setting the clock

- 1 Plug in the unit.
The display will flash "12:00".
- 2 Press **CLOCK SET** for a few seconds.
The hour will start to flash in the display.
- 3 Press **TIME SET +** or **-** until the correct hour appears in the display.
- 4 Press **CLOCK SET** once.
- 5 Repeat steps 3 and 4 to set the minute.
After setting the minute, press **CLOCK SET** to start the counting of the seconds.

- To set the current time rapidly, hold down **TIME SET +** or **-**.
- During PM hours, the indicator lights up.
- In step 5, when you press **CLOCK SET** after the minute setting to activate the clock, the seconds start counting from zero.

Playing a CD

An 8 cm (3-inch) CD can be played without an adaptor.

- 1 Pull \triangle **PULL OPEN** to open the CD compartment lid and place a disc.
- 2 Close the CD compartment lid.
- 3 Press **CD \blacktriangleright II**.
TRACK "01" appears in the display to indicate that track 1 of the CD is playing.
After you press **CD \blacktriangleright II**, it takes about 10 seconds before the music starts.
The indication in the display returns to the current time a few seconds after the music starts.
- 4 Turn **VOLUME** to adjust the volume.

To	Press
Pause	CD \blacktriangleright II
Resume play after pause	CD \blacktriangleright II again
Locate the beginning of the current track (AMS*)	\blacktriangleleft***
Locate the next track (AMS)	\blacktriangleright***
Go back at high speed	Hold down \blacktriangleleft***
Go forward at high speed	Hold down \blacktriangleright***
Locate the previous track (AMS)	\blacktriangleleft repeatedly**
Locate the succeeding track (AMS)	\blacktriangleright repeatedly**
Stop play	\blacksquare OFF

* AMS = Automatic Music Sensor

**These operations are possible during both play and pause.

- During CD playback, every time you press **TRACK**, the track number appears in the display for a few seconds.

About CD-Rs/CD-RWs

This unit is compatible with CD-Rs/CD-RWs but playback capability may vary depending on the quality of the disc, the recording device and application software.

Music discs encoded with copyright protection technologies

 
This product is designed to play back discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

To handle compact discs

Correct



Incorrect



Do not touch the surface.

Do not stick paper or tape nor write anything on the surface.

Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

Notes

- Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this unit. Attempting to do so may damage the unit. Do not use such discs.
- If you press **CD \blacktriangleright II** when there is no disc in the CD compartment, "00" flashes for a few seconds on the display and the unit turns off automatically.

Playing the radio

- 1 Press **RADIO ON** to turn on the radio.
"On" appears in the display.
- 2 Adjust **VOLUME**.
- 3 Select **BAND**.
- 4 Tune in a station using the **TUNING** dial.

- To turn off the radio, press **\blacksquare OFF**.
- This model does not support FM stereo.

Improving the reception

FM: The AC power cord functions as an FM antenna.

Extend the AC power cord fully to improve FM reception.

AM: Rotate the unit horizontally for optimum reception. A ferrite bar antenna is built into the unit.

Do not operate the unit over a steel desk or metal surface, as this may lead to interference of reception.

Listening to the sound from the connected optional components

- 1 Connect the **AUDIO IN** jack of this player with the line output jack or headphones jack of the optional component (ex: portable music players) using the stereo audio connecting cable (not supplied).
- 2 Press **AUDIO IN**.
The **AUDIO IN** indicator lights up.
- 3 Play the optional component connected to the **AUDIO IN** jack of this player.
- 4 Adjust **VOLUME**.

- To turn off the **AUDIO IN**, press **\blacksquare OFF**.

Note

Connect the cord firmly to avoid any malfunction.

Setting the Alarm

This unit is equipped with 3 alarm modes—CD, RADIO and buzzer. Before setting the alarm, make sure to set the clock (see "Setting the Clock"). This unit is also equipped with a dual alarm function. You can set the alarm for two different times ALARM A and ALARM B.

To set the Alarm time

- 1 If you will select the CD alarm or RADIO alarm, adjust the volume.
Also, if you will select the RADIO alarm, tune in to the desired station.
- 2 Set the **ALARM MODE** selector to **CD**, **RADIO** or **BUZZER**. The **ALARM A** or **B** indicator lights up.
- 3 Press **ALARM A** or **B** for a few seconds.
The **ALARM A** or **B** indicator flashes, depending on which one you set.
The hour will start to flash in the display.
- 4 Press **TIME SET +** or **-** until the desired hour appears.
To set the hour rapidly, hold down **TIME SET +** or **-**.
- 5 Press **ALARM A** or **B**.
The minute will flash.
- 6 Repeat step 4 to set the minute and press **ALARM A** or **B**.
The wake-up track number flashes on the display.
- 7 If you selected the CD alarm, press **\blacktriangleright II** or **\blacktriangleleft** to select the desired wake-up track number.
The wake-up track number can be set up to 99. Its default value is "01".
- 8 Press **ALARM A** or **B**.
The **ALARM A** or **B** indicator lights up.

For the CD alarm, the track you specified as the Wake-up track is played first.

To check the Alarm time

Press **ALARM A** or **B**. The display shows the alarm time.

If you press **ALARM A** or **B** again, the indication changes to the wake-up track number.

After a few seconds, the display returns to the current time.

- Alarm time in CD alarm, radio alarm and buzzer alarm is set at PM 12:00 when you purchased the unit.

ALARM ON

For the CD alarm, the track you specified as the Wake-up track is played first.

If you set the CD alarm when there is no disc in the CD player or the CD compartment lid is open, the buzzer alarm will sound at the set time.

For the radio alarm, the station that the tuning dial is set to will be received.

For the buzzer alarm, the beeping of the alarm becomes more rapid after every few seconds in three progressive stages.

 
Note

When **ALARM A** and **ALARM B** are set for the same time, only **ALARM A** will result.

To doze for a few more minutes

Press **SNOOZE/SLEEP OFF**.

The CD, radio or buzzer alarm turns off but will be automatically activated again after about 10 minutes. Every time you press **SNOOZE/SLEEP OFF**, the snooze time changes as follows:



The display shows the snooze time for a few seconds and returns to show the current time. When you press **SNOOZE/SLEEP OFF** after the current time appeared, the snooze time starts from 10 minutes again.

- The maximum length of the snooze time is 60 minutes.

ALARM OFF

The alarm is turned off automatically after 60 minutes.

To stop the Alarm

Press **ALARM RESET** to turn off the alarm.

The alarm will come on again at the same time the next day.

 
To deactivate the Alarm

Set the **ALARM MODE** selector to **OFF**. **ALARM A** or **ALARM B** indicator goes off.

Setting the Sleep Timer

You can fall asleep to the CD, RADIO, or AUDIO IN using the built-in sleep timer that turns off the CD, RADIO or AUDIO IN automatically after a preset duration.

Press **SLEEP** during CD, RADIO, or AUDIO IN play. You can set the Sleep Timer to durations of 90, 60, 30, or 15 minutes. Every push changes the display as follows:



The CD, RADIO, or AUDIO IN will play for the time you set, then turn off.

- To turn off the CD, RADIO or AUDIO IN before the preset time, press **SNOOZE/SLEEP OFF**.

Note

Even if the Sleep Timer is set, it cannot turn off the power of optional components connected to the **AUDIO IN** jack of this player.

To use both the Sleep Timer and the Alarm

You can fall asleep to the CD, RADIO or AUDIO IN and be awakened by the CD, RADIO or buzzer alarm.

- 1 Set the alarm. (See "Setting the Alarm".)
- 2 Set the Sleep Timer. (See "Setting the Sleep Timer".)

Note

This unit cannot select the alarm in **AUDIO IN**.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>