

Changing the Brightness of the Clock display

Turn **BRIGHTNESS** to adjust the brightness of the clock display.

Setting the Clock

 
- 1 Plug in the unit.
The display will flash "AM 12:00".
- 2 Press **CLOCK SET/TRACK** for a few seconds.
You will hear a beep and the hour will start to flash in the display.
- 3 Press **TIME SET +** or **-** until the correct hour appears in the display.
- 4 Press **CLOCK SET/TRACK** once.
- 5 Repeat steps **3** and **4** to set the minute.
After setting the minute, press **CLOCK SET/TRACK** to start the counting of the seconds, and you will hear two short beeps.

- To set the current time rapidly, hold down **TIME SET +** or **-**.
- In step **5**, when you press **CLOCK SET/TRACK** after the minute setting to activate the clock, the seconds start counting from zero.

Playing a CD

An 8 cm (3-inch) CD can be played without an adaptor.

- 1 Push **▲PUSH OPEN/CLOSE** to open the CD compartment lid and place a disc.
- 2 Close the CD compartment lid.

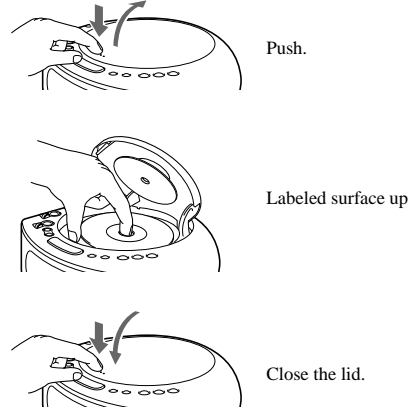

- 3 Press **CD ►II**.
The CD/RADIO indicator lights up and "TRACK 01" appears in the display to indicate that track 1 of the CD is playing.
After you press CD ►II, it takes about 10 seconds before the music starts.
The indication in the display returns to the current time after about 4 seconds.
- 4 Turn **VOLUME** to adjust the volume.

To	Press
Pause	CD ►II
Resume play after pause	CD ►II again
Locate the beginning of the current track (AMS*)	◀◀**
Locate the next track (AMS)	▶▶**
Go back at high speed	Hold down ◀◀**
Go forward at high speed	Hold down ▶▶**
Locate the previous track (AMS)	◀◀ repeatedly**
Locate the succeeding track (AMS)	▶▶ repeatedly**
Stop play	OFF ■

* AMS = Automatic Music Sensor
**These operations are possible during both play and pause.

- During CD playback, every time you press **CLOCK SET/TRACK**, the current time and the track number appear in the display alternately.

 
About CD-Rs/CD-RWs

This unit is compatible with CD-Rs/CD-RWs but playback capability may vary depending on the quality of the disc, the recording device and application software.

Music discs encoded with copyright protection technologies

This product is designed to play back discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

To handle compact discs

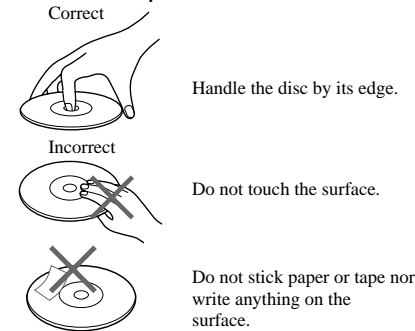

Notes

- Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this unit. Attempting to do so may damage the unit. Do not use such discs.
- If you press **CD ►II** when there is no disc in the CD compartment, "00" flashes for about 5 seconds on the display and the unit turns off automatically.

Various Modes of CD Playback

You can play tracks repeatedly or in random order. Slide **CD PLAY MODE**.

As you slide **CD PLAY MODE**, the play mode changes as follows:

Legend on CD PLAY MODE	Play mode
"NORMAL"	(normal play)
All the tracks are played once.	
"REPEAT"	(all repeat)
All the tracks are played repeatedly.	
"SHUFFLE"	(shuffle play)
All the tracks are played once in random order.	
"SHUFFLE REPEAT"	(shuffle repeat)
All the tracks are played repeatedly in random order.	

Playing the Radio

- 1 Press **RADIO•ON** to turn on the radio.
The "CD/RADIO" indication will light up.
- 2 Adjust **VOLUME**.
- 3 Select the **BAND**.
- 4 Tune in a station using the **TUNING** dial.

- To turn off the radio, press **OFF ■ • ALARM RESET**.

Improving the reception

FM: Extend the FM wire antenna to improve reception.

AM: Rotate the unit horizontally for optimum reception. A ferrite bar antenna is built into the unit.

Do not operate the unit over a steel desk or metal surface, as this may lead to interference of reception.

Setting the Alarm

This clock radio is equipped with 3 alarm modes—CD, radio and buzzer. Before setting the alarm, make sure to set the clock (see "Setting the Clock"). This unit is also equipped with a dual alarm function. You can set the alarm for two different times **ALARM SET A** and **ALARM SET B**.

To Set the Alarm Time

- 1 If you will select the CD alarm or radio alarm, adjust the volume. Also, if you will select the radio alarm, tune in to the desired station.
- 2 Set the **ALARM MODE** selector to **CD**, **RADIO** or **BUZZER**. The **ALARM A** or **ALARM B** indicator lights up.
- 3 Press **ALARM SET A** or **ALARM SET B** for a few seconds. The **ALARM A** or **ALARM B** indicator flashes, depending on which one you set.
After one beep, the hour will start to flash in the display.
- 4 Press **TIME SET +** or **-** until the desired hour appears.
To set the hour rapidly, hold down **TIME SET +** or **-**.
- 5 Press **ALARM SET**.
The minute will flash.
- 6 Repeat step **4** to set the minute and press **ALARM SET**.
The wake-up track number flashes on the display.

- 7 If you selected the CD alarm, press **TIME SET +** or **-** select the desired wake-up track number.
The wake-up track number can be set up to 99. Its default value is "01".
- 8 Press **ALARM SET**.
Two short beeps confirms the setting, and the **ALARM A** or **ALARM B** indicator lights up.

For the CD alarm, the track you specified as the Wake-up track is played first.
(If the CD play mode is set to "**SHUFFLE**" or "**SHUFFLE REPEAT**", however, all the tracks are played in random order.)

To Check the Alarm Time

Press **ALARM SET A** or **ALARM SET B**. The display shows the alarm time.
If you press **ALARM SET A** or **ALARM SET B** again, the indication changes to the wake-up track number. After a few seconds, the display returns to the current time.

- Alarm time in CD alarm, radio alarm and buzzer alarm is set at PM 12:00 when you purchased the unit.

ALARM ON

For the CD alarm, the track you specified as the Wake-up track is played first.
(If the CD play mode is set to "**SHUFFLE**" or "**SHUFFLE REPEAT**", however, all the tracks are played in random order.)

If you set the CD alarm when there is no disc in the CD player or the CD compartment lid is open, the buzzer alarm will sound at the set time.

For the radio alarm, the station that the tuning dial is set to will be received.

For the buzzer alarm, the beeping of the alarm becomes more rapid after every few seconds in three progressive stages.

 
Note

When **ALARM A** and **ALARM B** are set for the same time, only **ALARM A** will result.

To Doze for a Few More Minutes

Press **SNOOZE/SLEEP OFF**.

The CD, radio or buzzer alarm turns off but will be automatically activated again after about 10 minutes. Every time you press **SNOOZE/SLEEP OFF**, the snooze time changes as follows:



The display shows the snooze time for a few seconds and returns to show the current time. When you press **SNOOZE/SLEEP OFF** after the current time appeared, the snooze time starts from 10 minutes again.

- The maximum length of the snooze time is 60 minutes.

ALARM OFF

The alarm is turned off automatically after 60 minutes.

To Stop the Alarm

Press **OFF ■ • ALARM RESET** to turn off the alarm.

The alarm will come on again at the same time the next day.

 
To Deactivate the Alarm

Set the **ALARM MODE** selector to **OFF**. **ALARM A** or **ALARM B** indicator go off.

Using the NAP Timer (Count Down Timer)

The NAP timer sounds the buzzer after a present time duration.

Press **NAP** repeatedly until the desired minutes is displayed.
Each press changes the display as follows:



The NAP indicator turns on, and the NAP time is displayed for a few seconds. NAP timer starts counting down the NAP time.

When selected NAP time has passed, the beep sound comes on, and the NAP indicator flashes.

To Stop NAP Timer

Press **NAP** or **OFF ■ • ALARM RESET** to turn off the buzzer.

 
To Deactive NAP Timer

Press **NAP**.
The NAP indicator goes off.

Setting the Sleep Timer

You can fall asleep to the radio or CD using the built-in sleep timer that turns off the CD or the radio automatically after a preset duration.

Press **SLEEP** during CD or radio play.
You can set the sleep timer to durations of 90, 60, 30, or 15 minutes. Every push changes the display as follows:



The CD or the radio will play for the time you set, then shut off.

- To turn off the CD or radio before the preset time, press **SNOOZE/SLEEP OFF**.

To Use Both the Sleep Timer and the Alarm

You can fall asleep to the CD or the radio and be awakened by the CD, radio or buzzer alarm.

- 1 Set the alarm. (See "Setting the Alarm".)
- 2 Set the sleep timer. (See "Setting the Sleep Timer".)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>