

FM/AM CD Clock Radio ICF-CD863


FM/MW/LW CD Clock Radio ICF-CD863L

Operating Instructions
Mode d'emploi
Bedienungsanleitung (Rückseite)
Manual de instrucciones (en el reverso)

DREAM MACHINE

Dream Machine is a trademark of Sony Corporation.
Dream Machine est une marque de fabrique de Sony Corporation.
Dream Machine ist ein Warenzeichen der Sony Corporation.
Dream Machine es marca comercial de Sony Corporation.

Sony Corporation © 2002 Printed in China

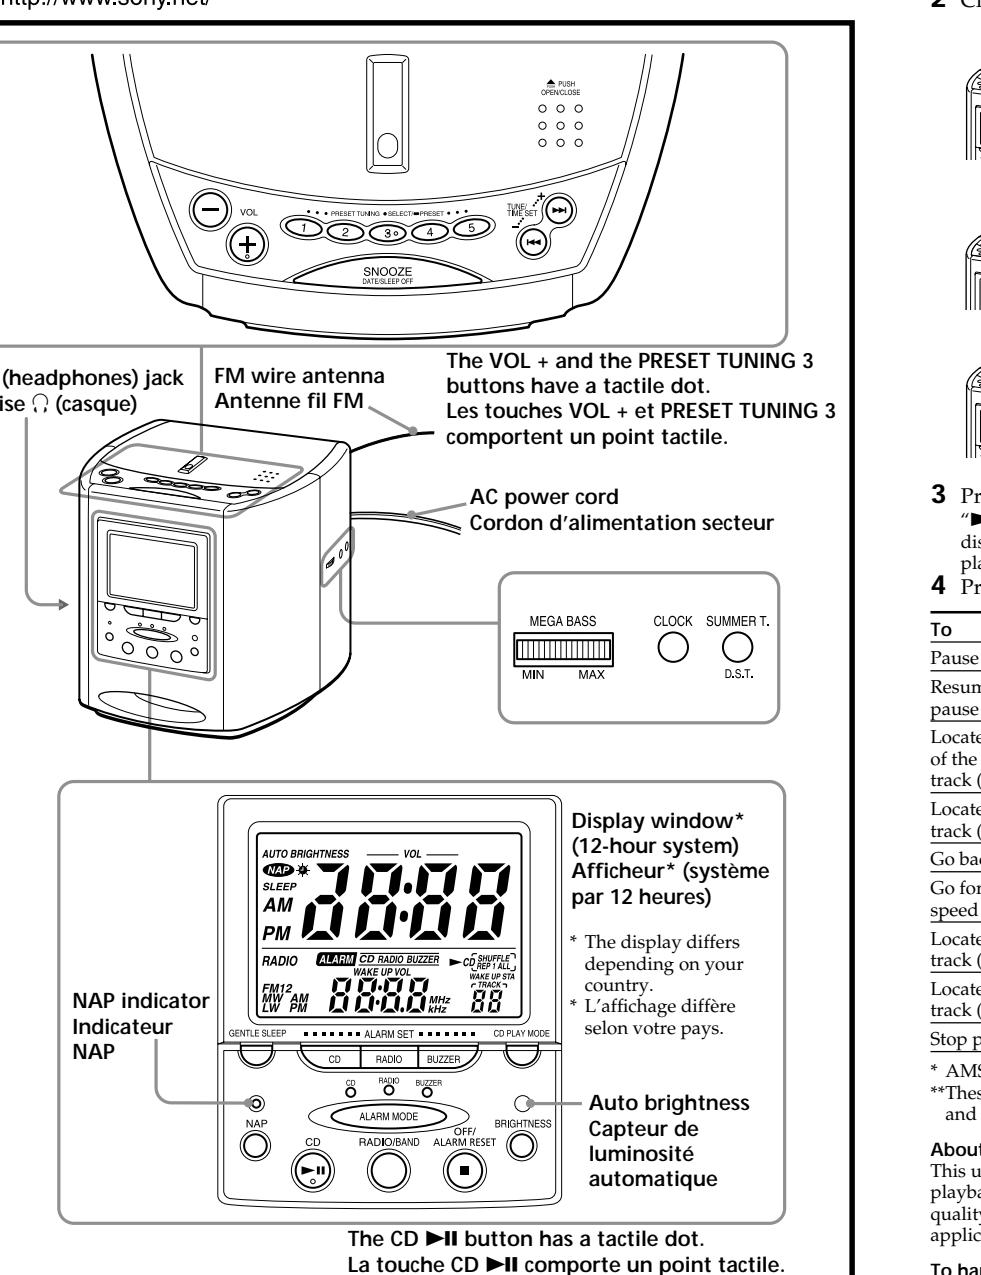

English

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Do not install the appliance in a confined space, such as a bookcase or built-in unit.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

For the Customers in Europe

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT

This Compact Disc player is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT label is located on the bottom exterior.

For the Customers in Canada

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Before You Begin

Thank you for choosing the Sony CD clock radio! It will give you many hours of reliable service and listening pleasure.

Before operating the unit, please read these instructions thoroughly and retain them for future reference.

These instructions cover the models ICF-CD863 and ICF-CD863L, and their difference is as follows:

Model Number ICF-CD863 ICF-CD863L
Band FM/AM FM/MW/LW

Setting the Brightness of the Backlight

Press BRIGHTNESS. Each press changes the brightness of the backlight as follows:

(Auto) → (brightness) → (high) → (middle) → (low)

The initial setting is Auto brightness.

With Auto brightness selected, the Auto brightness sensor detects ambient light and automatically adjusts the backlight brightness of the display in three levels.

For the Customers in Europe

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

For the Customers in Canada

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Before You Begin

Thank you for choosing the Sony CD clock radio! It will give you many hours of reliable service and listening pleasure.

Before operating the unit, please read these instructions thoroughly and retain them for future reference.

These instructions cover the models ICF-CD863 and ICF-CD863L, and their difference is as follows:

Model Number ICF-CD863 ICF-CD863L
Band FM/AM FM/MW/LW

Operating the Radio

Manual Tuning

1 Press RADIO/BAND to turn on the radio.

"RADIO" appears on the display.

2 Press RADIO/BAND repeatedly to select the desired band.

Each press changes the band as follows:

ICF-CD863

AM → FM1 → FM2

ICF-CD863L

MW → FM1 → FM2 → LW

When using FM or FM2 preset mode, you may listen to the radio on either mode (See "Presetting Your Favorite Station").

3 Use TUNE/TIME SET + or - to tune in to a station.

The FM channel step is set to 0.1 MHz and the AM channel step is set to 10 kHz (North America) or 9 kHz (Other countries).

The FM channel step is set to 0.05 MHz* and the AM(MW) channel step is set to 9 kHz (Other models).

*The FM frequency display is raised or lowered by a step of 0.1 MHz. For example, frequency 88.0 MHz is displayed as "88.0 MHz".

Two short beeps sound when the minimum frequency of each band is received during tuning.

4 Adjust volume using VOL + or -.

When you release TUNE/TIME SET + or - after locating your desired station, the display returns to the previous display after about 10 seconds.

To check the frequency of the tuned-in station, press RADIO/BAND and the frequency appears for about 10 seconds.

To turn off the radio, press OFF/ALARM RESET ■.

Playing a CD

FM: Extend the FM wire antenna fully to increase reception sensitivity.

AM/MW/LW:

Rotate the unit horizontally for optimum reception. A ferrite bar antenna is built into the unit.

Do not operate the unit over a steel desk or metal surface, as this may lead to interference of reception.

The wake-up volume for the buzzer alarm is not selectable by the setting.

Set the Alarm Mode

Before setting the alarm mode, be sure to set the alarm time. (See "To Set the Alarm Time".)

1 Push ▲OPEN/CLOSE to open the CD compartment lid and place a disc.

2 Close the CD compartment lid.

Push

Labelled surface up

Close the lid

3 Press CD ▶II.

"CD" and "TRACK 01" appear on the display to indicate that track 1 of the CD is playing.

4 Press VOL + or - to adjust the volume.

To

Press

Pause

CD ▶II

Resume play after

CD ▶II again

pause

Locate the beginning

◀◀**

of the current track (AMS)*

Locate the next track (AMS)

▶▶**

Go back at high speed

Hold down ▶◀**

Go forward at high speed

Hold down ▶▶**

Locate the previous

◀◀ repeatedly**

track (AMS)

Locate the succeeding

track (AMS)

▶▶ repeatedly**

speed

* AMS = Automatic Music Sensor

These operations are possible during both play and pause.

About CD-R/RW/RWs

This unit is compatible with CD-Rs/CD-RWs but playback capability may vary depending on the quality of the disc, the recording device and application software.

To handle compact discs

Correct

Handle the disc by its edge.

Incorrect

Do not touch the surface.

Do not stick paper or tape nor write anything on the surface.

Notes

• Discs with non-standard shapes (e.g., heart, square star) cannot be played on this unit.

Attempting to do so may damage the unit. Do not use such discs.

If you press CD ▶II when there is no disc in the CD compartment, "CD" flashes for about 5 seconds on the display and the unit turns off automatically.

Setting the Brightness of the Backlight

Press BRIGHTNESS. Each press changes the brightness of the backlight as follows:

(Auto) → (brightness) → (high) → (middle) → (low)

The initial setting is Auto brightness.

With Auto brightness selected, the Auto brightness sensor detects ambient light and automatically adjusts the backlight brightness of the display in three levels.

For the Customers in Europe

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

For the Customers in Canada

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Before You Begin

Thank you for choosing the Sony CD clock radio!

It will give you many hours of reliable service and listening pleasure.

Before operating the unit, please read these instructions thoroughly and retain them for future reference.

These instructions cover the models ICF-CD863 and ICF-CD863L, and their difference is as follows:

Model Number ICF-CD863 ICF-CD863L
Band FM/AM FM/MW/LW

Band FM

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>