

Cordless Telephone with Answering System

Operating Instructions

Owner's Record

The model and the serial numbers are located at the bottom of the unit. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. SPP-A1050 Serial No. _____

900MHz

SPP-A1050

Sony Corporation © 2001 Printed in China

For the customers in the USA



Be sure to save the receipt and attach it to your WARRANTY card when having your equipment repaired at an authorized Sony service center.

For the customers in the USA

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- 1. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

SAVE THESE INSTRUCTIONS

INFORMATION FOR FCC REGULATION CLAIM

- 1. This equipment complies with Part 15 and Part 68 of the FCC rules for the United States. On the bottom of this equipment is a label that contains, among other information, the FCC certification number and ringer equivalence number (REN) for this equipment.
2. This equipment connect to nationwide telephone network through a modular telephone jack which applicable certification jack (connector) is USOC-RJ11C.
3. The FCC compliant telephone cord and modular plug is provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using a compatible modular jack that is part 68 compliant.
4. The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call.
5. If this equipment (SPP-A1050) causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required.
6. The telephone company may make changes to its facilities, equipment, operations or procedures that could affect the operation of the equipment.
7. If trouble is experienced with this equipment (SPP-A1050), for repair or warranty information, please contact Sony Direct Response Center: Tel 1-800-222-7669.
8. All repairs will be performed by an authorized Sony service station.
9. This equipment may not be used on coin service provided by the Phone Company or Party Lines.
10. This equipment is hearing aid compatible.

When programming emergency numbers and (or) making test calls to emergency numbers:

- 1. Remain on the line and briefly explain to the dispatcher the reason for the call.
2. Perform such activities in the off-peak hours, such as early morning or late evenings.

Operation is subject to the following two conditions: (1)This device may not cause interference, and (2)This device must accept any interference, including interference that may cause undesired operation.

Caution

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Privacy of communications may not be ensured when using this phone.

Note

 
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Setting up the phone

Caution


The cordless telephone operates at a frequency that may cause interference to nearby TVs and VCRs; the base unit should not be placed near or on the top of a TV or VCR; and, if interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

Choose the best location

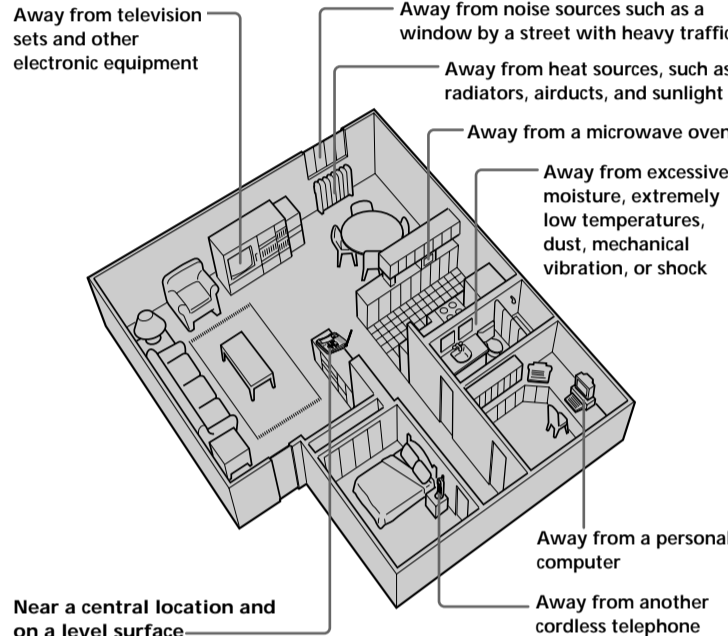

Connect the base unit

 
If you want to hang the base unit on the wall, mount the unit first (see "Mounting the base unit on the wall").

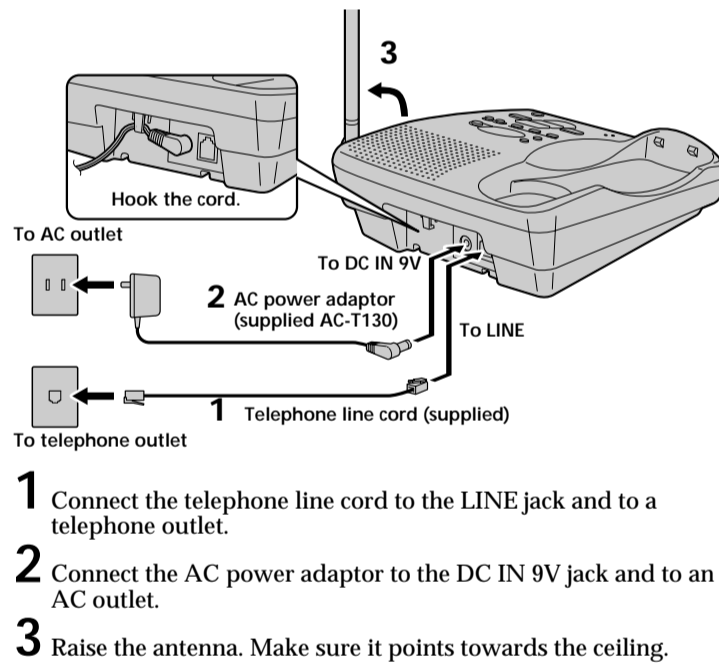

Notes: Use only the supplied AC-T130 AC power adaptor. Do not use any other AC power adaptor. Connect the AC power adaptor to a continuous power supply. Place the base unit close to the AC outlet so that you can unplug the AC power adaptor easily.

Choosing the dialing mode

 
For the telephone to work properly, select an appropriate dialing mode (tone or pulse). The default setting is tone.

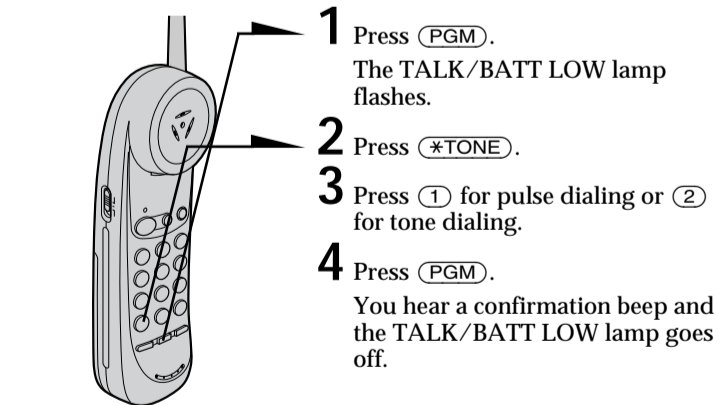

Note: Do not allow more than 20 seconds to elapse between each step of the procedure.

Prepare the battery pack

 Charge the battery pack for more than 10 hours before you start using your phone.

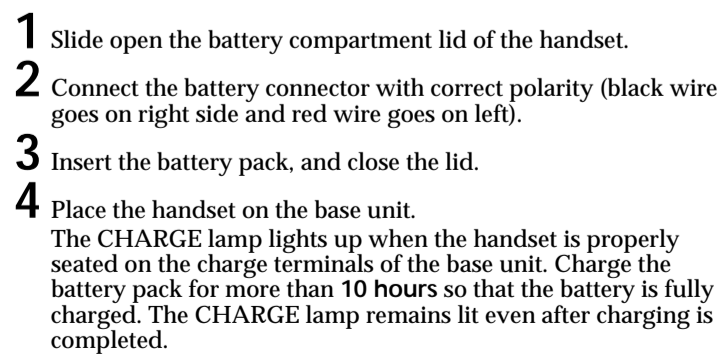

Battery duration

A fully charged battery pack lasts for about:
• Approx. 7 hours when you use the handset continuously
• Approx. 6 days when the handset is in standby mode.

Notes

- The battery pack will gradually discharge over a long period of time, even if not in use.
• If you leave the battery pack in the handset without charging it, the battery pack will be completely discharged. It may require several times of charging to recover its full capacity.

To obtain the best performance from battery

Do not place the handset on the base unit after each call. The battery works best if the handset is returned to the base unit after two or three calls.

When to purchase a new battery pack

 
If the battery lasts only a few minutes even after 10 hours of charging, the usable life of the battery has expired and needs replacement.

Note

Battery life may vary depending on usage condition and ambient temperature.

Making and receiving calls

Making calls

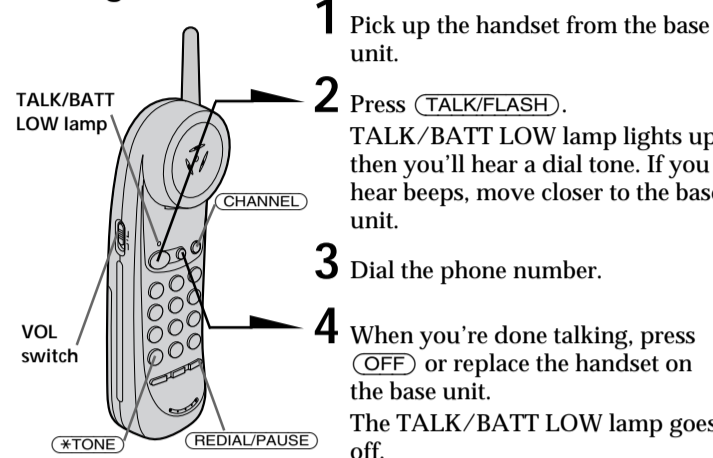

Receiving calls

- 1. When you hear the phone ring: Press TALK/FLASH (or any key except OFF).
• Pick up the handset from the base unit when the handset is placed on the base unit.
2. When you're done talking, press OFF or replace the handset on the base unit.

Additional tasks

Table with 2 columns: To (action) and Do this (instructions). Includes tasks like selecting a better channel, adjusting volume, switching tone dialing, and switching to another call.

* You need to subscribe to this service from your telephone company.

Notes

- Before dialing, make sure you can hear the dial tone.
• When the TALK/BATT LOW lamp lights up by pressing TALK/FLASH, the LINE lamp on the base unit lights up simultaneously.

If the handset battery becomes weak during a call

You hear a beep and the TALK/BATT LOW lamp on the handset flashes. The call will disconnect soon. Replace the handset on the base unit to charge.

For optimum performance, charge the battery for a full 10 hours.

Note that during the first 10-15 minutes of charging, the phone will be inactive, i.e., unable to make or receive a call. After this initial 10-15 minutes, you may be able to use the phone, but the battery duration will be very short; thus it is recommended that you fully charge the battery before the next usage.

Redialing

- 1. Press TALK/FLASH. The TALK/BATT LOW lamp lights up.
2. Press REDIAL/PAUSE to redial the number last dialed.

 
Note

If the number last dialed exceeds 16 digits, only the first 16 digits are dialed.

Speed dialing

You can dial with a touch of a few buttons by storing a phone number on a dialing button. You can store up to 10 different phone numbers.

Storing phone numbers

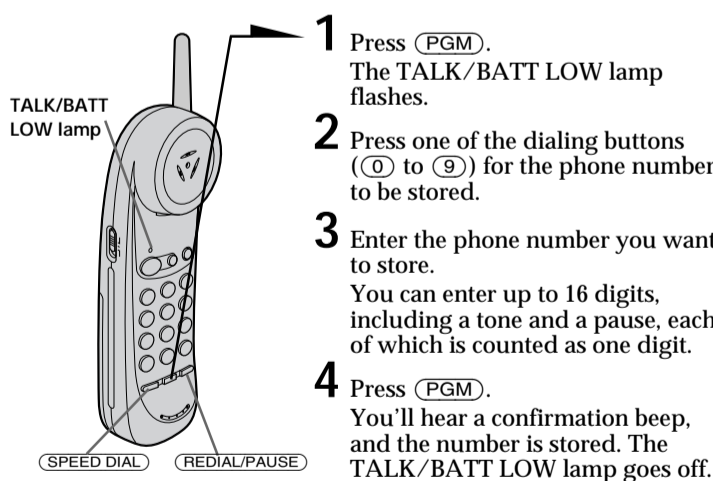

Notes

- In step 3, if you don't enter the phone number, the previously stored number will be erased.
• Do not allow more than 30 seconds to elapse between each step of the procedure.
• Before storing phone numbers, make sure the handset is not in use.

Tips

- If you enter a wrong number, start from the beginning.
• Use the supplied directory to write down what you stored on the speed dialing numbers.

To store the previous number dialed

Press REDIAL/PAUSE directly after step 2, then go to step 4.

To store a number to be dialed via Private Branch Exchange (PBX)

- Before entering a phone number in step 3, do as follows:
1. Enter the outside line access digit (e.g. 9).
2. Press REDIAL/PAUSE.

To change a stored number

 
To store a new number, follow the instructions described previously.

Making calls with speed dialing

- 1. Press TALK/FLASH. The TALK/BATT LOW lamp lights up.
2. Press SPEED DIAL.
3. Enter the desired speed dialing number (0 to 9). The phone number stored in the speed dialing number will be dialed.

Setting the ringer type

You can select a ringer type from four types.

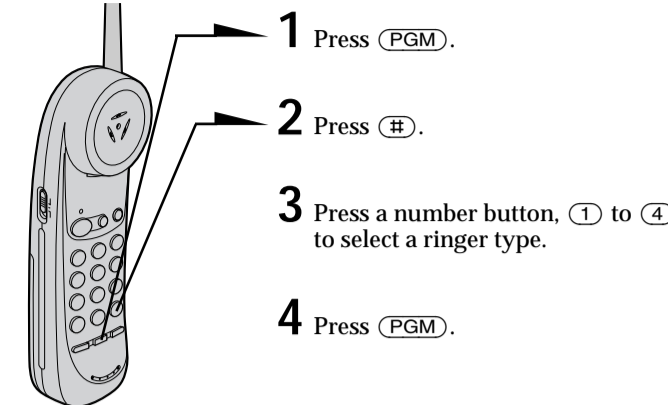

Turning off the ringer

- 1. Press PGM.
2. Press #.
3. Press 5.
4. Press PGM. The ringer on the handset is turned off.

To turn the ringer on again

Follow the instructions described in "Setting the ringer type."

 
Checking the ringer type

- 1. Press PGM.
2. Press #.
3. Press 0. The currently selected ringer sounds.
4. Press PGM.

Note

If you hear no sound (only key beep), the ringer on the handset has been turned off.

Setting the base ringer

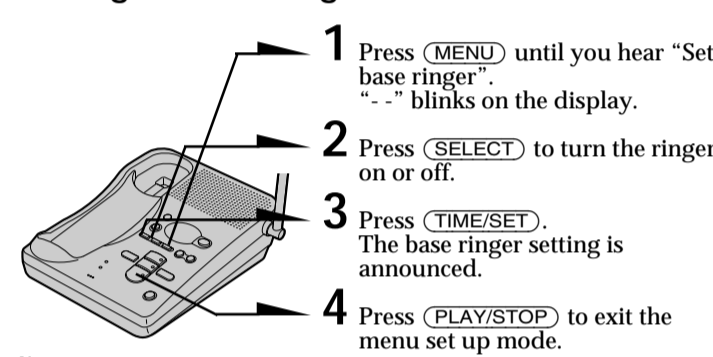


Note

The base ringer is preset to on.

Locating the handset

 You can page the handset from the base unit. Note that you cannot page if the handset is in use.

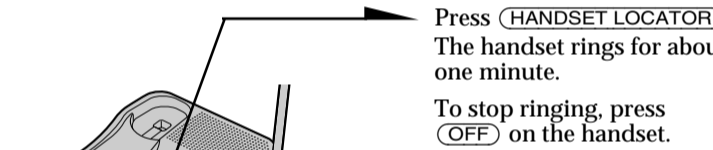

Note

 
If a call comes in paging, paging is cancelled.

Tips

- You can page the handset even when "RINGER" is set to "RINGER OFF".
• To stop ringing at the base unit, press HANDSET LOCATOR.

Setting up the answering machine

Setting the time and day of the week

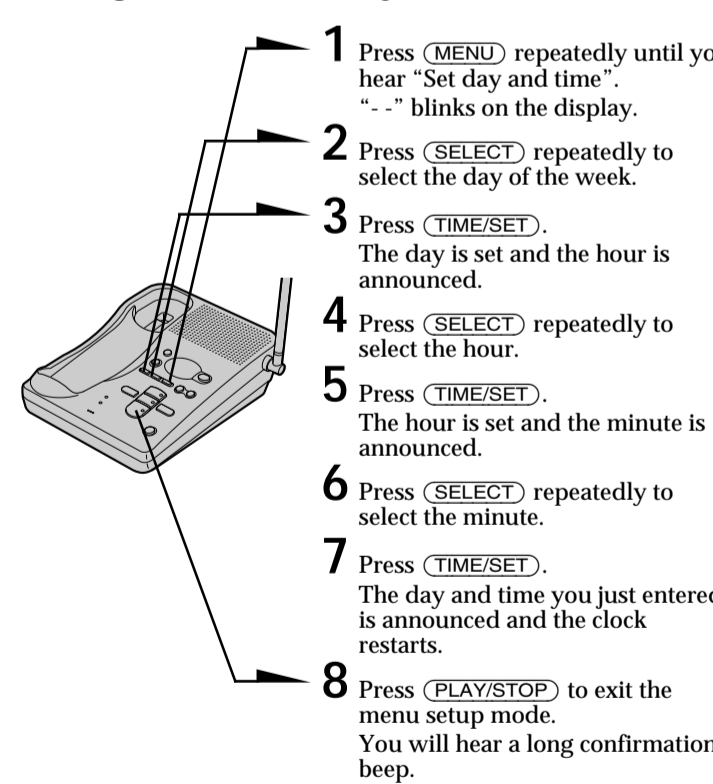

Notes

- Press and hold SELECT to increase the minute setting by 10.
• The time and day are preset to Monday, 12:00 AM.
• "CL" flashes when the day and time is cleared or delayed due to a power interruption.
Tip: All the mailbox buttons (MAILBOX 1, MAILBOX 2 and MAILBOX 3) work as the PLAY/STOP button; press any of the three in this case.

To hear the current time

Press TIME/SET. The current time setting is announced.

(continued)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>