

## Interchangeable Lens Digital Camera

# α57

α Handbook

A-mount

Preparing the camera

Shooting and viewing  
images

Shooting images to suit  
your subject

Using the shooting  
functions

Using the playback  
functions

Functions list

Viewing images on a  
computer

Others

Advanced operations

Index

# α

# Table of Contents

## Basic operations

.....	9
-------	---

This section provides basic information on operating the camera.

The contents of the “Basic operations” section are the same as those in the Instruction Manual supplied.

Notes on using your camera .....	10
----------------------------------	----




 
## Preparing the camera

Checking the supplied items .....	12
Identifying parts .....	13
Charging the battery pack .....	19
Inserting the battery pack/memory card (sold separately) .....	21
Attaching a lens .....	24
Turning the camera on and setting the clock .....	27
Before shooting .....	29
Adjusting the viewfinder to the visual acuity (diopter adjustment).....	29
Holding the camera properly .....	29

## Shooting and viewing images

Shooting still images .....	31
Recording movies .....	33
Playing back images .....	34
Deleting images (Delete) .....	35

## Shooting images to suit your subject

Adjusting the angle of the LCD screen .....	36
Shooting with the various shooting modes .....	37
 Superior Auto .....	38
SCN Scene Selection .....	39
 Sweep Panorama/  3D Sweep Panorama .....	40
 Continuous Advance Priority AE Mode .....	41

## Using the shooting functions

Using the flash .....	42
Adjusting the brightness of the image .....	44

☺ / 📺 Selecting the drive mode .....	46
Switching the recording information display (DISP) .....	47
Setting image size .....	48
Image Size .....	48
Panorama: Size .....	48

---

## Using the playback functions

Enlarging images .....	50
Switching to the display of the image list .....	51
Viewing images on a TV screen .....	52

---

## Functions list

Functions that can be operated with the buttons/switch .....	53
Selecting a function with the Fn (Function) button .....	54
Functions that can be selected with the Fn (Function) button .....	55
The functions selected with the MENU button .....	57
Using the guide function of the camera .....	64
In-Camera Guide .....	64
Shooting Tip .....	64

---

## Viewing images on a computer

Using with your computer .....	66
Using the software .....	68
Selecting the method for creating a disc of movies .....	71

---

## Others

List of icons on the screen .....	74
Functions available for each shooting mode .....	77
Flash modes available .....	78

## Advanced operations

.....	79
-------	----

This section provides further information on the camera.






 
---

## Preparation

Setting up the camera .....	80
Removing the eyecup .....	80
The screen displayed for shooting mode .....	81
Selecting the screen mode .....	81

Histogram .....	82
The digital level gauge .....	83
Monitoring the subject through the lens without effects displayed .....	83
List of icons for viewfinder mode .....	84
Shooting a clear image without camera shake .....	86
Camera shake warning indicator .....	86
Using the SteadyShot function .....	86
Using a tripod .....	87

## Shooting

Selecting the shooting mode .....	88
 Intelligent Auto/  Flash Off .....	88
 Superior Auto .....	88
<b>SCN</b> Scene Selection .....	89
 Sweep Panorama/  3D Sweep Panorama .....	91
 Cont. Priority AE Mode .....	93
<b>P</b> Program Auto .....	94
<b>A</b> Aperture Priority .....	95
<b>S</b> Shutter Priority .....	97
<b>M</b> Manual Exposure .....	99
<b>M BULB</b> .....	100
Movie recording setup .....	103
Recording movies easily .....	103
Digital Zoom .....	104
Recording movies with the shutter speed and aperture adjusted .....	105
File Format .....	105
Record Setting .....	106
Audio Recording .....	107
Adjusting the focus .....	109
Autofocus .....	109
Focus-lock .....	111
Autofocus Mode .....	112
AF area .....	113
The AF illuminator .....	113
Object Tracking .....	114
Manual focus .....	116
Peaking .....	117

Focus Magnifier .....	117
Detecting faces .....	119
Face Detection .....	119
Face Registration .....	120
Auto Port. Framing .....	121
Smile Shutter .....	122
Adjusting the brightness of the image .....	124
AE Lock .....	124
Metering Mode .....	125
Flash Comp. ....	125
Flash control .....	126
The flash .....	128
Wireless flash .....	128
Setting ISO .....	130
Multi frame noise reduction .....	130
Compensating for the brightness and contrast automatically (D-Range) .....	131
D-RangeOptimizer .....	131
Auto HDR .....	132
Setting the image processing .....	134
Picture Effect .....	134
Creative Style .....	135
Adjusting the color tones (White balance) .....	137
The fine adjustment screen for color .....	138
Color Temp./Color Filter .....	139
Custom white balance .....	139
Magnifies images with higher scale than the optical zoom (ZOOM) .....	141
☺/☐ Selecting the drive mode .....	144
Shooting single shot .....	144
Cont. Shooting .....	144
Self-timer .....	145
Bracket: Cont./Single Bracket .....	145
WB bracket .....	147
Remote Cdr. ....	148

---

## Playback

The screen displayed for playback mode .....	149
Switching the screen during playback .....	149
List of icons on the histogram display .....	149
Using the playback functions .....	151
Rotating an image .....	151
View Mode .....	151
Slide Show .....	152
Playback Display .....	152
Scrolling panoramic images .....	153
Protecting images (Protect) .....	154
Deleting images (Delete) .....	155
Delete (Multiple Img.) .....	155
Deleting all the images or movies in the same view mode .....	156
About playback on TV .....	157
3D Viewing .....	157
Using "BRAVIA" Sync .....	157

---

## Setup of the camera

Setting the aspect ratio and image quality .....	159
Aspect Ratio .....	159
Quality .....	159
Setting the other functions of the camera .....	161
Long Exposure NR .....	161
High ISO NR .....	161
Color Space .....	162
Release w/o Lens .....	162
Grid Line .....	163
Auto Review .....	163
Func. of AEL button .....	163
ISO Button .....	164
Preview Button .....	164
Electronic Front Curtain Shutter .....	165
LCD Brightness .....	165
Viewfinder Bright. ....	166
Eco Mode .....	166
Power Save .....	166

FINDER/LCD Setting .....	167
Lens compensation .....	168
Lens Comp.: Peripheral Shading .....	168
Lens Comp.: Chromatic Aberration .....	168
Lens Comp.: Distortion .....	168
Setting the method for recording on a memory card .....	169
Format .....	169
File Number .....	169
Folder Name .....	169
Select REC Folder .....	170
New Folder .....	170
Recover Image DB .....	171
Upload Settings .....	171
Resetting to the default .....	173
Confirming the version of the camera .....	177

---

## Computer

Connecting the camera to the computer .....	178
Setting the USB connection .....	178
Connecting to the computer .....	178
Importing images to the computer (Windows) .....	179
Importing images to the computer (Mac) .....	180
Deleting the USB connection .....	181
Creating a movie disc .....	182
Creating a high definition image quality (HD) disc (AVCHD recording disc) .....	182
Creating a standard definition image quality (STD) disc .....	183
Discs you can use with “PlayMemories Home” .....	184

---

## Print

Specifying DPOF .....	185
Date Imprint .....	185

---

## Cleaning

Cleaning the camera and a lens .....	186
Cleaning the image sensor .....	187

---

**Trouble shooting/Others**

Troubleshooting .....	190
Warning messages .....	199
Precautions .....	201
To use your camera abroad — Power sources .....	204
AVCHD format .....	205
3D-shootings .....	206
Memory card .....	207
Battery pack/Battery charger .....	209
The License .....	211
<b>Index .....</b>	<b>212</b>



# Basic operations

---

The contents of the “Basic operations” section are the same as those in the Instruction Manual supplied. This section provides the basic information on operating the camera. To more effectively take advantage of the camera, see “Advanced operations” (page 79).



# Notes on using your camera

## Shooting procedure

- This camera has 2 modes for monitoring subjects: the LCD screen mode using the LCD screen, and the viewfinder mode using the viewfinder.
- The recorded image may be different from the image you monitored before recording.

## Notes on the functions available with the camera

- To check whether it is a 1080 60i-compatible device or 1080 50i-compatible device, check for the following marks on the bottom of the camera.  
1080 60i-compatible device:60i  
1080 50i-compatible device:50i
- This camera is compatible with 1080 60p or 50p-format movies. Unlike standard recording modes up to now, which record in an interlacing method, this camera records using a progressive method. This increases the resolution, and provides a smoother, more realistic image.
- You may feel uncomfortable symptoms such as eyestrain, nausea, or a tired feeling while watching 3D-images recorded with the camera on 3D-compatible monitors. When you watch 3D-images, we recommend that you take a break at regular time intervals. Since the need for or frequency of break times varies among individuals, please set your own standards. If you feel sick, stop watching 3D-images, and consult a doctor as needed. Also, refer to the operating instructions of the connected device or the software used with the camera. A child's vision is always vulnerable (especially for children under 6 years of age). Before allowing them to watch 3D-images, please consult with an expert, such as a pediatric or ophthalmic doctor. Be sure to make sure your children follow the precautions above.

## No compensation for contents of the recording

The contents of the recording cannot be compensated for if recording or playback is not possible due to a malfunction of your camera or a memory card, etc.

## Back up recommendation

To avoid the potential risk of data loss, always copy (back up) data to other medium.

## Notes on the LCD screen, electronic viewfinder, lens, and image sensor

- The LCD screen and electronic viewfinder are manufactured using extremely high-precision technology so over 99.99% of the pixels are operational for effective use. However, there may be some tiny black points and/or bright points (white, red, blue or green in color) that constantly appear on the LCD screen and electronic viewfinder. These points are normal in the manufacturing process and do not affect the images in any way.
- Do not hold the camera by taking hold of the LCD screen.
- Do not expose the camera to sunlight or shoot sunward for a long time. The internal mechanism may be damaged. If sunlight is focused on a nearby object, it may cause a fire.
- There is a magnet on the back and around the rotating shaft of the hinge part of the LCD screen. Do not bring anything that is easily affected by a magnet, such as floppy disk, credit cards near the LCD screen.
- Images may trail across on the screen in a cold location. This is not a malfunction. When turning on the camera in a cold location, the screen may become temporarily dark. When the camera warms up, the screen will function normally.

## Notes on long-time recording

- When you continue to shoot for a long time, the temperature of the camera rises.

If the temperature reaches above a certain level, the [ ] mark is indicated on the screen and the camera is turned off automatically. If the power is turned off, leave the camera for 10 minutes or longer to allow the temperature inside the camera to decrease to a safe level.

- Under high ambient temperatures, the temperature of the camera rises quickly.
- When the temperature of the camera rises, the image quality may deteriorate. It is recommended that you wait until the temperature of the camera drops before continuing to shoot.
- The surface of the camera may get warm. This is not a malfunction.

### Notes on importing AVCHD movies to a computer

When importing AVCHD movies to a computer, for Windows computers, use the "PlayMemories Home" software on the CD-ROM (supplied).

### Notes when playing movies on other devices

- This camera uses MPEG-4 AVC/H.264 High Profile for AVCHD format recording. Movies recorded in AVCHD format with this camera cannot be played with the following devices.
  - Other devices compatible with AVCHD format that does not support High Profile
  - Devices incompatible with the AVCHD format

This camera also uses MPEG-4 AVC/H.264 Main Profile for MP4 format recording. For this reason, movies recorded in MP4 format with this camera cannot be played on devices other than those that support MPEG-4 AVC/H.264.

- Discs recorded with HD image quality (high definition) can be played back only on AVCHD format-compatible devices. DVD-based players or recorders cannot play back HD image quality discs, as they are incompatible with the AVCHD format. Also, DVD-based players or recorders may fail to eject HD image quality discs.

- 1080 60p/50p movies can be played back on compatible devices only.

### Warning on copyright

Television programs, films, videotapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provisions of the copyright laws.

### The pictures used in this manual

The photographs used as examples of pictures in this manual are reproduced images, and are not actual images shot using this camera.

### On the data specifications described in this manual

The data on performance and specifications is defined under the following conditions, except as described in this manual: at an ordinary ambient temperature of 25°C (77°F), and using a battery pack that is charged for about 1 hour after the CHARGE lamp goes out.

### Model name

This manual covers several models supplied with different lenses.

The model name varies depending on the supplied lens. The available model varies depending on the countries/regions.

Model name	Lens
SLT-A57	–
SLT-A57K	DT18-55mm
SLT-A57Y	DT18-55mm and DT55-200mm

 
# Checking the supplied items

First check the model name of your camera (page 11). The accessories supplied differ depending on the model.

The number in parentheses indicates the number of pieces.

## Common accessories

- Camera (1)
- BC-VM10A Battery charger (1)



- Power cord (mains lead) (1) (not supplied in the U.S.A. and Canada)



 
- Rechargeable battery pack NP-FM500H (1)



- USB cable (1)



- Shoulder strap (1)



- Body cap (1) (Attached on the camera)



- Eyecup (1) (Attached on the camera)
- CD-ROM (1)
  - Application Software for  $\alpha$  camera
  - $\alpha$  Handbook (This manual)
- Instruction Manual (1)

## SLT-A57K

- DT18-55mm zoom lens (1)/Front lens cap (1)/Packaging lid (1)


## SLT-A57Y

- DT18-55mm zoom lens (1)/Front lens cap (1)/Packaging lid (1)
- DT55-200mm zoom lens (1)/Front lens cap (1)/Rear lens cap (1)/Lens hood (1)

# Identifying parts


See the pages in parentheses for details of operation.

## Front side

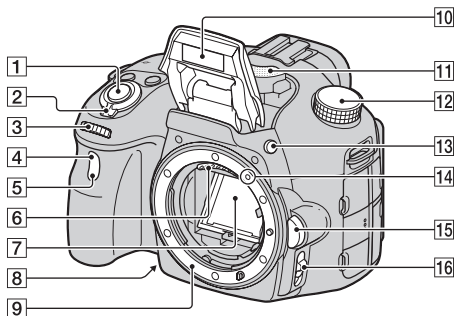

- 1 Shutter button (31)
  - 2 Power switch (27)
  - 3 Control dial (95, 97, 99)
  - 4 Remote sensor (148)
  - 5 Self-timer lamp (145)
  - 6 Lens contacts\*
  - 7 Mirror\*
  - 8 Preview button (97)/Focus Magnifier button (117)
  - 9 Mount
  - 10 Built-in flash\* (42, 128)
  - 11 Microphone\*\* (107)
  - 12 Mode dial (37)
  - 13  $\blacksquare$  (Flash pop-up) button (42, 128)
  - 14 Mounting index (24)
  - 15 Lens release button (25)
  - 16 Focus mode switch (109, 116)
- \* **Do not directly touch these parts.**
- \*\* **Do not cover this part during movie recording. Doing so may cause noise or lower the volume.**

## Rear side

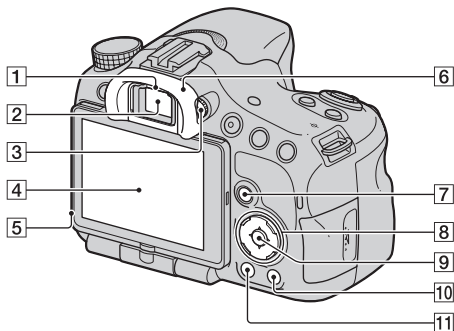

1 Eyepiece sensors (80)

2 Viewfinder\*

- When you look into the viewfinder, the viewfinder mode is activated, and when you take your face away from the viewfinder, the screen mode returns to the LCD screen mode.


3 Diopter-adjustment dial (29)

4 LCD screen (74, 84, 149)

 

5 Light sensor (165)

6 Eyecup (80)

7 For shooting: Fn (Function) button (54, 55)


For viewing:  (Image rotation) button (151)


8 Control button

▲/▼/◀/▶/DISP (Display) (47, 149)/WB (White balance) (137)/ (Drive) (46, 144)/ (Picture Effect) (134)

9 Control button (Enter)/AF button (113)/Object Tracking button (114)


10 ? (In-Camera Guide) button (64)





For viewing:  (Delete) button (35)


11  (Playback) button (34)

\* **Do not directly touch this part.**

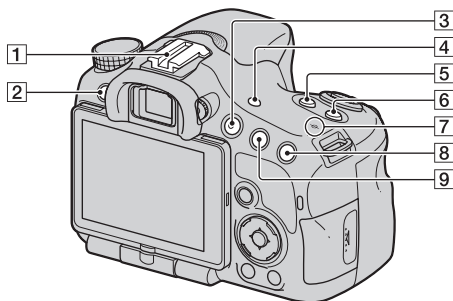
## Top side

  


- 1 Auto-lock Accessory shoe (128)
- 2 MENU button (57)
- 3 MOVIE button (33, 103)
- 4 FINDER/LCD button (167)
- 5  (Exposure) button (44)
- 6 ISO button (130, 164)
- 7  Image sensor position mark (111)
- 8 For shooting: ZOOM button (141)  
For viewing:  (Zoom in) button (50)
- 9 For shooting: AEL (AE lock) button (124, 163)/AV (Aperture value) button (99)  
For viewing:  (Zoom out)

button (50)/ (Image index) button (51)

## Sides/Bottom

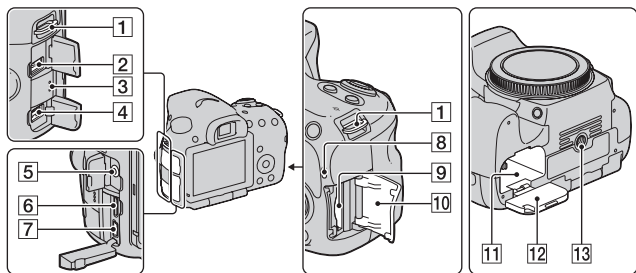**1** Hooks for shoulder strap

- Attach both ends of the strap onto the camera.

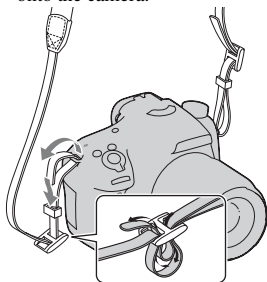**2** REMOTE terminal


- When connecting the RM-L1AM Remote Commander (sold separately) to the camera, insert the plug of the Remote Commander into the REMOTE terminal, aligning the guide of the plug with the guide of the REMOTE terminal. Make sure that the cord of the Remote Commander faces forward.

**3** Speaker**4** DC IN terminal

- When connecting the AC-PW10AM AC Adaptor (sold separately) to the camera, turn the camera off, then plug the connector of the AC Adaptor to the DC IN terminal on the camera.

**5** Microphone jack

- When an external microphone is connected, the internal microphone is turned off automatically. When the external microphone is a plug-in-power type, the power of the microphone is supplied by the camera.


**6** HDMI mini terminal (52, 157)**7**  (USB) terminal (178)**8** Access lamp (22)**9** Memory card insertion slot (21)**10** Memory card cover (21)




- 
- 11 Battery insertion slot (21)
- 12 Battery cover (21)
- 13 Tripod receptacle
- Use a tripod with a screw length of less than 5.5 mm (7/32 inch). You will be unable to firmly secure the camera to tripods with a screw length of 5.5 mm (7/32 inch) or longer, and attempting to do so may damage the camera.

## Lens

DT 18-55mm F3.5-5.6 SAM  
(Supplied with the SLT-A57K/A57Y)

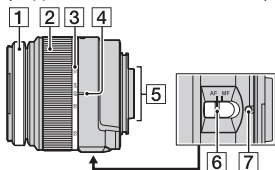

DT 55-200mm F4-5.6 SAM  
(Supplied with the SLT-A57Y)

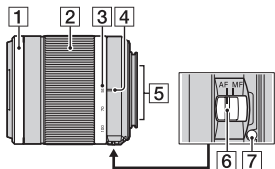

- 1 Focusing ring
- 2 Zoom ring
- 3 Focal-length scale
- 4 Focal-length index
- 5 Lens contacts
- 6 Focusing mode switch
- 7 Mounting index

- The DT 18-55mm F3.5-5.6 SAM/DT 55-200mm F4-5.6 SAM are designed for Sony A-mount cameras (models equipped with an APS-C sized image sensor). You cannot use these lenses on 35mm-format cameras.
- For the lenses other than DT 18-55mm F3.5-5.6 SAM/DT 55-200mm F4-5.6 SAM, refer to the operating instructions supplied with the lens.

# Charging the battery pack

When using the camera for the first time, be sure to charge the NP-FM500H “InfoLITHIUM” battery pack (supplied).

The “InfoLITHIUM” battery pack can be charged even when it has not been fully depleted.

It can also be used when it has not been fully charged.


The battery pack is discharged little by little, even when you do not use it.

To avoid missing an opportunity to shoot, check the remaining battery level before you shoot. If the battery level is low, charge it again.

---

## 1 Insert the battery pack onto the battery charger.

Push the battery pack until it clicks.

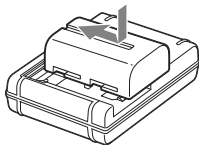

## 2 Connect the battery charger to the wall outlet (wall socket).


Light on: Charging

Light off: Charge completed


Charging time	About 175 minutes
---------------	-------------------

- When charging a fully depleted battery pack at a temperature of 25°C (77°F).
- The CHARGE lamp turns off when charging is completed.

For the U.S.A and Canada

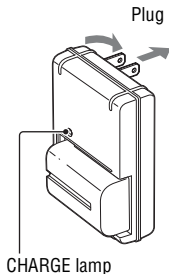

For countries/regions other than the U.S.A. and Canada

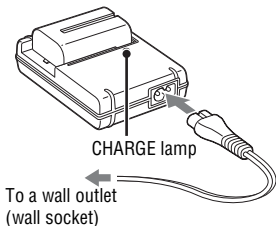


### Notes


- The charging time differs depending on the remaining capacity of the battery pack or charging conditions.
- We recommend charging the battery pack in an ambient temperature of between 10°C to 30°C (50°F to 86°F). You may not be able to efficiently charge the battery pack outside of this temperature range.
- Connect the battery charger to the nearest wall outlet (wall socket).

# Inserting the battery pack/memory card (sold separately)


- 1** While sliding the battery cover open lever, open the cover.

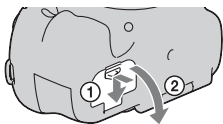


- 2** Firmly insert the battery pack all the way while pressing the lock lever with the tip of the battery.

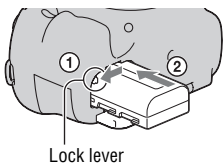

- 3** Close the cover.

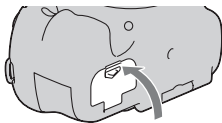


- 4** While sliding the memory card cover, open the cover.

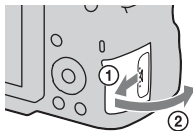


## 5 Insert a memory card.

- With the notched corner facing as illustrated, insert the memory card until it clicks into place.

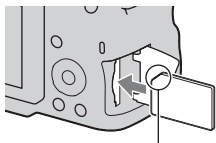


Ensure the notched corner faces correctly.

## 6 Close the cover.

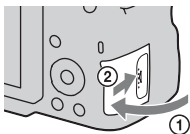

### To remove the battery pack

Turn off the camera. Slide the lock lever in the direction of the arrow 10 seconds after turning off the camera, then remove the battery pack. Be careful not to drop the battery pack.

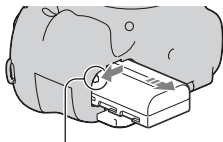

Lock lever

### To remove the memory card

Check that the access lamp is not lit, then open the cover, and push the memory card once.

### To check the remaining battery level

The supplied battery pack is a lithium-ion battery pack that has functions for exchanging information related to operating conditions with your camera. The remaining battery time in percent figures is displayed according to the operating conditions of your camera.

Battery level						<b>“Battery exhausted.”</b>
	High  Low					You cannot shoot any more pictures.

## Available memory cards

The following memory cards are compatible with this camera. However, all memory cards are not guaranteed to work with this camera.

Types of memory card	Still images	Movies	In this manual
Memory Stick PRO Duo	✓	✓ (Mark2)	Memory Stick PRO Duo
Memory Stick PRO-HG Duo	✓	✓	
SD memory card	✓	✓ (Class 4 or faster)	SD card
SDHC memory card	✓	✓ (Class 4 or faster)	
SDXC memory card	✓	✓ (Class 4 or faster)	

- MultiMediaCard cannot be used.


### Note

- Images recorded on an SDXC memory card cannot be imported to or played on computers or AV devices that are not compatible with exFAT. Make sure that the device is compatible with exFAT before connecting it to the camera. If you connect your camera to an incompatible device, you may be prompted to format the card. Never format the card in response to this prompt, as doing so will erase all data on the card. (exFAT is the file system used on SDXC memory cards.)


# Attaching a lens

## 1 Remove the body cap from the camera and the packaging lid from the rear of the lens.

- When changing the lens, quickly change the lens away from dusty locations so as to keep dust or debris from getting inside the camera.
- When shooting, remove the front lens cap from the lens.

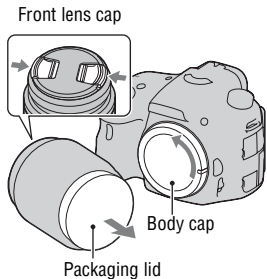


## 2 Mount the lens by aligning the orange index marks (mounting indexes) on the lens and camera.

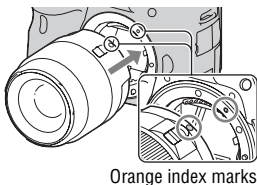

## 3 Turn the lens clockwise until it clicks into the locked position.

- Be sure to put the lens on straight.

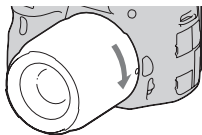

### Notes


- When attaching a lens, do not press the lens release button.
- Do not use force when attaching a lens.
- E-mount lenses are not compatible with this camera.
- When you use a lens for which a tripod socket is provided, attach the lens onto the tripod using the tripod socket provided to help balance the weight of the lens.
- When carrying the camera with a lens attached, hold both the camera and the lens firmly.



- Do not hold the part of the lens that is extended for the zoom or focus adjustment.

## To remove the lens


- 1 Press the lens release button all the way in and turn the lens counterclockwise until it stops.**

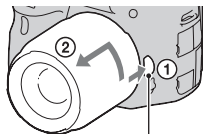

Lens release button


- 2 Attach the caps to the front and rear of the lens and the body cap to the camera.**

- Before you attach them, remove dust from them.
- A rear lens cap is not supplied with the DT 18-55mm F3.5-5.6 SAM Lens Kit. When you store the lens without attaching it to the camera, purchase the Rear Lens Cap ALC-R55.

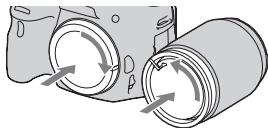

## To attach a lens hood

 It is recommended that you use a lens hood to reduce flare and ensure maximum image quality. Fit the hood into the mount on the end of the lens barrel and rotate the hood clockwise until it clicks.



### Notes

- A lens hood is not included with the DT 18-55mm F3.5-5.6 SAM. You can use the ALC-SH108 (sold separately).
- The lens hood may block the light of the flash. Remove the lens hood when using the flash.

- When storing, turn over the lens hood and place it onto the lens backwards.

### **Note on changing the lens**

When changing the lens, if dust or debris gets inside the camera and adheres to the surface of the image sensor (the part that acts as the film), it may appear as dark spots on the image, depending on the shooting environment.

The camera is equipped with an anti-dust function to prevent dust from landing on the image sensor. However, quickly change the lens away from dusty locations when attaching/removing a lens.

 
# Turning the camera on and setting the clock

When you turn the camera on for the first time, the date/time setup screen appears.


## 1 Set the power switch to ON to turn the camera on.

The screen used for setting date and time appears.

- To turn the camera off, set it to OFF.



## 2 Verify that [Enter] is selected on the LCD screen, then press the center of the control button.

 



## 3 Select your area with ◀/▶ on the control button, then press the center of the control button.

## 4 Select each item with ◀/▶ and set the numeric value with ▲/▼.

**[Daylight Svg.]:** Turns on or off the daylight saving time setting.

**[Date Format]:** Selects the format to display date.

 - Midnight is indicated as 12:00 AM, and noon as 12:00 PM.

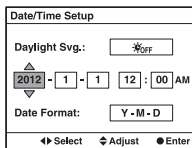

---

**5 Repeat step 4 to set other items, then press the center of the control button.**

---

**6 Verify that [Enter] is selected, then press the center of the control button.**


---

#### **To cancel the date/time setting operation**

Press the MENU button.

#### **To set up the date/time again**

When you turn the camera on for the first time, the date/time setup screen appears automatically. The next time, set up the date and time from the menu.

**MENU button →  1 → [Date/Time Setup]**

#### **To set up the area again**

You can set the area where you are using the camera. This allows you to set the local area when you use the camera abroad.

**MENU button →  1 → [Area Setting]**

#### **Maintaining the date and time setting**

 
This camera has an internal rechargeable battery for maintaining the date and time and other settings regardless of whether the power is on or off, or the battery is installed or not (page 201).

# Before shooting

## Adjusting the viewfinder to the visual acuity (diopter adjustment)

**Adjust the diopter-adjustment dial to your eyesight until the display appears clearly in the viewfinder.**

- If you cannot see the entire screen in the viewfinder, you can change the scale of the viewfinder screen (page 59).



### Note

- The dioptic adjustment attachment (sold separately) cannot be used with this camera.

## Holding the camera properly

**Stabilize your upper body and take a position that keeps the camera from moving.**

In LCD screen mode



In viewfinder mode



In viewfinder mode  
(vertical position)



### Point ①

One hand holds the grip of the camera, and the other hand supports the lens.

### Point ②

Take a secure stance with your feet shoulder-width apart.


Point ③



Lightly tuck your elbows against your body.

 
When shooting in a kneeling position, steady your upper body by placing your elbow on your knee.

# Shooting still images

The “Intelligent Auto” mode allows you to easily shoot any subject under any conditions because the camera makes appropriate judgments on the situation to adjust the settings.


Select  when shooting in a location where the use of a flash is restricted.


- 1 Set the mode dial to  or  (Flash Off).**




- 2 Hold the camera, monitoring your shot with the LCD screen or viewfinder.**

- 3 Overlay the AF area on the desired subject.**

- If the  (Camera shake warning) indicator flashes, carefully shoot the subject, holding the camera steady, or by using a tripod.
- When the camera recognizes the scene, the Scene Recognition icon appears on the screen and suitable settings for that scene will be put into effect.


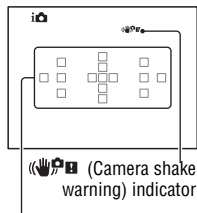


 - 4 When using a zoom lens, turn the zoom ring, then decide on your shot.**



## 5 Press the shutter button halfway down to focus.


When the focus is confirmed, ● or (Focus indicator) lights up (page 110).

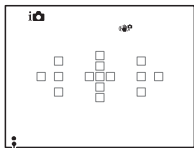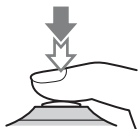

Focus indicator

## 6 Press the shutter button fully down to shoot.


- When the camera detects and shoots a face with [Auto Port. Framing] set to [Auto], the captured image is automatically trimmed into a suitable composition. Both the original and the trimmed images are saved (page 121).

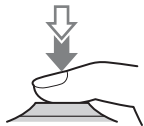



# Recording movies

## 1 Press the MOVIE button to start recording.


- Movie recording can be started from any exposure mode.
- The shutter speed and aperture are adjusted automatically. If you want to set them to particular values, set the mode dial to  (Movie) (page 105).
- The camera continues to adjust the focus when it is in autofocus mode.

MOVIE button



 
## 2 Press the MOVIE button again to stop recording.

### Notes

- The sound of the camera and the lens in operation may be recorded while recording a movie. You can disable sound recording by setting [Audio Recording] to [Off] (page 107).
- The continuous recording time of a movie may be shorter, depending on the ambient temperature or the status of the camera. See “Notes on continuous movie recording.”
- When the  mark is indicated, the temperature of the camera is too high. Turn the camera off and wait until the temperature of the camera drops (page 200).

# Playing back images

## 1 Press the button.



## 2 MENU button → 1 → [View Mode] → Select the desired mode

- To play back still images, select [Folder View(Still)], and to play back movies, select [Folder View(MP4)] or [AVCHD View] according to the file format.

## 3 Select an image with on the control button.

- To play back movies, press the center of the control button.

During movie playback	Control button/control dial operation
To pause/resume	●
To fast-forward	▶
To fast-rewind	◀
To slow-forward	Rotate the control dial to the right during pause
To slow-reverse	Rotate the control dial to the left during pause <ul style="list-style-type: none"><li>• The movie is played back frame-by-frame.</li></ul>
To adjust sound volume	▼ → ▲/▼
To display the information	▲

### Note

- Movies recorded with other devices may not be played back on this camera.


# Deleting images (Delete)

 
Once you have deleted an image, you cannot restore it. Check whether to delete the image or not beforehand.

## Note

- Protected images cannot be deleted.

## Deleting the image that is currently displayed

- 1** Display the image you want to delete and press the  button.



- 2** Select [Delete] with **▲** on the control button, then press the center of the control button.



# Adjusting the angle of the LCD screen

## Adjust the LCD screen to an easily viewable angle.

- The LCD screen tilts 180 degrees.
- The LCD screen can be rotated leftward 270 degrees from the position in which the LCD screen is facing forward.
- When the LCD screen is not used, it is recommended that you close it with the screen side facing to the camera.


### Note

- When the LCD screen is open, the eye sensor may not be able to function in situations involving low-position shooting. If you look into the viewfinder and the monitor is not switched automatically, press the FINDER/LCD button.

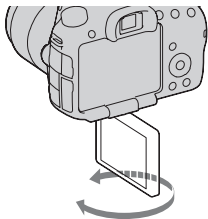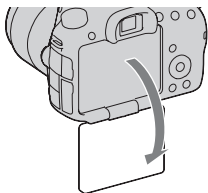

# Shooting with the various shooting modes

 Set the mode dial to the desired mode.



The following shooting modes are provided with the camera:

<b>i</b> (Intelligent Auto)/ (Flash Off) (31, 88)	The “Intelligent Auto” mode allows you to easily shoot any subject under any conditions because the camera makes appropriate judgments on the situation to adjust the settings. Select “Flash Off” when you want to shoot without the flash.
<b>i+</b> (Superior Auto) (38, 88)	The camera recognizes and evaluates the shooting condition, and appropriate settings are set automatically. The camera saves 1 appropriate image by combining or separating images, as necessary.
<b>SCN</b> (Scene Selection) (39, 89)	Selecting an appropriate mode for the subject or the shooting conditions allows you to shoot the image with a suitable setting for the subject.
<b>3D</b> (Sweep Panorama) (40, 91)	Allows you to shoot panoramic images.
<b>3D</b> (3D Sweep Panorama) (40, 91)	Allows you to shoot 3D panoramic images for playback on a 3D compatible TV.
<b>T</b> (Cont. Priority AE Mode) (41, 93)	The camera continues to shoot while the shutter button is pressed fully down. The camera records the images continuously at a maximum of about 12 or 10 images per second.
<b>M</b> (Movie) (33, 103)	Allows you to shoot movies with the exposure adjusted manually (both the shutter speed and the aperture value).
<b>P</b> (Program Auto) (94)	Allows you to shoot with the exposure adjusted automatically (both the shutter speed and the aperture value). The other settings can be adjusted manually.
<b>A</b> (Aperture Priority) (95)	Allows you to shoot after adjusting the aperture value manually using the control dial.
<b>S</b> (Shutter Priority) (97)	Allows you to shoot after adjusting the shutter speed manually using the control dial.


**M (Manual Exposure) (99)**

Allows you to shoot after adjusting the exposure manually (both the shutter speed and the aperture value) using the control dial.

**iA+ Superior Auto****1 Set the mode dial to iA+ (Superior Auto).****2 Point the camera towards the subject.**

When the camera recognizes and adjusts for shooting conditions, the following information is indicated: recognized scene mode mark, appropriate shooting function, the number of images to be shot.

Recognized scene mode mark

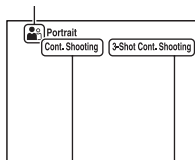

Shooting function

Number of images to be shot

**3 Adjust the focus and shoot the subject.****Scene recognized by the camera**

(Night Scene)	(Hand-held Twilight)	(Landscape)
(Backlight Portrait)	(Portrait)	(Tripod Night Scene)
(Backlight)	(Macro)	(Night Portrait)
(Spotlight)	(Low Brightness)	(Baby)

**Shooting function**

Cont. Shooting (144)	Slow Sync. (42, 128)	Auto HDR (132)
Daylight Sync.	Slow Shutter	Hand-held Twilight (39, 89)









## SCN Scene Selection

**1 Set the mode dial to SCN (Scene Selection).**

**2 Select the desired mode with ▲/▼, then press the center of the control button.**

- To change the scene, press the Fn button, then select another scene.


**3 Adjust the focus and shoot the subject.**

 (Portrait)	Blurs away backgrounds and sharpens the subject. Expresses skin tones softly.
 (Sports Action)	Shoots a moving subject at a fast shutter speed so that the subject looks as if it is standing still. The camera shoots images continuously while the shutter button is pressed.
 (Macro)	Shoots close subjects such as flowers, foods.
 (Landscape)	Shoots the entire range of scenery in sharp focus with vivid colors.
 (Sunset)	Shoots the red of the sunrise or sunset beautifully.
 (Night Scene)	Shoots night scenes at a distance without losing the dark atmosphere of the surroundings.
 (Hand-held Twilight)	Shoots night scenes with less noise and blur without using a tripod. A burst of shots are taken, and image processing is applied to reduce subject blur, camera shake, and noise.
 (Night Portrait)	Shoots portraits in night scenes.

## Sweep Panorama/ 3D Sweep Panorama

**1** Set the mode dial to  (Sweep Panorama)/ (3D Sweep Panorama).


**2** Point the camera at the edge of the subject, then press the shutter button halfway down to adjust the focus.

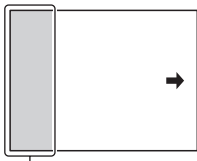

This part will not be taken

**3** Press the shutter button fully down.

**4** Pan or tilt the camera to the end, following the guidance on the screen.

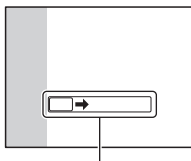

Guidance bar



## Continuous Advance Priority AE Mode

 

**1** Set the mode dial to  (Cont. Priority AE Mode).

**2** Select the desired mode with / on the control button, then press the center  on the control button.

- To change the mode, press the Fn button, then select another mode.

**3** Adjust the focus and shoot the subjects.

- The camera continues to shoot while the shutter button is pressed fully down.

 (Tele-zoom Cont. Priority AE)	The camera records the images continuously at a maximum of about 12 images per second. <ul style="list-style-type: none"> <li>• The minimum zoom scale of the camera is set to 1.4 times and the image size can be set to M or S.</li> </ul>
 (Cont. Priority AE)	The camera records the images continuously at a maximum of about 10 images per second. The image size can be set to L.

# Using the flash

In a dark location, using the flash allows you to shoot the subject brightly, and it also helps to prevent camera shake. When shooting into the sun, you can use the flash to shoot a bright image of the backlit subject.

---

## 1 Fn button → ⚡ (Flash Mode) → Select the desired setting


- For further information on the flash modes available for each shooting mode, see page 78.

---

## 2 Press the ⚡ button.

The flash pops up.

- In Intelligent Auto, Superior Auto or Scene Selection mode, the flash automatically pops up if the amount of light is insufficient or the subject is backlit. The built-in flash does not pop up even if you press the ⚡ button.

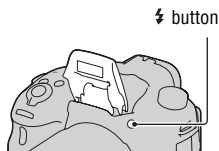


---

## 3 After the flash has finished charging, shoot the subject.





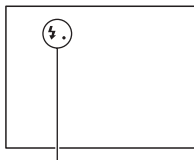

**⚡●** Flashing: The flash is being charged. When the indicator flashes, you cannot release the shutter.

**⚡●** Lit: The flash has been charged and is ready to fire.

- When you press the shutter button halfway down under dark lighting in autofocus mode, the flash may be fired to help focus on a subject (AF Illuminator).



**⚡●** (Flash charging) indicator

 <b>(Flash Off)</b>	Does not fire even the built-in flash pops up. <ul style="list-style-type: none"> <li>You cannot select this item when the mode dial is set to P, A, S, or M. However, the flash will not be fired if it is not pulled up.</li> </ul>
 <b>(Autoflash)</b>	Fires if it is dark or against light.
 <b>(Fill-flash)</b>	Fires every time you trigger the shutter.
 <b>(Slow Sync.)</b>	Fires every time you trigger the shutter. Slow sync shooting allows you to shoot a clear image of both the subject and the background by slowing the shutter speed.
 <b>(Rear Sync.)</b>	Fires right before the exposure is completed every time you trigger the shutter.
 <b>(Wireless)</b>	Fires an external flash (sold separately) that is off the camera and away from it (Wireless flash shooting).

# Adjusting the brightness of the image

Except for exposure mode M, the exposure is automatically selected (Automatic exposure).

Based on the exposure acquired by the automatic exposure, you can perform exposure compensation. You can make the entire image brighter by shifting to the + side. The entire image becomes darker when you shift it to the - side (Exposure compensation).

## 1 Press the button.

 button




## 2 Adjust the exposure with the control dial.

Toward + (over): Brightens an image.

Toward - (under): Darkens an image.


- In viewfinder mode, confirm the exposure using the EV scale.

The LCD screen after the exposure is adjusted.

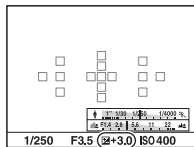

Compensated exposure

 The screen in the viewfinder



Standard exposure

## 3 Adjust the focus and shoot the subject.

### Shooting techniques

- Adjust the compensation level by checking the recorded image.
- Using bracket shooting, you can shoot multiple images with the exposure shifted to the plus or minus sides (page 145).

 
**Note**





- This item cannot be set when the exposure mode is set to Intelligent Auto, Superior Auto, or Scene Selection.

## / **Selecting the drive mode**

You can use an appropriate drive mode to suit your purposes, such as single-shot advanced, continuous advanced, or bracket.

  /  **on the control button →**  
**Select the desired mode**




 <b>(Single Shooting) (144)</b>	This mode is for normal shooting.
 <b>(Cont. Shooting) (144)</b>	The camera records the images continuously.
 <b>(Self-timer) (145)</b>	The 10-second self-timer is convenient when the photographer appears in a photo and the 2-second self-timer is convenient to reduce the camera shake.
<b>BRK C (Bracket: Cont.) (145)</b>	You can shoot 3 images, each with different degrees of exposure.
<b>BRK S (Single Bracket) (145)</b>	You can shoot 3 images, shot by shot, each with different degrees of exposure.
<b>BRK WB (WB bracket) (147)</b>	Based on the selected white balance, and the color temperature/color filter, 3 images are recorded with the white balance shifted.
 <b>(Remote Cdr.) (148)</b>	You can shoot using the SHUTTER and 2SEC (the shutter is released after 2 seconds) buttons on the RMT-DSLR1 Wireless Remote Commander (sold separately).


# Switching the recording information display (DISP)

 Each time you press DISP on the control button, the recording information display changes as follows.


You can select the available displays in the viewfinder or on the LCD screen separately.




Graphic Display

 


Display All Info.

 

No Disp. Info.

 


Level

 

Digital level gauge

## Graphic Display

The Graphic Display shows the shutter speed and aperture value as graphs, and clearly illustrates how the exposure works. The pointers on the shutter speed indicator and aperture indicator indicate the current value.

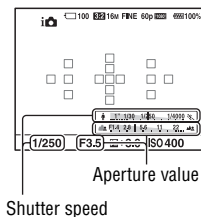

# Setting image size

## Image Size

**MENU button** →  **1** → **[Image Size]** → **Select the desired size**

**[Aspect Ratio]: [3:2]**

Image size		Usage guidelines
<b>L:16M</b>	4912 × 3264 pixels	For prints up to A3+ size
<b>M:8.4M</b>	3568 × 2368 pixels	For prints up to A4 size
<b>S:4.0M</b>	2448 × 1624 pixels	For prints up to L/2L size

**[Aspect Ratio]: [16:9]**

Image size		Usage guidelines
<b>L:14M</b>	4912 × 2760 pixels	For viewing on a high-definition TV
<b>M:7.1M</b>	3568 × 2000 pixels	
<b>S:3.4M</b>	2448 × 1376 pixels	

### Note

- When you select a RAW image with [Quality], the image size of the RAW image corresponds to L. This size is not displayed on the screen.

## Panorama: Size

You can set the image size of panoramic images. The image size varies depending on the setting of the shooting direction (page 93).

**MENU button** →  **1** → **[Panorama: Size]** or **[3D Pan.: Image Size]** → **Select the desired size**

**[Panorama: Size]**

<b>Standard</b>	[Panorama: Direction] is set to [Up] [Down]: 3872 × 2160 [Panorama: Direction] is set to [Right] [Left]: 8192 × 1856
<b>Wide</b>	[Panorama: Direction] is set to [Up] [Down]: 5536 × 2160 [Panorama: Direction] is set to [Right] [Left]: 12416 × 1856



**[3D Pan.: Image Size]**

 
<b>16:9</b>	1920 × 1080
<b>Standard</b>	4912 × 1080
<b>Wide</b>	7152 × 1080

# Enlarging images

A still image can be enlarged for closer examination. This is convenient to check the focus condition of a recorded image.

---

**1 Display the image you want to enlarge, then press the  $\oplus$  button.**



$\oplus$  button

---

**2 Zoom the image in or out with the  $\oplus$  button or  $\ominus$  button.**

- Rotating the control dial switches the image at the same display magnification. When you shoot multiple images with the same composition, you can compare their focus conditions.
- 

**3 Select the portion you want to enlarge with  $\blacktriangle$ / $\blacktriangledown$ / $\blacktriangleleft$ / $\blacktriangleright$  on the control button.**

---

## To cancel the enlarged playback

Press the center of the control button so that the image returns to the normal size.


# Switching to the display of the image list


You can display multiple images on the screen simultaneously.

## Press the button.

The image index screen is displayed.

- You can select the number of images displayed on one page of the image index screen using [Image Index] in the

 Playback menu.

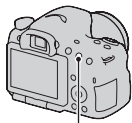
 


 button

## To return to the single-image screen

Press the center of the control button when you select the desired image.

## To display the desired folder


Select the left bar on the image index screen with the control button, then select the desired folder with /. Pressing the center of the control button when the left bar is selected switches the view mode.



# Viewing images on a TV screen

To view images recorded on the camera on a TV set, an HDMI cable (sold separately) and an HD TV equipped with an HDMI connector are required.

## 1 Turn off both your camera and the TV, and connect the camera to the TV.

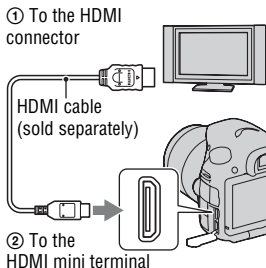



## 2 Turn on the TV and switch the input.


- See also the operating instructions supplied with the TV.

## 3 Turn on the camera, and press the button.

Images shot with the camera appear on the TV screen.





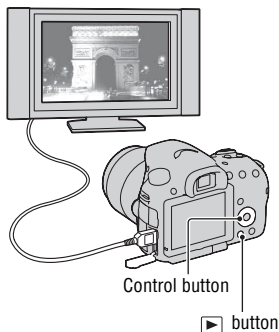



Select the desired image with   on the control button.

- The LCD screen on the camera does not turned on.



# Functions that can be operated with the buttons/switch

 
You can set up or operate various functions with these buttons/switch. For the location of the buttons/switch, see “Identifying parts” (page 13).

 <b>button (42, 128)</b>	Pops the flash up.
 <b>button (44)</b>	Compensates the exposure.
<b>ISO button (130)</b>	Adjusts the ISO sensitivity.
<b>FINDER/LCD button (167)</b>	Switches the display between the LCD screen and the viewfinder.
<b>MENU button (57)</b>	Displays the menu screen for setting up the menu item.
<b>MOVIE button (33, 103)</b>	Records movies.
<b>AEL button (124)/AV button (99)/ button (51)/ button (50)</b>	Fixes the exposure of the entire screen./Sets up the aperture value./Displays multiple images on the screen simultaneously./Scales down an image that has been scaled up when viewing images.
<b>ZOOM button (141)/ button (50)</b>	Magnifies and shoots the subject using the zoom feature of the camera (ZOOM)/Scales an image up when viewing images.
<b>Fn button (54, 55)/ button (151)</b>	Displays the setup screen of the function that is set using the Fn button./Rotates images.
<b>Control button</b>	Sets up the following functions: Display (47, 81, 149), White Balance (137), Drive mode (46, 144), Picture Effect (134), and Autofocus (109).
 <b>button (34)</b>	Plays back images.
<b>? button (64)/ button (35)</b>	Displays a shooting tip or In-Camera Guide./Deletes images.
<b>Focus mode switch (109, 116)</b>	Switches the autofocus and manual focus.
<b>Preview button (97)/Focus Magnifier button (117)</b>	Checks blurring of the background./Allows you to check the focus by enlarging the image before shooting.

# Selecting a function with the Fn (Function) button

This button is used for setting up or executing functions used frequently in shooting.


## 1 Press the Fn button.



## 2 Select the desired item with ▲/▼/◀/▶ on the control button, then press the center ● to execute.

The setup screen appears.

## 3 Following the operation guide, select and execute the desired function.

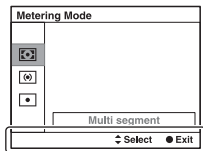

Operation guide

### To set up the camera directly from the recording information screen

Turn the control dial without pressing the center ● in step 2. You can set up the camera directly from the recording information screen.

# Functions that can be selected with the Fn (Function) button

The functions that can be selected with the Fn button are as follows:

<b>Scene Selection (39, 89)</b>	Selects an appropriate mode from among the Scene Selection preset settings to suit shooting conditions. (Portrait/Sports Action/Macro/Landscape/Sunset/Night Scene/Hand-held Twilight/Night Portrait)
<b>Movie (105)</b>	Selects the exposure mode to suit your subject or your effect and records movies. (P/A/S/M)
<b>Cont. Priority AE Mode (41, 93)</b>	Sets the speed for continuous shooting. (Tele-zoom Cont. Priority AE/Cont. Priority AE)
<b>Drive Mode (46, 144)</b>	Sets the drive mode such as continuous shooting. (Single Shooting/Cont. Shooting/Self-timer/Bracket: Cont./Single Bracket/WB bracket/Remote Cdr.)
<b>Flash Mode (42, 128)</b>	Sets the flash mode. (Flash Off/Autoflash/Fill-flash/Slow Sync./Rear Sync./Wireless)
<b>Autofocus Mode (112)</b>	Selects the method for focusing according to movement of the subject. (Single-shot AF/Automatic AF/Continuous AF)
<b>AF area (113)</b>	Selects the area of focus. (Wide/Zone/Spot/Local)
<b>Object Tracking (114)</b>	Keeps the focus on a subject while tracking it. (On/Off)
<b>Smile/Face Detect. (119, 122)</b>	Automatically captures people's face(s) with the optimal focus and exposure./Shoots when a smile is detected. (Face Detection Off/Face Detection On (Regist. Faces)/Face Detection On/Smile Shutter)
<b>Auto Port. Framing (121)</b>	Analyzes the scene when capturing face and automatically saves another image with well-balanced composition. (Auto/Off)
<b>ISO (130)</b>	Sets the sensitivity to light. The larger the number, the faster the shutter speed. (Multi Frame Noise Reduct./ISO AUTO to 16000)
<b>Metering Mode (125)</b>	Selects the method for measuring brightness. (Multi segment/Center weighted/Spot)

<b>Flash Comp. (125)</b>	Adjusts the intensity of flash output. (+2.0EV to -2.0EV)
<b>White Balance (137)</b>	Adjusts the color tone of images. (Auto WB/Daylight/Shade/Cloudy/Incandescent/Fluor.: Warm White/Fluor.: Cool White/Fluor.: Day White/Fluor.: Daylight/Flash/C.Temp./Filter/Custom)
<b>DRO/Auto HDR (131)</b>	Compensates for the brightness and contrast automatically. (Off/D-RangeOptimizer/Auto HDR)
<b>Creative Style (135)</b>	Selects your desired image processing. (Standard/Vivid/Portrait/Landscape/Sunset/Black & White)
<b>Picture Effect (134)</b>	Shoots with the desired effect filter to achieve more impressive expression. (Off/Toy Camera/Pop Color/Posterization/Retro Photo/Soft High-key/Partial Color/High Contrast Mono./Soft Focus/ HDR Painting/Rich-tone Mono./Miniature)



 
# The functions selected with the MENU button

You can set up the basic settings for the camera as a whole or execute functions such as shooting, playback, or other operations.

Press the MENU button, then set up the desired item with ▲/▼/◀/▶ on the control button, then press the center of the control button.

Select a page of the menu

Select an item on the menu



## Still shooting menu

1 2 3	
<b>Image Size (48)</b>	Selects the size of still images. (L:16M/M:8.4M/S:4.0M (When [Aspect Ratio] is set to 3:2) L:14M/M:7.1M/S:3.4M (When [Aspect Ratio] is set to 16:9))
<b>Aspect Ratio (159)</b>	Selects the aspect ratio for still images. (3:2/16:9)
<b>Quality (159)</b>	Sets the image quality for still images. (RAW/RAW & JPEG/Fine/Standard)
<b>Panorama: Size (48)</b>	Selects the size of panoramic images. (Standard/Wide)
<b>Panorama: Direction (93)</b>	Sets the shooting direction for panoramic images. (Right/Left/Up/Down)
<b>3D Pan.: Image Size (48)</b>	Selects the size of 3D-images. (16:9/Standard/Wide)
<b>3D Pan.: Direction (93)</b>	Sets the shooting direction for 3D-images. (Right/Left)

1 2 3	
<b>Clear Image Zoom (141)</b>	Zooms an image with higher quality than Digital Zoom. (On/Off)

<b>Digital Zoom (104, 141)</b>	Zooms an image with higher magnification than Clear Image Zoom. This feature can be also available in movie recording. (On/Off)
<b>Long Exposure NR (161)</b>	Sets noise reduction processing for shots in which shutter speed will be 1 second or longer. (On/Off)
<b>High ISO NR (161)</b>	Sets noise reduction processing for high-sensitivity shooting. (High/Normal/Low)
<b>Flash control (126)</b>	Sets the method for determining the intensity of flash output. (ADI flash/Pre-flash TTL)
<b>AF Illuminator (113)</b>	Sets the AF illuminator, which sheds light on a dark scene to aid focusing. (Auto/Off)
<b>Color Space (162)</b>	Changes the range of reproducible colors. (sRGB/AdobeRGB)



 
<b>SteadyShot (86)</b>	Sets SteadyShot. (On/Off)
<b>Shooting Tip List (64)</b>	Allows you to access all shooting tips.

## Movie shooting menu




<b>File Format (105)</b>	Selects the movie file format. (AVCHD/MP4)
<b>Record Setting (106)</b>	Selects the size of the recorded movie frame. (60i 24M(FX)/50i 24M(FX)/60i 17M(FH)/50i 17M(FH)/60p 28M(PS)/50p 28M(PS)/24p 24M(FX)/25p 24M(FX)/24p 17M(FH)/25p 17M(FH)/1440x1080 12M/VGA 3M)
<b>Audio Recording (107)</b>	Sets whether or not to record audio when shooting a movie. (On/Off)
<b>Wind Noise Reduct. (108)</b>	Reduces wind noise during movie recording. (On/Off)
<b>SteadyShot (86)</b>	Sets SteadyShot. (On/Off)

## Custom menu




<b>Eye-Start AF</b>	Sets whether or not to use auto focus when you look through the viewfinder. (On/Off)
<b>FINDER/LCD Setting (167)</b>	Sets the method for switching between the viewfinder and LCD screen. (Auto/Manual)
<b>Viewfinder Magnifi.</b>	Changes the screen size in the viewfinder. If you cannot see the entire screen in the viewfinder, set it to [Standard]. (Maximum/Standard)
<b>Red Eye Reduction</b>	Reduces the red-eye phenomenon during flash use. (On/Off)
<b>Release w/o Lens (162)</b>	Sets whether shutter can open when lens is not attached. (Enable/Disable)
<b>S. Auto Cont. Shooting (88)</b>	Sets whether or not to shoot continuously in Superior Auto mode. (Auto/Off)
<b>S. Auto Image Extract. (88)</b>	Sets whether or not to save all the images that were shot continuously in Superior Auto mode. (Auto/Off)

 

<b>Grid Line (163)</b>	Sets a grid line display to enable alignment to a structural outline. (Rule of 3rds Grid/Square Grid/Diag. + Square Grid/Off)
<b>Auto Review (163)</b>	Displays the captured image after shooting. Sets auto review. (10 Sec/5 Sec/2 Sec/Off)
<b>DISP Button(Monitor) (81)</b>	Allows you to select the available screen display modes of the LCD screen that can be selected by pressing DISP on the control button. (Graphic Display/Display All Info./No Disp. Info./Level/Histogram/For viewfinder)
<b>DISP Button(Finder) (81)</b>	Allows you to select the available screen display modes of the viewfinder that can be selected by pressing DISP on the control button. (Graphic Display/Display All Info./No Disp. Info./Level/Histogram)

<b>Peaking Level (117)</b>	Enhances the outline of in-focus ranges with a specific color in manual focus mode. (High/Mid/Low/Off)
<b>Peaking Color (117)</b>	Sets the color used for the peaking function. (Red/Yellow/White)
<b>Live View Display (83)</b>	Sets whether or not to display the effect of a function on the screen, such as the effect of the exposure compensation value. (Setting Effect ON/Setting Effect OFF)

 

<b>Func. of AEL button (163)</b>	Assigns the desired function to the AEL button. (Exposure Comp./Drive Mode/Flash Mode/Autofocus Mode/AF area/Face Detection/Smile Shutter/Auto Port. Framing/ISO/Metering Mode/Flash Comp./White Balance/DRO/Auto HDR/Creative Style/Picture Effect/Image Size/Quality/AEL hold/AEL toggle/ AEL hold/ AEL toggle/Object Tracking/AF lock/Aperture Preview/Shot. Result Preview/Zoom/Focus Magnifier)
<b>ISO Button (164)</b>	Assigns the desired function to the ISO button. (Exposure Comp./Drive Mode/Flash Mode/Autofocus Mode/AF area/Face Detection/Smile Shutter/Auto Port. Framing/ISO/Metering Mode/Flash Comp./White Balance/DRO/Auto HDR/Creative Style/Picture Effect/Image Size/Quality/AEL hold/AEL toggle/ AEL hold/ AEL toggle/Object Tracking/AF lock/Aperture Preview/Shot. Result Preview/Zoom/Focus Magnifier)
<b>Preview Button (164)</b>	Selects the method to be used for the operating preview button. (Shot. Result Preview/Aperture Preview/Focus Magnifier)
<b>Focus Hold Button</b>	Sets the function of the focus hold button of the lens. (Focus Hold/D.O.F.Preview)
<b>MOVIE Button</b>	Selects the appropriate mode for the MOVIE button. (Always/Movie Mode Only)




<b>Lens Comp.: Shading (168)</b>	Compensates for the shaded corners of the screen caused by the lens attached. (Auto/Off)
----------------------------------	---

<b>Lens Comp.: Chro. Aber. (168)</b>	Reduces the color deviation at the corners of the screen caused by the lens attached. (Auto/Off)
<b>Lens Comp.: Distortion (168)</b>	Compensates for distortion on the screen caused by the lens attached. (Auto/Off)
<b>Front Curtain Shutter (165)</b>	Sets whether or not to use the electronic front curtain shutter function. (On/Off)
<b>Face Registration (120)</b>	Registers or changes the person to be given priority in the focus. (New Registration/Order Exchanging/Delete/Delete All)
<b>Face Priority Tracking (115)</b>	Sets whether to preferentially-track a certain face or not when the camera detects that face during object tracking. (On/Off)

## Playback menu


 
<b>Delete (35, 155)</b>	Deletes images. (Multiple Img./All in Folder/All AVCHD view files)
<b>View Mode (151)</b>	Allows you to determine how to group the playback images. (Folder View(Still)/Folder View(MP4)/AVCHD View)
<b>Slide Show (152)</b>	Shows a slide show. (Repeat/Interval/Image Type)
<b>Image Index (51)</b>	Displays the image list. (4 Images/9 Images)
<b>3D Viewing (157)</b>	Plays back 3D-images using a 3D-compatible TV connected to the camera.
<b>Protect (154)</b>	Protects or cancels protection for an image. (Multiple Img./Cancel All Images/Cancel All Movies(MP4)/Cancel All AVCHD view files)
<b>Specify Printing (185)</b>	Specifies or unspecifies the images for DPOF. (DPOF Setup/Date Imprint)



<b>Volume Settings</b>	Sets the volume for movie playback.
<b>Playback Display (152)</b>	Sets how to play back an image recorded in portrait. (Auto Rotate/Manual Rotate)

## Memory Card Tool menu



<b>Format (169)</b>	Formats the memory card.
<b>File Number (169)</b>	Sets the method used to assign file numbers to still images and MP4 movies. (Series/Reset)
<b>Folder Name (169)</b>	Sets the folder format for still images. (Standard Form/Date Form)
<b>Select REC Folder (170)</b>	Changes the selected folder for storing still images and MP4 movies.
<b>New Folder (170)</b>	Creates a new folder for storing still images and MP4 movies.
<b>Recover Image DB (171)</b>	Recovers the image database file and enables recording and playback.
<b>Display Card Space</b>	Displays the remaining recording time of movies and the recordable number of still images on the memory card.

## Clock setup menu



<b>Date/Time Setup (27)</b>	Sets date and time, and daylight savings.
<b>Area Setting (28)</b>	Sets the location of use.

## Setup menu



<b>Menu start</b>	Sets the default position of the cursor on the menu to the top item or the last-selected item. (Top/Previous)
<b>LCD Brightness (165)</b>	Sets the brightness of the LCD screen. (Auto/Manual)
<b>Viewfinder Bright. (166)</b>	Sets the brightness of the viewfinder. (Auto/Manual)
<b>Eco Mode (166)</b>	Sets the level of the power saving feature. (Standard/Max)
<b>Power Save (166)</b>	Sets the interval after which power save mode engages. (30 Min/5 Min/1 Min/20 Sec/10 Sec)

<b>HDMI Resolution (157)</b>	Sets the resolution when the camera is connected to an HDMI TV. (Auto/1080p/1080i)
<b>CTRL FOR HDMI (158)</b>	Operates the camera from a TV that support "BRAVIA" Sync. (On/Off)



<b>Upload Settings* (171)</b>	Sets the upload function of the camera when using an Eye-Fi card. (On/Off)
<b>USB Connection (178)</b>	Sets the USB connection method. (Auto/Mass Storage/MTP)
<b>Audio signals</b>	Sets whether or not to use the beep sound when the focus is achieved or the self-timer is working. (On/Off)
<b>Cleaning Mode (187)</b>	Starts the cleaning mode to clean the image sensor.

\* Appears when an Eye-Fi card (sold separately) is inserted in the camera.



 
<b>Version (177)</b>	Displays the camera software version.
<b>Language</b>	Selects the language.
<b>Mode Dial Guide</b>	Turns on or off the mode dial guide (the explanation of each shooting mode). (On/Off)
<b>Demo Mode</b>	Sets the demonstration playback of a movie to on or off. (On/Off)
<b>Initialize (173)</b>	Restores the settings to their defaults. (Reset Default/Rec mode reset/Custom reset)

# Using the guide function of the camera

## In-Camera Guide

When you press the ? (In-Camera Guide) button on the Fn screen or menu screen, a guide in accordance with the currently selected function or setting appears automatically.

Select unavailable functions or settings on the Fn screen, then press the center of the control button, the appropriate setup is indicated in order to enable them.




? (In-Camera Guide) button

## Shooting Tip

 The camera displays the shooting tips in accordance with the shooting mode selected.

### 1 Press the ? (In-Camera Guide) button when the recording information display is displayed.

A shooting tip list in accordance with the current subject appears automatically.



? (In-Camera Guide) button

### 2 Select the desired shooting tip with ▲/▼ on the control button, then press the center of the control button.

The shooting tip is displayed.

- You can scroll the screen with ▲/▼.
- You can select the item with ◀/▶.

### To access all shooting tips

You can search through all the shooting tips from the menu.

Use this item when you want to read shooting tips you have seen before.



---

**MENU button** →  **3** → **[Shooting Tip List]** → **Select the desired shooting tip**

# Using with your computer

Following applications are contained on the CD-ROM (supplied) to allow more versatile use of images shot with your camera.

- “Image Data Converter”

You can open RAW format image files.

- “PlayMemories Home”

You can import still images or movies recorded with the camera to your computer so that you can view them, and use various convenient features to enhance the images you have shot.

For detailed notes on installation, also see page 68.

## Notes

- Use “Image Data Converter” to play back RAW images.
- “PlayMemories Home” is not compatible with Mac computers. When you play back images on Mac computers, use the appropriate application software supplied with the Mac computer.

## Recommended computer environment (Windows)

The following computer environment is recommended when using the supplied software and importing images via a USB connection.

<b>OS (pre-installed)</b>	Microsoft Windows XP* SP3/Windows Vista** SP2/ Windows 7 SP1
<b>“PlayMemories Home”</b>	<b>CPU:</b> Intel Pentium III 800 MHz or faster (For playing/editing the High Definition movies: Intel Core Duo 1.66 GHz or faster/Intel Core 2 Duo 1.66 GHz or faster, Intel Core 2 Duo 2.26 GHz or faster (AVC HD (FX/FH)), Intel Core 2 Duo 2.40 GHz or faster (AVC HD (PS))) <b>Memory:</b> Windows XP 512MB or more (1 GB or more is recommended), Windows Vista/Windows 7 1 GB or more <b>Hard Disk:</b> Disk space required for installation-approximately 500 MB <b>Display:</b> Screen resolution-1024 × 768 dots or more
<b>“Image Data Converter Ver.4”</b>	<b>CPU/Memory:</b> Pentium 4 or faster/1 GB or more <b>Display:</b> 1024 × 768 dots or more

- \* 64-bit editions and Starter (Edition) are not supported. Windows Image Mastering API (IMAPI) Ver.2.0 or later is required to use the function for creating discs.

\*\* Starter (Edition) is not supported.

## Recommended computer environment (Mac)

The following computer environment is recommended when using the supplied software and importing images via a USB connection.

<b>OS (pre-installed)</b>	<b>USB Connection:</b> Mac OS X v10.3 – 10.7 <b>“Image Data Converter Ver.4”:</b> Mac OS X v10.5, 10.6 (Snow Leopard), 10.7 (Lion)
<b>“Image Data Converter Ver.4”</b>	<b>CPU:</b> Intel Core Solo/Core Duo/Core 2 Duo or faster <b>Memory:</b> 1 GB or more is recommended. <b>Display:</b> 1024 × 768 dots or more

### Notes

- Operation is not assured in an environment based on an upgrade of the operating systems described above or in a multi-boot environment.
- If you connect 2 or more USB devices to a single computer at the same time, some devices, including the camera, may not operate, depending on the types of USB devices you are using.
- Connecting the camera using a USB interface that is compatible with Hi-Speed USB (USB 2.0 compliant) allows advanced transfer (high speed transfer), as the camera is compatible with Hi-Speed USB (USB 2.0 compliant).
- When your computer resumes activity from suspend or sleep mode, communication between the camera and your computer may not recover at the same time.


# Using the software

## Installing the software (Windows)

Log on as Administrator.

### 1 Turn on your computer, and insert the CD-ROM (supplied) into the CD-ROM drive.

The installation menu screen appears.

- If it does not appear, double-click [Computer] (For Windows XP: [My Computer]) →  (PMHOME) → [Install.exe].
- If the AutoPlay screen appears, select “Run Install.exe” and follow the instructions that appear on the screen to proceed with the installation.

### 2 Click [Install].

Make sure that both “Image Data Converter” and “PlayMemories Home” are checked and follow the instructions on the screen.

- Connect the camera to the computer during the procedure following the instructions on the screen (page 178).
- When the restarting confirmation message appears, restart the computer following the instructions on the screen.
- DirectX may be installed depending on the system environment of your computer.

### 3 Remove the CD-ROM after the installation is complete.

The following software is installed and shortcut icons appear on the desktop.

“Image Data Converter”

“PlayMemories Home”

“PlayMemories Home Help Guide”

#### Note

- If “PMB” (Picture Motion Browser) supplied with a camera that was purchased before 2011 has already been installed on the computer, “PMB” is overwritten by “PlayMemories Home,” and you may be unable to use some functions of “PMB.”

## Installing the software (Mac)

Log on as Administrator.

**1 Turn on your Mac computer, and insert the CD-ROM (supplied) into the CD-ROM drive.**

**2 Double-click the CD-ROM icon.**

**3 Copy the [IDC\_INST.pkg] file in the [MAC] folder to the hard disk icon.**

**4 Double-click the [IDC\_INST.pkg] file in the copy-to folder.**

Follow the instructions on the screen to complete the installation.

## Using “Image Data Converter”

With “Image Data Converter” you can do the following, etc.:

- To edit images recorded in RAW format with various corrections, such as tone curve, and sharpness.
- To adjust images with white balance, exposure, and creative style, etc.
- To save the images displayed and edited on a computer.

You can either save the image as RAW format or save it in the general file format.

- To display and compare RAW/JPEG images recorded with this camera.
- To rate the images on a scale of five.
- To set color labels.

To use “Image Data Converter,” refer to Help.

Click [Start] → [All Programs] → [Image Data Converter] → [Help] → [Image Data Converter Ver.4].

## Using “PlayMemories Home”

With “PlayMemories Home” you can do the following, etc.:


- To set images shot with the camera and display them on the computer.

- To organize images on the computer on a calendar by shooting date to view them.
- To retouch (red-eye reduction, etc.), print, send still images as e-mail attachments, and change the shooting date.
- To print or save still images with the date.
- To create Blu-ray discs or DVD discs from AVCHD movies imported to a computer. (An Internet connection environment is required when a Blu-ray disc/DVD disc is created for the first time.)

### Notes

- “PlayMemories Home” is not compatible with Mac computers. When you play back images on Mac computers, use the appropriate application software supplied with the Mac computer.
- Movies recorded with the [60p 28M(PS)]/[50p 28M(PS)], [60i 24M(FX)]/[50i 24M(FX)] or [24p 24M(FX)]/[25p 24M(FX)] setting in [Record Setting] are converted by “PlayMemories Home” in order to create an AVCHD recording disc. This conversion can take a long time. Also, you cannot create a disc with the original image quality. If you want to keep the original image quality, you must store your movies on a Blu-ray disc.

To use “PlayMemories Home,” refer to “PlayMemories Home Help Guide.”

Double-click the shortcut of  (PlayMemories Home Help Guide) on the desktop. Or, click [Start] → [All Programs] → [PlayMemories Home] → [PlayMemories Home Help Guide].




“PlayMemories Home” support page (English only)  
<http://www.sony.co.jp/pmh-se/>

# Selecting the method for creating a disc of movies

You can create a disc from AVCHD movies that have been recorded with this camera.

Depending on the disc type, playable devices may vary. Select the method that suits your disc player.

Here, 2 ways of creating a disc of movies are described; creating a disc with a computer using “PlayMemories Home” or creating a disc with devices other than a computer such as a DVD writer.

Disc type/usage	Record setting available			Player
	PS	FX	FH	
 To keep high-definition image quality (HD)	✓	✓	✓	Blu-ray disc playback devices (Sony Blu-ray disc player, PlayStation®3, etc.)
 To keep high-definition image quality (HD) (AVCHD recording disc)	—*	—*	✓	AVCHD format playback devices (Sony Blu-ray disc player, PlayStation®3, etc.)
 To keep standard definition image quality (STD)	—*	—*	—*	Ordinary DVD playback devices (DVD player, computer that can play DVDs, etc.)

\* When creating a disc using “PlayMemories Home,” changing the image quality to a lower setting allows you to create a disc.

## Creating a disc using a computer

You can import AVCHD movies to a computer using “PlayMemories Home” and create an AVCHD recording disc or a standard definition image quality (STD) disc.




 




For details on the method for creating a disc using “PlayMemories Home,” see “PlayMemories Home Help Guide.”

### Notes

- To create Blu-ray discs with “PlayMemories Home,” you have to install proprietary add-on software. For details, access following URL:  
<http://support.d-imaging.sony.co.jp/BDUW/>
- The PlayStation®3 may not be available in some countries/regions.
- Movies recorded with the [60p 28M(PS)]/[50p 28M(PS)], [60i 24M(FX)]/[50i 24M(FX)] or [24p 24M(FX)]/[25p 24M(FX)] setting in [Record Setting] are converted by “PlayMemories Home” in order to create an AVCHD recording disc. This conversion can take a long time. Also, you cannot create a disc with the original image quality. If you want to keep the original image quality, you must store your movies on a Blu-ray disc (page 183).
- To play back movies recorded with the [60p 28M(PS)]/[50p 28M(PS)] setting on a Blu-ray disc, a device compatible with the AVCHD Ver 2.0 format is required.

## Creating a disc with a device other than a computer

You can create a disc with a Blu-ray disc recorder and DVD writer. The disc type you can create depends on the device used.

Device	Disc type	
 <p>Blu-ray disc recorder: To create a Blu-ray disc or DVD with standard image quality (STD)</p>	 <p><b>Blu-ray</b> High-definition image quality (HD)</p>	 <p><b>DVD</b> Standard definition image quality (STD)</p>
 <p>DVD writer other than DVDExpress: To create an AVCHD recording disc or DVD with standard image quality (STD)</p>	 <p><b>DVD</b> High-definition image quality (HD) (AVCHD recording disc)</p>	 <p><b>DVD</b> Standard definition image quality (STD)</p>
 <p>HDD recorder, etc.: To create a DVD with standard image quality (STD)</p>	 <p><b>DVD</b> Standard definition image quality (STD)</p>	



**Notes**

- For details on how to create a disc, refer to the operating instructions of the device you use.
- If you create a disc using Sony DVDirect (DVD Writer), use the memory card slot of the DVD Writer or connect the DVD Writer via USB connection to transfer the data.
- If you use Sony DVDirect (DVD Writer), check that the firmware is updated to the newest version.


For details, see the following URL:

<http://sony.storagesupport.com/>


- To copy movies recorded with the [60p 28M(PS)]/[50p 28M(PS)] setting to a Blu-ray disc, a device compatible with the AVCHD Ver 2.0 format is required. To play back the created Blu-ray disc, a device compatible with the AVCHD Ver 2.0 format is required.

# List of icons on the screen


## Graphic Display (LCD screen)

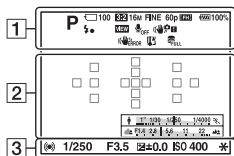

## Display All Info. (LCD screen)

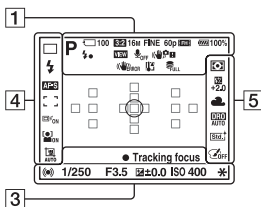

## For playback (Basic information display)

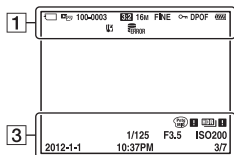

1

Display	Indication
	Exposure mode (37)
	Scene Recognition icons (31, 38, 88)
	Memory card (21, 207)/ Upload (171)
<b>100</b>	Remaining number of recordable images
<b>3:2 16:9</b>	Aspect ratio of still images (159)
<b>3D</b>	3D Sweep Panorama (40, 91)
<b>16M 8.4M 4.0M 14M 7.1M 3.4M</b> WIDE STD 16:9	Image size of still images (48)
<b>RAW RAW+J FINE STD</b>	Image quality of still images (159)
60p 60i 24p 50p 50i 25p	Frame rate of movies (106)

Display	Indication
	Image size of movies (106)
	Remaining battery (22)
	Flash charge in progress (42)
	Setting Effect OFF (83)
	No audio recording of movies (107)
	SteadyShot/Camera shake warning (86)
	SteadyShot error (198)
	Overheating warning (10)
	Database file full (200)/ Database file error (200)
	View Mode (151)
<b>100-0003</b>	Folder - file number (180)
	Protect (154)
<b>DPOF</b>	DPOF set (185)
	Remaining battery warning (22)

2

Display	Indication
	Spot metering area (125)
	AF area (113)
	Smart Zoom (141)
	Clear Image Zoom (141)
	Digital Zoom (141)
	Shutter speed indicator (47)
	Aperture indicator (47)






3

Display	Indication
<b>REC 0:12</b>	Recording time of the movie (m:s)
	Focus (32, 110)
<b>1/250</b>	Shutter speed (97)
<b>F3.5</b>	Aperture (95)
	EV scale (44, 100, 147) (Only for viewfinder)
	Exposure compensation (44)
	AE lock (124)
	Auto HDR image warning (132)
	Picture Effect error (135)
<b>ISO400</b>	ISO sensitivity (130)
<b>3/7</b>	File number/Number of images in the view mode
<b>2012-1-1 10:37AM</b>	Date of recording







 







4

Display	Indication
	Drive mode (46, 144)
	Flash mode (42, 128)/ Red-eye reduction (59)
	Focus mode (112)
	AF area (113)
	Object tracking (114)

Others

Display	Indication
  	Face Detection (119)/ Smile Shutter (122)
	Auto Portrait Framing (121)
	Smile Detection Sensitivity indicator (122)












5

Display	Indication
	Metering mode (125)
	Flash compensation (125)
<b>AWB</b>      -1  0  +1  +2  <b>7500K</b> <b>A5 G5</b>	White balance (Auto, Preset, Custom, Color temperature, Color filter) (137)
	D-Range Optimizer (131)/Auto HDR (132)
 <b>+3 +3 +3</b>	Creative Style (135)/ Contrast, Saturation, Sharpness
	Picture Effect (134)

# Functions available for each shooting mode

The functions you can use depend on the selected shooting mode. In the table below, ✓ indicates the function available. – indicates the function not available.

The functions you cannot use are displayed in gray on the screen.

Shoot Mode	Exposure Comp. (44)	Self-timer (145)	Cont. Shooting (144)	Face Detection (119)	Smile Shutter (122)	Auto Port. Framing (121)
i (31, 88)	–	✓	✓	✓	✓	✓
Ⓢ (31, 88)	–	✓	✓	✓	✓	✓
i+ (38, 88)	–	✓	✓	✓	✓	✓
SCN (39, 89)		–	✓	–	✓	✓
		–	✓	✓	✓	–
		–	✓	–	✓	✓
		–	✓	–	✓	✓
		–	✓	–	✓	✓
		–	✓	–	✓	✓
		–	–	–	✓	–
	–	✓	–	✓	✓	✓
 (40, 91)	✓	–	–	–	–	–
 (40, 91)	✓	–	–	–	–	–
T <sup>12</sup> / <sup>10</sup> (41, 93)	✓	–	–	–	–	–
P (94)	✓	✓	✓	✓	✓	✓
A (95)	✓	✓	✓	✓	✓	✓
S (97)	✓	✓	✓	✓	✓	✓
M (99)	–	✓	✓	✓	✓	✓
 (33, 103)	✓*	✓	✓	✓	–	–





















 

\* When [Manual Exposure] is selected, this function is not available.

# Flash modes available

The flash modes you can select depend on the shooting mode and functions selected.

In the table below, ✓ indicates the function selectable. – indicates the function not selectable.

The flash modes you cannot select are displayed in gray on the screen.

Shoot Mode	 (Flash Off)	 AUTO (Autoflash)	 (Fill-flash)	 SLOW (Slow Sync.)	 REAR (Rear Sync.)	 WL (Wireless)
 (31, 88)	✓	✓	✓	–	–	–
 (31, 88)	✓	–	–	–	–	–
 (38, 88)	✓	✓	✓	–	–	–
SCN (39, 89)		✓	✓	✓	–	–
		✓	–	✓	–	–
		✓	✓	✓	–	–
		✓	–	✓	–	–
		✓	–	✓	–	–
		✓	–	–	–	–
		✓	–	–	–	–
		–	✓	–	✓	–
 (40, 91)	✓	–	–	–	–	–
 (40, 91)	✓	–	–	–	–	–
 /  (41, 93)	–	–	✓	✓	✓	✓
P (94)	–	–	✓	✓	✓	✓
A (95)	–	–	✓	✓	✓	✓
S (97)	–	–	✓	✓	✓	✓
M (99)	–	–	✓	✓	✓	✓
 (33, 103)	✓	–	–	–	–	–

# Advanced operations

---

This section provides further information on the camera.




# Setting up the camera

## Removing the eyecup

When attaching the FDA-A1AM Angle Finder (sold separately) to the camera, remove the eyecup.

**Carefully slide the eyecup off by pushing on each side of the eyecup.**

- Put your fingers under the eyecup, and slide it upward.

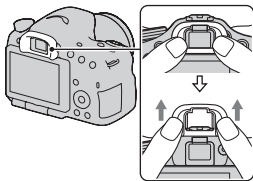

### Note

- When an FDA-A1AM Angle Finder (sold separately) is attached to the camera, switch the display between the viewfinder and the LCD screen by pressing the FINDER/LCD button. Setting [Eye-Start AF] to [Off] is recommended because the eyepiece sensors located above the viewfinder may be activated.



# The screen displayed for shooting mode

## Selecting the screen mode

You can select the desired screen mode. When you switch the screen by pressing DISP on the control button (page 47), only selected screens are displayed. You can set the available screens to be displayed on the LCD screen and the viewfinder separately.

---

**1** MENU button → ⚙ 2 → [DISP Button(Monitor)] or [DISP Button(Finder)]

---

**2** Select the desired display with ▲/▼/◀/▶ on the control button, then press the center of the control button.

---

**3** Press the MENU button.


---

## Histogram

The histogram displays the luminance distribution that shows how many pixels of a particular brightness exist in the picture.

The exposure compensation will change the histogram accordingly.

Both ends of the histogram show a high-key or low-key portion. You cannot restore these areas with a computer later. Adjust the exposure if necessary and shoot again.

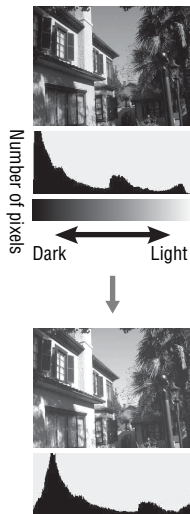


### Notes

- The histogram does not indicate the final recorded image. It indicates the condition of the image just monitored on the screen. The histogram will differ based on aperture setting, etc.
- The histogram differs between shooting and playback in the following situations:
  - When firing the flash.
  - When the subject has low intensity, such as night scenery.

## The digital level gauge

The digital level gauge indicates whether the camera is level in both the horizontal and front-back directions. When the camera is level in one direction, the indicator turns to green.

Horizontal direction

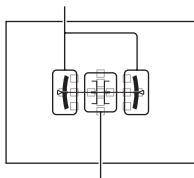

Front-back direction

### Notes

- The error of the digital level gauge is larger if you tilt the camera too far forward or backward.
- A tilt of  $\pm 1^\circ$  may be indicated even if the camera is almost level.

## Monitoring the subject through the lens without effects displayed

You can monitor the subject through the lens without effects, such as the exposure compensation, white balance, Creative Style, Picture Effect etc., displayed.

**MENU button** → **2** → **[Live View Display]** → **[Setting Effect OFF]**

- When [Setting Effect OFF] is selected, the Live View image in M mode is always displayed with the appropriate brightness.

### Note


- [Setting Effect OFF] cannot be selected when the exposure mode is set to Intelligent Auto, Superior Auto, Sweep Panorama, 3D Sweep Panorama, Movie or Scene Selection.

## List of icons for viewfinder mode


When [For viewfinder] in [DISP Button(Monitor)] is activated, you can set the status of the LCD screen to one suitable for used with the viewfinder, by pressing DISP on the control button.

See pages in parentheses for details of operation.

### In Intelligent Auto, Superior Auto, or Scene Selection mode

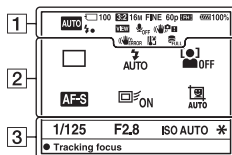

### In Cont. Priority AE Mode/ P/A/S/M mode

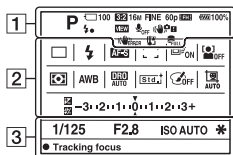

1

Display	Indication
  <b>A S M</b> 	Exposure mode (37)
   	Memory card (21, 207)/ Upload (171)
<b>100</b>	Remaining number of recordable images
<b>3:2 16:9</b>	Aspect ratio of still images (159)
<b>3D</b>	3D Sweep Panorama (40, 91)

Display	Indication
<b>16M 8.4M</b> <b>4.0M 14M</b> <b>7.1M 3.4M</b>   	Image size of still images (48)
<b>RAW</b> <b>RAW+J</b> <b>FINE</b> <b>STD</b>	Image quality of still images (159)
<b>60p 60i 24p</b> <b>50p 50i 25p</b>	Frame rate of movies (106)
  	Image size of movies (106)
<b>100%</b>	Remaining battery (22)
	Flash charge in progress (42)
<b>VIEW</b>	Setting Effect OFF (83)

Display	Indication
	No audio recording of movies (107)
	SteadyShot/Camera shake warning (86)
	SteadyShot error (198)
	Overheating warning (10)
	Database file full (200)/ Database file error (200)

2

Display	Indication
	Drive mode (46, 144)
	Flash mode (42, 128)/ Red-eye reduction (59)
	Focus mode (112)
	AF area (113)
	Object Tracking (114)
	Face Detection (119)/ Smile Shutter (122)
	Metering mode (125)
	White balance (Auto, Preset, Custom, Color temperature, Color filter) (137)
	D-Range Optimizer (131)/Auto HDR (132)

Display	Indication
	Creative Style (135)/ Contrast, Saturation, Sharpness
	Picture Effect (134)
	Auto Portrait Framing (121)
	Exposure compensation (44)/Metered Manual (100)
	Flash compensation (125)
	EV scale (147)


3


Display	Indication
<b>1/125</b>	Shutter speed (97)
<b>F2.8</b>	Aperture (95)
<b>ISO AUTO</b>	ISO sensitivity (130)
<b>*</b>	AE lock (124)


# Shooting a clear image without camera shake

“Camera shake” refers to unwanted movement of the camera that occurs after the shutter button has been pressed, resulting in a blurred image. To reduce camera shake follow the instructions below.


## Camera shake warning indicator

Due to potential camera shake, the  (Camera shake warning) indicator flashes. In this case, use a tripod or the flash.

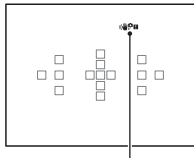

 (Camera shake warning) indicator



### Note

- The  (Camera shake warning) indicator is displayed only in the modes that automatically set the shutter speed. This indicator is not displayed in M/S modes or when you record movies.

## Using the SteadyShot function

The SteadyShot function is available with this camera to reduce camera shake. The SteadyShot function can be set separately for still image shooting and for movie recording.

The SteadyShot function is set to [On] in the default settings.

**MENU button** →  **3** or  **1** → **[SteadyShot]** → **Select the desired setting**

### Note

- The SteadyShot function may not work optimally when the power has just been turned on, right after you point the camera towards a subject, or when the shutter button has been pressed all the way down without stopping halfway.

## Using a tripod

In the following cases, we recommend that you mount the camera on a tripod.

- Shooting without a flash under dark conditions.
- Shooting with slow shutter speeds, which are typically used in night-time shooting.
- Shooting a close subject, such as in macro shooting.
- Shooting with a telescopic lens.


### Note

- When using a tripod, deactivate the SteadyShot function because there is a potential for malfunction of the SteadyShot function.

# Selecting the shooting mode

## Intelligent Auto/ Flash Off

Set the mode dial to  (Intelligent Auto), and shoot images (page 31).

- Select  when shooting in a location where the use of a flash is restricted.

### Note

- Since the camera turns on the automatic setting function, many features will be unavailable, such as exposure compensation, ISO setting. If you want to adjust various settings, set the mode dial to P, then shoot your subject.

## Superior Auto

Set the mode dial to  (Superior Auto), and shoot images (page 38).

To set the continuous shooting

**MENU button** →  1 → [S. Auto Cont. Shooting] → **Select the desired setting**

To select the storage method to be used for recorded images

In continuous shooting, you can select a storage method that allows the camera either to store 1 appropriate image from among the continuously shot images or store all the images.

**MENU button** →  1 → [S. Auto Image Extract.] → **Select the desired setting**

### Notes

- Even when you set [S. Auto Image Extract.] to [Off] with [Hand-held Twilight] selected from recognized scene mode, 1 combined image is saved.
- When [Quality] is set to [RAW] or [RAW & JPEG], performance will be affected.






 












## SCN Scene Selection

### This mode is suitable for

- Shooting with preset settings according to the scene

**Set the mode dial to SCN (Scene Selection), select the desired mode, and shoot images (page 39).**

 (Portrait)	<p>Blurs away backgrounds and sharpens the subject. Expresses skin tones softly.</p> <ul style="list-style-type: none"> <li>• To blur the background more, set the lens to the telephoto position.</li> <li>• You can shoot a vivid image by focusing on the eye that is closer to the lens.</li> <li>• Use the lens hood to shoot backlit subjects.</li> <li>• Use the red-eye reduction function if the eyes of your subject turn red from the flash (page 59).</li> </ul>	
 (Sports Action)	<p>Shoots a moving subject at a fast shutter speed so that the subject looks as if it is standing still. The camera shoots images continuously while the shutter button is pressed.</p> <ul style="list-style-type: none"> <li>• Press and hold the shutter button halfway down until the right moment.</li> </ul>	
 (Macro)	<p>Shoots close subjects such as flowers, foods.</p> <ul style="list-style-type: none"> <li>• You can shoot a closer subject using a macro lens (sold separately).</li> <li>• Set the flash mode to [Flash Off] when you shoot a subject within 1 m (3.3 feet).</li> <li>• When shooting in macro mode, the SteadyShot function will not be fully effective. Use a tripod to achieve better results.</li> <li>• The shortest focal distance does not change.</li> </ul>	
 (Landscape)	<p>Shoots the entire range of scenery in sharp focus with vivid colors.</p> <ul style="list-style-type: none"> <li>• To accentuate the openness of the scenery, set the lens to wide angle.</li> </ul>	

 (Sunset)	Shoots the red of the sunrise or sunset beautifully.	
 (Night Scene)	Shoots night scenes at a distance without losing the dark atmosphere of the surroundings. <ul style="list-style-type: none"> <li>• The shutter speed is slower, so using a tripod is recommended.</li> <li>• The picture may not be taken properly when shooting a wholly dark night scene.</li> </ul>	
 (Hand-held Twilight)	Shoots night scenes with less noise and blur without using a tripod. A burst of shots are taken, and image processing is applied to reduce subject blur, camera shake, and noise. <ul style="list-style-type: none"> <li>• Reducing blur is less effective even in [Hand-held Twilight] when shooting:             <ul style="list-style-type: none"> <li>– Subjects with erratic movement</li> <li>– Subjects too close to the camera</li> <li>– Subjects with a repeating pattern such as tiles, and subjects with little contrast such as sky, sandy beach, or lawn</li> <li>– Subjects with constant change such as waves or water falls</li> </ul> </li> <li>• In the case of [Hand-held Twilight], block noise may occur when using a light source that flickers, such as fluorescent lighting.</li> </ul>	
 (Night Portrait)	Shoots portraits in night scenes. <ul style="list-style-type: none"> <li>• The shutter speed is slower, so using a tripod is recommended.</li> </ul>	

### Shooting technique

- When you want finer images, set the mode dial to P, A, S, or M and use the creative style function (page 135). In such cases, you can adjust the exposure, ISO, etc.

**Notes**

- Since the camera judges the settings automatically, many features will be unavailable, such as exposure compensation, ISO setting.
- The flash is set to [Autoflash] or [Flash Off] for each Scene Selection mode. You can change these settings (pages 42, 78, 128).

## Sweep Panorama/ 3D Sweep Panorama

**This mode is suitable for**

- Shooting expansive scenery, or high-rise buildings with dynamic composition.
- Shooting 3D-images with a sense of depths and viewing them using a 3D-compatible TV.

**Set the mode dial to  (Sweep Panorama) or  (3D Sweep Panorama), and shoot images (page 40).**


**Notes**

- If you cannot pan or tilt the camera across the entire subject within the given time, a gray area occurs in the composed image. If this happens, move the camera fast to record a full panoramic image.
- Since several images are stitched together, the stitched part will not be recorded smoothly. While shooting, do not tilt the camera back and forth, or right and left when you swing the camera straight ahead.
- Under low light conditions, panoramic images may be blurred or not be recorded.
- Under lights that flicker such as fluorescent light, the brightness or color of the combined image is not always the same.
- When the whole angle of panoramic shooting and the angle in which you fixed the focus and exposure with AE/AF lock are extremely different in brightness, color and focus, the shooting will not be successful. If this happens, change the lock angle and shoot again.
- [Sweep Panorama] or [3D Sweep Panorama] is not suitable when shooting:
  - Moving subjects.
  - Subjects too close to the camera.
  - Subjects with a repeating pattern such as tiles, and subjects with little contrast such as sky, sandy beach, or lawn.
  - Subjects with constant change such as waves or water falls.
  - Subjects with the sun or electric lights, etc. that are much brighter than surroundings.

- [Sweep Panorama] or [3D Sweep Panorama] recording may be discontinued in the following situations:
  - You pan or tilt the camera too fast or too slow.
  - There is too much camera shake.
- The camera continues shooting during [Sweep Panorama] or [3D Sweep Panorama] recording, and the shutter keeps clicking until the end of the shooting.
- [Auto Port. Framing] and the zoom feature of the camera (ZOOM) cannot be used.

### Tips for shooting a panoramic image

Pan or tilt the camera in an arc with a constant velocity and in the same direction as the indication on the screen. [Sweep Panorama] or [3D Sweep Panorama] is better suited for still subjects, rather than moving ones.

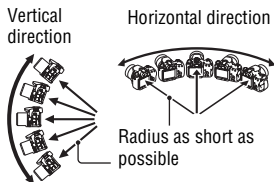

- In Sweep Panorama or 3D Sweep Panorama, it is recommended that you use a wide-angle lens.
- When you use a lens that has a long focal length, pan or tilt the camera more slowly than when you use a wide-angle lens.
- Determine the scene and press the shutter button halfway, so that you can lock the focus, exposure, and white balance.
- If a section with greatly varied shapes or scenery is concentrated along a screen edge, the image composition may fail. In such cases, adjust the frame composition so that the section is in the center of the image, then shoot again.

### 3D-images

Using the same operation as that for Sweep Panorama, the camera records multiple images and combines them to create a 3D-image. You can view these 3D images using a 3D-compatible TV. For details on 3D-shooting, see page 206.

### To change the image size

You can select the image size: MENU button → 1 → [Panorama: Size] or [3D Pan.: Image Size].

**To set the pan or tilt direction**

You can set the direction in which to pan or tilt the camera.


**MENU button** →  **1** → **[Panorama: Direction]** or **[3D Pan.: Direction]** → **Select the desired setting**

## **Cont. Priority AE Mode**

**This mode is suitable for**

- Shooting a fast-moving subject continuously to capture a moment.
- Shooting a child's expressions, changing continuously from moment to moment.

 
**Set the mode dial to  (Cont. Priority AE Mode), select the desired mode, and shoot images (page 41).**

- When  (Tele-zoom Cont. Priority AE) is selected, the minimum zoom scale of the camera (ZOOM) is set to 1.4 times and the image size is set to M or S.

**Shooting techniques**

- When the autofocus mode is set to [Continuous AF], the focus and the exposure continue to be adjusted during shooting. The ISO sensitivity can be adjusted.
- In manual focus mode or when the autofocus mode is set to [Single-shot AF], you can adjust the ISO sensitivity and the aperture. When [Single-shot AF] is selected, the focus is fixed at the first image.

**Notes**

- The Face Detection function is turned off.
- When [Auto HDR] is selected, the DRO process is performed temporarily according to the DRO setting.
- When  (Tele-zoom Cont. Priority AE) is selected, you cannot set [Quality] to [RAW] or [RAW & JPEG].

- Our measurement conditions. The speed of continuous shooting may be slower, depending on shooting conditions (Image size, ISO setting, High ISO NR, or the setting of [Lens Comp.: Distortion]).


## P Program Auto

### This mode is suitable for

- Using the automatic exposure, while keeping the custom settings for ISO sensitivity, Creative Style, D-Range optimizer, etc.

### 1 Set the mode dial to P.

### 2 Set the shooting functions to your desired settings (pages 109 to 148).

- To fire the flash, press the  button.

 
### 3 Adjust the focus and shoot the subject.

#### Program Shift

You can temporarily change the shutter speed and aperture value combination with the correct exposure determined by the camera maintained.

Rotate the control dial to select your desired combination while the focus is achieved.

The exposure mode indication changes to “P\*.”



## A Aperture Priority



### This mode is suitable for

- Putting the subject in sharp focus and blur everything in front of and beyond the subject. Opening the aperture narrows the range that is in focus. (Depth of field becomes shallower.)
- Shooting the depth of the scenery. Narrowing down the aperture widens the range that is in focus. (Depth of field becomes deeper.)

### 1 Set the mode dial to A.

### 2 Select the aperture value (F-number) with the control dial.

- Smaller F-number: The foreground and background of the subject are blurred.  
Larger F-number: The subject and its foreground and background are all in focus.
- You cannot check the blurring of an image on the LCD screen or in the viewfinder. Check the recorded image and adjust the aperture.

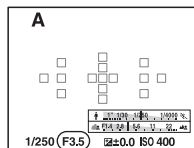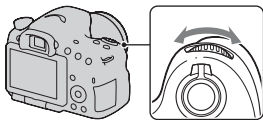


Aperture (F-number)

### 3 Adjust the focus and shoot the subject.

The shutter speed is automatically adjusted to obtain correct exposure.

- When the camera judges that the proper exposure is not obtained with the selected aperture value, the shutter speed flashes. In such cases, adjust the aperture again.

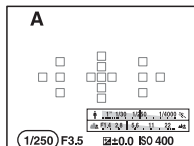


Shutter speed

#### Shooting techniques

- The shutter speed may become slower depending on the aperture value. When the shutter speed is slower, use a tripod.
- To blur the background more, use a telephoto lens or a lens that is equipped with a smaller aperture value (bright lens).
- You can check the approximate blurring of the image before recording using the preview button.

#### Note

- Press the  button when you shoot with the flash. However, the flash range differs according to the aperture value. When you shoot with the flash, check the flash range in “Specifications.”




## To check blurring of the background (Preview button)

The LCD screen and the viewfinder shows an image captured with the widest aperture. The change in aperture affects the sharpness of the subject image, creating a discrepancy between the sharpness of the image before shooting and that of the actual image.

While you are pressing the preview button, you can see the image with the aperture used in the actual shot so that you can check the approximate sharpness of the subject before shooting.

- Press the preview button after you adjust the focus.
- You can adjust the aperture in preview mode.

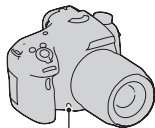

Preview button

### Note

- When [Focus Magnifier] is assigned to the preview button, set [Preview Button] to [Shot. Result Preview] or [Aperture Preview] in the ⚙ Custom menu (page 164).


 
## S Shutter Priority

### This mode is suitable for

- Shooting a moving subject at a moment in time. Use a faster shutter speed to crisply shoot an instant of the movement.
- Tracing the movement to express the dynamism and flow. Use a slower shutter speed to shoot a trailing image of the moving subject.

## 1 Set the mode dial to S.

## 2 Select the shutter speed with the control dial.

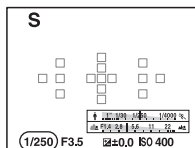


Shutter speed

## 3 Adjust the focus and shoot the subject.

The aperture is automatically adjusted to obtain correct exposure.

- When the camera judges that the proper exposure is not obtained with the selected shutter speed, the aperture value flashes. In such cases, adjust the shutter speed again.

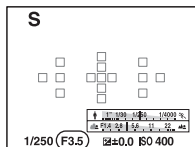



Aperture (F-number)

### Shooting techniques

- When the shutter speed is slower, use a tripod.
- When shooting an indoor sport, select a higher ISO sensitivity.

#### Notes

- The  (Camera shake warning) indicator is not indicated in Shutter Priority mode.
- The higher the ISO sensitivity, the more conspicuous the noise.
- When the shutter speed is 1 second or longer, noise reduction (Long Exposure NR) will be done for the same amount of time that the shutter was open after shooting. You cannot do any further shooting during the reduction.

- Press the  button when you shoot with the flash. However, when using the flash, if you close the aperture (a larger F-number) by making the shutter speed slower, the light of the flash will not reach distant subjects.


## M Manual Exposure

### This mode is suitable for


- Shooting with the desired exposure setting by adjusting both the shutter speed and aperture.

### 1 Set the mode dial to M.

### 2 Rotate the control dial to adjust the shutter speed, and while pressing the AV button, rotate the control dial to adjust the aperture.

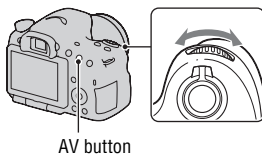



AV button

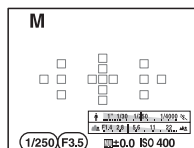

Shutter speed

### 3 Shoot the image after the exposure is set.

 - Check the exposure value using Metered Manual\*.  
Toward +: Images become brighter.  
Toward -: Images become darker.
- \* When the camera is in M mode, it will show an under or over compensation value based on the correct exposure.
- In viewfinder mode, check the exposure value using the EV scale.

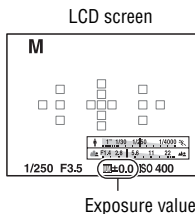

#### Notes

- The (Camera shake warning) indicator is not indicated in manual exposure mode.
- When the mode dial is set to M, the ISO setting [AUTO] is set to [100]. In M mode, the ISO setting [AUTO] is not available. Set the ISO sensitivity as necessary (page 130).
- Press the button when you shoot with the flash. However, the flash range differs according to the aperture value. When you shoot with the flash, check the flash range in “Specifications.”



## M BULB

#### This mode is suitable for

- Shooting trails of light, such as fireworks.
- Shooting trails of stars.


### 1 Set the mode dial to M.

- 2** Rotate the control dial to the left until [BULB] is indicated.

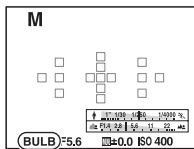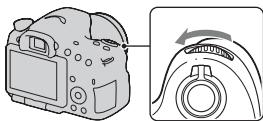

BULB

- 3** While pressing the AV button, rotate the control dial to adjust the aperture (F-number).

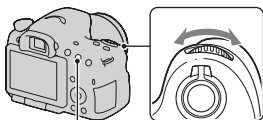

AV button

- 4** Press the shutter button halfway down to adjust the focus.

- 5** Press and hold the shutter button for the duration of the shooting.

As long as the shutter button is pressed, the shutter remains open.

#### Shooting techniques

- Use a tripod.
- Set the focus to infinity in manual focus mode when shooting fireworks, etc. When the infinity position of the lens is not known, first adjust the focus on fireworks that is set off in the same general area, then shoot them.

- Use the Wireless Remote Commander (sold separately) (page 148). Pressing the SHUTTER button on the Wireless Remote Commander triggers BULB shooting and pressing it again stops BULB shooting. You do not need to press and hold the SHUTTER button on the Wireless Remote Commander.
- If you use a Remote Commander that is equipped with a shutter button lock function (sold separately), you can leave the shutter open using the Remote Commander.

### Notes

- When using a tripod, turn off the SteadyShot function (page 87).
- The longer the exposure time, the more conspicuous the noise on the image.
- After shooting, noise reduction (Long Exposure NR) will be done for the same amount of time that the shutter was open. You cannot do any further shooting during the reduction.
- When the Smile Shutter or Auto HDR function is activated, or when [Picture Effect] is set to [HDR Painting] or [Rich-tone Mono.], you cannot set the shutter speed to [BULB].
- If the Smile Shutter, Auto HDR function, or the [HDR Painting] or [Rich-tone Mono.] setting of [Picture Effect] is used with the shutter speed set to [BULB], the shutter speed is temporarily set to 30 seconds.
- It is recommended that you start BULB shooting after the temperature of the camera drops to prevent the quality of the image from deteriorating.

# Movie recording setup

## Recording movies easily

Movie recording can be started from any exposure mode. The shutter speed and aperture value are adjusted automatically.

**Press the MOVIE button to start recording (page 33).**

### Shooting techniques

- Start recording after you adjust the focus.
- The following settings that were set during still image shooting can be used.
  - ISO
  - White Balance
  - Creative Style
  - Exposure compensation
  - AF area
  - Metering Mode
  - Face Detection
  - Object Tracking
  - D-Range optimizer
  - Lens Comp.: Shading
  - Lens Comp.: Chro. Aber.
  - Lens Comp.: Distortion
  - Picture Effect
- ISO, exposure compensation, Object Tracking, or AF area can be adjusted during movie recording.
- If you assign [AF lock] to the AEL button or ISO button, you can lock the focus by pressing these buttons in autofocus mode.

### Notes


- In movie recording mode, the recordable area (angle of view) is narrower than that of still image shooting.
- When the [For viewfinder] screen is displayed on the LCD screen, the LCD screen is switched to the [Display All Info.] screen at the moment movie recording starts.


- Do not shoot a strong light source, such as the sun. The internal mechanism of the camera may be damaged.
- When you import AVCHD movies to a computer, use “PlayMemories Home” (pages 66, 179).
- When you continue to shoot for a long time, the temperature of the camera rises and the image quality may deteriorate.
- When the [H] mark is indicated, the temperature of the camera is too high. Turn the camera off and wait until the temperature of the camera drops. If you continue to shoot, the camera is turned off automatically.
- Since the shutter speed and aperture are automatically adjusted, the shutter speed will be higher and the movement of the subject may not be smooth under bright conditions. Selecting manual focus and adjusting the shutter speed or aperture may make the movement smoother (page 105).
- A value for the ISO sensitivity between ISO 100 and ISO 3200 can be selected when you record movies. If you start movie recording with a value of ISO 3200 or larger selected, the ISO sensitivity is switched to ISO 3200. When you finish recording your movie, the ISO sensitivity setting is returned to the previous value.
- When ISO is set to [Multi Frame Noise Reduct.], [AUTO] is temporarily selected.
- You cannot select [Soft Focus], [HDR Painting], [Rich-tone Mono.], or [Miniature] in Picture Effect. When movie recording starts, Picture Effect is temporarily set to [Off].
- [Clear Image Zoom] cannot be used during movie recording.

## Digital Zoom

You can use the digital zoom feature during movie recording. The quality, however, will deteriorate because image processing is performed.

### 1 Press the ZOOM button.

- The digital zoom is available during movie recording even when [Digital Zoom] is set to [Off] in the  Still shooting menu.

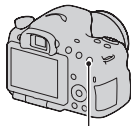

ZOOM button

### 2 Magnify the image up to the desired zoom factor with ◀/▶ on the control button.

- Zoom factor of up to about 4 times is available.



## Recording movies with the shutter speed and aperture adjusted

You can record movies with the shutter speed and aperture adjusted, controlling the background defocus or fluidity as intended.

**1** Set the focus mode switch to MF (page 116).





**2** Set the mode dial to  (Movie).

**3** Select the desired mode with ▲/▼ on the control button, then press the center of the control button.

- To change the mode, press the Fn button, then select another mode.

**4** Adjust the shutter speed and aperture value with the control dial.

**5** Adjust the focus, then press the MOVIE button to start recording.

 P (Program Auto) (94)	Allows you to shoot with the exposure adjusted automatically (both the shutter speed and the aperture value). The other settings can be adjusted manually, and your setting values can be saved.
 A (Aperture Priority) (95)	Allows you to shoot after adjusting the aperture value manually using the control dial.
 S (Shutter Priority) (97)	Allows you to shoot after adjusting the shutter speed manually using the control dial.
 M (Manual Exposure) (99)	Allows you to shoot after adjusting the exposure manually (both the shutter speed and the aperture value) using the control dial.

## File Format

**MENU** button →  1 → [File Format] → Select the desired format

<b>AVCHD</b>	<p>Records 60i/50i movies, 24p/25p movies or 60p/50p movies in AVCHD format. This file format is suitable for viewing the movie on a high-definition TV.</p> <p>You can create a Blu-ray disc, an AVCHD recording disc, or a DVD-Video disc using the supplied software “PlayMemories Home.”</p> <ul style="list-style-type: none"> <li>• 60i/50i movies are recorded at either 60 fields/second or at 50 fields/second, respectively. Both 60i and 50i movies utilize the interlace scanning system, Dolby Digital audio, and the AVCHD format.</li> <li>• 24p/25p movies are recorded at either 24 frames/second or at 25 frames/second, respectively. Both 24p and 25p movies utilize the progressive scanning system, Dolby Digital audio, and the AVCHD format.</li> <li>• 60p/50p movies are recorded at either 60 frames/second, or at 50 frames/second, respectively. Both 60p and 50p movies utilize the progressive scanning system and Dolby Digital audio.</li> </ul>
<b>MP4</b>	<p>Records mp4 (AVC) movies. This format is suitable for WEB uploads, e-mail attachments, etc.</p> <ul style="list-style-type: none"> <li>• Movies are recorded in MPEG-4 format at about 30 frames/second, utilizing the progressive scanning system, AAC audio, and the mp4 format.</li> <li>• You cannot create a disc from the movies recorded in this format using the supplied software “PlayMemories Home.”</li> </ul>

## Record Setting

The higher the average bit-rate, the higher the image quality.

**MENU button** →  **1** → **[Record Setting]** → **Select the desired size**

**[File Format]: [AVCHD]**

File Format	Average bit-rate	Recording
<b>60i 24M(FX)*</b> <b>50i 24M(FX)**</b>	24 Mbps	Records high image quality movies of 1920 × 1080 (60i/50i).
<b>60i 17M(FH)*</b> <b>50i 17M(FH)**</b>	17 Mbps	Records standard image quality movies of 1920 × 1080 (60i/50i).
<b>60p 28M(PS)*</b> <b>50p 28M(PS)**</b>	28 Mbps	Records highest image quality movies of 1920 × 1080 (60p/50p).
<b>24p 24M(FX)*</b> <b>25p 24M(FX)**</b>	24 Mbps	Records high image quality moves of 1920 × 1080 (24p/25p). This produces a cinema-like atmosphere.
<b>24p 17M(FH)*</b> <b>25p 17M(FH)**</b>	17 Mbps	Records standard image quality movies of 1920 × 1080 (24p/25p). This produces a cinema-like atmosphere.

**[File Format]: [MP4]**

File Format	Average bit-rate	Recording
<b>1440×1080 12M</b>	12 Mbps	Records movies of 1440 × 1080.
<b>VGA 3M</b>	3 Mbps	Records movies of VGA size.

\* 1080 60i-compatible device

\*\* 1080 50i-compatible device

**Notes**

- Movies recorded with the [60p 28M(PS)]/[50p 28M(PS)], [60i 24M(FX)]/[50i 24M(FX)] or [24p 24M(FX)]/[25p 24M(FX)] setting in [Record Setting] are converted by “PlayMemories Home” in order to create an AVCHD recording disc. This conversion can take a long time. Also, you cannot create a disc with the original image quality. If you want to keep the original image quality, you must store your movies on a Blu-ray disc.
- To watch 60p/50p or 24p/25p movies on a TV, you need a TV that is compatible with 60p/50p or 24p/25p. If you use a non-compatible TV, the movies are converted to 60i/50i and output to the TV.

**Audio Recording**

When you record movies, the operating noise of the camera or lens may be recorded. You can record movies without audio.

**MENU button** →  **1** → **[Audio Recording]** → **[Off]**

When the focus mode is set to manual focus, you can disable recording of the operating noise of the lens for the autofocus (page 116).

**To reduce wind noise**

You can reduce wind noise by cutting bass sound input from the built-in microphone.

**MENU button** →  **1** → **[Wind Noise Reduct.]** → **[On]****Notes**

- Setting this item to [On] may cause some bass sound to be recorded with too low a volume. Set it to [Off] when the wind is not blowing.
- When an external microphone (sold separately) is used, this item does not function.


# Adjusting the focus

There are 2 methods for adjusting the focus: autofocus and manual focus. Depending on the lens, the method for switching between the auto focus and manual focus is different.


The type of lens	The switch to be used	To switch to auto focus	To switch to manual focus
The lens is equipped with a focus mode switch	Lens (Always set the focus mode switch on the camera to AF.)	Set the focus mode switch on the lens to AF.	Set the focus mode switch on the lens to MF.
The lens is not equipped with a focus mode switch	Camera	Set the focus mode switch on the camera to AF.	Set the focus mode switch on the camera to MF.

## Autofocus

- 1 Set the focus mode switch on the camera to AF.

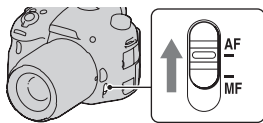


- 2 When the lens is equipped with the focus mode switch, set it to AF.

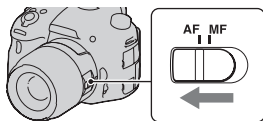

### 3 Press the shutter button halfway down to check the focus and shoot the image.

- When the focus is confirmed, the focus indicator changes to ● or (●) (below).
- The AF area where the focus has been confirmed turns green.

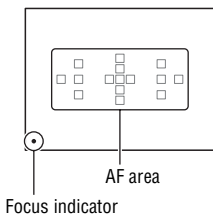

#### Note

- While the camera is focusing automatically, do not touch the rotating focusing ring.

#### Shooting technique

- To select the AF area used for focusing, set up [AF area] (page 113).

#### Focus indicator

Focus indicator	Status
● lit	Focus locked. Ready to shoot.
(●) lit	Focus is confirmed. Focal point moves following a moving subject. Ready to shoot.
(○) lit	Still focusing. You cannot release the shutter.
● flashing	Cannot focus. The shutter is locked.


#### Subjects that may require special focusing

Using the autofocus, it is hard to focus on the following subjects. In such cases, use the focus lock shooting feature (page 111) or manual focus (page 116).

- A subject that is low in contrast, such as blue sky or a white wall.
- Two subjects at different distances overlapping in the AF area.
- A subject that is composed of repeating patterns, such as the facade of a building.
- A subject that is very bright or glittering, such as the sun, the body of an automobile, or the surface of water.
- Ambient light is not sufficient.

## To measure the exact distance to the subject

The  $\ominus$  mark located on the top of the camera shows the location of the image sensor\*. When you measure the exact distance between the camera and the subject, refer to the position of the horizontal line.

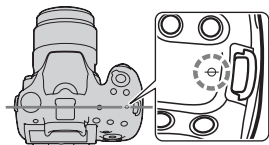

\* The image sensor is the part of the camera that acts as the film.

### Note

- If the subject is closer than the minimum shooting distance of the attached lens, the focus cannot be confirmed. Make sure you put enough distance between the subject and the camera.

## Focus-lock

- 1 Place the subject within the AF area and press the shutter button halfway down.**

The focus is locked.

- Set [Autofocus Mode] to [Single-shot AF].



- 2 Keep the shutter button halfway down, and put the subject back in the original position to re-compose the shot.**



- 3 Press the shutter button fully down to take the picture.**

## Autofocus Mode

**Fn button** → **AF-A (Autofocus Mode)** → **Select the desired setting**

<b>AF-S (Single-shot AF)</b>	The camera focuses and the focus is locked when you press the shutter button halfway down.
<b>AF-A (Automatic AF)</b>	The [Autofocus Mode] is switched between Single-shot AF and Continuous AF according to the movement of the subject. When you press and hold the shutter button halfway down, if the subject is motionless, the focus is locked and if the subject is in motion, the camera continues to focus.
<b>AF-C (Continuous AF)</b>	The camera continues to focus while the shutter button is pressed and held halfway down. <ul style="list-style-type: none"> <li>• The audio signals will not sound when the subject is in focus.</li> <li>• Focus-lock cannot be used.</li> </ul>

### Shooting techniques

- Use [Single-shot AF] when the subject is motionless.
- Use [Continuous AF] when the subject is in motion.




### Notes

- [Automatic AF] is selected when the exposure mode is set to Intelligent Auto, Superior Auto or one of the following Scene Selection modes: [Portrait], [Landscape], [Sunset], [Night Scene], [Night Portrait], or [Hand-held Twilight].
- [Single-shot AF] is selected when the exposure mode is set to Sweep Panorama, 3D Sweep Panorama or [Macro] in Scene Selection.
- [Continuous AF] is selected when the exposure mode is set to [Sports Action] in Scene Selection or when the Smile Shutter function is used.





## MENU button → 2 → [AF Illuminator] → Select the desired setting

- Since the camera uses the built-in flash as an AF illuminator, press the  button to open the flash.
- AF illuminator does not operate when [Autofocus Mode] is set to **AF-C** (Continuous AF) or the subject is moving in **AF-A** (Automatic AF). (The  or  indicator lights.)
- The AF illuminator may not operate with focal lengths of 300 mm or longer.
- When an external flash (sold separately) that is equipped with an AF illuminator is attached, the AF illuminator of the external flash is used. Push the built-in flash down.
- AF illuminator does not operate when [Smile Shutter] is set to [On].

## Object Tracking

Keeps the focusing on a moving subject while tracking it. The Object Tracking function is set to [On] in the default setting.

### 1 Press the center of the control button on the recording information display.


A target frame appears.

- To turn off the Object Tracking function, press the Fn button, then set it to [Off].

### 2 Align the target frame with the subject to be tracked, and press the center of the control button.

The camera starts tracking the subject.

- To cancel this tracking feature, press the center again.

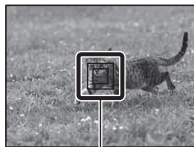

Target frame

### 3 Press the shutter button to shoot the subject.

## Notes

- Tracking may be difficult in the following situations:
  - The subject is moving too quickly.
  - The subject is too small, or too large.
  - The contrast between the subject and the background is poor.
  - The subject is under dark lighting.
  - The ambient light changes.
- The Object Tracking function cannot be used when the exposure mode is set to Sweep Panorama, 3D Sweep Panorama, Continuous Advance Priority AE Mode or [Hand-held Twilight] in Scene Selection is used, the manual focus function is selected.
- The camera stops tracking a subject when the subject moves off of the screen.

## To preferentially-track the face

You can select whether to preferentially-track a certain face or not when the camera detects that face during object tracking.

### **MENU button** → **⚙ 4** → **[Face Priority Tracking]** → **[On]**

 
When the face is not visible on the screen, the camera tracks the body, and when the face is visible, the camera tracks the face. If the targeted person disappears from the screen while the camera is tracking, and then returns to the screen, the camera focuses on that face again.

- If the camera tracks a face using the Object Tracking function with Smile Shutter turned on, the face becomes the target of the smile detection feature.
- If you set the detected face as a target, even when [Face Priority Tracking] is set to [Off], the camera tracks the body when the face is not visible. If the targeted person disappears from the screen while the camera is tracking, and then returns to the screen, the camera focuses on that face again.


## Manual focus

When it is difficult to get the proper focus in autofocus mode, you can adjust the focus manually.


- 1 Set the focus mode switch on the lens to MF.



 - 2 When the lens is not equipped with the focus mode switch, set the focus mode switch on the camera to MF.



- 3 Rotate the focusing ring of the lens to achieve a sharp focus.

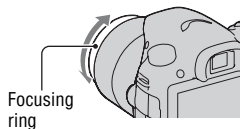

### Notes

- When the Wide AF area is used, the center area is used for focusing; when the Zone AF area is used, a typical area of the selected area is used; and when the Local AF area is used, an area that is selected with the control button is used.
- When using a tele converter (sold separately), etc., rotation of the focusing ring may not be smooth.
- The correct focus in the viewfinder is not achieved if the diopter is not adjusted properly in viewfinder mode (page 29).
- Make sure to set the focus mode switch to MF for manual focus. Do not rotate the focusing ring without setting to MF. Rotating the focusing ring forcibly without switching to MF may damage the focusing ring.

## Direct manual focus

When a lens that is equipped with a direct manual focus function is mounted and [Autofocus Mode] is set to [Single-shot AF] or [Automatic AF], you can make fine adjustments using the focusing ring after the focus is locked. You can quickly focus on a subject rather than using the manual focus from the beginning. This is convenient in cases such as macro shooting.

## Peaking

You can enhance the outline of in-focus ranges with a specific color in manual focus. This function allows you to confirm the focus easily.

**MENU button** → **⚙ 2** → **[Peaking Level]** → **Select the desired setting**

### Notes

- Since the camera judges that sharp areas are in focus, the peaking level is different, depending on the subject, shooting situation, or on the lens used.
- The outline of in-focus ranges is not enhanced when the camera is connected using an HDMI cable.

### To set the color of the peaking function

You can set the color used for the peaking function in manual focus.

**MENU button** → **⚙ 2** → **[Peaking Color]** → **Select the desired setting**

### Note


- This item cannot be set when [Peaking Level] is set to [Off].

## Focus Magnifier

You can check the focus by enlarging the image before shooting.


**1 MENU button** → **⚙ 3** → **[Preview Button]** → **[Focus Magnifier]**

## 2 Press the Focus Magnifier button.

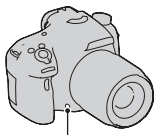

Focus Magnifier button

## 3 Press the Focus Magnifier button again to enlarge the image and select the portion you want to enlarge with ▲/▼/◀/▶ on the control button.

 

- Each time you press the Focus Magnifier button, the magnifier scaling changes as follows: Full display → Approx.  $\times 4.8$  → Approx.  $\times 9.5$

## 4 Confirm and adjust the focus.

- Rotate the focusing ring to adjust the focus in manual focus mode.
- If you press the AF button, the enlarged portion returns to the center.
- The Focus Magnifier function is canceled if you press the shutter button halfway down.

## 5 Press the shutter button fully down to shoot the image.

- You can record images when an image is enlarged, however the recorded image is for full display.
- The Focus Magnifier function will be released after shooting.

# Detecting faces

## Face Detection

The camera detects faces, adjusts the focus, exposure, performs image processing, and adjusts flash settings.


**Fn button** →  (**Smile/Face Detect.**) → **Select the desired setting**

<b>Face Detection Off</b>	Turns off Face Detection.
<b>Face Detection On (Regist. Faces)</b>	Enables Face Detection and prioritizes recognized faces that have been registered in [Face Registration] (page 120).
<b>Face Detection On</b>	Enables Face Detection, but does not prioritize recognized faces.
<b>Smile Shutter</b>	Detects and shoots a smile automatically.

### The Face Detection frame

When the camera detects faces, gray Face Detection frames appear. When the camera judges that autofocus is possible, the Face Detection frames turn white.

When you press the shutter button halfway down, the Face Detection frames turn green.

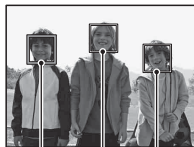

Face Detection frames (gray)

Face Detection frames (white)

- If a face is not positioned inside the AF area available when you press the shutter button halfway down, the AF area that is used for focusing turns green.
- When the camera detects multiple faces, the camera automatically selects a priority face and the single Face Detection frame turns white. A magenta frame appears on a face that is registered with [Face Registration].

### Shooting technique

- Compose to overlay the Face Detection frame and the AF area.

**Notes**

- When the exposure mode is Sweep Panorama, 3D Sweep Panorama or Continuous Advance Priority AE Mode, the Face Detection function cannot be used.
- Up to 8 faces can be detected.
- The camera may not detect any faces, or may detect some other object, depending on the shooting conditions.

**Face Registration**

The camera detects faces for which information has been registered in advance.

---

**1 MENU button** → **⚙ 4** → **[Face Registration]** → **[New Registration]**

---

**2 Align the guide frame with the face to be registered, and press the shutter button.**

---

**3 Select [Enter] with ▲ on the control button, then press the center of the control button.**

- Up to 8 faces of your subjects can be registered.
- Shoot the face from the front in a brightly lit place. The face may not be registered correctly if it is obscured by a hat, a mask, sunglasses, etc.

**To change the priority of faces previously registered**

When you have registered multiple faces, the priority order is set. You can change the priority order.

**MENU button** → **⚙ 4** → **[Face Registration]** → **[Order Exchanging]** → **Select a face for which you want to change the priority and the priority level**

**To delete a registered face**

You can delete a registered face.



## MENU button → 4 → [Face Registration] → [Delete] → Select the face you want to delete


- When you select [Delete All], you can delete all registered faces at one time.


### Notes

- Even if you select [Delete], the data on registered faces remain stored in the camera. If you also want to delete this data from the camera, select [Delete All].
- The registered face is not deleted even if you use [Initialize].

## Auto Port. Framing

When the camera detects and shoots a face, the captured image is automatically trimmed into a suitable composition. Both the original and the trimmed images are saved.

-  turns to green when the trimming feature is available in Live View mode.
- The frame used for trimming is indicated on the auto review screen after shooting.

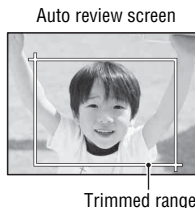

### To change the setting of [Auto Port. Framing]

The default setting is [Auto].

## Fn button → (Auto Port. Framing) → Select the desired setting

### Notes

- The Auto Port. Framing function cannot be used when the exposure mode is set to Sweep Panorama, 3D Sweep Panorama, or Continuous Advance Priority AE Mode, Movie, or [Hand-held Twilight], [Sports Action] in Scene Selection.
- The trimmed image may not be the best possible composition, depending on the shooting conditions.
- When [Quality] is set to [RAW] or [RAW & JPEG], this function cannot be used.

- This feature cannot be used with the following functions: Continuous shooting, continuous bracket, [Multi Frame Noise Reduct.], [Auto HDR], the zoom feature of the camera (ZOOM), manual focus, or [Soft Focus], [HDR Painting], [Rich-tone Mono.], [Miniature] in Picture Effect.

## Smile Shutter

When the camera detects a smile, the shutter is released automatically.

### 1 Fn button → (Smile/Face Detect.) → [Smile Shutter On: Normal Smile] → Select the desired Smile Detection Sensitivity mode with ◀/▶ on the control button


You can set the sensitivity of the Smile Shutter function for detecting smiles to one of the following 3 options: 😊<sub>ON</sub> (Slight Smile), 😊<sub>ON</sub> (Normal Smile), and 😊<sub>ON</sub> (Big Smile).

- When the Smile Shutter is activated, the Smile Detection Sensitivity indicator appears on the screen.

### 2 Wait detecting a smile.

The camera detects a smile and the focus is confirmed. When the smile level exceeds the ◀ point on the indicator, the camera records images automatically.

- When the camera detects the target faces, orange Face Detection frames appear around the faces. The Face Detection frames turn green when these subjects come into focus.
- When [Auto Port. Framing] is set to [Auto], the image will be automatically trimmed to provide a suitable composition.

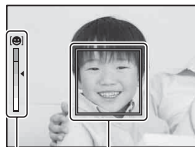

Face Detection frame

Smile Detection Sensitivity indicator

### 3 To stop shooting, Fn button → (Smile/Face Detect.) → Select an item other than [Smile Shutter].

**Shooting techniques**

- To focus on the smile, overlay the Face Detection frame and AF area.
- Do not cover the eyes with bangs, etc. Keep the eyes narrowed.
- Do not obscure the face with a hat, a mask, sunglasses, etc.
- Try to orient the face in front of the camera and keep it as level as possible.
- Hold a clear smile with an open mouth. The smile is easier to detect when the teeth are showing.
- If you press the shutter button while the Smile Shutter function is activated, the camera shoots the image, and then returns to Smile Shutter.


**Notes**

- The Smile Shutter function cannot be used when the exposure mode is set to Sweep Panorama, 3D Sweep Panorama, Continuous Advance Priority AE Mode, Movie, or [Hand-held Twilight] in Scene Selection, or the manual focus is selected.
- The drive mode is automatically set to [Single Shooting] or [Remote Cdr.].
- The AF illuminator does not work with the Smile Shutter function.
- If the camera does not detect a smile, change the settings for Smile Detection Sensitivity.
- Smiles may not be detected correctly, depending on the shooting conditions.
- If the camera tracks a face using the Object Tracking function with Smile Shutter turned on, the face becomes the target of the smile detection feature (page 114).

# Adjusting the brightness of the image

## AE Lock

When shooting into the sun or by a window, and the exposure may not be appropriate for the subject, use the light meter where the subject is bright enough and lock the exposure before shooting. To reduce the brightness of the subject, point the camera forwards a spot that is brighter than the subject and use the light meter to lock the exposure of the entire image. To make the subject brighter, point the camera forwards a spot that is darker than the subject and use the light meter to lock the exposure of the entire image.

This section describes how to shoot a brighter image of the subject using the  (Spot).

---

**1** Fn button →  (Metering Mode) →  (Spot)

---

 

**2** Adjust the focus on the portion you want to lock the exposure.

---

**3** Press the AEL button to lock the exposure.

- \* (AE lock mark) appears.
- The exposure value based on the locked exposure in the spot metering circle is also indicated on the EV scale.

AEL button

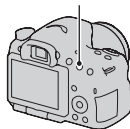

---

**4** While pressing the AEL button, focus on the subject, and shoot the subject.




- If you continue to shoot with the same exposure value, press and hold the AEL button after the shooting. The setting is canceled when the button is released.
-

**Note**

- AE lock cannot be used when the exposure mode is set to M.

**Metering Mode**

**Fn button** →  **(Metering Mode)** → **Select the desired mode**

 <b>(Multi segment)</b>	This mode measures light on each area after dividing the total area into multiple areas and determines the proper exposure of the entire screen.
 <b>(Center weighted)</b>	While emphasizing the central area of the screen, this mode measures the average brightness of the entire screen.
 <b>(Spot)</b>	This mode measures light only in the spot metering circle located in the center area.

**Shooting techniques**


- Use [Multi segment] metering for general shooting.
- When there is a high contrast subject in the AF area, measure the light of the subject you want to shoot with the optimal exposure using the spot metering function and take advantage of an AE lock shooting (page 124).

**Note**

- When the exposure mode is set to Intelligent Auto, Superior Auto, or Scene Selection, or when the zoom feature of the camera (ZOOM) is used, [Metering Mode] is fixed to [Multi segment] and you cannot select other modes.

**Flash Comp.**

When shooting with the flash, you can adjust the amount of flash light alone, without changing the exposure compensation. You can only change the exposure of a main subject which is within the flash range.

**Fn button** →  **(Flash Comp.)** → **Select the desired setting**

Toward +: Makes the flash level higher.

Toward -: Makes the flash level lower.

**Notes**

- This item cannot be set when the exposure mode is set to Intelligent Auto, Superior Auto, Sweep Panorama, 3D Sweep Panorama, or Scene Selection.

- The higher flash effect may not be visible due to the limited amount of flash light, if the subject is outside the maximum range of the flash. If the subject is very close, the lower flash effect may not be visible.

### Exposure compensation and flash compensation

Exposure compensation changes the shutter speed, aperture, and ISO sensitivity (when [AUTO] is selected) to perform the compensation.

Flash compensation only changes the amount of flash light.

## Flash control

**MENU button** →  **2** → **[Flash control]** → **Select the desired setting**

<b>ADI flash</b>	This method controls the lighting of the flash, factoring in the focus distance information and light metering data from the pre-flash. This method enables an accurate flash compensation with virtually no effect from the reflection off the subject.
<b>Pre-flash TTL</b>	This method controls the amount of flash light depending on the data only from pre-flash light metering. This method is susceptible to the reflection off the subject.

ADI: Advanced Distance Integration

TTL: Through the lens


- When [ADI flash] is selected, using a lens that is provided with a distance encoder feature can perform more accurate flash compensation by using more accurate distance information.

### Notes

- When the distance between the subject and the external flash (sold separately) cannot be determined (wireless flash shooting using an external flash (sold separately), shooting with an off-camera flash using a cable, shooting with a macro twin flash, etc.), the camera automatically selects Pre-flash TTL mode.
- Select [Pre-flash TTL] in the following cases, as the camera cannot perform flash compensations with ADI flash.
  - A wide panel is attached to the HVL-F36AM flash.
  - A diffuser is used for flash shooting.
  - A filter with an exposure factor, such as an ND filter, is used.
  - A close-up lens is used.

- ADI flash is only available in combination with a lens that is provided with a distance encoder. To determine if the lens is equipped with a distance encoder, refer to the operating instructions supplied with the lens.
- This item cannot be set when the exposure mode is set to Sweep Panorama, 3D Sweep Panorama, or [Night Scene]/[Hand-held Twilight] in Scene Selection.

# The flash

**Press the Fn button, select the desired flash mode, press the  button, and shoot images (page 42).**

## Shooting techniques

- The lens hood may block the light of the flash. Remove the lens hood when using the flash.
- When using the flash, shoot the subject at a distance of 1 m (3.3 feet) or greater.
- When shooting indoors or shooting nightscapes, you can use slow sync to shoot a brighter image of people and backgrounds.
- You can use rear sync to shoot a natural image of the trail of a moving subject such as a moving bicycle or a walking person.
- When using the HVL-F58AM/HVL-F43AM Flash (sold separately), you can shoot with the High-speed sync feature at any shutter speed. For details, refer to the operating instructions supplied with the flash.

## Notes

- Do not hold the camera by grabbing the flash emitter.
- Shooting conditions required to prevent shadows from appearing on an image vary, depending on the lens.
- When the exposure mode is set to Intelligent Auto, Superior Auto, or Scene Selection, the [Slow Sync.], [Rear Sync.], and [Wireless] items cannot be selected.
- When the exposure mode is set to P, A, S, M, Continuous Advance Priority AE Mode, the [Flash Off] or [Autoflash] items cannot be selected. If you do not want to use the flash, push the flash down.
- If you use the flash with a stereo microphone or similar device attached to the Auto-lock Accessory shoe, the flash may not pop up to the correct position and recorded images may have a shadow on their corners. Remove any device from the Auto-lock Accessory shoe.

## Wireless flash

With a flash that has a wireless shooting function (sold separately), you can shoot with the flash without a cord, even when the flash is not attached to the camera. By changing the position of the flash, you can shoot an image



with a three dimensional feel by highlighting the contrast of light and shadow on the subject.

For the actual steps of shooting, refer to the operating instructions of the flash.

---

## 1 Attach the wireless flash to the Auto-lock Accessory shoe and turn both the camera and the flash on.

---

## 2 Fn button → (Flash Mode) → (Wireless)

---

## 3 Remove the wireless flash from the Auto-lock Accessory shoe and pop up the built-in flash.


- If you perform a test fire of the flash, press the AEL button.

---

### Notes

- Turn off the wireless flash mode after wireless flash shooting. If the built-in flash is used while the wireless flash mode is still active, inaccurate flash exposures will result.
- Change the channel of the external flash when another photographer is using a wireless flash nearby and his/her flash light causes your external flash to fire. To change the channel of the external flash, refer to the operating instructions supplied with it.

### Setup of the AEL button

When using a wireless flash, it is recommended that you set [Func. of AEL button] to [AEL hold] in the  Custom menu (page 163).

### Wireless flash with lighting ratio control

You can use the wireless lighting ratio control in combination with the multiple flashes. For details, refer to the operating instructions supplied with the flash (HVL-F58AM, HVL-F43AM).

# Setting ISO

Sensitivity to light is expressed by the ISO number (recommended exposure index). The larger the number, the higher the sensitivity.

## 1 Press the ISO button to display the ISO screen.



## 2 Select the desired setting with ▲/▼ on the control button.

- The larger the number, the higher the noise level.
- If you want to select [Multi Frame Noise Reduct.], display the setup screen with ►, and select the desired value with ▲/▼.

### Notes

- When the exposure mode is set to Intelligent Auto, Superior Auto, Sweep Panorama, 3D Sweep Panorama, or Scene Selection, ISO is fixed to [AUTO] and you cannot select other ISO numbers.
- When the exposure mode is set to P/A/S and ISO is set to [AUTO], ISO is automatically set between ISO 100 and ISO 3200.
- The [AUTO] setting is not provided in exposure mode M. If you change the exposure mode to M with the [AUTO] setting, it is switched to [100]. Set the ISO according to your shooting conditions.

## Multi frame noise reduction

The camera automatically shoots multiple images continuously, combines the images, reduces the noise, and records 1 image. In multi frame noise reduction, you can select larger ISO numbers than the maximum ISO sensitivity.




The image recorded is 1 combined image.

### Notes

- When [Quality] is set to [RAW] or [RAW & JPEG], this function cannot be used.
- The flash, D-Range optimizer, and [Auto HDR] cannot be used.

# Compensating for the brightness and contrast automatically (D-Range)



**Fn button** → ** (DRO/Auto HDR)** → **Select the desired setting**


<b> (Off)</b>	Does not use the DRO/Auto HDR functions.
<b> (D-Range Opt.)</b>	By dividing the image into small areas, the camera analyses the contrast of light and shadow between the subject and the background, producing the image with the optimal brightness and gradation.
<b> (Auto HDR)</b>	Shoots 3 images with different exposures, and then overlays correctly exposed image, the bright areas of an under exposed image and the dark areas of an over exposed image to create an image with rich gradation. 2 images are recorded: an image with the correct exposure and an overlaid image.

## D-RangeOptimizer

**1** **Fn button** → ** (DRO/Auto HDR)** → ** (D-Range Opt.)**

**2** **Select an optimal level with / ** on the control button.

<b> (Auto)</b>	Corrects the brightness automatically.
<b> (Level)*</b>	Optimizes the gradations of a recorded image in each area of the image. Select the optimal level between Lv1 (weak) and Lv5 (strong).

\* Lv\_ displayed with **** is the step currently selected.

### Notes



- The setting is fixed to [Off] when the exposure mode is set to Sweep Panorama or 3D Sweep Panorama, or when [Multi Frame Noise Reduct.] or [Picture Effect] is used.
- The setting is fixed to [Off] when [Sunset], [Night Scene], [Night Portrait], or [Hand-held Twilight] is selected in Scene Selection. The setting is fixed to [Auto] when other modes are selected in Scene Selection.


- When shooting with the D-Range optimizer, the image may be noisy. Select the proper level by checking the recorded image, especially when you enhance the effect.

## Auto HDR

1 Fn button →  (DRO/Auto HDR) →  (Auto HDR)

2 Select an optimal level with ◀▶ on the control button.

 (Auto HDR: Exposure Diff. Auto)	Corrects the exposure difference automatically.
 (Exposure Difference Level)*	Sets the exposure difference, based on the contrast of the subject. Select the optimal level between 1.0Ev (weak) and 6.0Ev (strong). For example: When 2.0Ev is selected, 3 images are overlaid: an image with -1.0Ev, an image with the correct exposure, and an image with +1.0Ev.


\* \_Ev displayed with  is the step currently selected.

### Shooting technique

- Since the shutter is released 3 times for 1 shot, be careful about the following:
  - Use this function when the subject is motionless or does not blink.
  - Do not recompose.

### Notes


- You cannot use this function on RAW images.
- When the exposure mode is set to Intelligent Auto, Superior Auto, Sweep Panorama, 3D Sweep Panorama, Continuous Advance Priority AE Mode or Scene Selection, or when [Multi Frame Noise Reduct.] is selected, you cannot select [Auto HDR].
- You cannot start the next shoot until the capture process is completed after you shoot.
- You may not obtain a desired effect depending on the luminance difference of a subject and the shooting conditions.
- When the flash is used, this function has little effect.



- When the contrast of the scene is low or when camera shake or subject blur is occurred, you may not obtain good HDR images. If the camera has detected a problem, **HDR**  is indicated on the recorded image to inform you of this situation. Shoot again, as necessary, paying attention to the contrast or blur.

 
# Setting the image processing

























## Picture Effect


Select the desired effect filter to achieve more impressive and artistic expression.

 **(Picture Effect) on the control button → Select the desired setting**


- When a mode that has a fine adjustment option is selected, select the desired setting with  .



 <b>(Off)</b>	Does not use the Picture Effect function.
 <b>(Toy Camera)</b>	Creates the look of a Toy Camera photo with shaded corners and pronounced colors. You can set the color tone with   .
 <b>(Pop Color)</b>	Creates a vivid look by emphasizing color tones.
 <b>(Posterization)</b>	Creates a high contrast, abstract look by heavily emphasizing primary colors, or in black and white. You can select primary colors or black and white with   .
 <b>(Retro Photo)</b>	Creates the look of an aged photo with sepia color tones and faded contrast.
 <b>(Soft High-key)</b>	Creates an image with the indicated atmosphere: bright, transparent, ethereal, tender, soft.
    <b>(Partial Color)</b>	Creates an image which retains 1 specific color, but converts others to black and white. You can select a color with   .
 <b>(High Contrast Mono.)</b>	Creates a high-contrast image in black and white.
 <b>(Soft Focus)</b>	Creates an image filled with a soft lighting effect. You can set the intensity of the effect with   .
 <b>(HDR Painting)</b>	Creates the look of a painting, enhancing the colors and details. The camera releases the shutter 3 times. You can set the effect intensity with   .
 <b>(Rich-tone Mono.)</b>	Creates an image in black and white with rich gradation and reproduction of details. The camera releases the shutter 3 times.

 <b>(Miniature)</b>	Creates an image which enhances the subject vividly, with the background defocused considerably. This effect may often be found in pictures of miniature models. You can select the area to be in focus with ◀/▶. The focus on other areas is greatly reduced.
--	--



### Notes


- When the zoom feature of the camera (ZOOM) is used, the [Toy Camera] and [Miniature] effects are not available.
- When [Partial Color] is selected, images may not retain the selected color, depending on the subject or shooting condition.
- When the exposure mode is set to Intelligent Auto, Superior Auto, Sweep Panorama, 3D Sweep Panorama or Continuous Advance Priority AE Mode, or when [Quality] is set to [RAW] or [RAW & JPEG], Picture Effect cannot be used.
- When [HDR Painting], [Miniature], [Rich-tone Mono.] or [Soft Focus] is selected, you cannot confirm the effect before shooting. You cannot also set the drive mode.
- When the contrast of the scene is low or when significant camera shake or subject blur has occurred with [HDR Painting] or [Rich-tone Mono.] selected, you may not obtain good HDR images. If the camera detects such situation,  is indicated on the recorded image to inform you of this situation. Shoot again, as necessary, recomposing or paying attention to the blur.






## Creative Style



You can select the desired style to be used to perform image processing, and adjust the contrast, saturation, and sharpness for each Creative Style. You can also adjust the exposure (shutter speed and aperture), unlike Scene Selection where the camera adjusts the exposure.




**1 Fn button** →  **(Creative Style)** → **Select the desired setting**

**2 When you want to adjust**  **(Contrast)**,  **(Saturation)**, or  **(Sharpness)**, **select the desired item with** ◀/▶ **on the control button, then adjust the value with** ▲/▼.

 <b>(Standard)</b>	For shooting various scenes with rich gradation and beautiful colors.
---	---

 <b>(Vivid)</b>	The saturation and contrast are heightened for shooting striking images of colorful scenes and subjects such as flowers, spring greenery, blue sky, or ocean views.
 <b>(Portrait)</b>	For shooting the skin color in a soft tone, ideally suited to shooting portraits.
 <b>(Landscape)</b>	The saturation, contrast, and sharpness are heightened for shooting vivid and crisp scenery. Distant landscapes also stand out more.
 <b>(Sunset)</b>	For shooting the beautiful red of the setting sun.
 <b>(Black &amp; White)</b>	For shooting images in black and white monotone.

 (Contrast),  (Saturation), and  (Sharpness) can be adjusted for each Creative Style item.

 <b>(Contrast)</b>	The higher the value selected, the more the difference of light and shadow is accentuated, thus making an impact on an image.
 <b>(Saturation)</b>	The higher the value selected, the more vivid the color. When a lower value is selected, the color of the image is restrained and subdued.
 <b>(Sharpness)</b>	Adjusts the sharpness. The higher the value selected, the more the contours are accentuated, and the lower the value selected, the more the contours are softened.

### Notes

- When the exposure mode is set to Intelligent Auto, Superior Auto or Scene Selection, or the Picture Effect mode is selected, [Creative Style] is fixed to [Standard] and you cannot select other settings.
- When [Black & White] is selected, you cannot adjust the saturation.



# Adjusting the color tones (White balance)

The color tone of the subject changes depending on the characteristics of the light source. The table below shows how the color tone changes based on various light sources, compared with a subject that appears white under the sunlight.

Weather/lighting	Daylight	Cloudy	Fluorescent	Incandescent
Characteristics of light	White	Bluish	Green-tinged	Reddish

 
Use this feature when the color tone of the image did not come out as you expected, or when you want to change the color tone on purpose for photographic expression.

## Notes

- When the exposure mode is set to Intelligent Auto, Superior Auto, or Scene Selection, [White Balance] is fixed to [Auto WB] and you cannot select other modes.
- If the only light source available is a mercury lamp or a sodium lamp, the camera will not be able to acquire the accurate white balance because of the characteristics of the light source. Use the flash in such cases.

## WB on the control button → Select the desired setting

- When you select a setting other than [C.Temp./Filter], press **▶** so that the fine adjustment screen appears and you can adjust the color tone with **▲/▼/◀/▶**, as necessary.




<b>AWB (Auto WB)</b>	The camera automatically detects a light source and adjusts the color tones.
<b>☀ (Daylight)</b>	If you select an option to suit a specific light source, the color tones are adjusted for the light source (preset white balance).
<b>🏠 (Shade)</b>	
<b>☁ (Cloudy)</b>	
<b>💡 (Incandescent)</b>	
<b>☀-1 (Fluor.: Warm White)</b>	
<b>☀0 (Fluor.: Cool White)</b>	
<b>☀+1 (Fluor.: Day White)</b>	
<b>☀+2 (Fluor.: Daylight)</b>	
<b>⚡ (Flash)</b>	

### Shooting techniques

- Use the white balance bracket function if you cannot get the desired color in the selected option (page 147).
- When you select [C.Temp./Filter], you can adjust the value to the desired value (page 139).
- When you select [Custom], you can register your setting (page 139).

## The fine adjustment screen for color


You can perform a fine adjustment by combining the color temperature with the color filter.

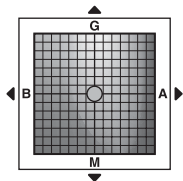

<b>Color Temp.</b>	Fine-tunes color in the B (blue) direction with ◀ and the A (amber) direction with ▶.
<b>Color Filter</b>	Fine-tunes color in the G (green) direction with ▲ and the M (magenta) direction with ▼.

## Color Temp./Color Filter

 - 1** WB on the control button →   
(C.Temp./Filter) → ▶



- 2** Set the color temperature with ▲/▼ on the control button.


- 3** Press ▶ to display the fine adjustment screen and compensate the color to your preference with ▲/▼/◀/▶.


### Note

 - Since color meters are designed for film cameras, the values differ under fluorescent/sodium lamp/mercury lamps. We recommend that you use the custom white balance or perform a test shooting.

## Custom white balance

In a scene where the ambient light consists of multiple types of light source, use of custom white balance is recommended in order to accurately reproduce the whiteness.

- 1** WB on the control button →   
SET] → press the center of the  
control button



---

## 2 Hold the camera so that the white area fully covers the AF area located in the center, and then press the shutter button down.

The shutter clicks and the calibrated values (Color Temperature and Color filter) are displayed.

 
---

## 3 Press the center of the control button.

The screen returns to the recording information display with the memorized custom white balance setting retained.


- The custom white balance setting registered in this operation is effective until a new setting is registered.
- 

### Note

- The message “Custom WB error” indicates that the value is beyond the expected range. (When the flash is used on a subject in close proximity or a subject with a bright color is in the frame.) If you register this value, the  indicator turns yellow on the recording information display. You can shoot at this point, but it is recommended that you set the white balance again to get a more accurate white balance value.

### To call the custom white balance setting
 
#### WB on the control button → (Custom)

- Press  to display the fine adjustment screen and compensate the color to your preference.

### Note

- If the flash is used when the shutter button is pressed, a custom white balance is registered with the flash light taken into account. Take pictures with the flash in later shootings.

# Magnifies images with higher scale than the optical zoom (ZOOM)

Using the zoom feature of the camera (ZOOM), the camera allows you to use a higher magnification zoom than the optical zoom factor of the lens to magnify the center area on the screen and record the image.

**1 Magnify the image with the zoom ring when using a zoom lens (page 31).**

**2 Press the ZOOM button.**



 
ZOOM button

**3 Magnify the image to your desired zoom scale with ◀/▶ on the control button.**


- You can magnify the image at wider intervals with ▲/▼.


## The zoom features available with this camera
















The icon displayed on the screen changes as follows according to the zoom scale.



- 1 Q** : The zoom feature of the camera (ZOOM) is not used ( $\times 1.0$  is indicated).
- 2 sQ** Smart Zoom: You can magnify images by trimming them slightly. (Available only when [Image Size] is set to M or S.)

3  Clear Image Zoom: You can magnify images using a high-quality image process.

4  Digital Zoom: You can magnify images using an image process.

Setting	Image size	Zoom scale with optical zoom
Zooms images by trimming them in the available range (without deterioration of image quality). Clear Image Zoom: Off Digital Zoom: Off	L	–
	M	About 1.4× 
	S	About 2× 
Gives priority to image quality when zooming images. Clear Image Zoom: On Digital Zoom: Off	L	About 2× 
	M	About 2.8×  
	S	About 4×  
Gives priority to higher magnification when zooming images. Clear Image Zoom: On Digital Zoom: On	L	About 4×  
	M	About 5.6×   
	S	About 8×   

### Notes

- The zoom feature of the camera (ZOOM) is unavailable
  - When the exposure mode is set to Sweep Panorama or 3D Sweep Panorama.
  - [Quality] is set to [RAW] or [RAW & JPEG].
- The [Clear Image Zoom] is unavailable
  - When the exposure mode is set to Continuous Advance Priority AE Mode.
  - The drive mode is set to Continuous Shooting or continuous bracket shooting.
- You cannot use the Smart Zoom or [Clear Image Zoom] function with movies.
- When the zoom scale of the electronic zoom is higher than 2.0 times, [AF area] is set to [Spot].
- When the electronic zoom is available, [Metering mode] is set to [Multi segment].

**To change the setting of [Clear Image Zoom]**

The default setting is [On].

**MENU button →  2 → [Clear Image Zoom] → Select the desired setting**

**To change the setting of [Digital Zoom]**

The default setting is [Off]. If you want to use higher magnification regardless of the deterioration of the image, set it to [On].

 
**MENU button →  2 → [Digital Zoom] → Select the desired setting**

# / **Selecting the drive mode**

## Shooting single shot

This mode is for normal shooting.

 /  **on the control button** →  
 **(Single Shooting)**




### Note

- When the exposure mode is set to [Sports Action] in Scene Selection, you cannot shoot single shot.

## Cont. Shooting

The camera records the images continuously.

 **1**  /  **on the control button** →  
 **(Cont. Shooting)** → **Select the desired speed**




## **2 Adjust the focus and shoot the subject.**

- When you press and hold the shutter button, the recording continues.

### Shooting technique

- To shoot continuously faster, set the exposure mode to Continuous Advance Priority AE Mode (pages 41, 93).

### Notes

- When  Hi is selected, the image recorded between the frames is displayed.





- You cannot shoot continuously when using Scene Selection modes other than [Sports Action].

## Self-timer

The 10-second self-timer is convenient when the photographer appears in a photo and the 2-second self-timer is convenient to reduce the camera shake.
  
### 1 / on the control button → (Self-timer) → Select the desired setting



- The number after  is the number of seconds that is currently selected.



### 2 Adjust the focus and shoot the subject.

- When the self-timer is activated, audio signals and the self-timer lamp indicate the condition. The self-timer lamp flashes quickly and the audio signal sounds quickly right before the shooting.

#### To cancel the self-timer

Press  /  on the control button.

## Bracket: Cont./Single Bracket



Base exposure





 
- direction



+ direction

Bracket shooting allows you to shoot several images, each with different degrees of exposure. Specify the value of deviation (steps) from the base exposure, and the camera shoots 3 images while automatically shifting the exposure.

**1**  /  on the control button →  
**BRK C (Bracket: Cont.)** or  
**BRK S (Single Bracket)** → **Select the desired bracket step**



- **\_EV** displayed with **BRK** is the currently selected value. The number of images you can record “3,” is also displayed on the Fn screen.

**2 Adjust the focus and shoot the subject.**

 
 
 

The base exposure is set at the first shot in the bracket.

- Press and hold the shutter button until recording stops when [Bracket: Cont.] is selected.
- Press the shutter button shot by shot when [Single Bracket] is selected.

**Notes**

- When the mode dial is set to M, the exposure is shifted by adjusting the shutter speed.
- When you adjust the exposure, the exposure is shifted based on the compensated value.
- The bracket cannot be used when the exposure mode is set to Intelligent Auto, Superior Auto, Continuous Advance Priority AE Mode, Sweep Panorama, 3D Sweep Panorama, or Scene Selection.
- When the flash is fired, flash bracket shooting is used to shift the amount of flash light. To shoot, press the shutter button shot by shot even when [Bracket: Cont.] is selected.

## The EV scale in bracket shooting

	Ambient light* bracket (e.g., 0.3 steps, 3 shots, Exposure compensation 0)	Flash bracket (e.g., 0.7 steps, 3 shots, Flash compensation -1.0)
Viewfinder		
LCD screen (When [DISP Button(Monitor)] is set to [For viewfinder])	 Shown in the top row.	 Shown in the bottom row.

\* Ambient light: Any light other than the flash light that shines on the scene for an extended period of time, such as natural light, a light bulb, or a fluorescent light.


- In bracket shooting, the same number of indices as the number of recordable images is displayed on the EV scale.
- When the bracket shooting starts, the indices that indicate already recorded images start to disappear one by one.

## WB bracket

 Based on the selected white balance, and the color temperature/color filter, 3 images are recorded with the white balance shifted.

- 1  on the control button → **BRK WB (WB bracket) → Select the desired setting**

- When Lo is selected, it is shifted by 10 MK<sup>-1</sup>\*, and when Hi is selected, it is shifted by 20 MK<sup>-1</sup>.






## 2 Adjust the focus and shoot the subject.

\* MK<sup>-1</sup>: a unit to indicate the color conversion quality in color temperature filters (The same value as the conventional unit, "Mired.").

## Remote Cdr.

You can shoot using the SHUTTER and 2SEC (the shutter is released after 2 seconds) buttons on the RMT-DSLR1 Wireless Remote Commander (sold separately). Also, refer to the operating instructions supplied with the Wireless Remote Commander.

 - 1**  on the control button →  
 (Remote Cdr.)



- 2** Focus on the subject, point the transmitter of the Wireless Remote Commander to the remote sensor, and shoot the image.


### Note

- The RMT-DSLR1 Wireless Remote Commander (sold separately) cannot be used for movie recording.


# The screen displayed for playback mode

## Switching the screen during playback

Each time you press DISP on the control button, the screen changes as follows.

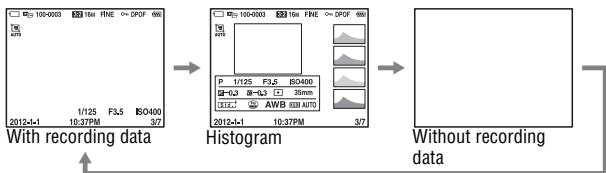

## List of icons on the histogram display

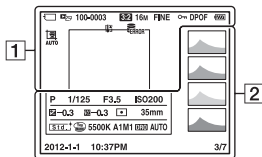

1

Display	Indication
	Memory card (21, 207)
	View mode (151)
<b>100-0003</b>	Folder - file number (180)
<b>3:2</b> <b>16:9</b>	Aspect ratio of still images (159)
<b>3D</b>	3D Sweep Panorama (40, 91)

Display	Indication
<b>16M 8.4M</b> <b>4.0M 14M</b> <b>7.1M 3.4M</b> <b>WIDE</b> <b>STD</b> <b>16:9</b>	Image size of still images (48)
<b>RAW</b> <b>RAW+J</b> <b>FINE</b> <b>STD</b>	Image quality of still images (159)
	Protect (154)
<b>DPOF</b>	DPOF set (185)

Display	Indication
	Remaining battery warning (22)
	Auto Portrait Framing (121)
	Remaining battery (22)
	Database file full (200)/ Database file error (200)
	Overheating warning (10)

2

Display	Indication
	Histogram* (82)
	Exposure mode (37)
<b>1/125</b>	Shutter speed (97)
<b>F3.5</b>	Aperture (95)
<b>ISO200</b>	ISO sensitivity (130)
<b>-0.3</b>	Exposure compensation (44)
<b>-0.3</b>	Flash compensation (125)
	Metering mode (125)
<b>35mm</b>	Focal length
	Creative Style (135)
	Picture Effect (134)


Display	Indication
<b>AWB</b>	White balance (Auto, Preset, Color temperature, Color filter, Custom) (137)
<b>5500K A1 M1</b>	
<b>D-R OFF</b> <b>DRO HDR</b> <b>HDR</b>	D-Range Optimizer (131)/Auto HDR/Auto HDR image warning (132)
<b>2012-1-1 10:37AM</b>	Date of recording
<b>3/7</b>	File number/Number of images in the view mode

\* When the image has a high-key or low-key portion, that portion is flashed on the histogram display (Luminance limit warning).

# Using the playback functions

## Rotating an image

- 1 Display the image you want to rotate, then press the  button.

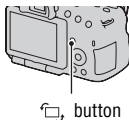


- 2 Press the center of the control button.

The image is rotated counter-clockwise. When you want to do another rotation, repeat step 2.

- Once you rotate the image, the image is played back in the rotated position, even after you turn off the power.

### To return to the normal playback screen

Press the  button again.

#### Notes

- You cannot rotate movies and 3D-images.
- When you copy rotated images to a computer, “PlayMemories Home” contained on the CD-ROM (supplied) can display the rotated images correctly. However, the images may not be rotated depending on the software.


## View Mode

Selects the unit for images to be played back.

**MENU button** →  **1** → **[View Mode]** → **Select the desired setting**

<b>Folder View(Still)</b>	Displays still images by folder.
<b>Folder View(MP4)</b>	Displays movies (MP4) by folder.
<b>AVCHD View</b>	Displays only AVCHD movies.

## Slide Show

**MENU button** →  **1** → **[Slide Show]** → **[Enter]**

Plays back recorded images in order (Slide Show). The slide show automatically stops after all the images have been played back.

- You can view the previous/next image with ◀/▶ on the control button.
- You cannot pause the slide show.

**To end in the middle of the slide show**

Press the center of the control button.

**To choose the interval between the images in slide show**

**MENU button** →  **1** → **[Slide Show]** → **[Interval]** → **Select the desired number of seconds**

**To play back repeatedly**

**MENU button** →  **1** → **[Slide Show]** → **[Repeat]** → **[On]**

**To play back 3D-images**

If you connect the camera to a 3D-compatible TV using an HDMI cable (sold separately), you can play back 3D-images recorded with the 3D Sweep Panorama mode. For details on 3D-shooting, see page 206. Also refer to the operating instructions supplied with the TV.

**MENU button** →  **1** → **[Slide Show]** → **[Image Type]** → **[Display 3D Only]**

## Playback Display

You can set the playback orientation of images recorded in portrait orientation.

**MENU button** →  **2** → **[Playback Display]** → **Select the desired setting**



**Note**

- When you play back the image on a TV or a computer, the image will be displayed in the portrait position even if [Manual Rotate] is selected.

**Scrolling panoramic images****Select a panoramic image, then press the center of the control button.**

- Pressing it again pauses the playback. You can scroll a panoramic image by pressing ▲/▼/◀/▶ during pause.


**Note**

- Scrolling playback is not available for images that were recorded with [3D Pan.: Image Size] set to [16:9].

# Protecting images (Protect)

You can protect images against accidental erasure.

---

**1 MENU button** →  **1** → **[Protect]** → **[Multiple Img.]**

---

**2 Select the image you want to protect with ◀/▶ on the control button, then press the center of the control button.**

A ✓ mark is put in the check box.

- To cancel a selection, press the center again.



---

**3 To protect other images, repeat step 2.**

- You can select all the images in the folder by selecting the bar on the left of the image index screen.

---

**4 Press the MENU button.**

---

**5 Select [Enter] with ▲, then press the center of the control button.**

---

## To cancel the protection of all the images or movies

You can cancel the protection of all the images or movies by the same view mode currently displayed.

**MENU button** →  **1** → **[Protect]** → **[Cancel All Images]**,  
**[Cancel All Movies(MP4)]** or **[Cancel All AVCHD view files]**

# Deleting images (Delete)

You can delete only unnecessary images, or all the images.

Once you have deleted an image, you cannot restore it. Check whether to delete the image or not beforehand.


## Note

- Protected images cannot be deleted.

## To display the desired folder

Select the bar on the left of the image index screen with the control button, then select the desired folder with ▲/▼.

## Delete (Multiple Img.)

**1** MENU button →  1 → [Delete] → [Multiple Img.]

**2** Select the images you want to delete with the control button, then press the center of the control button.

A ✓ mark is put in the check box.

- To cancel a selection, press the center again.



Total number

**3** To delete other images, repeat step 2.

- You can select all the images in the folder by selecting the bar on the left of the image index screen.

**4** Press the MENU button.

**5** Select [Delete] with ▲, then press the center of the control button.

---

## Deleting all the images or movies in the same view mode

You can delete all still images or movies by the same view mode currently displayed.

---

**1 MENU button** →  **1** → **[Delete]** → **[All in Folder]** or **[All AVCHD view files]**

---


**2 Select [Delete] with ▲ on the control button, then press the center of the control button.**

---

# About playback on TV

Connect the camera to a TV using an HDMI cable (sold separately) and play back images (page 52).

## Notes

- Use an HDMI cable with the HDMI logo.
- Use an HDMI mini connector on one end (for the camera), and a connector suitable for connection to your TV on the other end.
- When images cannot be displayed properly, set [HDMI Resolution] in the  Setup menu to [1080p] or [1080i], according to your TV.
- Some devices may not work properly.
- Do not connect the output connector of the device with the HDMI terminal on the camera. This may cause a malfunction.

## On “PhotoTV HD”

This camera is compatible with the “PhotoTV HD” standard.

By connecting Sony’s PhotoTV HD-compatible devices using an HDMI cable, a whole new world of photos can be enjoyed in breathtaking Full HD quality.

“PhotoTV HD” allows for a highly-detailed, photo-like expression of subtle textures and colors.

## 3D Viewing

If you connect the camera to a 3D-compatible TV using an HDMI cable (sold separately), you can play back 3D-images recorded with the 3D Sweep Panorama mode automatically. For details on 3D-shooting, see page 206. Also refer to the operating instructions supplied with the TV.

**MENU button** →  **1** → [3D Viewing]

## Using “BRAVIA” Sync

By connecting the camera to a TV that supports “BRAVIA” Sync using an HDMI cable, you can operate the camera with the TV Remote Control.

## 1 Connect a TV that supports “BRAVIA” Sync to the camera (page 52).

The input is automatically switched and the image shot with the camera appears on the TV screen.


## 2 Press the SYNC MENU button on the TV Remote Control.

## 3 Operate with the buttons on the TV Remote Control.

### The items for Sync Menu

<b>Slide Show</b>	Plays back images automatically (page 152).
<b>Single-image playback</b>	Returns to the single-image screen.
<b>Image Index</b>	Switches to the image index screen.
<b>3D Viewing</b>	Plays back 3D-images when connected to a 3D-compatible TV.
<b>View Mode</b>	Switches the view mode.
<b>Delete</b>	Deletes images.

### Notes

- The operations available are restricted when the camera is connected to a TV using an HDMI cable.
- Only TVs that support “BRAVIA” Sync can provide these operations. The SYNC Menu operations differ depending on the TV connected. For details, refer to the operating instructions supplied with the TV.
- If the camera performs unnecessary operations in response to the TV Remote Control when the camera is connected to another manufacturer’s TV using an HDMI connection, set [CTRL FOR HDMI] in the  Setup menu to [Off].

# Setting the aspect ratio and image quality

## Aspect Ratio

**MENU button** →  **1** → **[Aspect Ratio]** → **Select the desired ratio**

<b>3:2</b>	A normal ratio.
<b>16:9</b>	An HDTV ratio.

### Note

- This item cannot be set when the exposure mode is set to Sweep Panorama or 3D Sweep Panorama.

## Quality

**MENU button** →  **1** → **[Quality]** → **Select the desired setting**

<b>RAW (RAW)</b>	File format: RAW (Records using the RAW compression format.) This format does not perform any digital processing on the images. Select this format to process images on a computer for professional purposes. <ul style="list-style-type: none"><li>• The image size is fixed to the maximum size. The image size is not displayed on the screen.</li></ul>
<b>RAW+J (RAW &amp; JPEG)</b>	File format: RAW (Records using the RAW compression format.) + JPEG A RAW image and a JPEG image are created at the same time. This is suitable when you need 2 image files, a JPEG for viewing, and a RAW for editing. <ul style="list-style-type: none"><li>• The image quality is fixed to [Fine] and the image size is fixed to [L].</li></ul>
<b>FINE (Fine)</b>	File format: JPEG
<b>STD (Standard)</b>	The image is compressed in the JPEG format when recorded. Since the compression rate of <b>STD</b> (Standard) is higher than that of <b>FINE</b> (Fine), the file size of <b>STD</b> is smaller than that of <b>FINE</b> . This will allow more files to be recorded on one memory card, but the image quality will be lower.

### Note

- This item cannot be set when the exposure mode is set to Sweep Panorama or 3D Sweep Panorama.

### About RAW images

You need the “Image Data Converter” software included on the CD-ROM (supplied) in order to open a RAW image recorded on this camera. With this software, a RAW image can be opened and converted to a common format, such as JPEG or TIFF, and its white balance, color saturation, contrast, etc., can be readjusted.

- The RAW format image cannot be printed using a DPOF (print) designated printer.
- You cannot set [Auto HDR] or [Picture Effect] on RAW format images.



# Setting the other functions of the camera

## Long Exposure NR

When you set the shutter speed to 1 second or longer (Long exposure shooting), noise reduction is turned on for the same duration that the shutter is open.

This is to reduce the grainy noise typical in a long exposure. When noise reduction is in progress, a message appears and you cannot take another picture. Select [On] to prioritize the image quality. Select [Off] to prioritize the timing of shooting.

**MENU button** →  **2** → **[Long Exposure NR]** → **Select the desired setting**

### Notes

- When the exposure mode is set to Sweep Panorama, 3D Sweep Panorama, Continuous Advance Priority AE Mode, or continuous shooting, continuous bracketing, [Sports Action] or [Hand-held Twilight] in Scene Selection, or ISO is set to [Multi Frame Noise Reduct.], noise reduction is not performed even when it is set to [On].
- When the exposure mode is set to Intelligent Auto, Superior Auto or Scene Selection, you cannot turn off noise reduction.

## High ISO NR

The camera reduces the noise that becomes more noticeable when the camera sensitivity is high. A message may be indicated during the processing and you cannot record images during this processing. Normally, set it to [Normal]. Select [High] to reduce the noise. Select [Low] to prioritize the timing of shooting.

**MENU button** →  **2** → **[High ISO NR]** → **Select the desired setting**

### Notes

- When the exposure mode is set to Intelligent Auto, Superior Auto, Sweep Panorama, 3D Sweep Panorama, or Scene Selection, this item cannot be set.

- Noise reduction is not performed on RAW images.

## Color Space

The way colors are represented with combinations of numbers or the range of color reproduction is called “color space.” You can change the color space, depending on your purpose.

**MENU button** →  **2** → **[Color Space]** → **Select the desired setting**

<b>sRGB</b>	This is the standard color space of the digital camera. Use sRGB in normal shooting, such as when you intend to print out the images without any modification.
<b>AdobeRGB</b>	This has a wide range of color reproduction. When a large part of the subject is vivid green or red, Adobe RGB is effective. <ul style="list-style-type: none"> <li>• The file name of the image starts with “_DSC.”</li> </ul>

### Notes

- Adobe RGB is for applications or printers that support color management and DCF2.0 option color space. Using some applications or printers that do not support them may result in or print images that do not faithfully reproduce the color.
- When displaying images that were recorded with Adobe RGB on the camera or non-Adobe RGB-compliant devices, the images are displayed with low saturation.

## Release w/o Lens

You can release the shutter when no lens is attached. Select this when you attach the camera on an astronomical telescope, etc.

**MENU button** →  **1** → **[Release w/o Lens]** → **[Enable]**

### Note

- Correct metering cannot be achieved when you use lenses that do not provide a lens contact, such as the lens of an astronomical telescope. In such cases, adjust the exposure manually by checking it on the recorded image.

## Grid Line

The grid line is an auxiliary line for shooting composition. You can set the grid line to on/off or select the type of grid line. The available range of movie recording is also displayed.

**MENU button** →  **2** → **[Grid Line]** → **Select the desired setting**

## Auto Review

You can check the recorded image on the screen right after the shooting. You can change the displayed time.

**MENU button** →  **2** → **[Auto Review]** → **Select the desired setting**



### Notes

- In auto review, the image will not be displayed in the vertical position even if [Playback Display] is set to [Auto Rotate] (page 152).
- In auto review, the camera may display an image to which an image process, such as [Lens Comp.: Distortion], has not been performed, then display the same image to which an image process has been performed.

## Func. of AEL button

The function of the AEL button can be selected from the following 2 functions (page 125):

- Holding the locked exposure value by pressing the AEL button while the button is held down ([AEL hold]).
- Holding the locked exposure value by pressing the AEL button until the button is pressed again ([AEL toggle]).

When [ AEL hold] or [ AEL toggle] is selected, the exposure is locked in spot metering mode.

**MENU button** →  **3** → **[Func. of AEL button]** → **Select the desired setting**

**Notes**

- While the exposure value is locked, \* appears on the LCD screen and in the viewfinder. Be careful not to reset the setting.
- When [AEL toggle] is selected, be sure to press the AEL button again to release the lock.

**To assign another function to the AEL button**

You can assign one of the following functions to the AEL button in addition to the AEL function:

Exposure Comp./Drive Mode/Flash Mode/Autofocus Mode/AF area/Face Detection/Smile Shutter/Auto Port. Framing/ISO/Metering Mode/Flash Comp./White Balance/DRO/Auto HDR/Creative Style/Picture Effect/Image Size/Quality/Object Tracking/AF lock/Aperture Preview/Shot. Result Preview/Zoom/Focus Magnifier

**Note**

- When the exposure mode is set to M, the AEL button functions as an AV button. The selected function is not assigned to the button.

**ISO Button**

You can also assign another function to the ISO button, other than the ISO function. The functions available are the same as those of [Func. of AEL button] (page 163).

**MENU button** →  **3** → **[ISO Button]** → **Select the desired setting**

**Preview Button**

You can check the approximate blurring of the background of the subject before shooting (page 97). You can also assign [Focus Magnifier] to the preview button, which allows you to magnify the image to confirm the focus before shooting (page 117).

**MENU button** →  **3** → **[Preview Button]** → **Select the desired setting**

<b>Shot. Result Preview</b>	The aperture is narrowed to match the selected aperture value and you can check the blurring. The effect of DRO or the shutter speed value is also reflected. <ul style="list-style-type: none"> <li>• The preview image may be darker, depending on the shutter speed value. However, you can record images in accordance with the brightness you have set.</li> </ul>
<b>Aperture Preview</b>	The aperture is narrowed to match the selected aperture value and you can check the blurring.
<b>Focus Magnifier</b>	You can magnify the image to confirm the focus before shooting.

## Electronic Front Curtain Shutter

The electronic front curtain shutter function shortens the time lag between shutter releases.

**MENU button** →  **4** → **[Front Curtain Shutter]** → **Select the desired setting**

### Notes

- When you shoot at high shutter speeds with a large diameter lens attached, the ghosting of a blurred area may occur, depending on the subject or shooting conditions. In such cases, set this item to [Off].
- When a Konica Minolta lens is used, set this item to [Off]. If you set this item to [On], the correct exposure will not be set or the image brightness will be uneven.

## LCD Brightness

The brightness of the LCD screen is automatically adjusted to the surrounding lighting conditions using the light sensor (page 14). You can set the brightness of the LCD screen manually.

**MENU button** →  **1** → **[LCD Brightness]** → **Select the desired setting**

### Notes

- When it is set to [Auto], do not cover the light sensor with your hand and so on.
- When using the camera with the AC-PW10AM AC Adaptor (sold separately), the brightness of the LCD screen is always set to the brightest setting even if you select [Auto].

## Viewfinder Bright.

The brightness of the viewfinder is automatically adjusted to the lighting conditions of the subject.

You can set the brightness of the viewfinder manually.

**MENU button** →  **1** → **[Viewfinder Bright.]** → **[Manual]** → **Select the desired setting**

### Note

- When using the camera with the AC-PW10AM AC Adaptor (sold separately), the brightness of the viewfinder is always set to the brightest setting even if you select [Auto].

## Eco Mode

You can shorten the waiting time until the camera is turned off when it is not being operated to prevent the battery from being consumed. If you set this item to [Max], [Power Save] is set to [10 Sec]. If you do not operate the camera for a given period of time, the brightness of the LCD screen is reduced.

**MENU button** →  **1** → **[Eco Mode]** → **Select the desired setting**

### Note

- When the AC-PW10AM AC Adaptor (sold separately) is used, this item cannot be set to [Max].

## Power Save

You can set different time intervals for the camera to switch to power save mode (Power Save). Pressing the shutter button halfway down returns the camera to the shooting mode.

**MENU button** →  **1** → **[Power Save]** → **Select the desired time**

**Note**

- The camera does not turn to power save mode when the camera is connected to a TV or the drive mode is set to [Remote Cdr.].

**FINDER/LCD Setting**

You can disable the automatic switching of the LCD screen and the viewfinder and enable only the FINDER/LCD button to switch them.

**MENU button** → **⚙ 1** → **[FINDER/LCD Setting]** → **[Manual]**

# Lens compensation

You can automatically compensate the following characteristics: light fall-off at the edges, chromatic aberration, and distortion (only for automatic compensation compliant lenses). For further information on automatic compensation compliant lenses, visit the Sony web site in your area, or consult your Sony dealer or local authorized Sony service facility.

## Lens Comp.: Peripheral Shading

Compensates for the shaded corners of the screen caused by certain lens characteristics. This item is set to [Auto] in the default settings.

**MENU button** →  **4** → **[Lens Comp.: Shading]** → **Select the desired setting**

## Lens Comp.: Chromatic Aberration

Reduces the color deviation at the corners of the screen caused by certain lens characteristics. This item is set to [Auto] in the default settings.

**MENU button** →  **4** → **[Lens Comp.: Chro. Aber.]** → **Select the desired setting**

## Lens Comp.: Distortion

Compensates for the distortion of the screen caused by certain lens characteristics. This item is set to [Off] in the default settings.


**MENU button** →  **4** → **[Lens Comp.: Distortion]** → **Select the desired setting**



# Setting the method for recording on a memory card

## Format

Note that formatting irrevocably erases all data on a memory card, including protected images.

**MENU button** →  **1** → **[Format]** → **[Enter]**

### Notes

- During the format, the access lamp lights up. Do not eject the memory card while the lamp is lit.
- Format the memory card using the camera. If you format it on a computer, the memory card may not be usable with the camera, depending on the format type used.
- Formatting may take several minutes depending on the memory card.
- When the remaining battery time is 1 percent or less, you cannot format memory cards.

## File Number

**MENU button** →  **1** → **[File Number]** → **Select the desired setting**

<b>Series</b>	The camera does not reset numbers and assigns numbers to files in sequence until the number reaches “9999.”
<b>Reset</b>	The camera resets numbers when a file is recorded in a new folder and assigns numbers to files from “0001.” When the recording folder contains a file, a number one higher than the largest number is assigned.

## Folder Name

The recorded still images are stored in automatically-created folders in the DCIM folder of the memory card.

**MENU button** →  **1** → **[Folder Name]** → **Select the desired setting**

<b>Standard Form</b>	The folder name format is as follows: folder number + MSDCF. Example: 100MSDCF
<b>Date Form</b>	The folder name format is as follows: folder number + Y (the last digit)/MM/DD. Example: 10020405 (Folder name: 100, date: 2012/04/05)

**Note**

- The MP4 movie folder form is fixed as “folder number + ANV01.”

## Select REC Folder

When a standard form folder is selected and there are 2 or more folders, you can select the recording folder to be used to record images.

**MENU button** →  **1** → **[Select REC Folder]** → **Select the desired folder**

**Note**

- You cannot select the folder when you select the setting [Date Form].

## New Folder

You can create a folder in a memory card for recording images.

A new folder is created with a number incremented one higher than the largest number currently used, and the folder becomes the current recording folder. A folder for still images and a folder for MP4 movies are created at the same time.

**MENU button** →  **1** → **[New Folder]**

**Notes**

- When you insert a memory card that was used with other equipment into the camera and shoot images, a new folder may be automatically created.
- Up to 4,000 images can be stored in a folder. When the folder capacity is exceeded, a new folder is created automatically.

## Recover Image DB

When inconsistencies are found in the image database file, caused by processing images on computers, etc., images on the memory card will not be played back in this form. If this happens, the camera repairs the file.

**MENU button** →  **1** → **[Recover Image DB]** → **[Enter]**

### Note






- Use a sufficiently charged battery. Low battery power during repairing can cause damage to data.

## Upload Settings

Sets whether or not you use the upload function when using an Eye-Fi card (commercially available). This item appears when an Eye-Fi card is inserted in the camera.




**MENU button** →  **2** → **[Upload Settings]** → **Select the desired setting**

### The status indicators in communication

	Standby. No images are to be sent.
	Upload standby.
	Connecting.
	Uploading.
	Error.


### Notes

- The Eco Mode function does not work while the camera is uploading images.
- Before using an Eye-Fi card, set up the wireless LAN access point and forwarding destination. For details, refer to the operating manual supplied with the Eye-Fi card.
- Eye-Fi cards are sold in the U.S.A, Canada, Japan, and some countries in the EU (as of March in 2012).
- For more information, please contact the manufacturer or vendor directly.
- Eye-Fi cards can be used only in the countries/regions where they were purchased. Use Eye-Fi cards in accordance with the law of the countries/regions where you purchased the card.

- Eye-Fi cards include a wireless LAN function. Do not insert any Eye-Fi cards in the camera when it is prohibited to do so, such as on an airplane. If there is an Eye-Fi card inserted in the camera, set [Upload Settings] to [Off].  OFF is displayed on the screen when [Upload Settings] is set to [Off].
- When you use a brand-new Eye-Fi card for the first time, copy the install file of Eye-Fi manager recorded on the card to your computer before formatting the card.
- Use an Eye-Fi card after updating the firmware to the latest version. For details, refer to the manual that comes with the Eye-Fi card.
- The power save function of the camera does not work while it is uploading images.
- If  (error) is displayed, remove the memory card and reinsert it, or turn off then turn on the power again. If  appears again, the Eye-Fi card may be damaged.
- Wi-Fi network communication may be influenced by other communication devices. If the communication status is poor, move closer to the access point of the Wi-Fi network.
- For details on the file types that can be uploaded, refer to the operating instructions supplied with the Eye-Fi card.
- This product does not support the Eye-Fi “Endless Memory Mode.” Make sure that Eye-Fi cards that you insert into this product have “Endless Memory Mode” turned off.

# Resetting to the default

You can reset the main functions of the camera.

**MENU button** →  **3** → [Initialize] → **Select the desired setting**  
→ [Enter]

The items to be reset are as follows.

## Shooting functions (Reset Default/Rec mode reset)

Items	Reset to
Exposure compensation (44)	±0.0
Drive mode (46, 144)	Single Shooting
Flash Mode (42, 128)	Fill-flash (differs based on whether the built-in flash is open or not)
Autofocus Mode (112)	AF-A
AF area (113)	Wide
Object Tracking (114)	On
Smile/Face Detect. (119, 122)	Face Detection On (Regist. Faces)
Auto Port. Framing (121)	Auto
ISO (130)	AUTO
Metering Mode (125)	Multi segment
Flash Comp. (125)	±0.0
White Balance (137)	AWB (Auto white balance)
Color Temp./Color Filter (139)	5500K, Color Filter 0
Custom white balance (139)	5500K
DRO/Auto HDR (131)	D-Range Optimizer: Auto
Creative Style (135)	Standard
Picture Effect (134)	Off
Scene Selection (39, 89)	Portrait
Movie (105)	P
Cont. Priority AE Mode (41, 93)	Tele-zoom Cont. Priority AE

## Still shooting menu (Reset Default/Rec mode reset)

Items	Reset to
Image Size (48)	L:16M

Items	Reset to
Aspect Ratio (159)	3:2
Quality (159)	Fine
Panorama: Size (48)	Standard
Panorama: Direction (93)	Right
3D Pan.: Image Size (48)	Standard
3D Pan.: Direction (93)	Right
Clear Image Zoom (141)	On
Digital Zoom (104, 141)	Off
Long Exposure NR (161)	On
High ISO NR (161)	Normal
Flash control (126)	ADI flash
AF Illuminator (113)	Auto
Color Space (162)	sRGB
SteadyShot (86)	On

### Movie shooting menu (Reset Default/Rec mode reset)

Items	Reset to
File Format (105)	AVCHD
Record Setting (106)	60i 17M(FH), 50i 17M(FH)
Audio Recording (107)	On
Wind Noise Reduct. (108)	Off
SteadyShot (86)	On

### Custom menu (Reset Default/Custom reset)

Items	Reset to
Eye-Start AF (80)	Off
FINDER/LCD Setting (167)	Auto
Viewfinder Magnifi. (59)	Maximum
Red Eye Reduction (59)	Off
Release w/o Lens (162)	Disable
S. Auto Cont. Shooting (88)	Auto
S. Auto Image Extract. (88)	Auto

Items	Reset to
Grid Line (163)	Off
Auto Review (163)	2 Sec
DISP Button(Monitor) (81)	Display All Info./Graphic Display/No Disp. Info./Level
DISP Button(Finder) (81)	No Disp. Info./Graphic Display/Level
Peaking Level (117)	Off
Peaking Color (117)	White
Live View Display (83)	Setting Effect ON
Func. of AEL button (163)	AEL hold
ISO Button (164)	ISO
Preview Button (164)	Shot. Result Preview
Focus Hold Button (60)	Focus Hold
MOVIE Button (60)	Always
Lens Comp.: Shading (168)	Auto
Lens Comp.: Chro. Aber. (168)	Auto
Lens Comp.: Distortion (168)	Off
Front Curtain Shutter (165)	On
Face Priority Tracking (115)	On

### Playback menu (Reset Default)

Items	Reset to
View Mode (151)	Folder View(Still)
Slide Show – Interval (152)	3 sec
Slide Show – Repeat (152)	Off
Image Index (51)	4 Images
Specify Printing – Date Imprint (185)	Off
Volume Settings (61)	2
Playback Display (152)	Auto Rotate

### Memory Card Tool menu (Reset Default)

Items	Reset to
File Number (169)	Series
Folder Name (169)	Standard Form

**Setup menu (Reset Default)**

Items	Reset to
Menu start (62)	Top
LCD Brightness (165)	Auto
Viewfinder Bright. (166)	Auto
Eco Mode (166)	Standard
Power Save (166)	1 Min
HDMI Resolution (157)	Auto
CTRL FOR HDMI (157)	On
Upload Settings (171)	On
USB Connection (178)	Auto
Audio signals (63)	On
Mode Dial Guide (63)	On
Demo Mode (63)	Off

**Others (Reset Default)**

Items	Reset to
Recording information display (LCD screen) (47)	Display All Info.
Recording information display (Viewfinder) (47)	Level
Playback display (149)	Single-image screen (with recording information)

**Note**

- The face registered using [Face Registration] is not deleted, even if you use [Reset Default]. Select [Delete All] in [Face Registration].




# Confirming the version of the camera

Displays the version of your camera. Confirm the version when a firmware update is released.

If you mount a lens compatible with the lens version up feature, the version of the lens is indicated.

**MENU button** →  **3** → [Version]

## Note

- An update can be performed only when the battery level is  (3 remaining battery icons) or more. We recommend that you use a sufficient battery or the AC-PW10AM AC Adaptor (sold separately).

# Connecting the camera to the computer

## Setting the USB connection

Selects the method used for a USB connection when the camera is connected to a computer or a USB device with a USB cable.

**MENU button** →  **2** → **[USB Connection]** → **Select the desired setting**

<b>Auto</b>	Establishes a Mass Storage or MTP connection automatically, in accordance with a computer or other USB devices to be connected. Windows 7 computers are connected in MTP, and its unique functions are enabled to use.
<b>Mass Storage</b>	Establishes a Mass Storage connection between the camera, a computer, and other USB devices. Standard mode.
<b>MTP</b>	Establishes an MTP connection between the camera, a computer, and other USB devices. Windows 7 computers are connected in MTP, and its unique functions are enabled to use. In the case of other computers (Windows Vista/XP, Mac OS X), the AutoPlay Wizard appears, and the still images in the recording folder on the camera are imported to the computer.

### Notes

- When this item is set to [Auto], it may take some time to establish a connection.
  - If Device Stage\* is not displayed with Windows 7, set this item to [Auto].
- \* Device Stage is a menu screen used to manage connected devices, such as a camera (Function of Windows 7).

## Connecting to the computer


- 1** Insert a sufficiently charged battery pack into the camera, or connect the camera to a wall outlet (wall socket) using the AC-PW10AM AC Adaptor (sold separately).

## 2 Turn on the camera and the computer.

## 3 Check that [USB Connection] in 2 is set to [Mass Storage].

## 4 Connect the camera to your computer.

- When a USB connection is established for the first time, your computer automatically runs a program to recognize the camera. Wait for a while.

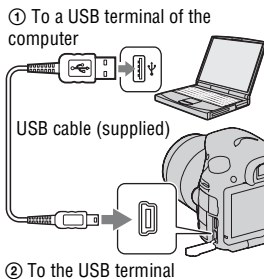

## Importing images to the computer (Windows)

“PlayMemories Home” allows you to easily import images. For details on “PlayMemories Home” functions, see the “PlayMemories Home Help Guide.”

### Importing images to the computer without using “PlayMemories Home”

When the AutoPlay Wizard appears after making a USB connection between the camera and a computer, click [Open folder to view files] → [OK] → [DCIM] or [MP\_ROOT] → copy the desired images to the computer.

**File name**

Folder	The type of file	File name
<b>DCIM folder</b>	JPEG file	DSC0□□□□.JPG
	JPEG file (Adobe RGB)	_DSC□□□□.JPG
	RAW file	DSC0□□□□.ARW
	RAW file (Adobe RGB)	_DSC□□□□.ARW
<b>MP_ROOT folder</b>	MP4 file (1440 × 1080 12M)	MAH0□□□□.MP4
	MP4 file (VGA 3M)	MAQ0□□□□.MP4

- □□□□ (file number) stands for any number within the range of 0001 to 9999.
- When [Quality] is set to [RAW & JPEG], the numerical portions of the name of a RAW data file and its corresponding JPEG file are the same.

**Notes**

- For operations such as importing AVCHD movies to the computer, use “PlayMemories Home.”
- When the camera is connected to the computer, if you operate AVCHD movies or folders from the connected computer, images may be damaged or cannot be played. Do not delete or copy AVCHD movies on the memory card from the computer. Sony is not held liable for consequences resulting from such operations via the computer.

**Importing images to the computer (Mac)**

**1 Connect the camera to your Mac computer first. Double-click the newly recognized icon on the desktop → the folder where the images you want to import are stored.**

**2 Drag and drop the image files to the hard disk icon.**

The image files are copied to the hard disk.

**3 Double-click the hard disk icon → the desired image file in the folder containing the copied files.**

The image is displayed.

## The software for Mac computers

For details on other software for Mac computers, access the following URL:



<http://www.sony.co.jp/imsoft/Mac/>

 
## Deleting the USB connection

Perform the procedures from step 1 to 2 below before:

- Disconnecting the USB cable.
- Removing the memory card.
- Turning off the camera.

### 1 Double-click the disconnect icon on the tasktray.

- For Windows 7, click , then click .



### 2 Click (Safely remove USB Mass Storage Device).

#### Notes

- Drag and drop the icon of the memory card or the drive icon to the “Trash” icon beforehand when you use a Mac computer, and the camera is disconnected from the computer.
- With Windows 7, the disconnect icon may not be displayed. In such cases, you can disconnect without following the above procedure.
- Do not disconnect the USB cable when the access lamp is lit. The data may be damaged.

# Creating a movie disc

You can create a disc from AVCHD movies recorded on the camera.

- Movies recorded with the [60p 28M(PS)]/[50p 28M(PS)], [60i 24M(FX)]/[50i 24M(FX)] or [24p 24M(FX)]/[25p 24M(FX)] setting in [Record Setting] are converted by “PlayMemories Home” in order to create an AVCHD recording disc. This conversion can take a long time. Also, you cannot create a disc with the original image quality. If you want to keep the original image quality, you must store your movies on a Blu-ray disc (page 183).

## Creating a high definition image quality (HD) disc (AVCHD recording disc)

You can create a high definition image quality (HD) AVCHD recording disc from AVCHD movies imported to a computer using the supplied software “PlayMemories Home.”

---

**1 Start up [PlayMemories Home] and click  (Create Discs).**

---

**2 Select [AVCHD (HD)] from the drop-down list used for selecting a disc.**

---

**3 Select the AVCHD movies you want to write.**

---

**4 Click [Add].**

- You can also add movies by a drag and drop operation.

---

**5 Create the disc following the instruction on the screen.**

### Notes

- Install “PlayMemories Home” beforehand.
- Still images and MP4 movie files cannot be recorded on the AVCHD recording disc.
- It may take a long time to create a disc.

## Playing back AVCHD recording disc on a computer

You can play back the discs using “PlayMemories Home.” Select the DVD drive that hold the disc and click [Player for AVCHD] on “PlayMemories Home.”

See “PlayMemories Home Help Guide” for details.

### Note

- Movies may not be played smoothly depending on the computer environment.

## Creating a Blu-ray disc

You can create a Blu-ray disc with AVCHD movies previously imported to a computer. Your computer must support the creation of Blu-ray discs. BD-R (non-rewritable) and BD-RE (rewritable) media can be used to create Blu-ray discs. You cannot add contents to either type of disc once it has been created.

To create Blu-ray discs with “PlayMemories Home,” you have to install proprietary add-on software. For details, access the following URL:

<http://support.d-imaging.sony.co.jp/BDUW/>

See “PlayMemories Home Help Guide” for details.

### Note

- When movies recorded with the [60p 28M(PS)]/[50p 28M(PS)] setting are copied to a Blu-ray disc using “PlayMemories Home,” those movies can be played back only on devices that are compatible with the AVCHD Ver 2.0 format.

## Creating a standard definition image quality (STD) disc

**1 Start up [PlayMemories Home] and click  (Create Discs).**

**2 Select [DVD-Video (STD)] from the drop-down list used for selecting a disc.**

**3 Select the AVCHD movies you want to write.**

**4 Click [Add].**

- You can also add movies by a drag and drop operation.

## 5 Create the disc following the instruction on the screen.

### Notes

- Install “PlayMemories Home” beforehand.
- MP4 movie files cannot be recorded on a disc.
- It will take a longer time to create a disc because AVCHD movies are converted to standard definition image quality (STD) movies.
- An Internet connection environment is required when creating a DVD-Video (STD) disc for the first time.

### Discs you can use with “PlayMemories Home”

You can use 12 cm discs of following type with “PlayMemories Home.”  
For Blu-ray disc, see page 183.

Disc type	Features
DVD-R/DVD+R/DVD+R DL	Unrewritable
DVD-RW/DVD+RW	Rewritable

- Always maintain your PlayStation®3 to use the latest version of the PlayStation®3 system software.
- The PlayStation®3 may not be available in some countries/regions.



# Specifying DPOF

Using the camera, you can specify the still images before you print images at a shop or with your printer. Follow the procedure below.

DPOF specifications are left with images after printing. It is recommended that you unspecify them after printing.

---

**1 MENU button** →  **1** → [Specify Printing] → [DPOF Setup] → [Multiple Img.]

---

**2 Select the image with**  /  **on the control button.**

---

**3 Check the**  **mark by pressing the center of the control button.**

- To unspecify DPOF, select the image again, then press the center of the control button.
- 

**4 Press the MENU button.**

---

**5 Select [Enter] with**  **, then press the center of the control button.**

---

## Notes

- You cannot specify DPOF on RAW data files.
- You cannot specify the number of images to be printed.

## Date Imprint

You can date images when printing them. The position of the date (inside or outside the image, character size, etc.) depends on your printer.

**MENU button** →  **1** → [Specify Printing] → [Date Imprint] → [On]

## Note

- This function may not be provided, depending on the printer.

# Cleaning the camera and a lens

## Cleaning the camera

- Do not touch the inside of the camera, such as lens contacts, or the mirror. Since dust on the mirror or around the mirror may affect the images or the performance of the camera, blow the dust away using a commercially available blower\*. For details on cleaning the image sensor, see the next page.
  - \* Do not use a spray blower. Using one may cause a malfunction.
- Clean the camera surface with a soft cloth slightly moistened with water, then wipe the surface with a dry cloth. Do not use the following as they may damage the finish or the casing.
  - Chemical products such as thinner, benzine, alcohol, disposable cloths, insect repellent, sunscreen or insecticide, etc.
  - Do not touch the camera with the above on your hand.
  - Do not leave the camera in contact with rubber or vinyl for a long time.

## Cleaning the lens

- Do not use a cleaning solution containing organic solvents, such as thinner, or benzine.
- When cleaning the lens surface, remove dust using a commercially available blower. In case of dust that sticks to the surface, wipe it off with a soft cloth or tissue paper slightly moistened with lens cleaning solution. Wipe in a spiral pattern from the center to the outside. Do not spray lens cleaning solution directly onto the lens surface.

# Cleaning the image sensor

If dust or debris enters the camera and adheres to the image sensor (the part that acts as the film), it may appear as dark spots on the photo image, depending on the shooting environment. If there is dust on the image sensor, clean the image sensor following the steps below.

## Notes


- The camera starts beeping if the battery pack becomes low during cleaning. Stop cleaning immediately and turn the camera off. The use of an AC-PW10AM AC Adaptor (sold separately) is recommended.
- The cleaning should be completed quickly.
- Do not use a spray blower because it may scatter water droplets inside the camera body.

## Cleaning the image sensor automatically using the cleaning mode of the camera


**1** Confirm that the battery is fully charged (page 22).

**2** Press the MENU button, then select **2** with **◀/▶** on the control button.

MENU button

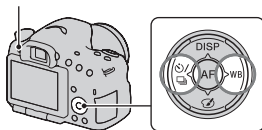

 **3** Select [Cleaning Mode] with **▲/▼**, then press the center of the control button.



---

#### 4 Select [Enter] with ▲, and press the center of the control button.

The image sensor vibrates for a short time, and eliminates dust from the sensor.

---

#### 5 Turn off the camera.

---

### Cleaning the image sensor using a blower

If another cleaning is needed after using the cleaning mode, clean the image sensor using a blower following the steps below.

---

#### 1 Perform the cleaning operation described in steps 1 to 4 of “Cleaning the image sensor automatically using the cleaning mode of the camera.”


---

#### 2 Detach the lens (page 25).

---

#### 3 Push the ▼ mark on the mirror lock lever to lift up the mirror.


- Be careful not to touch the surface of the mirror.

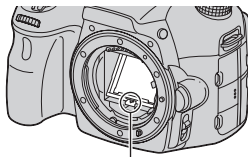

Mirror lock lever


#### 4 Use the blower to clean the image sensor surface and the surrounding area.

- Do not touch the image sensor with the tip of the blower and do not put the tip of a blower into the cavity beyond the mount.
- Hold the camera's face downward to prevent the dust from resettling in the camera. Complete the cleaning quickly.
- Also clean the back of the mirror using a blower.

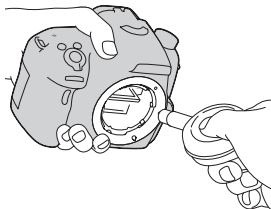

#### 5 After the cleaning is finished, lower the mirror with a finger until it clicks.

- Lower the frame of the mirror back down with a finger. Be careful not to touch the surface of the mirror.
- Lower the mirror down until it locks firmly.

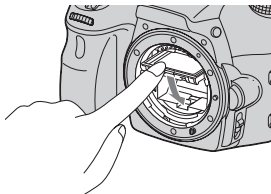

#### 6 Attach the lens and turn the camera off.

- Confirm that the mirror is locked down firmly when you attach the lens.

#### Notes

- After the cleaning is finished, confirm that the mirror is locked down firmly when you attach the lens. Otherwise, the lens may be scratched or this may be the cause of additional trouble. Also, if the mirror is not locked down firmly, the autofocus does not work during shooting.
- You cannot shoot while the mirror is lifted up.

# Troubleshooting

If you experience trouble with your camera, try the following solutions. Check the items on pages 190 to 198. Consult your Sony dealer or local authorized Sony service facility.

❶ Check the following items.

❷ Remove the battery pack, and insert the battery pack again after about 1 minute, and turn on the power.

❸ Reset the settings (page 173).

❹ Consult your Sony dealer or local authorized Sony service facility.

## Battery pack and power

### The battery pack cannot be installed.

- As you insert the battery pack, use the tip of the battery pack to push the lock lever (page 21).
- You can use an NP-FM500H battery pack only. Make sure that the battery is NP-FM500H.

---

### The remaining battery indicator is incorrect, or sufficient remaining battery indicator is displayed but the power runs out too quickly. Cannot turn on the camera.

- This phenomenon occurs when you use the camera in an extremely hot or cold location (page 201).
- The battery pack is discharged. Install a charged battery pack (page 19).
- The battery pack is dead (page 210). Replace it with a new one.
- Install the battery pack correctly (page 21).

---

### The power turns off suddenly.

- If you do not operate the camera for given period of time, the camera turns to power saving mode and nearly shuts down. To cancel the power save,

operate the camera, such as pressing the shutter button halfway down (page 166).

---

### The CHARGE lamp flashes when charging the battery pack.

- You can use an NP-FM500H battery pack only. Make sure that the battery is NP-FM500H.
- If you charge a battery pack that has not been used for a long time, the CHARGE lamp may flash.
- The CHARGE lamp flashes in 2 ways, fast (about 0.15-second intervals) and slow (about 1.5-second intervals). If it is flashing fast, remove the battery pack and reattach the same battery pack securely. If the CHARGE lamp flashes fast again, it suggests that there is something wrong with the battery pack. Slow flashing indicates that charging is suspended because the ambient temperature is outside the suitable range for charging the battery pack. Charging will resume and the CHARGE lamp will be lit when the ambient temperature returns to within the suitable temperature. Charge the battery pack under the suitable temperatures between 10°C and 30°C (50°F and 86°F).

## Shooting images

### Nothing is displayed on the LCD screen in viewfinder mode when the power is turned on.

- If you do not operate the camera for given period of time, the camera turns to power saving mode and nearly shuts down. To cancel the power save, operate the camera, such as pressing the shutter button halfway down (page 166).

---

### The image is not clear in the viewfinder.

- Adjust the diopter scale properly using the diopter-adjustment dial (page 29).

---

### No images in the viewfinder.

- [FINDER/LCD Setting] is set to [Manual]. Press the FINDER/LCD button (page 167).
- Move your eye a little closer to the viewfinder.

---

### The shutter does not release.

- You are using a memory card with a write-protect switch, and the switch is set to the LOCK position. Set the switch to the recording position.
- Check the free capacity of the memory card.
- You cannot record images while charging the built-in flash (pages 42, 128).
- In autofocus mode, the shutter cannot be released when the subject is out of focus.
- The lens is not attached properly. Attach the lens properly (page 24).
- When the camera is attached to another device, such as an astronomical telescope, set [Release w/o Lens] to [Enable] (page 162).
- The subject may require special focusing (page 110). Use the focus-lock or manual focus function (pages 111, 116).

---

### Recording takes a long time.

- The noise reduction function is turned on (page 161). This is not a malfunction.
- You are shooting in RAW mode (page 159). Since the RAW data file is large, the RAW mode shooting may take time.
- The Auto HDR is processing an image (page 131).

---

### The same image is shot several times.

- The drive mode is set to [Cont. Shooting] or [Bracket: Cont.]. Set it to [Single Shooting] (pages 46, 144).
- The exposure mode is set to Continuous Advance Priority AE Mode (pages 41, 93).
- The exposure mode is set to Superior Auto and [S. Auto Image Extract.] is set to [Off] (page 88).

---

### The image is out of focus.

- The subject is too close. Check the minimum focal distance of the lens.
- You are shooting in manual focus mode, set the focus mode switch to AF (autofocus) (page 109).
- When the focus mode switch is equipped with the lens, set it to AF.
- Ambient light is insufficient.

---

### Eye-Start AF does not work.

- Set [Eye-Start AF] to [On] (page 80).
- Press the shutter button halfway down.



---

**The flash does not work.**

- The flash mode is set to [Autoflash]. If you want to make sure the flash fires without fail, set the flash mode to [Fill-flash] (pages 42, 128).

---

**The flash takes too long to recharge.**

- The flash has been fired in succession in a short period. When the flash has been fired in succession, the recharging process may take longer than usual to avoid overheating of the camera.

---

**A picture taken with the flash is too dark.**

- If the subject is beyond the flash range (the distance that the flash can reach), the pictures will be dark because the flash light does not reach the subject. If the ISO is changed, the flash range also changes with it. Check the flash range in “Specifications.”

---

**The date and time are recorded incorrectly.**

- Set the correct date and time (page 27).
- The area selected with [Area Setting] is different from the actual area. Set up [Area Setting] again (page 27).

---

**The aperture value and/or shutter speed flashes when you press the shutter button halfway down.**

- Since the subject is too bright or too dark, it is beyond the available range of the camera. Adjust the setting again.

---

**The image is whitish (Flare).****Blurring of light appears on the image (Ghosting).**

- The picture was taken under a strong light source, and excessive light has entered the lens. Attach a lens hood.

---

**The corners of the picture are too dark.**

- If any filter or hood is used, take it off and try shooting again. Depending on the thickness of the filter and improper attachment of the hood, the filter or the hood may partially appear in the image. The optical properties of some lenses may cause the periphery of the image to appear too dark (insufficient light). You may compensate for this phenomenon with [Lens Comp.: Shading] (page 168).

---

**The eyes of the subject come out red.**

- Activate the red eye reduction function (page 59).
- Get close to the subject, and shoot the subject within the flash range using the flash. Check the flash range in “Specifications.”

---

**Dots appear and remain on the LCD screen.**

- This is not a malfunction. These dots are not recorded (page 10).

---

**The image is blurred.**

- The picture was taken in a dark location without the flash, resulting in camera shake. The use of a tripod or the flash is recommended (pages 42, 87, 128).

---

**The EV scale ◀ ▶ is flashing.**

- The subject is too bright or too dark for the metering range of the camera.

## Viewing images

**Your camera cannot play back images.**

- The folder/file name has been changed on your computer (page 178).
- When an image file has been processed by a computer or when the image file was recorded using a model other than that of your camera, playback on your camera is not guaranteed.
- Use “PlayMemories Home” to play images stored on a PC with this camera.
- The camera is in USB mode. Delete the USB connection (page 181).

## Deleting images

**Your camera cannot delete an image.**

- Cancel the protection (page 154).

---

**You have deleted an image by mistake.**

- Once you have deleted an image, you cannot restore it. We recommend that you protect images that you do not want to delete (page 154).

## Computers

### **You do not know if the OS of your computer is compatible with the camera.**

- Check “Using with your computer” (page 66).

---

### **Your computer does not recognize your camera.**

- Check that the camera is turned on.
- When the battery level is low, install the charged battery pack (page 19), or use the AC Adaptor (sold separately).
- Use the USB cable (supplied) (page 178).
- Disconnect the USB cable, and connect it again firmly.
- Disconnect all equipment other than the camera, the keyboard and the mouse from the USB jacks of your computer.
- Connect the camera directly to your computer without passing through a USB hub or other devices (page 178).

---

### **You cannot copy images.**

- Make the USB connection by properly connecting the camera with your computer (page 178).
- Follow the designated copy procedure for your OS (page 179).
- When you shoot images with a memory card formatted by a computer, you may not be able to copy the images to a computer. Shoot using a memory card formatted by your camera (page 169).

---

### **The image cannot be played back on a computer.**

- If you are using “PlayMemories Home,” refer to the “PlayMemories Home Help Guide.”
- Consult the computer or software manufacturer.

---

### **After making a USB connection, “PlayMemories Home” does not start automatically.**

- Make the USB connection after the computer is turned on (page 178).

## Memory card

### Cannot insert a memory card.

- Insertion direction of the memory card is wrong. Insert it in the correct direction (page 21).

---

### Cannot record on a memory card.

- The memory card is full. Delete unnecessary images (pages 35, 155).
- An unusable memory card is inserted (pages 23, 207).

---

### You have formatted a memory card by mistake.

- All the data on the memory card are deleted by formatting. You cannot restore it.

## Printing

### Cannot print images.

- RAW images cannot be printed. To print RAW images first, convert them to JPEG images using “Image Data Converter” on the supplied CD-ROM.

---

### The color of the image is strange.

- When you print the images recorded in Adobe RGB mode using sRGB printers that are not compatible with Adobe RGB (DCF2.0/Exif2.21), the images are printed at a lower intensity level (page 162).

---

### Images are printed with both edges cut off.

- Depending on your printer, the left, right, top, and bottom edges of the image may be cut off. Especially when you print an image shot with the aspect ratio set to [16:9], the lateral end of the image may be cut off.
- When printing images using your own printer, cancel the trimming or borderless settings of the printer. Consult the printer manufacturer as to whether the printer provides these functions or not.
- When having images printed at a digital print shop, ask the shop whether they can print the images without cutting off both edges.

---

### Cannot print images with the date.

- Using “PlayMemories Home,” you can print images with date (page 69).

- This camera does not have a feature for superimposing dates on images. However, because the images shot with the camera include information on the recording date, you can print images with the date superimposed if the printer or the software can recognize Exif information. For compatibility with Exif information, consult the manufacturer of the printer or the software.
- When you print images at a shop, images can be printed with the date if you ask them to do so.

## Others

### **The lens gets fogged.**

- Moisture condensation has occurred. Turn off the camera and leave it for about 1 hour before using it (page 201).

### **The message “Set Area/Date/Time.” appears when you turn on the camera.**

- The camera has been left unused for sometime with a low battery or no battery pack. Charge the battery pack and set the date again (pages 27, 201). If the date setting is lost every time the battery pack is charged, consult your Sony dealer or local authorized Sony service facility.

### **The number of recordable images does not decrease or decreases 2 at a time.**

- This is because the compression rate and the image size after compression change depending on the image when you shoot a JPEG image (page 159).

### **The setting is reset without the resetting operation.**

- The battery pack was removed when the power switch was set to ON. When removing the battery pack, make sure the camera is turned off and the access lamp is not lit (pages 16, 21).

### **The camera does not work properly.**

- Turn off the camera. Remove the battery pack and insert it again. If the camera is warm, remove the battery pack, and allow it to cool down before trying this corrective procedure.
- If an AC Adaptor (sold separately) is used, disconnect the power plug. Connect the power plug and turn on the camera again. If the camera does

not work after doing these solutions, consult your Sony dealer or local authorized Sony service facility.



**is indicated on the screen.**

- The SteadyShot function does not work. You can continue to shoot but the SteadyShot function will not work. Turn the camera off and on. If the SteadyShot scale continues to be indicated, consult your Sony dealer or local authorized Sony service facility.

**“--E-” is indicated on the screen.**

- Remove the memory card, and insert it again. If this procedure does not turn off the indication, format the memory card.

# Warning messages

If the following messages appear, follow the instructions below.

---

## Set Area/Date/Time.

- Set the area, date, and time. If you have not used the camera for a long time, charge the internal rechargeable battery (pages 27, 201).

---

## Power insufficient.

- You tried to perform [Cleaning Mode] when the battery level is insufficient. Charge the battery pack or use the AC Adaptor (sold separately).

---

## Unable to use memory card. Format?

- The memory card was formatted on a computer and the file format was modified. Select [Enter], then format the memory card. You can use the memory card again, however, all previous data in the memory card is erased. It may take a some time to complete the format. If the message still appears, change the memory card.

---

## Memory Card Error

- An incompatible memory card is inserted or the format has failed.

---

## Reinsert memory card.

- The inserted memory card cannot be used in your camera.
- The memory card is damaged.
- The terminal section of the memory card is dirty.

---

## Memory card locked.

- You are using a memory card with a write-protect switch, and the switch is set to the LOCK position. Set the switch to the recording position.

---

## Processing...

- When Long exposure noise reduction or High ISO noise reduction will be done for the same amount of time that the shutter was open. You cannot do any further shooting during this reduction.

---

## Unable to display.

- Images recorded with other cameras or images modified with a computer may not be able to be displayed.

---

## Check the lens attachment. If the lens is not supported, you can permit use of the lens in the custom menu.

- The lens is not attached properly, or the lens is not attached.
- When attaching the camera to an astronomical telescope or something similar, set [Release w/o Lens] to [Enable].

---

**Unable to print.**

- You tried to mark RAW images with a DPOF mark.

---

**Internal temp. high. Allow it to cool.**

- The camera has become hot because you have been shooting continuously.  
Turn the power off. Cool the camera and wait until the camera is ready to shoot again.



- Because you have been recording for a long time, the temperature inside the camera has increased to an unacceptable level. Stop recording.

---

**Recording is unavailable in this movie format.**

- Set [File Format] to [MP4].



- The number of images exceeds that for which date management in a database file by the camera is possible.



- Unable to register to the database file. Import all the images to a computer using “PlayMemories Home” and recover the memory card.

---

**Camera Error  
System Error**

- Turn the power off, remove the battery pack, then re-insert it. If the message appears frequently, consult your Sony dealer or local authorized Sony service facility.

---

**Image Database File error. Recover?**

- You cannot record or play back AVCHD movies because the Image Database File is damaged. Follow the on-screen instructions to recover data.

---

**Unable to magnify.  
Unable to rotate image.**

- Images recorded with other cameras may not be magnified or rotated.

---

**Cannot create more folders.**

- The folder with a name beginning with “999” exists on the memory card. You cannot create any folders if this is the case.



# Precautions

## Do not use/store the camera in the following places

- In an extremely hot, dry or humid place  
In places such as in a car parked in the sun, the camera body may become deformed and this may cause a malfunction.
- Storing under direct sunlight or near a heater  
The camera body may become discolored or deformed, and this may cause a malfunction.
- In a location subject to rocking vibration
- Near strong magnetic place
- In sandy or dusty places  
Be careful not to let sand or dust get into the camera. This may cause the camera to malfunction, and in some cases this malfunction cannot be repaired.
- Humid places  
These may mold on a lens.

## On storing

Be sure to attach the front lens cap or body cap when not using the camera. When attaching the body cap, remove all the dust from the cap before placing it on the camera. When you purchase the DT 18-55mm F3.5-5.6 SAM Lens Kit, purchase the Rear Lens Cap ALC-R55 also.

## On operating temperatures

Your camera is designed for use under the temperatures between 0°C and 40°C (32°F and 104°F). Shooting in extremely cold or hot places that exceed this range is not recommended.

## On moisture condensation

If the camera is brought directly from a cold to a warm location, moisture may condense inside or outside the camera. This moisture condensation may cause a malfunction of the camera.

### How to prevent moisture condensation

When bringing the camera from a cold place to a warm place, seal the camera in a plastic bag and allow it to adapt to conditions at the new location over about 1 hour.

### If moisture condensation occurs

Turn off the camera and wait about an hour for the moisture to evaporate. Note that if you attempt to shoot with moisture remaining inside the lens, you will be unable to record clear images.

## On the internal rechargeable battery

This camera has an internal rechargeable battery for maintaining the date and time and other settings regardless of whether the power is on or off, or the battery pack is charged or discharged.

This rechargeable battery is continually charged as long as you are using the camera. However, if you use the camera for only short periods, it discharges gradually, and if you do not use the camera at all for about 3 months it becomes completely discharged. In this case, be sure to charge this rechargeable battery before using the camera.

However, even if this rechargeable battery is not charged, you can still use the camera as long as you do not record the date and time. If the camera resets the settings to the defaults each time you charge the battery, the internal rechargeable battery may be dead. Consult your Sony dealer or local authorized Sony service facility.

### **Charging method of the internal rechargeable battery**

Insert a charged battery pack in the camera, or connect the camera to a wall outlet (wall socket) using the AC Adaptor (sold separately), and leave the camera for 24 hours or more with the power off.

### **On using the lenses and accessories**

It is recommended that you use Sony lenses/accessories\* designed to suit the characteristics of this camera. Using the products of other manufacturers may cause the camera not to operate to its capability, or result in accidents and malfunctions of the camera.

\* Konica Minolta products are included.

### **On memory cards**

Do not attach a label, etc. on a memory card or a card adaptor. This may cause a malfunction.

### **On recording/playback**

- When you use a memory card with this camera for the first time, it is recommended to format the card using the camera for stable performance of the memory card before shooting. Note that formatting permanently erases all data on the memory card, and is unrecoverable. Save precious data on a computer, etc.
- If you repeatedly record/delete images, fragmentation of data may occur on the memory card. Movies may not be able to be saved or recorded. In such a case, save your images to a computer or other storage location, then format the memory card (page 169).
- Before you record one-time events, make a trial recording to make sure that the camera is working correctly.
- This camera is neither dust-proof, nor splash-proof, nor water-proof.
- Do not look at the sun or a strong light through a removed lens or the viewfinder. This may cause irrecoverable damage to your eyes. Or it may cause a malfunction of your camera.

- Do not use the camera near a location that generates strong radio waves or emits radiation. The camera may not be able to record or play back properly.
- Using the camera in sandy or dusty locations may cause malfunctions.
- If moisture condensation occurs, remove it before using the camera (page 201).
- Do not shake or strike the camera. In addition to malfunctions and an inability to record images, this may render the memory card unusable, or cause image data breakdown, damage or loss.
- Clean the flash surface with a soft cloth or something similar before use. The heat of flash emission may cause dirt on the flash surface to emit smoke or to become burned.
- Keep the camera, supplied accessories, etc., out of the reach of children. A memory card, etc., may be swallowed. If such a problem occurs, consult a doctor immediately.

# To use your camera abroad — Power sources

You can use your camera and the battery charger and the AC-PW10AM AC Adaptor (sold separately) in any country or region where the power supply is within 100 V to 240 V AC, 50/60 Hz.

## Note

- Do not use an electronic transformer (travel converter), as this may cause a malfunction.

## On TV color systems

When you view images on a TV screen, the camera and TV must use the same TV color system.

### NTSC system (1080 60i)

Bahama Islands, Bolivia, Canada, Central America, Chile, Colombia, Ecuador, Jamaica, Japan, Korea, Mexico, Peru, Surinam, Taiwan, the Philippines, the U.S.A., Venezuela, etc.

### PAL system (1080 50i)

Australia, Austria, Belgium, China, Croatia, Czech Republic, Denmark, Finland, Germany, Holland, Hong Kong, Hungary, Indonesia, Italy, Kuwait, Malaysia, New Zealand, Norway, Poland, Portugal, Rumania, Singapore, Slovak Republic, Spain, Sweden, Switzerland, Thailand,

Turkey, United Kingdom, Viet Nam, etc.

### PAL-M system (1080 50i)

Brazil

### PAL-N system (1080 50i)

Argentina, Paraguay, Uruguay

### SECAM system (1080 50i)

Bulgaria, France, Greece, Guiana, Iran, Iraq, Monaco, Russia, Ukraine, etc.

# AVCHD format

The AVCHD format is a high definition digital video camera format used to record a high definition (HD) signal of either the 1080i specification\*<sup>1</sup> or the 720p specification\*<sup>2</sup> using efficient data compression coding technology. The MPEG-4 AVC/H.264 format is adopted to compress video data, and the Dolby Digital or Linear PCM system is used to compress audio data.

The MPEG-4 AVC/H.264 format is capable of compressing images at higher efficiency than that of the conventional image compressing format. The MPEG-4 AVC/H.264 format enables a high definition video signal shot on a digital video camera recorder to be recorded on 8 cm DVD discs, hard disk drive, flash memory, memory card, etc.

## Recording and playback on your camera

Based on the AVCHD format, your camera records with the high definition image quality (HD) mentioned below.

Video signal\*<sup>3</sup>:

### 1080 60i-compatible device

MPEG-4 AVC/H.264 1920 × 1080/60i, 1920 × 1080/60p, 1920 × 1080/24p

### 1080 50i-compatible device

MPEG-4 AVC/H.264 1920 ×

1080/50i, 1920 × 1080/50p, 1920 × 1080/25p

Audio signal: Dolby Digital 2ch  
Recording media: Memory card

#### \*1 1080i specification

A high definition specification which utilizes 1,080 effective scanning lines and the interlace system.

#### \*2 720p specification

A high definition specification which utilizes 720 effective scanning lines and the progressive system.

\*3 Data recorded in AVCHD format other than the above mentioned cannot be played on your camera.

# 3D-shootings

## Notes on recording

- [3D Sweep Panorama] is not suitable when shooting:
  - Subjects are moving.
  - Subjects are too close to the camera.
  - Subjects with a repeating pattern such as tiles, and subjects with little contrast such as sky, sandy beach, or lawn.
- [3D Sweep Panorama] recording may be discontinued in the following situations:
  - You pan or tilt the camera too fast or too slow.
  - There is too much camera shake.
- If you cannot pan or tilt the camera across the entire subject within the given time, a black area occurs in the composed image. If this happens, move the camera fast to record a full panoramic image.
- Since several images are stitched together, the stitched part will not be recorded smoothly.
- Under low light conditions, images may be blurred.
- Under lights that flicker such as fluorescent light, images may not be recorded properly.
- When the whole angle of 3D panoramic shooting and the angle in which you fixed the focus and exposure with AE/AF lock are extremely different in brightness, color and focus, the shooting will not be successful. If this happens,

change the lock angle and shoot again.

- The available shooting direction is horizontal only.
- For details on the procedure used for shooting 3D-images, see page 40.

## Note on playback of 3D-images

When you play back 3D-images on the LCD screen of the camera or on a non-3D-compatible TV, the images are played back without the 3D effect.

## Notes on 3D-image files

- A JPEG file and an MPO are combined to create a 3D-image. If you erase one of these files from the computer, the 3D-image may not be played back properly.
- For details on the procedure used for viewing 3D-images, see pages 152 and 157.

# Memory card

## Notes on using memory cards

- Do not strike, bend or drop the memory card.
- Do not use or store the memory card under the following conditions:
  - High temperature locations such as the hot interior of a car parked in direct sunlight.
  - Locations exposed to direct sunlight.
  - Humid locations or locations with corrosive substances present.
- The memory card may be hot just after it has been used for a long time. Be careful when you handle it.
- When the access lamp is lit, do not remove the memory card or the battery pack, or turn off the power. The data may be corrupted.
- Data may be damaged if you place the memory card near strongly-magnetized material or use the memory card in a static-prone or electrically noisy environment.
- We recommend backing up important data, such as to a hard disk of a computer.
- When you carry or store the memory card, put it in the case supplied with it.
- Do not expose the memory card to water.

- Do not touch the terminal section of the memory card with your hand or a metal object.
- When the write-protect switch of a memory card is set to the LOCK position, you cannot perform operations, such as recording or deleting images.
- The memory cards formatted with a computer are not guaranteed to operate with this camera. Be sure to format the memory cards using the camera.
- Data read/write speeds differ depending on the combination of the memory cards and the equipment used.
- Do not press down hard when you write down on the memo area.
- Do not attach a label on the memory cards themselves.
- Do not disassemble or modify the memory cards.
- Do not leave the memory cards within the reach of small children. They might accidentally swallow it.

## Notes on the “Memory Stick” media used with the camera

The types of “Memory Stick” media that can be used with this camera are as follows. However, proper operation cannot be guaranteed for all “Memory Stick PRO Duo” media functions.

### “Memory Stick PRO Duo” media\*1\*2\*3

### “Memory Stick PRO-HG Duo” media\*1\*2

Available with your camera



### “Memory Stick Duo” media

Unavailable with your camera



### “Memory Stick” media and “Memory Stick PRO” media

Unavailable with your camera



\*1 This is equipped with MagicGate function. MagicGate is copyright protection technology that uses encryption technology. Data recording/playback that requires MagicGate functions cannot be performed with this camera.

\*2 Supports high-speed data transfer using a parallel interface.

\*3 When using “Memory Stick PRO Duo” media to record movies, only those marked with Mark2 can be used.

## Notes on using “Memory Stick Micro” media (sold separately)

- This product is compatible with “Memory Stick Micro” media (“M2”). “M2” is an abbreviation for “Memory Stick Micro” media.
- To use a “Memory Stick Micro” media with the camera, be sure to insert the “Memory Stick Micro” media into an “M2” Adaptor as large as of Duo size. If you insert a “Memory Stick Micro” media into the camera without an “M2” Adaptor as large as of Duo size, you might not be able to remove it from the camera.
- Do not leave the “Memory Stick Micro” media within the reach of small children. They might accidentally swallow it.



# Battery pack/ Battery charger

- The charging time differs depending on the remaining capacity of the battery pack or charging conditions.
- We recommend charging the battery pack in an ambient temperature of between 10 to 30°C (50 to 86°F). You may not be able to efficiently charge the battery pack outside of this temperature range.
- Connect the battery charger to the nearest wall outlet (wall socket).
- Do not try to charge the battery pack again right after it has been charged, or when it has not been used after being charged. Doing so will affect the performance of the battery pack.
- Do not charge any battery pack other than the “InfoLITHIUM” M series battery pack in the battery charger (supplied) with your camera. Batteries other than the specified kind may leak, overheat, or explode if you attempt to charge them, posing a risk of injury from electrocution and burns.
- When the CHARGE lamp flashes, this may indicate a battery error or that a battery pack other than the specified type has been installed. Check that the battery pack is the specified type. If the battery pack is the specified type, remove the battery pack, replace it with a new

one or another one and check if the battery charger operates correctly. If the battery charger operates correctly, a battery error may have occurred.

- If the battery charger is dirty, charging may not be performed successfully. Clean the battery charger with dry cloth, etc.

## Notes on using the battery pack

- Use only an NP-FM500H battery pack. Note that the NP-FM55H, NP-FM50 and NP-FM30 cannot be used.
- The displayed level may not be correct under certain circumstances.
- Do not expose the battery pack to water. The battery pack is not water-resistant.
- Do not leave the battery pack in extremely hot places, such as in a car or under direct sunlight.

## Effective use of the battery pack

- Battery performance decreases in low temperature surroundings. So, the time that the battery pack can be used is shorter in cold places and the speed of continuous shooting slows down. We recommend that you put the battery pack in a pocket close to your body to warm it up, and insert it in your camera immediately before you start shooting.
- The battery pack will run out quickly if you use the flash

frequently, use continuous shooting often, turn the camera on and off frequently, or set the LCD screen brighter.

## **Battery life**

- The battery life is limited. Battery capacity decreases little by little as you use it more and more, and as time passes. If the battery operating time seems shortened considerably, a probable cause is that the battery pack has reached the end of its life. Buy a new battery pack.
- The battery life varies according to how it is stored and the operating conditions and environment in which each battery pack is used.

## **How to store the battery pack**

If the battery pack is not to be used for a long time, charge it and then fully use it up once a year on your camera before storing the battery pack in a dry, cool place to prolong the battery life.

# The License

## Notes on the License

“C Library”, “zlib”, and “libjpeg” software are provided in the camera. We provide this software based on license agreements with their owners of copyright. Based on requests by the owners of copyright of these software applications, we have an obligation to inform you of the following. Please read the following sections.

Read “license3.pdf” in the “License” folder on the CD-ROM. You will find licenses (in English) of “C Library”, “zlib”, and “libjpeg” software.

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO

- (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD (“AVC VIDEO”) AND/OR
- (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO.

NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE.

ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C.

SEE

[HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

## On GNU GPL/LGPL applied software

The software that is eligible for the following GNU General Public License (hereinafter referred to as “GPL”) or GNU Lesser General Public License (hereinafter referred to as “LGPL”) are included in the camera.

This informs you that you have a right to have access to, modify, and redistribute source code for these software programs under the conditions of the supplied GPL/LGPL.

Source code is provided on the web. Use the following URL to download it.

<http://www.sony.net/Products/Linux/>  
We would prefer you do not contact us about the contents of source code.

Read “license2.pdf” in the “License” folder on the CD-ROM. You will find licenses (in English) of “GPL”, and “LGPL” software.

To view the PDF, Adobe Reader is needed. If it is not installed on your computer, you can download it from the Adobe Systems web page:  
<http://www.adobe.com/>

# Index

## Numerics

3D .....40, 92, 206

## A

Adobe RGB .....162

AE Lock.....124

AEL button .....163

AF area .....113

AF illuminator .....113

Ambient light.....147

Anti-dust function.....187

Aperture .....95

Aperture Priority.....95

Area Setting .....28

Aspect ratio.....159

Audio signals .....63

Auto HDR.....132

Auto Port. Framing.....121

Auto review .....163

Autoflash .....42, 128

Autofocus .....109

Autofocus mode.....112

AVCHD.....71, 105, 107, 205

## B

Battery pack.....19, 21, 209

Bracket.....145

“BRAVIA” Sync .....157

BULB shooting.....100

## C

Center weighted ..... 125

Charging battery pack..... 19

Cleaning ..... 186

Cleaning mode ..... 187

Clear Image Zoom ..... 141

Color filter ..... 139

Color Space..... 162

Color temperature ..... 139

Compression ratio ..... 159

Computer ..... 66, 178

Continuous Advance Priority AE  
..... 41, 93

Continuous AF..... 112

Continuous bracket ..... 145

Continuous shooting ..... 144

Contrast..... 135

Control button ..... 53

Control dial ..... 95, 97, 99

Creative Style..... 135

CTRL FOR HDMI..... 157

Custom white balance..... 139

## D

Date imprint ..... 185

Date/Time setup..... 27

DC IN terminal ..... 16

Default setting..... 173

Delete ..... 35, 155

Digital level gauge ..... 83

- Digital Zoom ..... 104, 141
- Diopter-adjustment ..... 29
- Disc creation ..... 71, 182
- DISP ..... 47, 149
- DPOF Setup ..... 185
- D-Range Optimizer ..... 131
- Drive mode ..... 46, 144
- E**
- Eco Mode ..... 166
- Electronic Front Curtain Shutter  
..... 165
- Enlarged image ..... 50
- EV scale ..... 44, 100, 147
- Exposure compensation ..... 44
- Eyecup ..... 80
- Eye-Fi ..... 171
- Eyepiece sensor ..... 14, 80
- Eye-Start AF ..... 59
- F**
- Face Detection ..... 119
- Face Priority Tracking ..... 115
- Face Registration ..... 120
- File Number ..... 169
- Fill-flash ..... 42, 128
- FINDER/LCD Setting ..... 167
- Flash bracket ..... 145
- Flash compensation ..... 125
- Flash control ..... 126
- Flash mode ..... 42, 78, 128
- Flash Off ..... 31, 42, 88, 128
- Fn button ..... 53, 55
- Focus ..... 109
- Focus Hold Button ..... 60
- Focus indicator ..... 110
- Focus Magnifier ..... 117
- Focus mode ..... 112
- Focus-lock ..... 111
- Folder Name ..... 169
- Format ..... 169
- Func. of AEL button ..... 163
- G**
- Graphic Display ..... 47
- Grid Line ..... 163
- H**
- Hand-held Twilight ..... 39, 89
- HDMI Resolution ..... 157
- High ISO NR ..... 161
- High-speed sync ..... 128
- Histogram ..... 82
- I**
- Image Data Converter ..... 69
- Image Index ..... 51
- Image quality ..... 159
- Image sensor ..... 111, 187
- Image size ..... 48
- In-Camera Guide ..... 64
- Initialize ..... 173
- Intelligent Auto ..... 31, 88
- ISO Button ..... 164

- ISO sensitivity .....130
- J**
- JPEG .....159
- L**
- Landscape .....39, 89
- Language .....63
- LCD brightness.....165
- LCD screen.....36, 74, 84, 149
- Lens .....18, 24
- Lens Compensation .....168
- Live View Display.....83
- Long exp.NR .....161
- M**
- Macro.....39, 89
- Manual Exposure.....99
- Manual focus .....116
- Memory card .....21, 207
- Menu.....57
- Metering mode.....125
- Moisture condensation.....201
- Movie Audio Recording .....107
- MOVIE Button .....60
- Movie File Format.....105
- Multi frame noise reduction .....130
- Multi segment .....125
- N**
- New Folder .....170
- Night Portrait.....39, 89
- Night Scene..... 39, 89
- Noise reduction ..... 130, 161
- O**
- Object Tracking ..... 114
- P**
- Peaking ..... 117
- Picture Effect ..... 134
- PlaybackDisplay ..... 152
- Playing back panoramic images  
..... 153
- PlayMemories Home ..... 69
- Portrait ..... 39, 89
- Power Save ..... 166
- Preview ..... 97
- Preview Button ..... 164
- Print..... 185
- Program Auto..... 94
- Protect ..... 154
- Q**
- Quality ..... 159
- R**
- RAW ..... 159
- Rear sync. .... 42, 128
- Record Setting ..... 106
- Recording information display  
..... 47, 149
- Recording movies ..... 33, 103
- Recover Image DB ..... 171
- Red Eye Reduction ..... 59

- Reducing camera shake ..... 86
- Release w/o Lens ..... 162
- Remote Commander ..... 16, 148
- Reset..... 173
- Rotate ..... 151
- S**
- Saturation ..... 135
- Scene Selection ..... 39, 89
- Select REC Folder ..... 170
- Self-timer ..... 145
- Set the clock..... 27
- Sharpness ..... 135
- Shooting ..... 31
- Shooting Tip ..... 64
- Shoulder strap ..... 16
- Shutter Priority..... 97
- Shutter speed..... 97
- Single Bracket..... 145
- Single-shot AF ..... 112
- Slide show ..... 152
- Slow sync..... 42, 128
- Smart Zoom ..... 141
- Smile Shutter..... 122
- Software ..... 68
- Sports Action ..... 39, 89
- Spot ..... 125
- SteadyShot function ..... 86
- Sunset..... 39, 89
- Superior Auto..... 38, 88
- Superior Auto Cont. Shooting ... 88
- Superior Auto Image Extract. .... 88
- Sweep Panorama ..... 40, 91
- T**
- Tele-zoom Continuous Priority AE  
..... 41, 93
- U**
- USB connection ..... 178
- V**
- Version ..... 177
- View Mode..... 151
- Viewfinder ..... 166
- Viewfinder Magnifi..... 59
- Viewing image ..... 34, 151
- Viewing images on a TV screen  
..... 52, 157
- Volume Settings..... 61
- W**
- White balance..... 137
- White balance bracket..... 147
- Wind Noise Reduc. .... 108
- Wireless flash..... 128
- Wireless Remote Commander  
..... 148
- Z**
- Zoom ..... 31, 141

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>