

Mobile Broadband ExpressCard EC400 HSPA/UMTS/EDGE

Quick Start Guide



INTRODUCTION

Thank you for choosing a Sony Ericsson EC400/EC400g Mobile Broadband ExpressCard. The Wireless Manager application is automatically installed when you plug in the EC400 to your computer. You can connect using HSPA, UMTS, EDGE and GPRS; you can also send and receive SMS messages. The EC400g provides GPS capability.

Note: Your EC400 does not support GSM or UMTS voice calls.

BEFORE YOU BEGIN

Wireless Manager works with the following versions of the Windows® operating system:

- Windows 2000 Service Pack 4 (SP4)
- Windows XP Service Pack 2 (SP2); 32-bit (x86) and 64-bit (x64) processors
- Windows Vista™; 32-bit (x86) and 64-bit (x64) processors

Your PC must meet or exceed the minimum system requirements for your version of Windows.




In addition, you will need:

- an ExpressCard slot
- 110 MB of available disk space

Your subscription must support Internet access over GPRS/EDGE/UMTS/HSPA.

INSTALLING YOUR EC400 AND WIRELESS MANAGER 5

1. Insert your SIM card into the SIM slot on your EC400. Make sure the gold contacts on the SIM card are facing towards the EC400 and the angled corner (A) of the SIM card is positioned as shown in Figures 1 and 2.

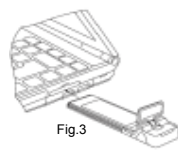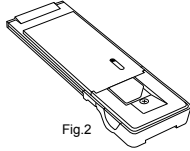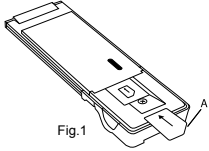

2. Fully insert your EC400 into the ExpressCard slot on your laptop and put the antenna in the up position as shown in Figure 3.

3. After a few seconds, the Sony Ericsson EC400 dialog box opens. Select **Install Wireless Manager**.

Note: If the Sony Ericsson EC400 dialog box fails to appear, open Windows Explorer, navigate to My Computer, find the disk drive called Sony Ericsson EC400 and double-click Setup.exe in the INSTALL folder.

4. The software installation procedure starts. Follow the on-screen instructions.

Important: The installation process might pause for several minutes. During this time the drivers are saved to your hard drive. DO NOT cancel.

Note: Wireless Manager is installed in the same language as your Windows operating system. If Wireless Manager does not support your language, English is installed.

5. When installation is complete, click **Finish**.
6. Eject, wait 10 seconds and reinsert the EC400.
7. Once you receive the Hardware Ready message, your EC400 and Wireless Manager are now installed and ready for use.

STARTING WIRELESS MANAGER

1. Select **Start → All Programs → Sony Ericsson → Wireless Manager 5 → Wireless Manager 5**.
2. Wireless Manager opens. If requested, enter your SIM card PIN, and then click **OK**.
3. Click the **Enable** button to turn on the radio transmitter. After a short delay your signal strength and the name of your network operator are displayed in the Status window.



CREATING A CONNECTION PROFILE

Wireless Manager should identify your network operator from the information in your SIM card and automatically configure your Internet connection. The **Connect** button will be ready for you to click and make a connection.


If you see a 'No Connection Profile' message or if you wish to define your connection manually:

1. From the Wireless Manager window, select **View → Settings** and click on **Profiles**.
2. Un-check the **Let Wireless Manager Choose the Connection Profile** check box and click the **New** button.
3. Enter the necessary information and click **OK**. Press F1 if you need help.






USING A CONNECTION

1. Start Wireless Manager.
2. Click the **Connect** button or right-click the status icon  and select **Connect**.
3. To end the connection, click **Disconnect** or right-click the status icon  and select **Disconnect**.

WIRELESS MANAGER STATUS ICON


The Wireless Manager status icon  is displayed in the Windows notification area located in the lower right-hand corner of the screen, by the clock.

The icon displays the status of your EC400, typically the signal strength on a scale of zero to five bars and the type of network available. The most common states are:



 
 
-  The EC400 has mobile network service of type **HSPA**, **UMTS**, **EDGE** or **GPRS**.
-  The EC400 is searching for a network.
-  Radio is disabled. Right-click and select **Enable Radio** to turn it on.
-  Wireless Manager is waiting for your EC400 to be inserted.
-  Wireless Manager is waiting for you to enter your SIM PIN code.

DISABLING THE RADIO AND EXITING WIRELESS MANAGER

To disable the radio, right-click  or select **Radio → Disable Radio**.

To exit Wireless Manager, select **Radio → Exit** or right-click the status icon  and select **Exit**.

FURTHER WIRELESS MANAGER AND EC400 FEATURES

You can also use Wireless Manager to view and change settings , work with the SIM phone book , send and receive SMS messages  and access PlayNow™ . Press F1 or click Help for detailed information. Select **View → GPS** to access the EC400g GPS functions.

Status LEDs

LED	Color	Flash Rate	Description
Mobile	Red ●	Fast	Searching for a mobile network
Service connected	Green ●	Medium	Registered to GPRS or EDGE service, not
	Green ●	Slow	Connected - GPRS or EDGE service
	Blue ●	Medium	Registered to UMTS or HSPA service, not connected
	Blue ●	Slow	Connected - UMTS or HSPA service
GPS	Yellow ●	Fast	Searching, position not fixed
	Yellow ●	Slow	Position fixed
	Off		Off

ADDITIONAL RESOURCES

When you install Wireless Manager, the *EC400 User Guide* is automatically saved to your PC. Click **Start → All Programs → Sony Ericsson → Wireless Manager 5** to select the document. The latest information, updates and a printable *Wireless Manager User Guide* are available from the Sony Ericsson Web site: www.sonyericsson.com/support

SERVICE AND SUPPORT

Purchasing an EC400 gives you access to a number of exclusive advantages such as global and local web site support, a global network of call centers, and an extensive global network of Sony Ericsson service partners.

The terms and conditions of your Sony Ericsson warranty are listed in the User Guide and also available on the web at www.sonyericsson.com/support. Save your original proof of purchase, you will need it for warranty repair claims.

In the unlikely event your product needs service, please return it to the dealer from whom it was purchased or one of our service partners. For more information, go to www.sonyericsson.com/support or contact our call center. The phone numbers and e-mail addresses are listed on the back page of this guide. If your country/region is not represented on the list, please contact your local dealer.

The caller will be charged according to national rates, including local taxes, unless the phone number is a toll-free number.

TRADEMARKS AND NOTICES

© Sony Ericsson Mobile Communications AB, 2008. All rights reserved.

Publication number: EN/1205-1916

This document is published by Sony Ericsson Mobile Communications AB, Sweden, without any warranty. The information in this document may change without notice due to typographical errors, inaccurate information, or improvements to programs and/or equipment. Such changes will be incorporated into new editions of this document by Sony Ericsson Mobile Communications AB. Sony Ericsson is the trademark or registered trademark of Sony Ericsson Mobile Communications AB. Windows 2000, XP and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

All other product or service names mentioned in this guide are trademarks of their respective companies. The information contained in this document was correct at the time of printing.

CONTACT SONY ERICSSON

Argentina	800-333-7427 questions.AR@support.sonyericsson.com	Lithuania	8 700 55030 questions.LT@support.sonyericsson.com
Aruba	888-821-8408	Malaysia	1-800-889900 questions.MY@support.sonyericsson.com
Australia	1-300 650 050 questions.AU@support.sonyericsson.com	Mexico	01 800 000 4722 questions.MX@support.sonyericsson.com
Austria	0810 200245 questions.AT@support.sonyericsson.com	Netherlands	0900 899 8318 questions.NL@support.sonyericsson.com
Barbados	1-888-821-8408	New Zealand	0800-100150 questions.NZ@support.sonyericsson.com
Belgium	02-7451611 questions.BE@support.sonyericsson.com	Nicaragua	1 800 0174 - 800 853 3458 1 800 0164 - 800 853 3458 (Spanish)
Bolivia	800 101 110 - 800 853 3458 (English) 800 101 111 - 800 853 3458 (Spanish)	Norway	815 00 840 questions.NO@support.sonyericsson.com
Brazil	4001-0444 questions.BR@support.sonyericsson.com	Pakistan	111 22 55 73 (92-21) 111 22 55 73 (Outside Karachi) questions.PK@support.sonyericsson.com
Canada	1-866-766-9374 questions.CA@support.sonyericsson.com	Panama	001-888-821-8408
Cayman Islands	1-888-821-8408	Paraguay	800 853 3458 008 11 800 - 800 853 3458 (Asuncion City)
Central Africa	+27 112589023 questions.CF@support.sonyericsson.com	Peru	0 800 70 088 - 800 853 3458 0 800 50 288 - 800 853 3458 (English) 0 800 5 0000 - 800 853 3458 (Spanish)
Chile	123-0020-0656 questions.CL@support.sonyericsson.com	Philippines	+63 (02) 7891860 questions.PH@support.sonyericsson.com
China	4008100000 questions.CN@support.sonyericsson.com	Poland	0 (prefix) 22 6916200 questions.PL@support.sonyericsson.com
Colombia	18009122135 questions.CO@support.sonyericsson.com	Portugal	808 204 466 questions.PT@support.sonyericsson.com
Costa Rica	0-800-011-0400 1-800-821-8408	Romania	(+4021) 401 0401 questions.RO@support.sonyericsson.com
Croatia	062 000 000 questions.HR@support.sonyericsson.com	Russia	8(495) 787 0986 questions.RU@support.sonyericsson.com
Czech Republic	844 550 055 questions.CZ@support.sonyericsson.com	Singapore	67440733 questions.SG@support.sonyericsson.com
Denmark	33 31 28 28 questions.DK@support.sonyericsson.com	Slovakia	02-5443 6443 questions.SK@support.sonyericsson.com
Dominican Republic	1-888-821-8408	South Africa	0861 632222 questions.ZA@support.sonyericsson.com
Ecuador	1 999 119 - 800 853 3458 1 800 225 528 - 800 853 3458 1 800 999 119 - 800 853 3458 (Spanish)	Spain	902 180 576 questions.ES@support.sonyericsson.com
El Salvador	155 0018001785 - 800 853 3458	St. Vincent and the Grenadines	1888-821-8408
Estonia	372 (0)6 032 032	Suriname	156
Finland	09-299 2000 questions.FI@support.sonyericsson.com	Sweden	013-24 45 00 questions.SE@support.sonyericsson.com
France	0 825 383 383 questions.FR@support.sonyericsson.com	Switzerland	0848 824 040 questions.CH@support.sonyericsson.com
Germany	0180 534 2020 questions.DE@support.sonyericsson.com	Taiwan	02-26625511 questions.TW@support.sonyericsson.com
Greece	801-11-810-810 210-89 91 919 (from mobile phone) questions.GR@support.sonyericsson.com	Thailand	02-2483030 questions.TH@support.sonyericsson.com
Guatemala	1-800-999-4030	Trinidad and Tobago	1888-821-8408
Haiti	001-800-0-123	Turkey	0212 473 77 77 questions.TR@support.sonyericsson.com
Honduras	001 800 0 123 - 800 853 3458	Ukraine	(+380) 44 590 1515 questions.UA@support.sonyericsson.com
Hong Kong	8203 8863 questions.HK@support.sonyericsson.com	United Arab Emirates	43 919880 questions.AE@support.sonyericsson.com
Hungary	+36 1 880 47 47 questions.HU@support.sonyericsson.com	United Kingdom	08705 23 7237 questions.GB@support.sonyericsson.com
India	1800 11 1800 (toll free number) 39011111 (from mobile phone) questions.IN@support.sonyericsson.com	United States	1-866-766-9374 questions.US@support.sonyericsson.com
Indonesia	021-2701388 questions.ID@support.sonyericsson.com	Uruguay	000 410 - 800 853 3458
Ireland	1850 545 888 questions.IE@support.sonyericsson.com	Venezuela	0-800-100-2250 questions.VE@support.sonyericsson.com
Italy	06 48895206 questions.IT@support.sonyericsson.com	Vietnam	111 2255 73 questions.VN@support.sonyericsson.com
Jamaica	1-888-821-8408		
Latvia	67 21 43 01		

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>