

SHARP

MICRO COMPONENT SYSTEM

MODEL

XL-MP2H

OPERATION MANUAL

COMPACT
disc
DIGITAL AUDIO



4-MODE
PRESET EQUALIZER




SAVING ENERGY
STAND-BY POWER
CONSUMPTION 0.6w

MP3

CD-R/RW
Playable

Thank you for purchasing this SHARP product.
To obtain the best performance from this product, please read this manual carefully. It will guide you in operating your SHARP product.

XL-MP2H Micro Component System consisting of XL-MP2H (main unit) and CP-MP2H (speaker system).

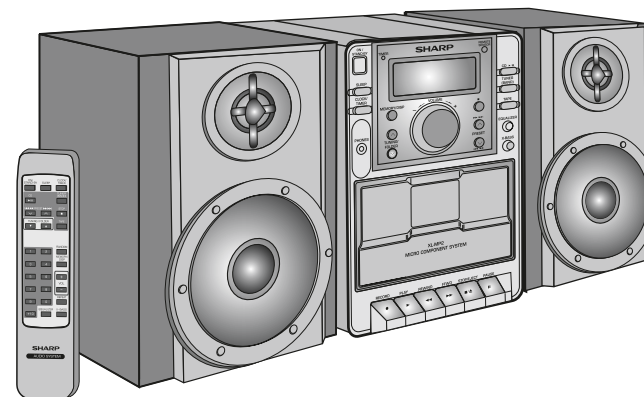

04/12/15 XL-MP2H_FRONT.fm

Special notes

WARNINGS

- When the ON/STAND-BY button is set at STAND-BY position, mains voltage is still present inside the unit. When the ON/STAND-BY button is set at STAND-BY position, the unit may be brought into operation by the timer mode or remote control.
- This unit contains no user serviceable parts. Never remove covers unless qualified to do so. This unit contains dangerous voltages, always remove mains plug from the socket before any service operation and when not in use for a long period.
- To prevent fire or shock hazard, do not expose this appliance to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.

Note for users in Australia:

Copyright may exist in material you wish to record. Copying or broadcasting such material without permission of the relevant licensees or owners of the copyright is prohibited by law. SHARP is not in a position to authorise the copying or broadcasting of copyright materials and nothing in this OPERATION MANUAL should be implied as giving that authority.

For other countries:

Audio-visual material may consist of copyrighted works which must not be recorded without the authority of the owner of the copyright. Please refer to the relevant laws in your country.

CAUTION

- This product is classified as a CLASS 1 LASER product.
- Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.


Laser Diode Properties

Material: GaAlAs

Wavelength: 790 nm

Emission Duration: continuous

Laser Output: max. 0.6 mW

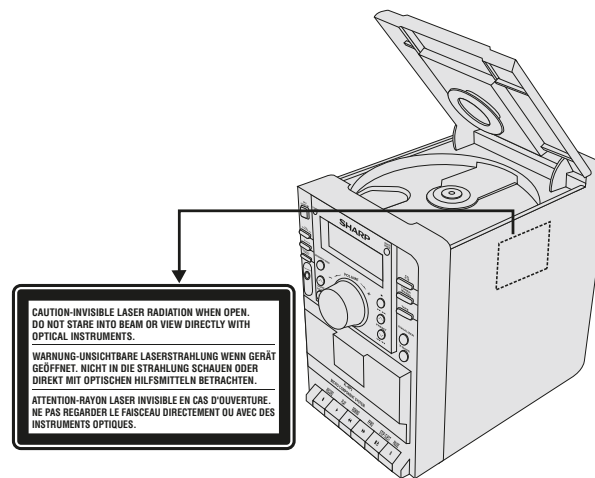

CAUTION-INVISIBLE LASER RADIATION WHEN OPEN.
DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH
OPTICAL INSTRUMENTS.

WARNUNG-UNSICHTBARE LASERSTRAHLUNG WENN GERÄT
GEÖFFNET. NICHT IN DIE STRAHLUNG SCHAUEN ODER
DIREKT MIT OPTISCHEN HILFSMITTELN BETRACHTEN.


ATTENTION-RAYON LASER INVISIBLE EN CAS D'OUVERTURE.
NE PAS REGARDER LE FAISCEAU DIRECTEMENT OU AVEC DES
INSTRUMENTS OPTIQUES.

Special Note

Supply of this product does not convey a license nor imply any right to distribute content created with this product in revenue-generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), revenue-generating streaming applications (via Internet, intranets and/or other networks), other revenue-generating content distribution systems (pay-audio or audio-on-demand applications and the like) or on revenue-generating physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like). An independent license for such use is required. For details, please visit <http://mp3licensing.com>. MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

Accessories

Please confirm that the following accessories are included.

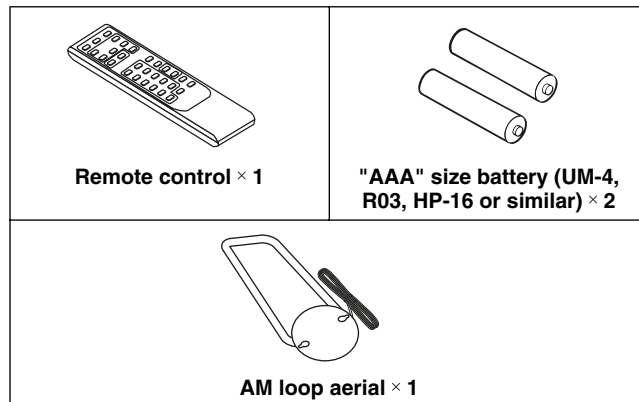

Note:

Only the above accessories are included.

Contents


XL-MP2H

	Page
■ General Information	
Precautions	4
Controls and indicators	5 - 7
■ Preparation for Use	
System connections	8 - 9
Remote control	10
■ Basic Operation	
General control	11
Setting the clock	12
■ CD or MP3/WMA disc Playback	
Listening to a CD or MP3/WMA disc	13 - 14
Advanced CD or MP3/WMA disc playback	15 - 18
MP3/WMA folder mode (only for MP3/WMA files)	19 - 20
■ Radio	
Listening to the radio	21
Listening to the memorised station	22
■ Tape Playback	
Listening to a cassette tape	22 - 23
■ Tape Recording	
Recording on a cassette tape	24 - 25
■ Advanced Features	
Timer and sleep operation	26 - 28
Enhancing your system	29
■ References	
Troubleshooting chart	29 - 30
Maintenance	31
Specifications	32

Precautions

■ General

- Please ensure that the equipment is positioned in a well ventilated area and that there is at least 10 cm (4") of free space along the sides and back. There must also be a minimum of 10 cm (4") of free space on the top of the unit.

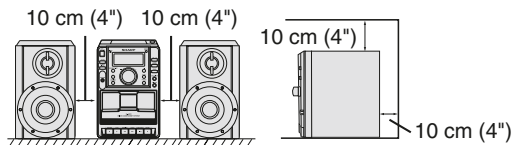

- Use the unit on a firm, level surface free from vibration.
- Keep the unit away from direct sunlight, strong magnetic fields, excessive dust, humidity and electronic/electrical equipment (home computers, facsimiles, etc.) which generate electrical noise.
- Do not place anything on top of the unit.
- Do not expose the unit to moisture, to temperatures higher than 60°C (140°F) or to extremely low temperatures.
- If your system does not work properly, disconnect the AC power lead from the wall socket. Plug the AC power lead back in, and then turn on your system.
- In case of an electrical storm, unplug the unit for safety.
- Hold the AC power plug by the head when removing it from the wall socket, as pulling the lead can damage internal wires.
- The AC power plug is used as disconnect device and shall always remain readily operable.
- **Do not remove the outer cover, as this may result in electric shock. Refer internal service to your local SHARP service facility.**
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The apparatus is designed for use in moderate climate.
- This unit should only be used within the range of 5°C - 35°C (41°F - 95°F).

Warnings:

- The voltage used must be the same as that specified on this unit. Using this product with a higher voltage other than that which is specified is dangerous and may result in a fire or other type of accident causing damage. SHARP will not be held responsible for any damage resulting from use of this unit with a voltage other than that which is specified.
- **CD players use a laser pickup which can damage the eyes if viewed directly. Do not look at the pickup, and do not touch the pickup directly.**


■ Volume control

The sound level at a given volume setting depends on speaker efficiency, location, and various other factors. It is advisable to avoid exposure to high volume levels. Do not turn the volume on to full at switch on and listen to music at moderate levels.

■ Care of compact discs


Compact discs are fairly resistant to damage, however mistracking can occur due to an accumulation of dirt on the disc surface. Follow the guidelines below for maximum enjoyment from your CD collection and player.

- Do not write on either side of the disc, particularly the non-label side from which signals are read. Do not mark this surface.
- Keep your discs away from direct sunlight, heat, and excessive moisture.
- Always hold the CDs by the edges. Fingerprints, dirt, or water on the CDs can cause noise or mistracking. If a CD is dirty or does not play properly, clean it with a soft, dry cloth, wiping straight out from the centre, along the radius.

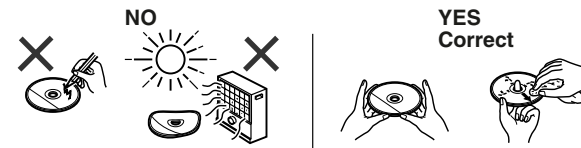

Controls and indicators



XL-MP2H

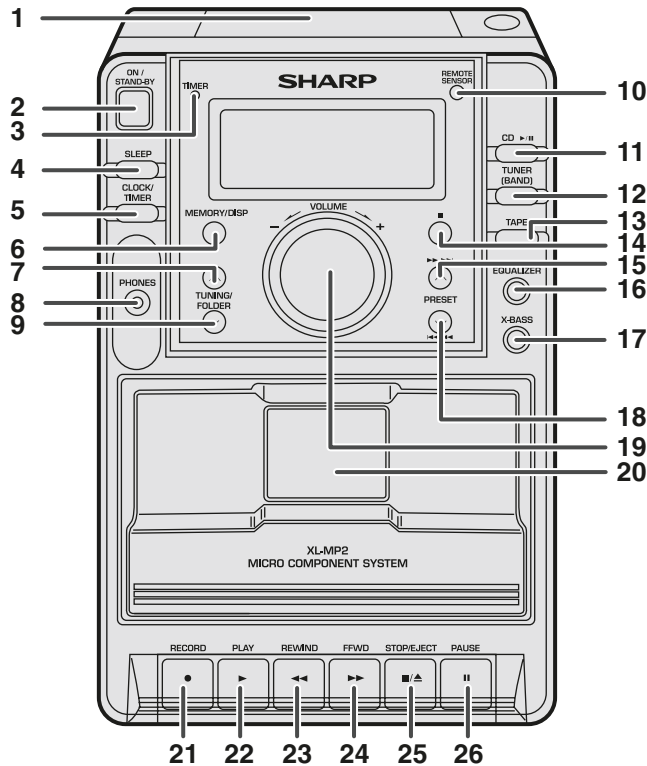

■ Front panel

	Reference page
1. CD Door	14
2. On/Stand-By Button	11
3. Timer Indicator	27
4. Sleep Button	26
5. Clock/Timer Button	12, 26
6. Memory/Disp Button	17, 21, 26
7. Tuning Up/Folder Up Button	21
8. Headphone Socket	29
9. Tuning Down/Folder Down Button	21
10. Remote Sensor	10
11. CD Play/Pause Button	13
12. Tuner (Band) Button	21
13. Tape Button	22
14. Stop Button	23
15. Disc Track Up or Fast Forward, Tuner Preset Up, Time Up Button	12, 17, 21, 26
16. Equaliser Button	11
17. Extra Bass Button	11
18. Disc Track Down or Fast Reverse, Tuner Preset Down, Time Down Button	12, 17, 21, 26
19. Volume Control	11
20. Cassette Compartment	22
21. Tape Record Button	24
22. Tape Play Button	23, 24
23. Tape Rewind Button	23
24. Tape Fast Forward Button	23
25. Tape Stop/Eject Button	23, 24
26. Tape Pause Button	26

Controls and indicators (continued)

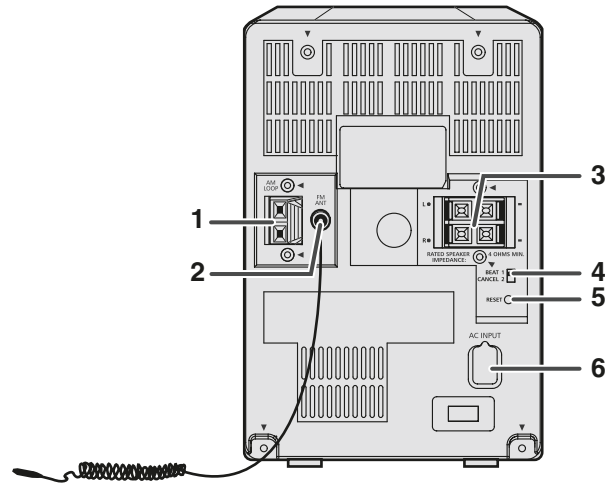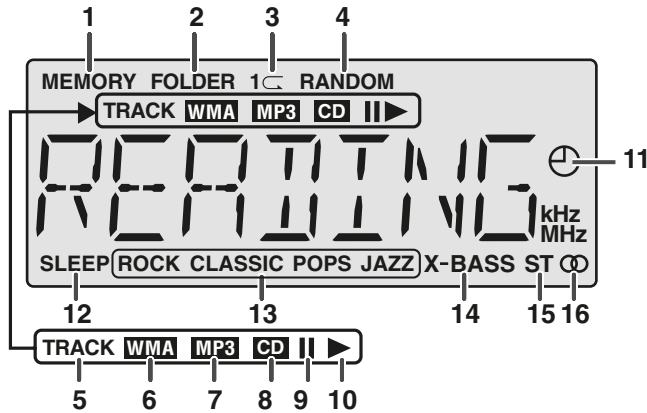

■ Display


	Reference page
1. Memory Indicator	17
2. MP3/WMA Folder Indicator	20
3. Disc Repeat Indicator	16
4. Random Indicator	16
5. MP3/WMA Track Indicator	14, 15
6. WMA Indicator	14
7. MP3 Indicator	14
8. CD Indicator	14
9. Disc Pause Indicator	14
10. Disc Play Indicator	14
11. Timer Play Indicator	27
12. Sleep Indicator	28
13. Equaliser (ROCK, CLASSIC, POPS, JAZZ) Indicator	11
14. Extra Bass Indicator	11
15. FM Stereo Mode Indicator	21
16. FM Stereo Receiving Indicator	21


■ Rear panel

	Reference page
1. AM Loop Aerial Sockets	9
2. FM Aerial Wire	9
3. Speaker Terminals	9
4. Beat Cancel Switch	25
5. Reset Button	30
6. AC Input Socket	9

■ Speaker system

1. Tweeter
2. Woofer
3. Bass Reflex Duct
4. Speaker Wire

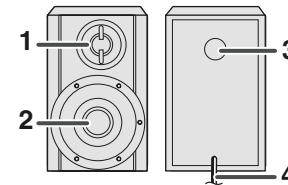

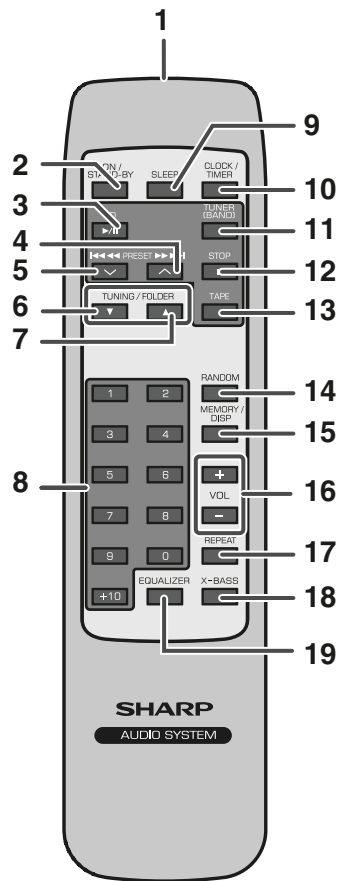

■ Remote control

Reference page

1. Remote Control Transmitter	10
2. On/Stand-by Button	11
3. CD Play/Pause Button	13
4. Disc Track Up or Fast Forward, Tuner Preset Up, Time Up Button	12, 17, 21, 26
5. Disc Track Down or Fast Reverse, Tuner Preset Down, Time Down Button	12, 17, 21, 26
6. Tuning Down/Folder Down Button	21
7. Tuning Up/Folder Up Button	21
8. Disc Direct Search Buttons	13, 15
9. Sleep Button	28
10. Clock/Timer Button	12, 26
11. Tuner (Band) Button	21
12. Disc Stop Button	13
13. Tape Button	22
14. Random Button	16
15. Memory/Disp Button	17, 21, 26
16. Volume Up and Down Buttons	11
17. Repeat Button	16
18. Extra Bass Button	11
19. Equaliser Button	11

System connections

Make sure to unplug the AC power lead before any connections.


■ Aerial connection (see page 9)

AM loop aerial

FM aerial

Right speaker

Left speaker

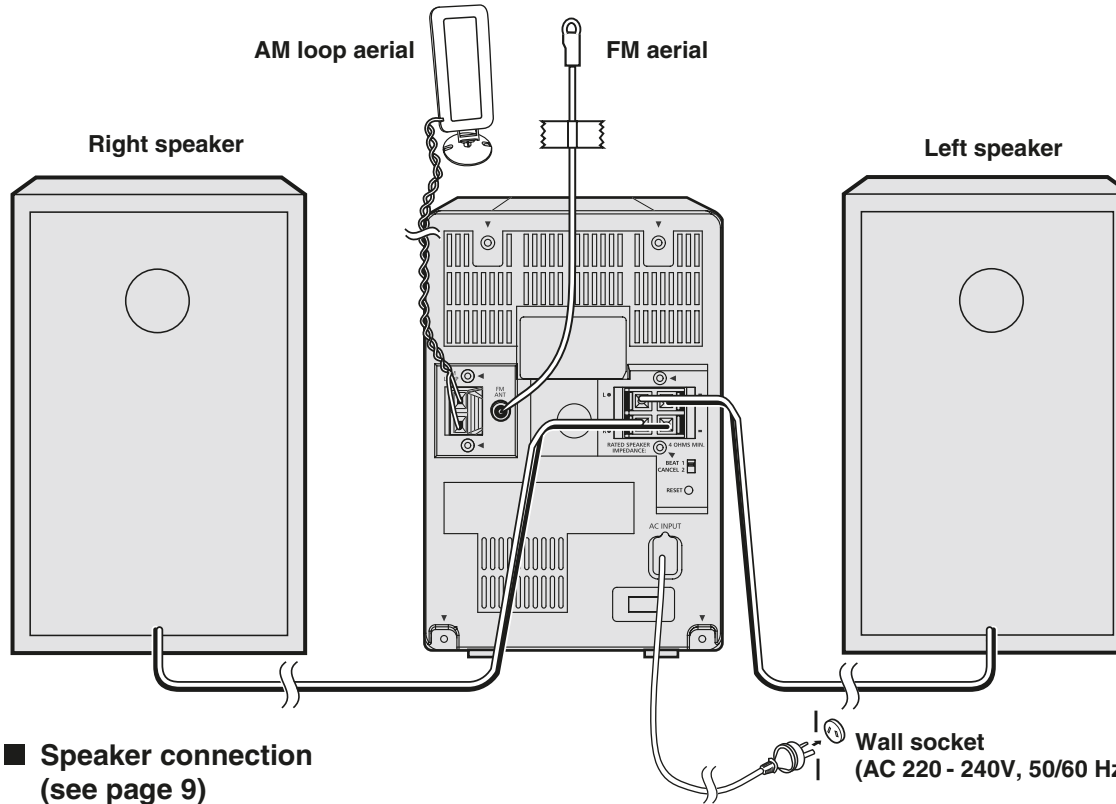

■ Speaker connection (see page 9)

■ AC power connection (see page 9)


■ Aerial connection

Attached FM aerial:

Position the FM aerial wire in the direction where the strongest signal can be received.

Supplied AM loop aerial:

Connect the AM loop aerial to the AM loop aerial socket. Position the AM loop aerial for optimum reception. Place the AM loop aerial on a shelf, etc., or attach it to a stand or a wall with screws (not supplied).

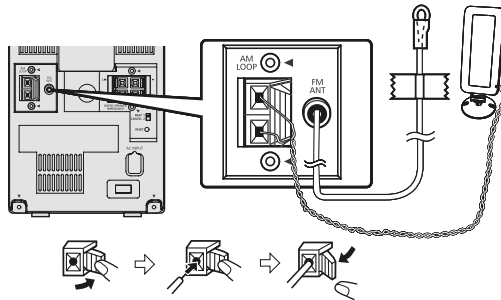


Note:


Placing the aerial on the unit or near the AC power lead may cause noise pickup. Place the aerial away from the unit for better reception.

Installing the AM loop aerial:

< Assembling >

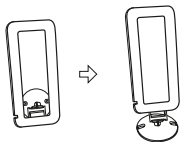


< Attaching to the wall >

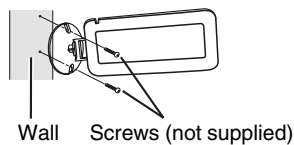


■ Speaker connection

Connect the black wire to the minus (-) terminal, and the red wire to the plus (+) terminal.

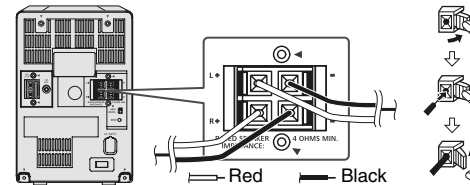


Caution:

- Use speakers with an impedance of 4 ohms or more, as lower impedance speakers can damage the unit.
- Do not mistake the right and the left channels. The right speaker is the one on the right side when you face the unit.
- **Do not let the bare speaker wires touch each other.**
- Do not allow any objects to fall into or to be placed in the bass reflex ducts.
- Do not stand or sit on the speakers. You may be injured.

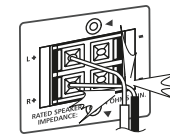

■ AC power connection

After checking all the connections have been made correctly, plug the AC power lead of this unit into the wall socket.

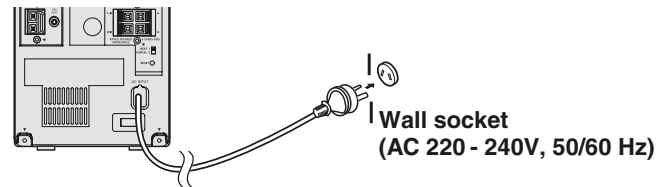

Note:

- Unplug the AC power lead from the wall socket if the unit will not be in use for a prolonged period of time.


Remote control

■ Battery installation

- 1 **Open the battery cover.**
- 2 **Insert the batteries according to the direction indicated in the battery compartment.**

When inserting or removing the batteries, push them towards the ⊖ battery terminals.

- 3 **Close the cover.**

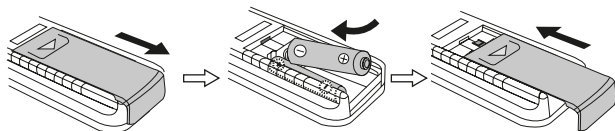

Precautions for battery use:

- Replace all old batteries with new ones at the same time.
- Do not mix old and new batteries.
- Remove the batteries if the unit will not be used for long periods of time. This will prevent potential damage due to battery leakage.

Caution:

- Do not use rechargeable batteries (nickel-cadmium battery, etc.).
- Installing the batteries incorrectly may cause the unit to malfunction.

Battery removal:

Open the battery cover and pull up the battery to take out.

Notes concerning use:


- Replace the batteries if the operating distance is reduced or if the operation becomes erratic. Purchase 2 "AAA" size batteries (UM-4, R03, HP-16 or similar).
- Periodically clean the transmitter on the remote control and the sensor on the unit with a soft cloth.
- Exposing the sensor on the unit to strong light may interfere with operation. Change the lighting or the direction of the unit if this occurs.
- Keep the remote control away from moisture, heat, shock, and vibrations.

■ Test of the remote control

After installing the unit (see pages 8 - 9), check that the remote control operates correctly.


Point the remote control directly at the remote sensor on the unit.

The remote control can be used within the range shown below: Press the ON/STAND-BY button. Does the power turn on? Now, you can use the unit.

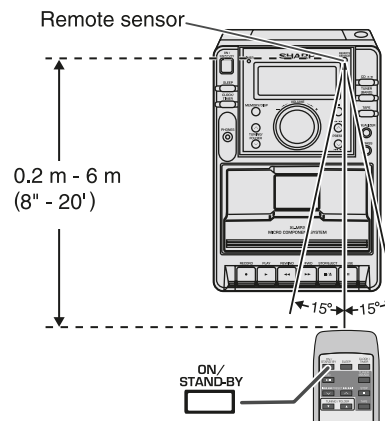

General control

XL-MP2H

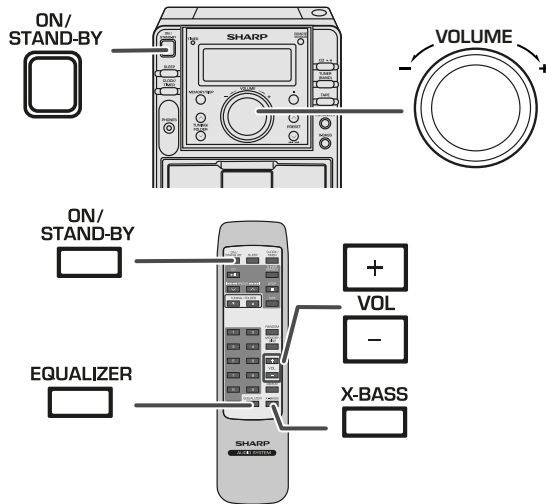

■ To turn the power on

Press the ON/STAND-BY button to turn the power on.

After use:

Press the ON/STAND-BY button to enter the power stand-by mode.

■ Auto power off function

In the stop mode of CD operation, the main unit enters the stand-by mode after 10 minutes of inactivity.

■ Volume auto set-in

- If you turn off and on the main unit with volume set to 16 or higher, the volume will start at 16.
- If you turn the unit off then on again with the volume level set to less than 15, it will turn on again at the level set.

■ Volume control

Main unit operation:

When the VOLUME control is turned clockwise, the volume will increase. When it is turned anti-clockwise, the volume will decrease.


Remote control operation:

Press the VOLUME (+ or -) button to increase or decrease the volume.



■ Equaliser


When the EQUALIZER button on the main unit or remote control is pressed, the current mode setting will be displayed. To change to a different mode, press the EQUALIZER button repeatedly until the desired sound mode appears.

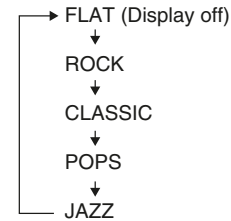

■ X-BASS

When the X-BASS button on the remote control or main unit is pressed, the unit will enter the extra bass mode which emphasises the bass frequencies and "X-BASS" will appear. To cancel the extra bass mode, press the X-BASS button again.

Setting the clock

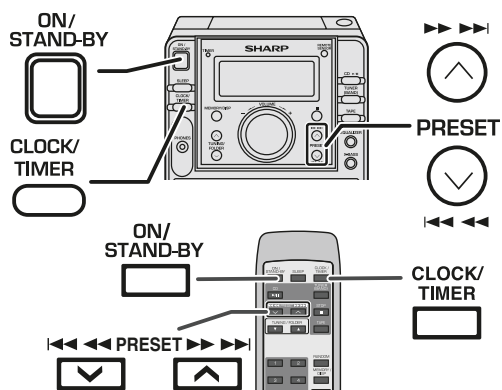

In this example, the clock is set for the 24-hour (0:00) display.

1	In STAND-BY condition.
2	Press the CLOCK/TIMER button for more than 2 seconds.
3	Within 10 seconds, press the PRESET (∨ or ∧) button to set hour.
4	Press the CLOCK/TIMER button again.
5	Within 10 seconds, press the PRESET (∨ or ∧) button to set minute.
6	Press the CLOCK/TIMER button again.

To confirm the time display:

Press the **CLOCK/TIMER** button. The time display will appear for about 5 seconds.

Notes:

- To reset the clock if the power fails or is unplugged, the unit must be in the **STAND-BY** mode.
- "0:00" or time will flash when the AC power supply is restored after a power failure or unplugging the unit or when reset button is pressed.
Readjust the clock as follows:

To readjust the clock:

Perform "Setting the clock" from beginning.

Listening to a CD or MP3/WMA disc

XL-MP2H

This system can play back a standard CD, CD-R/RW in the CD format and CD-R/RW with MP3 or WMA files, but cannot record on them. Some audio CD-R and CD-RW discs may not be playable due to the state of the disc or the equipment used for recording.

MP3:

MP3 is a form of compression. It is an acronym which stands for MPEG Audio Layer 3.



MP3 is a type of audio code which is processed by significant compression from the original audio source with very little loss in sound quality.

- The MP3 track indicator will light up when an MP3 track is read.
- This system supports MPEG 1 Layer 3 and VBR files.
- During VBR file playback, time counter in the display may differ from its actual playback time.
- Bitrate which is supported by MP3 is 32 ~ 320 kbps.

WMA:

WMA files are ASF (Advanced System Format) audio files which are compressed with Windows Media Audio codec. WMA is developed by Microsoft as an audio format file for Windows Media Player.


- The WMA track indicator will light up when a WMA track is read.
- Supported bit rates for WMA files range from 64 kbps to 160 kbps.

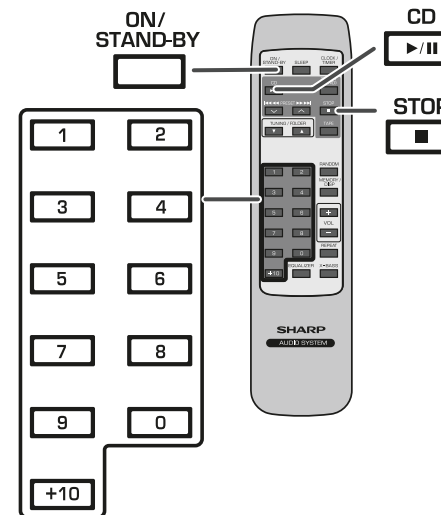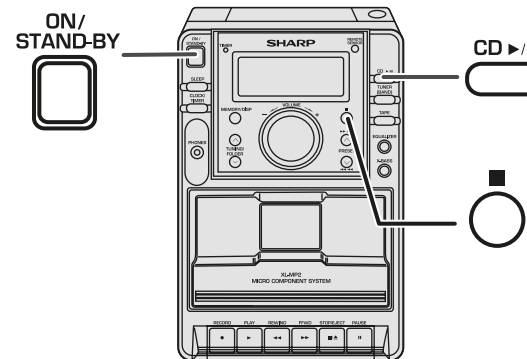


CD or MP3/WMA disc Playback

Listening to a CD or MP3/WMA disc (continued)

- 1** Press the ON/STAND-BY button to turn the power on.
- 2** Open the CD compartment.
- 3** Place the disc on the spindle, label side up. 8 cm (3") discs may be played without an adaptor.

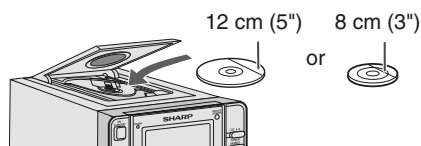


- 4** Close the CD compartment.

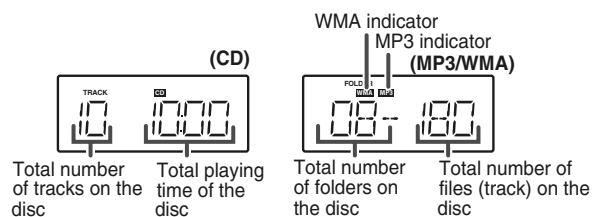

- Due to the structure of its disc information, it takes longer (approximately 20 to 90 seconds) to read a CD-R/RW disc recorded in the MP3 or WMA format than a normal CD.

- 5** Press the CD ► / || button to start playback from track 1.

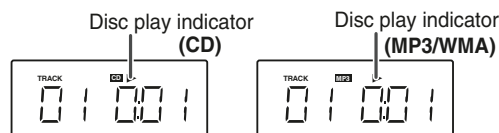

When the last track on the disc has finished playing, the unit will stop automatically.

To interrupt playback:

- Press the CD ► / || button during playback.
- Press the CD ► / || button again to resume playback.

To listen to the track being played again:

During playback, press the I◀◀ ◀◀ button.

To move to the beginning of the next track:

During playback, press the ►► ►►I button.

To skip a number of tracks at one time:

Press the I◀◀ ◀◀ or ►► ►►I button repeatedly until the desired track number is shown.

To start playback a desired track:

Press the I◀◀ ◀◀ or ►► ►►I button whilst in the stop mode to select the track number and then press the CD ► / || button.

To fast forward:

During playback, press and hold down the ►► ►►I button. Release the button to resume playback.

To fast reverse:

During playback, press and hold down the I◀◀ ◀◀ button. Release the button to resume playback.

To stop playback:

Press the ■ button.

Caution:

- Do not play discs with special shapes (heart or octagon shaped) as it may cause malfunctions.
- If a disc is damaged, dirty, or loaded upside down, "NO DISC" will appear on the display.
- Keep foreign objects out of the disc compartment.
- Subjecting the unit to shock or vibration may cause mistracking.
- When the unit is not being used, be sure to close the disc compartment. If it is left open, the lens may be covered with dust and the unit may not operate properly.
- If TV or radio interference occurs during disc operation, move the unit away from the source of the interference.

 
Advanced CD or MP3/WMA disc playback

XL-MP2H

■ Direct track search

By using the direct search buttons, the desired tracks on the current disc can be played.

Use the direct search buttons on the remote control to select the desired track whilst playing or in the stop mode.




Selected track number

- The direct search buttons allow you to select up to number 9.
- When selecting number 10 or higher, use the "+10" button.

A. For example, to choose 13

- 1 Press the "+10" button once.
- 2 Press the "1" button.
- 3 Press the "3" button.

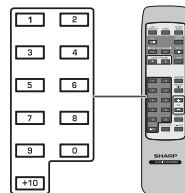

B. For example, to choose 130

- 1 Press the "+10" button twice.
- 2 Press the "1" button.
- 3 Press the "3" button.
- 4 Press the "0" button.

Whilst in the stop mode:

Press the direct search button to select desired track and the selected track will be played back.

Whilst playing the disc:

The desired track can be selected by simply pressing the direct search button and the selected track will be played back.

Notes:

- A track number higher than the number of tracks on the disc cannot be selected.
- During random play, direct search is not possible.
- For CD-R/RW discs recorded in the MP3 or WMA format, you can select the track number but cannot select the folder by pressing the direct search buttons.


To stop playback:

Press the ■ button.


Advanced CD or MP3/WMA disc playback (continued)

■ Repeat play (REMOTE CONTROL ONLY)

Repeat play can play single track and all track sequence continuously.

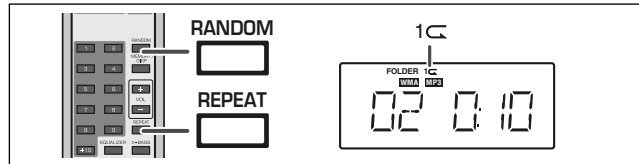

Each time press the button, the repeat mode changes in the following order:

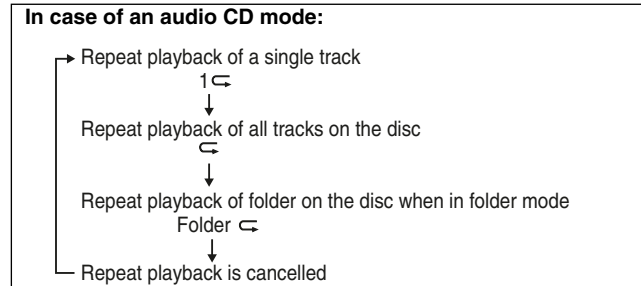

■ Random play (REMOTE CONTROL ONLY)

The tracks on the disc(s) can be played in random order automatically.

To random play all tracks:

Press the RANDOM button on the remote control so that the random indicator light up in the display window.



To cancel random playback, press the button again, so that the random indicator will disappear.

Notes:

- If you press the ◀◀ or ▶▶ button during random play, you can move to the track selected next by the random operation.
- In random play, the unit will select and play tracks automatically. (You cannot select the order of the tracks.)
- During random play, repeat function is not possible.
- In random function, playback will stop after all the tracks is played randomly.

Caution:

After performing repeat, be sure to press the ■ button. Otherwise, it will play continuously.

Note:

 
(⊗) When in folder mode, the selected playmode can be used for the files in the selected folder only.

Notes:


- This unit only supports "MPEG-1 Audio Layer-3" format. (Sampling Frequency is 32, 44.1, 48kHz)
- "MPEG-2 Audio Layer-3", "MPEG-2.5 Audio Layer-3" and MP1, MP2 format are not supported.
- Playback order for MP3 files may differ sometimes depending on the writing software used during file download.
- Bitrate which is supported by MP3 is 32~320 kbps, WMA is 64~160 kbps.
- For MP3/WMA files, please put ".MP3" ".WMA" extension. Files cannot be played back if there is no MP3/WMA extension.
- Playlists are not supported on this unit.
- This unit only supports MP3 ID3-Tag version 1.x.
- The display playback time may not be displayed correctly when playing back a variable bitrate file.
- WMA meta tag also supports title, artist and album name which are recorded in WMA files.
- Copyright protected WMA files cannot be played back.

■ Programmed play

- 1 Whilst in the stop mode, press the MEMORY/DISP button to enter the programming save mode.




 - 2 Press the direct search buttons on the remote control to select the desired tracks.



You can also select a track by pressing the <<<< or >>>> button.

 - 3 Press the MEMORY/DISP button to save the track number.



- 4 Repeat steps 2 – 3 for other tracks. Up to 32 tracks can be programmed.


- 5 Press the CD ► / II button to start playback.

To cancel the programmed play mode:

During programmed stop mode, press the MEMORY/DISP button and press the ■ button or STOP ■ button on the remote control. The display will show "CLEAR" and all the programmed contents will be cleared.

Notes:

- If the disc lid is opened, the programmed sequence will be cancelled.
- The programme will automatically cancelled if you press the ON/STAND-BY button to enter the stand-by mode or change the function from CD to another.
- During the programme operation, press the RANDOM button will automatically cancelled the programme.

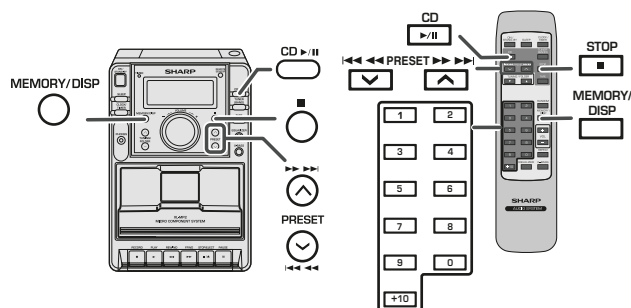


Advanced CD or MP3/WMA disc playback (continued)

■ Programmed play (Folder mode)

- 1** Whilst in the stop mode, press the MEMORY/DISP button to enter the programming save mode.




 - 2** Press the TUNING/FOLDER (▼ or ▲) button on the remote control to select the desired folder.




You can also select a folder by pressing the TUNING/FOLDER (▼ or ▲) button on the main unit.

 Then press the ◀◀◀◀ or ▶▶▶▶ button on the remote control to select the desired tracks.



You can also select a track by pressing the ◀◀◀◀ or ▶▶▶▶ button on main unit.

 - 3** Press the MEMORY/DISP button to save the folder and track number.



- 4** Repeat steps 2 – 3 for other folder/tracks. Up to 32 tracks can be programmed.


- 5** Press the CD ► / II button to start playback.

To cancel the programmed play mode:

During programmed stop mode, press the MEMORY/DISP button and press the ■ button or STOP ■ button on the remote control. The display will show "CLEAR" and all the programmed contents will be cleared.

Notes:

- If the disc lid is opened, the programmed sequence will be cancelled.
- The programme will automatically cancelled if you press the ON/STAND-BY button to enter the stand-by mode or change the function from CD to another.
- During the programme operation, press the RANDOM button will automatically cancelled the programme.

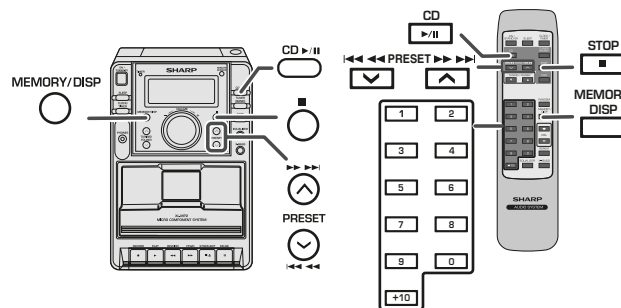

MP3/WMA folder mode (only for MP3/WMA files)

XL-MP2H

To playback MP3/WMA (Windows Media Audio) file

There are many music sites on the internet that you can download MP3/WMA (Windows Media Audio) music files. Follow the instructions from the website on how to download the music files. You can then playback these downloaded music files by burning them to a CD-R/RW disc.

- Your downloaded song/files are for personal use only. Any other usage of the song without owner's permission, is against the law.

■ About folder playback order

If MP3/WMA files are recorded in several folders, a folder number will be set to each folder automatically.


These folders can be selected by the TUNING/FOLDER button on the remote control. If there is no supported file formats inside the selected folder, the folder is skipped and the next folder will be selected.

Example: How to set folder number if MP3/WMA format files are recorded as below figure.

1. ROOT folder is set as folder 1.
2. As for folders inside ROOT folder (Folder A and Folder B), the folder which is recorded earlier on the disc will be set as folder 2.
3. As for folder inside Folder A (Folder C and Folder D), the folder which is recorded earlier on the disc will be set as folder 3.
4. Because there is no folder in Folder C, Folder D will be set as folder 4.
5. Folder E that is inside Folder D will be set as folder 5.
6. Folder B inside ROOT folder will be set as folder 6.

* The folder and file order information which is recorded on the disc depends on the writing software. There maybe possibilities that this unit will playback the files not according to our expected playback order.

All the files inside the selected folder will be played back. In case Folder D is selected, file 4, 5 and 6 will be played back. File 7 and 8 in Folder E will not be played back.

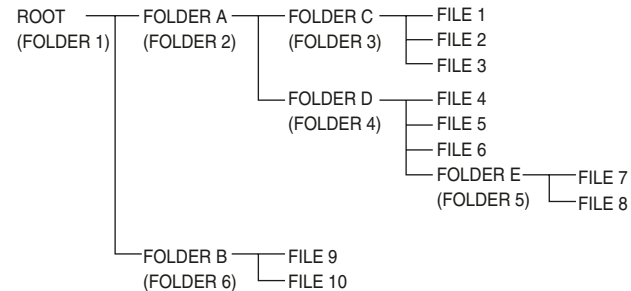


MP3/WMA folder mode (only for MP3/WMA files) (continued)

■ Procedure to playback MP3/WMA disc

To playback CD-R/RW.


1 Press the CD button, and load a MP3/WMA disc.

- After disc is loaded, the disc info will be displayed.

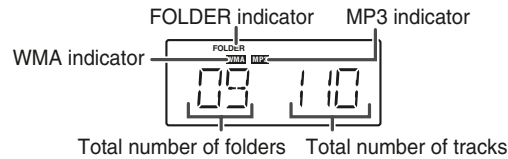


- In case in folder mode, proceed to step 2.
- In case track is selected, proceed to step 3.

2 Press the TUNING/FOLDER (▼ or ▲) button to select desired playback folder.

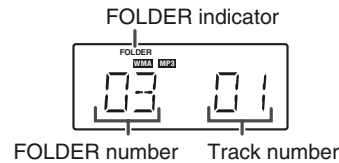


- To start playback with folder mode, go to step 4.
- To change the playback folder, press the TUNING/FOLDER (▼ or ▲) to select another folder.
- In case of playback in the folder mode, press the TUNING/FOLDER (▼ or ▲) button, and the desired folder can be selected even though it is in playback mode. It will continue playback mode in the 1st track of the selected folder.

 3 Select desired track to be played back by pressing the ◀◀ or ▶▶▶▶ button. Proceed to step 4.



4 Press the CD ► / II button and playback will start.

- Press the MEMORY/DISP button to display Title, Artist and Album name if it is recorded on the disc.
- To cancel the display of Title, Artist and Album name, press the MEMORY/DISP button twice to display track number.
- Title, Artist and Album name will scroll through the LCD display as follows.

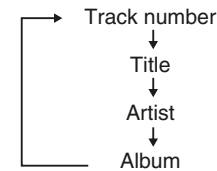

MP3 ID3-Tag only support version 1.x.

Note:

- If "ERR DISC" is displayed, it means "Copyright protected WMA file" or "Not supported playback file" is selected.

Listening to the radio

XL-MP2H

■ Tuning

- 1 Press the ON/STAND-BY button to turn the power on.
- 2 Press the TUNER (BAND) button to select the desired frequency band (FM or AM).
- 3 Press the TUNING/FOLDER (▼ or ▲) button to tune into the desired station.

Manual tuning:

Press the TUNING/FOLDER (▼ or ▲) button as many times as required to tune in the desired station.

Auto tuning:

When the TUNING/FOLDER (▼ or ▲) button is pressed for more than 0.5 seconds, scanning will start automatically and the tuner will stop at the first receivable broadcast station.

Notes:

 
- When radio interference occurs, auto scan tuning may stop automatically at that point.
- Auto scan tuning will skip weak signal stations.
- To stop the auto tuning, press the TUNING/FOLDER (▼ or ▲) button again.

To receive an FM stereo transmission:



Press the TUNER (BAND) button to display the "ST" indicator.

- "∞" will appear when an FM broadcast is in stereo.
- If the FM reception is weak, press the TUNER (BAND) button to extinguish the "ST" indicator. The reception changes to monaural and the sound becomes clearer.

FM stereo receiving indicator



FM stereo mode indicator

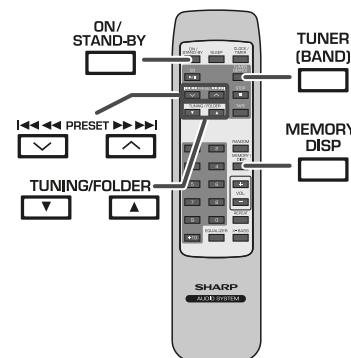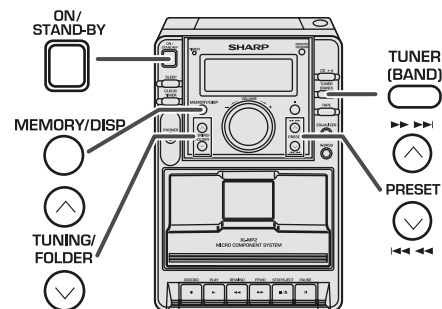

Note:

This product can receive FM stereo/ FM monaural and AM monaural broadcasts. AM stereo broadcasts will not be played in stereo.

 
Listening to the memorised station

■ Memorising a station


Up to 20 stations for FM band, 10 station for AM band can be preset.

1 Perform steps 1 - 3 in "Listening to the radio" on page 21.

2 Press the MEMORY/DISP button to enter the preset tuning saving mode.



 3 Press the PRESET (∨ or ∧) button to select the channel to be preset.



- The number button(s) on the remote control can be used to pre-set the station. In this example, press 9 after the step 2 above.

4 Press the MEMORY/DISP button.

In this example, "103.25 MHz" FM station is preset on FM channel 9.



5 Repeat steps above to add more preset stations.

- When presetting a new station, the previous preset station is cleared.

Note:

The backup function protects the memorised stations for a few hours should there be a power failure or the AC power lead become disconnected.

■ Listening to preset stations



 
1 Press the TUNER (BAND) button to select FM or AM.

2 Press the PRESET (∨ or ∧) button to select the desired channel number.

Listening to a cassette tape

Before playback:

- For playback, use normal or low-noise tapes for the best sound. (Metal or CrO₂ tapes are not recommended.)
- Do not use C-120 tapes or poor-quality tapes, as they may cause malfunctions.
- Before loading a tape into the cassette compartment, tighten the slack with a pen or a pencil.

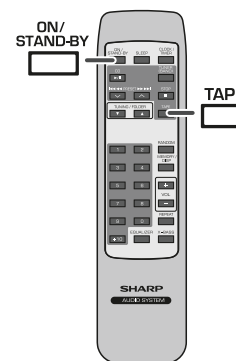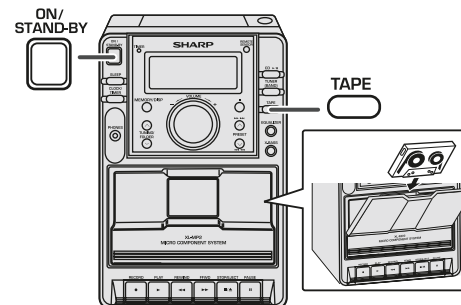

■ Tape playback

1	Press the ON/STAND-BY button to turn the power on.
2	Press the TAPE button to select "TAPE" function. "TAPE" appears.
3	Press the STOP/EJECT ■ / ▲ button to open the cassette holder.
4	Load a cassette into the cassette compartment with the side to be played facing towards you. After loading the cassette push the cassette holder back into position.
5	Press the PLAY ► button to begin playback.
6	Press the STOP/EJECT ■ / ▲ button to stop playback at any time. Press it again to remove the cassette. When the end of the tape has been reached, automatic stop will be activated.

Pause

- Press the PAUSE || button to temporarily stop playback or recording. Press it again to resume operation.

Fast forward and rewind

- Press the F.FWD ►► or REWIND ◀◀ button. When the desired location has been reached, press the STOP/EJECT ■ / ▲ button.

Automatic stop system:

- At the end of the tape whilst recording or playback, the cassette deck stops automatically and the button is released.
- This system does not work in fast forward and rewind operation. Be sure to press the STOP/EJECT ■ / ▲ button when the end of the tape has been reached.

Caution:

- Do not press the PAUSE || button whilst the fast forward or rewind operations are in progress. The REWIND ◀◀ or F.FWD ►► button will not be released when the tape end is reached. Once this occurs press the STOP/EJECT ■ / ▲ button.
- Before changing from one tape operation to another, press the STOP/EJECT ■ / ▲ button.

 

Recording on a cassette tape

Before recording:

- When recording important selections, make a preliminary test to ensure that the desired material is properly recorded.
- SHARP is not liable for damage or loss of your recording arising from malfunction of this unit.
- The volume and sound controls can be adjusted with no effect or the recorded signal (Variable Sound Monitor).
- **For recording, use only normal tapes. Do not use metal or CrO₂ tapes.**

Erase - prevention tab of cassette tapes:

- When recording on a cassette tape, make sure that the erase-prevention tabs are not removed. Cassettes have removable tabs that prevent accidental recording or erasing.
- To protect the recorded sound, remove the tab after recording. Cover the tab hole with adhesive tape to record on the tape without the tab.

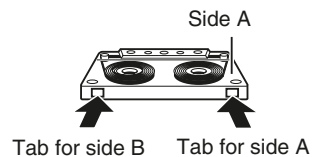

■ Recording from CD or MP3/WMA disc

1 Press the ON/STAND-BY button to turn the power on.

2 Load a blank cassette.

3 Select "CD" function.

4 Load the disc to be recorded.

- Select the track number if required.
- For programmed recording, programme the material in advance (as described under "Programmed Play").

5 Press the RECORD ● button. The PLAY ► button is engaged simultaneously and CD recording starts.

When you want to record music as you listen, press the RECORD ● button. Recording starts automatically from the beginning of the track.

6 Press the STOP/EJECT ■ / ▲ button to stop recording.


When the end of the tape is reached, the CD player and deck stop automatically.

■ Recording from the radio

- | |
|--|
| 1 Tune in to the desired station. (See page 21) |
| 2 Load a blank cassette. |
| 3 Press the RECORD ● button to start recording. |
| 4 Press the STOP/EJECT ■ /▲ button to stop recording. |

When beat is heard

Beat (a high-pitched noise) may sometimes be heard during the recording of radio broadcasts. If this occurs, set the BEAT CANCEL switch (the rear of the unit) to 1 or 2 position to reduce the level of the beat noise.

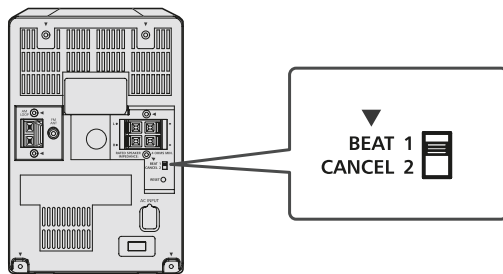


Note:

If you hear a whistling noise whilst recording on AM station, move the AM loop aerial.

■ Erasing recorded tapes

- | |
|--|
| 1 Load the tape to be erased into the cassette compartment with the side to be erased facing towards you. |
| 2 Press the TAPE button until "TAPE" appears on the display. When operating with the remote control, press the TAPE button. |
| 3 Press the RECORD ● button, which also engages the PLAY ► button to begin erasing. |

Timer and sleep operation

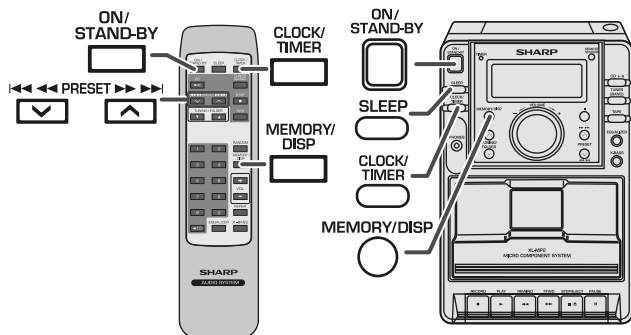

■ Timer playback

 
Before setting timer:

- 1 Check that the clock is set to the correct time (refer to page 12). If it is not set, you cannot use the timer function.
- 2 For timer playback, load the disc to be played back.



1 Press the ON/STAND-BY button to turn the power on.

2 Press the CLOCK/TIMER button for about 2 seconds.




3 Within 10 seconds, press the CLOCK/TIMER button.


4 Press the PRESET (∨ or ∧) button to set hour then press the CLOCK/TIMER button.



 5 Press the PRESET (∨ or ∧) button to set minute and then press the CLOCK/TIMER button.



 
6 Switch input with the PRESET (∨ or ∧) button to select "TMR-OFF" and then press the CLOCK/TIMER button.




7 Press the PRESET (∨ or ∧) button to set hour and then press the CLOCK/TIMER button.



 8 Press the PRESET (∨ or ∧) button to set minute and then press the CLOCK/TIMER button.




 9 To select the timer playback source, switch input with PRESET (∨ or ∧) button to select "SOURCE".




Continued to the next page


- 10** To select CD, press the CD ►/|| button and then press the CLOCK/TIMER button.

 


- 11** To select TUNER (BAND), press the TUNER (BAND) button and then press the CLOCK/TIMER button.

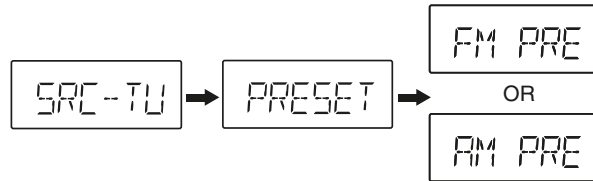

- 12** Select the band by pressing the PRESET (▼ or ▲) button and then press the CLOCK/TIMER button to set the station selected.

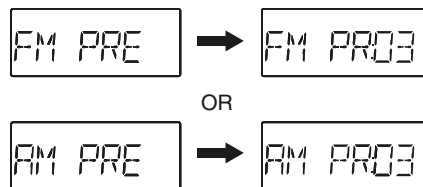

 
- 13** To select a preset channel number, press the PRESET (▼ or ▲) button and then press the CLOCK/TIMER button.



- 14** Press the SLEEP button for more than 2 seconds to activate timer function.

The "TIMER" indicator lights up and the unit is ready for timer playback.

- 15** Press the ON/STAND-BY button to enter the power stand-by mode.

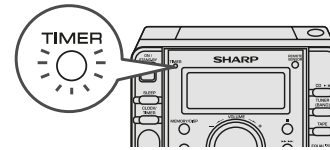

- 16** When the preset time is reached, playback will start.

- 17** When the timer end time is reached, the system will enter the power stand-by mode automatically.

To cancel Timer function:

Press the SLEEP button for 2 seconds. The "TIMER" indicator will disappear.

 
 
Notes:

- After selecting the playback source, when press the CLOCK/TIMER button to confirm, "SOURCE" will appear and blink for 2 seconds, then change to CD or TUNER mode.
- When the preset time is reached, playback will start at current setting if no selected playback source is made.
- The volume cannot be preset during timer operation. It will always go to volume 16.

Timer and sleep operation (continued)

■ Sleep operation

The radio, compact disc and cassette tape can all be turned off automatically.

- | | |
|----------|---|
| 1 | Play back the desired sound source. |
| 2 | Press the SLEEP button repeatedly to select the time.
(Maximum: 90 minutes - Minimum: 10 minutes) |
| |  |
| 3 | Release the SLEEP button.
"SLEEP" will appear. |
| |  |
| 4 | The unit will enter the power stand-by mode automatically after the preset time has elapsed. |

To confirm the remaining sleep time:

- 1 Whilst "SLEEP" is indicated, press the SLEEP button.
 - The remaining sleep time is displayed for about 10 seconds.
 - You can change the remaining sleep time whilst it is displayed by pressing the SLEEP button (steps 2 - 3).

To cancel the sleep operation:

To cancel the sleep operation without setting the unit to the stand-by mode, proceed as follows.


- 1 Whilst "SLEEP" is indicated, press the SLEEP button to select 0 minute.

■ To use timer and sleep operation together

Sleep and timer playback:

For example, you can fall asleep listening to the radio and wake up to CD in the next morning.


- 1 Set the sleep time (see left, steps 1 - 4).
- 2 Whilst the sleep timer is set, set the timer playback (steps 2 - 10, pages 26 - 27).

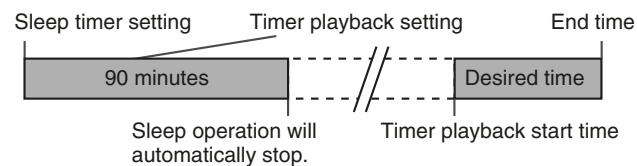

Enhancing your system

■ Headphones

- Before plugging in or unplugging the headphones, reduce the volume.
- Be sure your headphones have a 3.5 mm (1/8") diameter plug and impedance between 16 and 50 ohms. The recommended impedance is 32 ohms.
- Plugging in the headphones disconnects the speakers automatically. Adjust the volume using the VOLUME control.

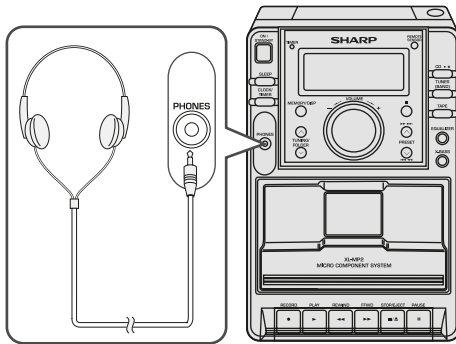

Troubleshooting chart

XL-MP2H

Many potential problems can be resolved by the owner without calling a service technician. If something is wrong with this product, check the following before calling your authorised SHARP dealer or service centre.

■ General

Symptom	Possible cause
<ul style="list-style-type: none"> ● The clock is not set to the correct time. 	<ul style="list-style-type: none"> ● Did a power failure occur? Reset the clock. (Refer to page 12)
<ul style="list-style-type: none"> ● When a button is pressed, the unit does not respond. 	<ul style="list-style-type: none"> ● Set the unit to the power standby mode and then turn it back on. ● If the unit still malfunctions, reset it. (Refer to page 30)
<ul style="list-style-type: none"> ● No sound is heard. 	<ul style="list-style-type: none"> ● Is the volume level set to "0"? ● Are the headphones connected? ● Are the speaker wires disconnected?

■ CD player

Symptom	Possible cause
<ul style="list-style-type: none"> ● Playback does not start. ● Playback stops in the middle or is not performed properly. 	<ul style="list-style-type: none"> ● Is the disc loaded upside down? ● Does the disc satisfy the standards? ● Is the disc distorted or scratched?
<ul style="list-style-type: none"> ● Playback sounds are skipped, or stopped in the middle of a track. 	<ul style="list-style-type: none"> ● Is the unit located near excessive vibrations? ● Is the disc very dirty? ● Has condensation formed inside the unit?

Troubleshooting chart (continued)

■ Tuner

Symptom	Possible cause
<ul style="list-style-type: none"> ● The radio makes unusual noises continuously. 	<ul style="list-style-type: none"> ● Is the unit placed near the TV or computer? ● Is the FM aerial or AM loop aerial placed properly? Move the aerial away from the AC power lead if it's located nearby.

■ Cassette deck

Symptom	Possible cause
<ul style="list-style-type: none"> ● Cannot record. 	<ul style="list-style-type: none"> ● Is the erase-prevention tab removed?
<ul style="list-style-type: none"> ● Cannot record tracks with proper sound quality. ● Cannot erase completely. 	<ul style="list-style-type: none"> ● Is it a normal tape? (You cannot record on a metal or CrO₂ tape.)
<ul style="list-style-type: none"> ● Sound skipping. ● Cannot hear treble. ● Sound fluctuation. 	<ul style="list-style-type: none"> ● Is there slack in the tape? ● Is the tape stretched? ● Are the capstan, pinch roller, or head dirty?

■ Remote control

Symptom	Possible cause
<ul style="list-style-type: none"> ● The remote control does not operate. 	<ul style="list-style-type: none"> ● Is the AC power lead of the unit plugged in? ● Is the battery polarity correct? ● Are the batteries dead? ● Is the distance or angle incorrect? ● Does the remote control sensor receive strong light?

■ If trouble occurs

When this product is subjected to strong external interference (mechanical shock, excessive static electricity, abnormal supply voltage due to lightning, etc.) or if it is operated incorrectly, it may malfunction.

If such a problem occurs, do the following:

1. Set the unit to the stand-by mode and turn the power on again.
2. If the unit is not restored in the previous operation, unplug and plug in the unit, and then turn the power on.

Note:


If neither operation above restores the unit, clear all the memory by resetting it.

■ Condensation

Sudden temperature changes, storage or operation in an extremely humid environment may cause condensation inside the cabinet (CD pickup, tape head, etc.) or on the transmitter on the remote control. Condensation can cause the unit to malfunction. If this happens, leave the power on with no disc (or cassette) in the unit until normal playback is possible (about 1 hour). Wipe off any condensation on the transmitter with a soft cloth before operating the unit.

■ Clearing all the memory (reset)

1. Press the ON/STAND-BY button to enter the power standby mode.
2. Push the "RESET" switch.

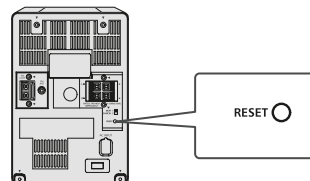

Caution:

This operation will erase all data stored in memory including clock, timer setting, tuner preset and CD programme.

Maintenance

XL-MP2H

■ Cleaning the CD pickup lens

Do not touch the laser pickup lens. If finger prints or dust accumulate on the pickup, clean it gently with a dry cotton swab.



■ Cleaning the cabinet


Periodically wipe the cabinet with a soft cloth and a diluted soap solution, then with a dry cloth.

Caution:

- Do not use chemicals for cleaning (petrol, paint thinner, etc.). It may damage the cabinet finish.
- Do not apply oil to the inside of the unit. It may cause malfunctions.

■ Cleaning the tape-handling parts

- Dirty head, capstan or pinch roller can cause poor sound and tape jams. Clean these parts with a cotton swab moistened with commercial head/pinch roller cleaner or isopropyl alcohol.
- When cleaning the head, pinch roller, etc., unplug the unit which contains high voltages.

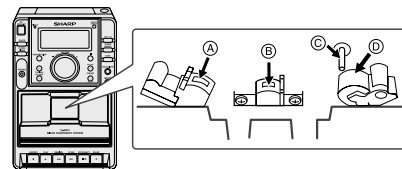

- Ⓐ Erase head
- Ⓑ Recording/Playback head
- Ⓒ Capstan
- Ⓓ Pinch roller

- After long use, the deck's head and capstan may become magnetised, causing poor sound. Demagnetise these parts once every 30 hours of playing/recording time by using a commercial tape head demagnetiser. Read the demagnetiser's instructions carefully before use.

Specifications

As part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

■ General

Power source	AC 220 - 240 V, 50/60 Hz
Power consumption	Power on: 18 W Power stand-by: 0.6 W(*)
Dimensions	Width: 138 mm (5-7/16") Height: 212 mm (8-11/32") Depth: 218 mm (8-19/32")
Weight	2.6 kg (5.6 lbs.)

(*) This power consumption value is obtained when the unit is in the power stand-by mode.

■ Amplifier

Output power	PMPO: 26 W (total) MPO: 13 W (6.5 W + 6.5 W) (10% T.H.D.) RMS: 10 W (5 W + 5 W) (10% T.H.D.)
Output terminals	Speakers: 4 ohms Headphones: 16 - 50 ohms (recommended: 32 ohms)

■ Tuner

Frequency range	FM: 87.5 - 108.0 MHz AM: 522 - 1,620 kHz
------------------------	---

■ CD player

Type	Compact disc player
Signal readout	Non-contact, 3-beam semiconductor laser pickup
D/A converter	1-bit D/A converter
Frequency response	20 - 20,000 Hz
Dynamic range	90 dB (1 kHz)

■ Cassette deck

Frequency response	80 - 8,000 Hz (normal tape)
Signal/noise ratio	50 dB (recording/playback)
Wow and flutter	0.35% (WRMS)

■ Speaker

Type	2 way speaker system
Maximum input power	10 W
Rated input power	5 W
Impedance	4 ohms
Dimensions	Width: 135 mm (5-5/16") Height: 211 mm (8-5/16") Depth: 180 mm (7-3/32")
Weight	1.5 kg (3.3 lbs./each)



MEMO





MEMO





SHARP

FOR LOCATION ENQUIRIES WITHIN
AUSTRALIA
REGARDING YOUR LOCAL
SHARP APPROVED SERVICE CENTRE
VISIT OUR WEBSITE AT

www.sharp.net.au

OR CALL SHARP CUSTOMER CARE

1300 135 022

(LOCAL CALL COST APPLY WITHIN AUSTRALIA)

SHARP CORPORATION OF AUSTRALIA PTY LTD

SHARP

FOR LOCATION ENQUIRIES WITHIN
NEW ZEALAND
REGARDING YOUR LOCAL
SHARP APPROVED SERVICE CENTRE
VISIT OUR WEBSITE AT

www.sharp.net.nz

CONTACT YOUR SELLING DEALER/RETAILER
OR CALL

SHARP CUSTOMER SERVICES

TELEPHONE: 09 573 0111

FACSIMILE: 09 573 0113

SHARP CORPORATION OF NEW ZEALAND LIMITED

SPform019(JUNE 2004)



SHARP WARRANTY

Consumer Electronic Products

Congratulations on Your Purchase!

This Sharp product is warranted against faults in materials and manufacture for a period of twelve(12) months from the date of original purchase.

If service is required during the warranty period, please contact your nearest Sharp Approved Service Centre. These repairs would be carried out at no charge to the owner, subject to the conditions specified herein.

The owner is responsible for any transportation and insurance costs if the product has to be returned for repair.

This warranty does not extend to accessories or defects or injuries caused by or resulting from causes not attributable to faulty parts or the manufacture of the product, including but not limited to, defect or injury caused by or resulting from misuse, abuse, neglect, accidental damage, improper voltage, liquid spillage, vermin infestation, software, or any alterations made to the product which are not authorised by Sharp.

Please retain your sales documentation, as this should be produced to validate a warranty claim.

This warranty is in addition to and in no way limits, varies or excludes any express and implied rights and remedies under any relevant legislation in the country of sale.

IMPORTANT DO NOT RETURN THIS DOCUMENT TO SHARP

For your reference, please enter the particulars of your purchase below and retain, with your purchase documentation.

Model No. _____ Date of Purchase _____

Serial No. _____ Retailer _____

SHARP
SHARP CORPORATION OF AUSTRALIA PTY. LIMITED
ABN 40 005 038 405
1 Huntingwood Drive
Huntingwood NSW 2148
SHARP CORPORATION OF NEW ZEALAND LIMITED
53 Hugg Johnson Drive
Petrie 9, Auckland
SharpM11 (JUNE 2004)

IMPORTANT NOTICE: This warranty applies only to products sold in Australia & New Zealand

SHARP

SHARP CORPORATION

92L01LMP200030

06J R MW ①

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>