

Setting the clock

- 1 Plug in the unit.
- 2 Press and hold **CLOCK** until the hour flashes in the display. The hour starts to flash in the display.
- 3 Press **ALARM/CLOCK +** or **-** repeatedly to set the hour.
- 4 Press **CLOCK**.
- 5 Repeat steps 3 and 4 to set the minute, and then press **CLOCK**. The seconds start incrementing from zero.

Notes

- If you do not press any button for about 1 minute while setting the clock, the clock setting will be canceled.
- When pressing any of the rear buttons, hold the unit firmly to prevent slippage.

To change the display to the daylight saving time (summer time) indication
Change the daylight saving time (summer time) adjustment setting according to the following procedures.

Press **DST/SUMMER TIME**. “*” appears in the display and the time indication changes to the daylight saving time (summer time). To deactivate the daylight saving time (summer time) adjustment, press **DST/SUMMER TIME** again. “*” disappears.

Setting the brightness of the display

Four levels of brightness are available by pressing **SNOOZE/BRIGHTNESS**.

High (default) → Middle → Low → Off

Playing the radio

There are two ways to tune. To switch between the two tuning methods (manual tuning or preset), press **TUNE MODE/ENTER · MEMORY**.

Auto preset

You can preset 20 stations for FM.


- 1 Press **FM** to turn on the radio.
- 2 Press and hold **FM** until “AP” appears in the display.
- 3 Press **TUNE MODE/ENTER · MEMORY**. The unit automatically presets the available channels in order.

If a station cannot be preset automatically

You need to preset a station with a weak signal manually.

- 1 Follow steps 1 and 2 in “Manual tuning mode” to tune the frequency you wish to preset.
- 2 Press and hold **TUNE MODE/ENTER · MEMORY** for preset number until the flashes.
- 3 Press **TUNE/PRESET** **◀◀** or **▶▶** to select the preset number, then press **TUNE MODE/ENTER · MEMORY**. The frequency is stored with the selected preset number.

Example: The following display appears when you preset FM 105.7 MHz to preset number 2 for FM.

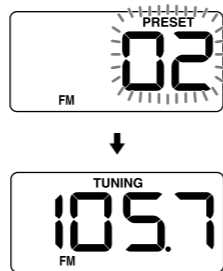

The display shows the frequency for about 10 seconds, and then returns to the current time.

To preset another station, repeat these steps.

Note

If you try to store another station with the same preset number, the previously stored station will be replaced.

Preset tuning mode

- 1 Press **FM** to turn on the radio. Check that the preset mode is selected.
- 2 Press **TUNE/PRESET** **◀◀** or **▶▶** to select the desired preset number.
- 3 Adjust the volume using **VOLUME +** or **-**.

Manual tuning mode

- 1 Press **FM** to turn on the radio. Check that the manual tuning mode is selected.
- 2 Press **TUNE/PRESET** **◀◀** or **▶▶** to tune in to a desired frequency.
- 3 Adjust the volume using **VOLUME +** or **-**.

Tuning in to a station

The unit automatically scan FM stations.

- 1 Press **FM** to turn on the radio. Check that the manual tuning mode is selected.
- 2 Press and hold **TUNE/PRESET** **◀◀** or **▶▶**.
▶▶: scans upward through the frequency bands.
◀◀: scans downwards through the frequency bands.
 Scanning starts from the currently-tuned frequency. When a station is received, scanning stops.
- 3 Adjust the volume using **VOLUME +** or **-**.

Improving the reception

FM: Extend the FM wire antenna fully to increase reception sensitivity.

Notes on radio reception

- Keep digital music players or mobile phones away from the FM antenna, as this may lead to reception interference.
- When you are listening to the radio with an iPhone connected to the unit, interference with radio reception may occur.
- When you are listening to the radio while charging an iPod, interference with radio reception may occur.
- Do not place the FM antenna close to the AC power adaptor as noise may result.

Playing an iPod

You can enjoy audio from iPod by connecting to this unit. To use an iPod, refer to the user’s guide of your iPod.

If you are using an iPhone, iPhone 3G, iPhone 3GS or iPhone 4, attach the supplied universal dock adaptor for iPhone, iPhone 3G, iPhone 3GS or iPhone 4 before connecting. The adapter number, ⑫, ⑬ or ⑭, is shown on the bottom-rear of the supplied universal dock adaptors. ⑫ is for the iPhone, ⑬ is for the iPhone 3G & iPhone 3GS and ⑭ is for the iPhone 4. Check the adapter number before use.


Universal dock adaptor



Notes

- When inserting an iPod into the unit, be sure to use the universal dock adaptor supplied with your iPod or commercially available from Apple Inc.
- The connector of the unit is exclusively for use with an iPod.
- Sony cannot accept responsibility in the event that data recorded on an iPod is lost or damaged when using an iPod connected to this unit.
- For details of environmental conditions for operating your iPod, check the website of Apple Inc.

- 1 Attach the adaptor for your iPod/iPhone.
- 2 Insert your iPod/iPhone into the connector of the unit.

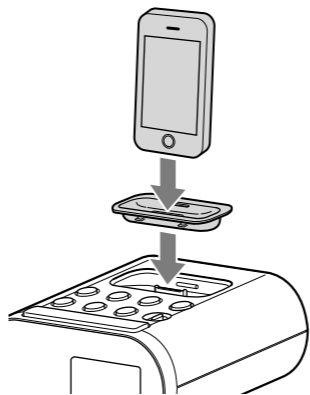

- 3 Press **iPod & iPhone · ▶▶II**. The iPod begins to play automatically. You can operate the connected iPod by this unit or the buttons on iPod.
- 4 Adjust the volume using **VOLUME +** or **-**.

To	Press
Turn off the iPod	OFF , or press and hold iPod & iPhone · ▶▶II
Pause playback	iPod & iPhone · ▶▶II To resume play, press it again.
Go to the next track	▶▶
Go back to the previous track	◀◀ *
Locate a point while listening to the sound	▶▶ (forward) or ◀◀ (backward) while playing and hold it until you find the point.
Locate a point while observing the display	▶▶ (forward) or ◀◀ (backward) in pause and hold it until you find the point.

* During playback, this operation goes back to the beginning of the current track. To go back to the previous track, press twice.

Notes

- When placing or removing the iPod, hold the iPod at the same angle as that of the connector on this unit, and do not twist or bend the iPod as connector damage may result.
- Do not carry the unit with an iPod set on the connector. Doing so may cause a malfunction.
- When placing or removing the iPod, hold the iPod firmly so as not to topple the unit.
- Before disconnecting the iPod, pause playback.

To use the unit as a battery charger

You can use the unit as a battery charger. Charging begins when the iPod is connected to the unit. Charging status appears in the display of iPod. For details, see the user’s guide of your iPod.

On copyrights

iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. “Made for iPod,” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

Setting the alarm

This clock radio is equipped with 3 alarm modes—iPod, radio and buzzer. Before setting the alarm, make sure to set the clock (see “Setting the clock”).

To set the alarm

- 1 Press and hold **ALARM · SET**. “WAKE-UP” appears, and the hour flashes in the display.
- 2 Press **ALARM/CLOCK +** or **-** repeatedly until the desired hour appears. To cycle the hour rapidly, press and hold **ALARM/CLOCK +** or **-**.
- 3 Press **ALARM · ON/OFF**. The minute flashes.
- 4 Repeat step 2 to set the minute.
- 5 Press **ALARM · ON/OFF**. The alarm mode setting is entered.
- 6 Press **ALARM/CLOCK +** or **-** repeatedly until the desired alarm mode flashes. You can choose one of 3 settings: “iPod”, “FM” or “BUZZER”. Set the alarm mode as follows:
 – iPod: see “[A] Setting the alarm for iPod.”
 – FM: see “[B] Setting the radio alarm.”
 – BUZZER: see “[C] Setting the buzzer alarm.”

[A] Setting the alarm for iPod

- 1 Perform steps 1 to 6 in “To set the alarm.”
- 2 Press **ALARM · ON/OFF** to select alarm mode for “iPod”. “VOL” appears in the display.
- 3 Press **ALARM/CLOCK +** or **-** to adjust the volume.
- 4 Press **ALARM · ON/OFF**. The setting is entered.
- 5 If “ALARM” does not appear in the display, press **ALARM · ON/OFF** again. The iPod will sound at the set time.

When using an iPod touch/iPhone

- To wake up to music stored in an iPod touch/iPhone, connect the iPod touch/iPhone to the unit first, follow the steps above to set alarm time, and then select the music function.
- Even if the alarm setting for iPod is complete, if you turn the power of iPod touch/iPhone off before inserting the iPod touch/iPhone into the unit, the alarm for iPod will not work.

[B] Setting the radio alarm

- 1 Perform steps 1 to 6 in “To set the alarm.”
- 2 Press **ALARM · ON/OFF** to select “FM” alarm mode. “FM”, “PRESET” number or “- -” flashes. “- -” is the last station received.
- 3 Press **ALARM/CLOCK +** or **-** to select the desired preset number or “- -”.
- 4 Press **ALARM · ON/OFF**. “VOL” appears in the display.
- 5 Press **ALARM/CLOCK +** or **-** to adjust the volume.
- 6 Press **ALARM · ON/OFF**.
- 7 If “ALARM” does not appear in the display, press **ALARM · ON/OFF** again. The radio will turn on at the set time.

[C] Setting the buzzer alarm

- 1 Perform steps 1 to 6 in “To set the alarm.”
- 2 Press **ALARM · ON/OFF** to select “BUZZER” alarm mode. The setting is entered.
- 3 If “ALARM” does not appear in the display, press **ALARM · ON/OFF** again. The buzzer will sound at the set time.

Note

The volume cannot be set for the buzzer alarm.

To confirm an alarm time setting

Turn off the “ALARM” indicator in the display, and press the **ALARM · ON/OFF** button once.

To change an alarm setting

Set the alarm again.

To doze for a few more minutes

Press **SNOOZE/BRIGHTNESS**. The sound turns off but will automatically come on again after about 10 minutes. You can change the snooze time by pressing **SNOOZE/BRIGHTNESS** repeatedly within 4 seconds. The maximum length of the snooze time is 60 minutes.

To stop the alarm

Press **ALARM RESET · OFF** to turn off the alarm. The alarm will sound again at the same time the next day.

To deactivate the alarm

Press **ALARM · ON/OFF** to turn off the “ALARM” indicator from the display.

Note on the alarm in the event of a power interruption

In the event of a power interruption, the alarm will work until the battery is totally discharged. However, certain functions will be affected as follows:

- The backlight will not light up.
- If the alarm mode is set to iPod or radio, it will change to BUZZER automatically.
- If a power interruption occurs while the alarm is sounding, the alarm will stop.
- If **ALARM RESET · OFF** is not pressed, the alarm will sound for about 5 minutes.
- If “⌂” appears in the display, the alarm will not sound in the event of power interruption. Replace the battery if “⌂” appears.
- The snooze function will not work.
- During a power interruption, the alarm will sound at the set time only once.

Setting the sleep timer

You can fall asleep to the music, etc., using the built-in sleep timer that turns off the unit automatically after a preset duration.

- 1 Press **SLEEP** while the unit is turned on. “SLEEP” appears and the sleep time flashes in the display.
- 2 Press **SLEEP** to set the sleep timer duration. Each time you press **SLEEP**, the duration (in minutes) changes as follows:
 90 → 60 → 30 → 15
 OFF ←

The display returns to clock mode for about 4 seconds after you have finished the duration setting and released **SLEEP**, and then the sleep timer starts. The unit will play for the duration you set, and then shut off.

To turn off the unit before the preset time

Press **ALARM RESET · OFF**.

To change the sleep timer setting

You can press **SLEEP** repeatedly to select the desired sleep timer setting even after the sleep timer has been activated.

To deactivate the sleep timer

Press **SLEEP** repeatedly to set the sleep timer to “OFF” in step 2.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>