

FM/AM RADIO ICF-S10MK2


For the customers in the USA
Please register this product on line at <http://www.sony.com/productregistration>.
Proper registration will enable us to send you periodic mailings about new products, services, and other important announcements. Registering your product will also allow us to contact you in the unlikely event that the product needs adjustment or modification. Thank you.

WARNING

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Installing the Batteries

Two R6 (size AA) batteries

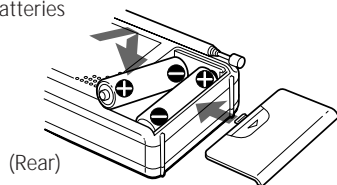

When the TUNE indicator glows faintly, replace all the batteries with new ones.

Precautions

- Operate the unit only on 3 V DC.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- When the case becomes soiled, clean it with a soft cloth dampened with a mild detergent solution. Never use abrasive cleansers or chemical solvents, as they may mar the case.
- Do not leave magnetic bank cards, magnetic train passes, or other cards containing magnetic information near the speaker. The information on the card may be erased by the magnetism inside the speaker.

If you have any question or problem concerning your unit that is not covered in this manual, please consult your nearest Sony dealer.


How to Use

Power switch/VOL (volume) control
Turn to power on.
Turn upward for more volume.

TUNE (tuning) indicator

Ⓜ (earphone) jack

Speaker

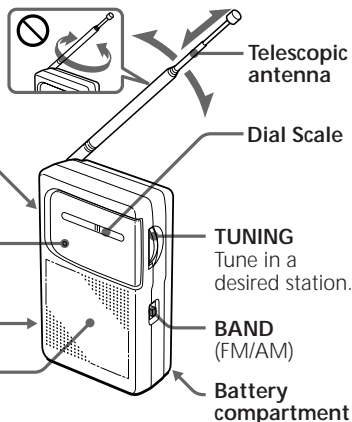

To turn off the radio

Turn the Power switch downward to OFF until a click is heard.

For improved reception

FM: Extend the telescopic antenna and adjust its length, direction and angle for the best reception.

AM: Rotate the unit horizontally for optimum reception. A ferrite bar antenna is built in the unit.

Specifications

Frequency range

FM: 87.5–108 MHz
AM: 530–1605 kHz

Speaker

Approx. 5.7 cm (2¼ inches) dia.

Power output

100mW (at 10 % harmonic distortion)

Output

Ⓜ jack (minijack)

Power requirements

3 V DC, two R6 (size AA) batteries

Battery life

Using Sony SUM-3 (NS)

FM: Approx. 40 hours

AM: Approx. 45 hours

Dimensions

Approx. 71 × 118.5 × 30 mm (w/h/d)

(2⅞ × 4¾ × 1⅜ inches)

Mass

Approx. 202 g (7 oz.) incl. batteries

Design and specifications are subject to change without notice.

Sony Corporation © 1996

<http://www.sony.net/>

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>