 


VOLUME + [11] and [8] have a tactile dot.

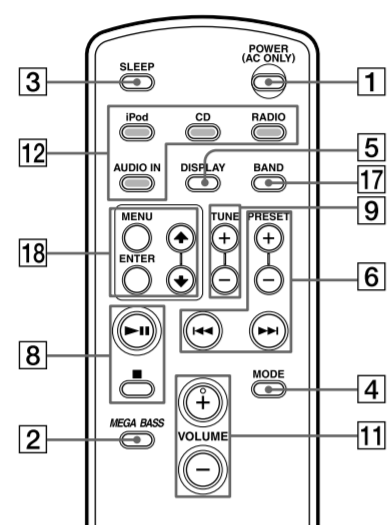 


VOLUME + [11] have a tactile dot.


Opening/closing the Sliding Tray

Setting the iPod

- Press the PUSH OPEN/CLOSE button [14]. The Sliding Tray [15] is ejected half way.
- Pull the Sliding Tray [15] all the way out.
- Attach the iPod Universal Dock Adapter if necessary (not supplied).
- Place your iPod on the Sliding Tray [15].

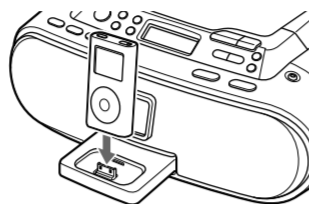


 - Push in and adjust the Sliding Tray [15] so that the iPod fits on the Back Support [16].

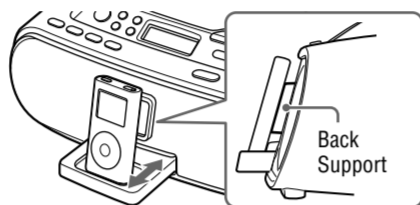

Closing the Sliding Tray

 - Remove the iPod

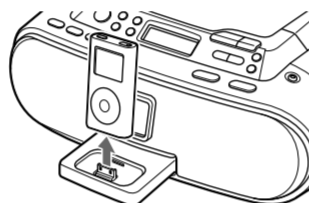


- Push the Sliding Tray [15] until it clicks.
- Press the PUSH OPEN/CLOSE button [14].
- Push the Sliding Tray [15] into the unit.

Notes

- Do not carry the unit with an iPod set on the connector. Doing so may cause a malfunction.
- Be sure to store the Sliding Tray [15] before moving the unit.

Playing the iPod

 - Press iPod [12] (direct power-on). "DC OUT" appears in the display (AC only).



- Press [8]. The iPod begins to play. You can operate the connected iPod by the unit or the iPod buttons.

To	Press
Pause playback	[8] To resume play, press it again.
Stop playback	[8]
Go to the next track	[6]
Go back to the previous track	[6]
Locate a point while listening to the sound	[6] (forward) or [6] (backward) while playing and hold it until you find the point.
Locate a point while observing on the iPod display	[6] (forward) or [6] (backward) in pause and hold it until you find the point.
Select a menu	Press MENU and [18] on the remote to select a menu, and then press ENTER [18].
Go back to the previous menu	Press MENU [18] on the remote.

Notes

- You may use the universal adaptor supplied with your iPod for a more customized fit. The iPod may be docked without the use of an adaptor.
- If you connect the iPod when another function is in use, the function will change to iPod automatically.
- Apple's iPod Universal Dock Adapter (not supplied) can be used with this unit.
- To use an iPod, refer to the user's guide of your iPod.
- Before disconnecting the iPod, pause playback.

To use the unit as a battery charger (AC only)

You can use the unit as a battery charger. The charging status appears in the iPod display. For details, see the user's guide of your iPod.

 
On copyrights

- iPod is a trademark of Apple Inc., registered in the U.S. and other countries.
- All other trademarks and registered trademarks are of their respective holders. In this manual, ™ and ® marks are not specified.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.


Playing a CD

- Press CD [12] (direct power-on).
- Press [7] and place a disc with the label side up in the CD compartment.

To close the CD compartment, press [7].

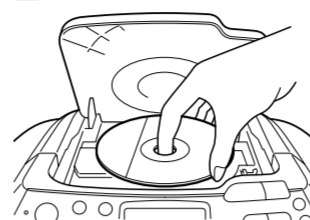

 - Press [8]. The player plays all the tracks once.



To	Press
Pause playback	[8] To resume play, press it again.
Stop playback	[8]
Go to the next track	[6]
Go back to the previous track	[6]
Locate a point while listening to the sound	[6] (forward) or [6] (backward) while playing and hold it until you find the point.
Locate a point while observing the display	[6] (forward) or [6] (backward) in pause and hold it until you find the point.
Remove the CD	[7]

 
Using the display

To check the total track number and playing time

In stop mode, press DISPLAY•ENTER [5] or DISPLAY [5] on the remote repeatedly while playing a CD. The display changes as follows:

To check the remaining time

Press DISPLAY•ENTER [5] or DISPLAY [5] on the remote repeatedly while playing a CD. The display changes as follows:

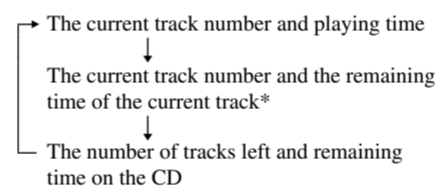

* For a track whose number is more than 20, the remaining time appears as "-:--" in the display.

Selecting the play mode

Press MODE [4] until "1", "SHUF", "SHUF" and "PGM", or "PGM" and "1" appear in the display. Then proceed as follows:

To Select	Select	Then do this
Repeat a single track	[1]	Press [6] to select the track that you want to repeat, then press [8].
Repeat all tracks	[1]	Press [8].
Shuffle play	"SHUF"	Press [8].
Repeat tracks in random order	"SHUF"	Press [8].
Program play	"PGM"	Press [6] then press DISPLAY•ENTER [5] or ENTER [18] on the remote for the tracks (up to 20) you want to program in the order you want. Then press [8].

To Select	Select	Then do this
Repeat programmed tracks	"PGM" and [1]	Press [6] then press DISPLAY•ENTER [5] or ENTER [18] on the remote for the tracks (up to 20) you want to program in the order you want. Then Press [8].

To cancel the selected play mode

Press MODE [4] repeatedly until the selected mode disappears from the display.

To check the programmed track and playing order in the display

To check the order of tracks before play, press DISPLAY•ENTER [5] or ENTER [18] on the remote. Every time you press the button, the track number appears in the programmed order.

To change the current program

Press [8] once if the CD is stopped and twice if the CD is playing. The current program will be erased. Then create a new program following the programming procedure.

Tip

You can play the same program again, since the program is saved until you open the CD compartment.

Listening to the radio

- Press RADIO•BAND•AUTO PRESET [12] repeatedly (direct power-on) or press RADIO [12] and press BAND [17] repeatedly on the remote.

Each time you press the button, the indication changes as follows:
"FM" ↔ "AM"

- Hold down TUNE + or - [9] until the frequency digits begin to change in the display.

The player automatically scans the radio frequencies and stops when it finds a clear station.

If you can't tune in a station, press the button repeatedly to change the frequency step by step. When an FM stereo broadcast is received, "ST" appears.

Tips

- If the FM broadcast is noisy, press MODE [4] until "Mono" appears in the display and the radio will play in monaural.
- If you touch or operate an iPod connected to this unit while listening to AM/FM, noise may occur. Avoid touching or operating the iPod in this case.
- If you hear noise from the AM/FM while supplying power to iPod ("DC OUT" indicator appears in the display), press and hold MODE for a few seconds to stop the power supply to the iPod ("DC OUT" indicator disappears from the display).

Presetting radio stations

You can store radio stations into the player's memory. You can preset up to 30 radio stations, 20 for FM and 10 for AM in any order.

- Press RADIO•BAND•AUTO PRESET [12] or BAND [17] on the remote to select the band.
- Hold down RADIO•BAND•AUTO PRESET [12] or RADIO [12] on the remote for 2 seconds until "AUTO" flashes in the display.

- Press DISPLAY•ENTER [5] or ENTER [18] on the remote.

The stations are stored in memory from the lower frequencies to the higher ones.

If a station cannot be preset automatically

You need to preset a station with a weak signal manually.

- Press RADIO•BAND•AUTO PRESET [12] or BAND [17] on the remote to select the band.
- Tune in a station you want.

- Hold down DISPLAY•ENTER [5] or ENTER [18] on the remote for 2 seconds until the preset number flashes in the display.

- Press PRESET + or - [6] until the preset number you want for the station flashes in the display.

- Press DISPLAY•ENTER [5] or ENTER [18] on the remote.

The new station replaces the old one.

Tip

The preset radio stations remain in memory even if you unplug the AC power cord or remove the batteries.

Playing preset radio stations

- Press RADIO•BAND•AUTO PRESET [12] or BAND [17] on the remote to select the band.
- Press PRESET + or - [6] to tune in the stored station.

Connecting optional components

You can enjoy the sound from an optional component such as a portable digital music player through the speakers of this unit. Be sure to turn off the power of each component before making any connections. For details, refer to the instruction manual of the component to be connected.

- Connect the AUDIO IN jack [10] on the unit to the line output jack of the portable digital music player or other components using an audio connecting cable (not supplied).

- Turn the unit and the connected component on.
- Press AUDIO IN [12] and start playing sound on the connected component.

The sound from the connected component is output from the speakers.

To connect the unit to a TV or VCR, use an extension cable (not supplied) with a stereo-mini jack on one end and two phono plugs on the other end.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>