

Micro HI-FI Component System

Operating Instructions

COMPACT
disc
DIGITAL AUDIO

ATRAC

DAB

Digital Audio Broadcasting

R·D·S

CMT-BX7DAB

© 2007 Sony Corporation

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place lighted candles on the apparatus.

 
To reduce the risk of fire or electric shock, do not place objects filled with liquids, such as vases, on the apparatus.

Connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

Except for customers in the U.S.A. and Canada



This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear exterior.

Notice for the customer in the countries applying EU Directives

The manufacturer of this product is Sony Corporation, 1-7-1 Konan, Minato-ku, Tokyo, 108-0075 Japan.

The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany.

For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.



Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.
Applicable accessories: Remote commander

Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

Music discs encoded with copyright protection technologies

This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

- “WALKMAN” and “WALKMAN” logo are registered trademarks of Sony Corporation.
- MICROVAULT is a trademark of Sony Corporation.
- ATRAC, ATRAC3, ATRAC3plus and their logos are trademarks of Sony Corporation.
- U.S. and foreign patents licensed from Dolby Laboratories.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

Table of Contents

Guide to parts and controls	5
Information on the display.....	9

Getting Started

Hooking up the system securely.....	10
Setting the clock	12

Basic Operations

Playing a CD/MP3 disc	13
Listening to the radio	14
Listening to music of an USB device	15
Using optional audio components.....	17
Adjusting the sound	18
Changing the display	18

Other Operations

Creating your own program (Program Play).....	19
Presetting radio stations	20
Using the Timers.....	21

Others


Troubleshooting.....	22
Messages.....	25
Precautions.....	26
Specifications	28
Playable USB devices	30

Guide to parts and controls


This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.

Unit

Front panel

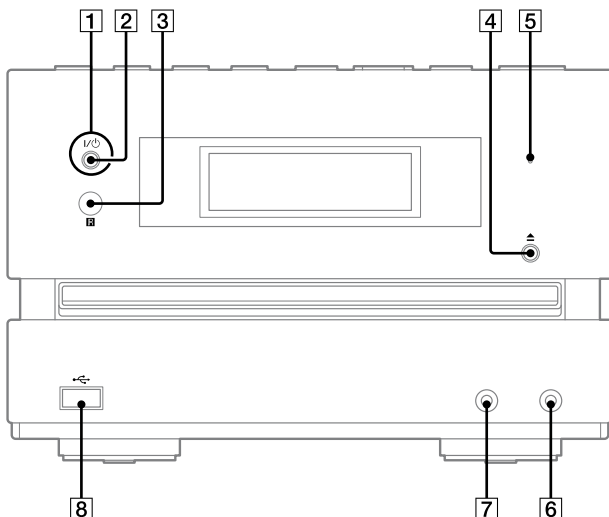


Top panel

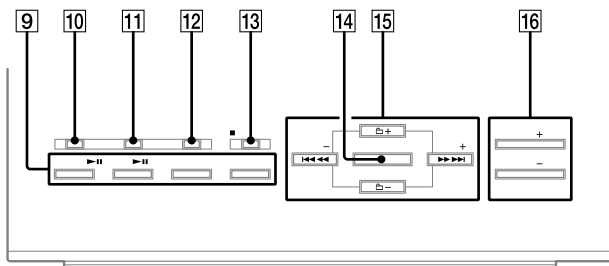

Continued

Remote

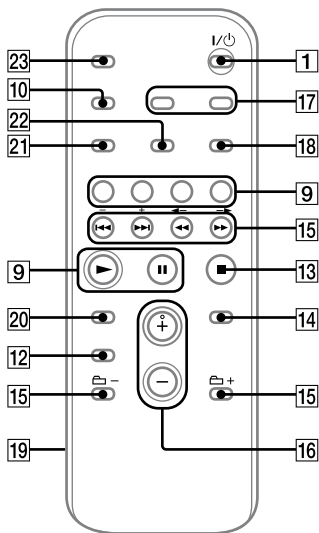

1
I/O (power) button (page 12, 21, 24)

Press to turn on the system.

2
STANDBY indicator (page 18, 22)
Lights up when the system is turned off.

3
Remote sensor (page 22)

4
▲ (open/close) button (page 13)
Press to open or close the disc tray.

5
USB MEMORY indicator
Lights up when an optional USB device (Digital music player or USB storage media) is connected.

6
AUDIO IN jack (page 17)
Connect to an optional audio component.

7
PHONES jack
Connect the headphones.

8
•⇄ (USB) port (page 16, 30)
Connect to an optional USB device (Digital music player or USB storage media).

9
Playback buttons and function buttons
Unit: USB ►|| (play/pause) button (page 16)

Press to select the USB function.
Press to start or pause playback of an optional USB device (Digital music player or USB storage media).
Remote: USB button (page 16)
Press to select the USB function.

Unit: CD ►|| (play/pause) button (page 13)
Press to select the CD function.
Press to start or pause playback of a disc.
Remote: CD button (page 13)
Press to select the CD function.

Remote: ► (play) button,
|| (pause) button
Press to start or pause playback.

TUNER/BAND button (page 14)

Press to select the TUNER function.
Press to select FM or AM reception mode.

Unit: AUDIO IN button (page 17)

Press to select the AUDIO IN function.

Remote: FUNCTION button

Press to select the function.

10**DISPLAY button (page 18)**

Press to change the information on the display.

11**DAB AUTO SCAN button (page 12)**

Press to run the DAB Automatic Scan.

12**Sound buttons (page 18)**

Unit: DSGX button

Remote: EQ button

Press to select the sound effect.

13

Unit: ■/CANCEL (stop/cancel) button (page 13, 14, 16)

Remote: ■ (stop) button (page 13, 14, 16)

Press to stop playback.

14**ENTER button (page 12, 19, 20, 21)**

Press to enter the settings.

15**◀◀/▶▶ (go back/go forward) button (page 13, 16, 19)**

Press to select a track or file.

Unit: TUNE +/- (tuning) button (page 14)

Remote: +/- (tuning) button (page 14, 20)

Press to tune in the desired station.

◻ +/- (select folder) button (page 13, 16, 19)

Press to select a folder.

◀◀/▶▶ (rewind/fast forward) button (page 13, 16)

Press to find a point in a track or file.

16

Unit: VOL +/- button (page 13, 14, 16, 17)

Remote: VOLUME +/- button (page 13, 14, 16, 17)

Press to adjust the volume.

17

CLOCK/TIMER SELECT button (page 21)

CLOCK/TIMER SET button (page 12, 21)

Press to set the clock and the Play Timer.

18

REPEAT/FM MODE button (page 13, 15, 16)

Press to listen to a disc, a single track or file repeatedly.

Press to select the FM reception mode (monaural or stereo).

Continued 

19

Battery compartment lid
(page 11)

20

CLEAR button (page 19)
Press to delete a pre-programmed track or file.

21

TUNER MEMORY button (page 20)
Press to preset the radio station.


22

PLAY MODE/TUNING MODE button (page 13, 14, 16, 19, 20)
Press to select the play mode of a CD, MP3 disc or an optional USB device (Digital music player or USB storage media).
Press to select the tuning mode.

23

SLEEP button (page 21)
Press to set the Sleep Timer.


Information on the display

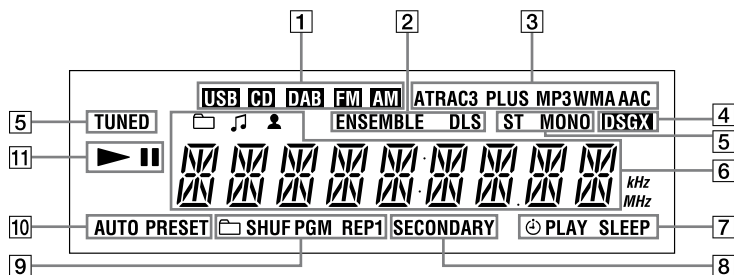

- | | |
|----------------------------|--|
| 1 | 7 |
| Function | Timer (page 21) |
| 2 | 8 |
| Label indication (page 18) | DAB service reception
Lights up when secondary service is received. |
| 3 | 9 |
| Audio format | Play mode (page 13, 16) |
| 4 | 10 |
| DSGX (page 18) | Tuner reception mode (page 14) |
| 5 | 11 |
| Tuner reception (page 14) | Play/Pause |
| 6 | |
| Text information | |

Getting Started

Hooking up the system securely

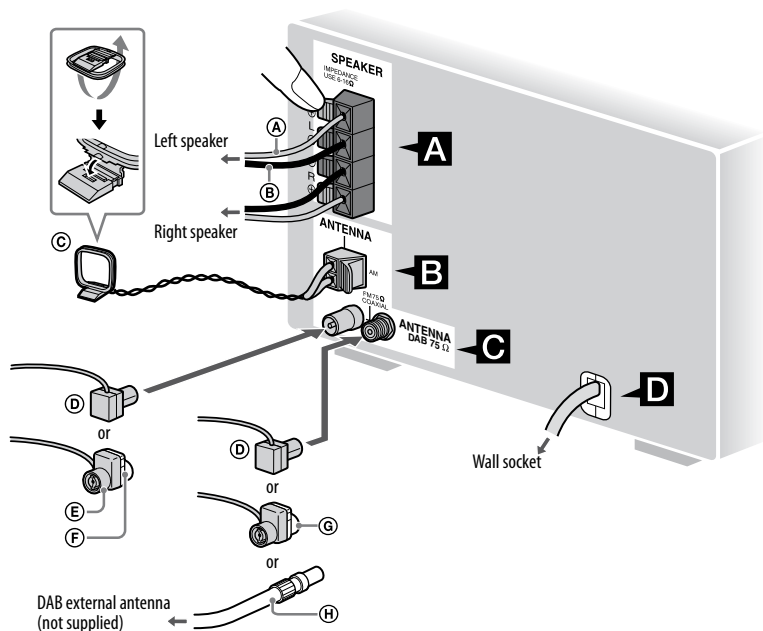

- (A) Speaker cord (Red/⊕)
- (B) Speaker cord (Black/⊖)
- (C) AM loop antenna
- (D) FM/DAB lead antenna (Extend it horizontally.)
- (E) Brown side for other regions
- (F) White side for North American model
- (G) Connect white side.
- (H) 75-ohm coaxial cable with F male type connector (not supplied)

A Speakers

Insert only the stripped portion of the speaker cords into the SPEAKER jacks.

B FM/AM antennas

Find a location and an orientation that provide good reception, and then set up the antenna.

Keep the antennas away from the speaker cords, the power cord and the USB cable to avoid picking up noise.

C DAB antenna

With a DAB external antenna (not supplied), you can obtain higher DAB broadcast sound quality. We recommend that you use the supplied FM/DAB lead antenna only temporarily until you install a DAB external antenna.

D Power


Connect the power cord to a wall socket. If the plug does not fit the wall socket, detach the supplied plug adaptor (only for models equipped with an adaptor).

When carrying this system

- 1 Remove a disc to protect the CD mechanism.
- 2 Press CD **[9]** to select the CD function.
- 3 Hold down TUNER/BAND **[9]** and DSGX **[12]** on the unit, and press **▲ [4]** on the unit until "STANDBY" appears.
- 4 After "LOCK" appears, unplug the power cord.

To use the remote

Slide and remove the battery compartment lid **[19]**, and insert the two supplied R6 (size AA) batteries, **+** side first, matching the polarities shown below.

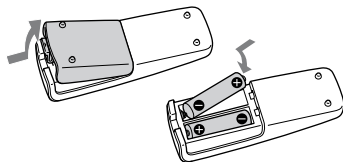

Notes

 
- With normal use, the batteries should last for about six months.
- Do not mix an old battery with a new one or mix different types of batteries.
- If you do not use the remote for a long period of time, remove the batteries to avoid damage from battery leakage and corrosion.

Continued 

To run the DAB Automatic Scan

When you turn on the system for the first time after you purchase the system, DAB Automatic Scan starts automatically and creates a list of available services. If you want to run the DAB Automatic Scan again, perform the procedure below.

- 1 Press DAB AUTO SCAN **[11]** on the unit.
“AUTO SCAN” and “PUSH ENTR” appear.
- 2 Press ENTER **[14]**.
Scanning begins. The scanning progress is indicated by advancing asterisks. Depending on the DAB services available in your area, scanning may take a few minutes.



When scanning is complete, a list of available services is created.

Notes

- If your country or region does not support DAB broadcast, “NO SERV” appears.
- Do not press any button on the unit or the remote during DAB Automatic Scan. Scanning is interrupted and service list may not be created properly. In this case, run the DAB Automatic Scan again.
- If you move to another area, repeat this procedure to store the stations for your new area.
- This procedure clears all previously stored presets.
- Before unplugging the DAB antenna, make sure the system is turned off to preserve your own DAB settings.
- This tuner does not support data services.

Setting the clock

Use buttons on the remote to set the clock.

- 1 Press I/⏻ **[1]** to turn on the system.
- 2 Press CLOCK/TIMER SET **[17]**.
If the current mode appears on the display, press ◀◀/▶▶ **[15]** repeatedly to select “CLOCK SET” and then press ENTER **[14]**.
- 3 Press ◀◀/▶▶ **[15]** repeatedly to set the hour, and then press ENTER **[14]**.
- 4 Use the same procedure to set the minutes.

The clock settings are lost when you disconnect the power cord or if a power failure occurs.


To display the clock when the system is off

Press DISPLAY **[10]**. The clock is displayed for about 8 seconds.

Basic Operations

Playing a CD/MP3 disc

- 1 Select the CD function.
Press CD [9].
- 2 Place a disc.
Press ▲ [4] on the unit, and place a disc with the label side up on the disc tray.

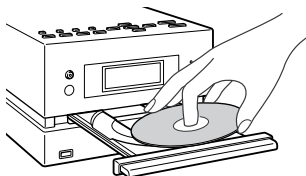

To close the disc tray, press ▲ [4] on the unit again.
Do not force the disc tray closed with your finger, as this may damage the unit.

- 3 Start playback.
Press ► (or CD ►|| on the unit) [9].
- 4 Adjust the volume.
Press VOLUME +/- (or VOL +/- on the unit) [16].

Other operation

To	Press
Pause playback	(or CD ► on the unit) [9]. To resume play, press the button again.
Stop playback	■ [13].
Select a folder on an MP3 disc	Folder +/- [15].
Select a track or file	◀◀/▶▶ [15].
Find a point in a track or file	Hold down ◀◀/▶▶ [15] during playback, and release the button at the desired point.
Select Repeat Play	REPEAT [18] repeatedly until "REP" or "REP1" appears.

To change the play mode

Press PLAY MODE [22] repeatedly while the player is stopped. You can select normal play ("□*"), shuffle play ("SHUF" or "□ SHUF*"), or program play ("PGM").

* When playing a CD-DA disc, □ (SHUF) Play performs the same operation as normal (shuffle) play.

Continued 

Notes on Repeat Play

- All tracks or files on a disc are played repeatedly up to five times.
- “REP1” indicates that a single track or file is repeated until you stop it.

Notes on playing MP3 discs

- Do not save other types of files or unnecessary folders on a disc that has MP3 files.
- Folders that have no MP3 files are skipped.
- MP3 files are played back in the order that they are recorded onto the disc.
- The system can only play MP3 files that have a file extension of “.MP3”.
- If there are files on the disc that have the “.MP3” file extension, but that are not MP3 files, the unit may produce noise or may malfunction.
- The maximum number of:
 - folders is 255 (including the root folder).
 - MP3 files is 511.
 - MP3 files and folders that can be contained on a single disc is 512.
 - folder levels (the tree structure of files) is 8.
- Compatibility with all MP3 encoding/writing software, recording device, and recording media cannot be guaranteed. Incompatible MP3 discs may produce noise or interrupted audio or may not play at all.

 
Notes on playing multisession discs

- If the disc begins with a CD-DA (or MP3) session, it is recognized as a CD-DA (or MP3) disc, and other sessions are not played back.
- A disc with a mixed CD format is recognized as a CD-DA (audio) disc.

Listening to the radio

Before you can receive DAB, you must complete the DAB Automatic Scan procedure (see “To run the DAB Automatic Scan” (page 12)).

- 1 Select “DAB,” “FM” or “AM.”**
Press TUNER/BAND [9] repeatedly.
- 2 Select the tuning mode.**
Press TUNING MODE [22] repeatedly until “AUTO” appears.
- 3 Tune in the desired station.**
Press +/- (or TUNE +/- on the unit) [15]. Scanning stops automatically when a station is tuned in, and then “TUNED” and “ST” (for stereo programs only) appear.



When you tune in a DAB station or an FM station that provides RDS services, the service name or station name appears on the display.

- 4 Adjust the volume.**
Press VOLUME +/- (or VOL +/- on the unit) [16].

To stop automatic scanning (FM/AM bands only)

Press ■ [13].

To tune in a station with a weak signal (FM/AM bands only)

If “TUNED” does not appear and the scanning does not stop, press TUNING MODE [22] repeatedly until “AUTO” and “PRESET” disappear, and then press +/- (or TUNE +/- on the unit) [15] repeatedly to tune in the desired station.


To reduce static noise on a weak FM stereo station

Press FM MODE **[8]** repeatedly until “MONO” appears to turn off stereo reception.

Notes on listening to DAB stations

- When tuning in a DAB station, it may take a few seconds before you hear any sound.
- Primary service is automatically received when secondary service ends.

Listening to music of an USB device

You can connect an optional USB device (Digital music player or USB storage media) to the  (USB) port **[8]** on the unit and listen to music stored in the USB device. See “Playable USB devices” (page 30) for a list of USB devices that can be connected to this system.

The audio formats that can be played back by this system are as follows:
ATRAC/MP3*/WMA*/AAC*

* Files with copyright protection (Digital Rights Management) cannot be played by this system.


Files downloaded from an online music store may not be played by this system.

Continued 

1 Select the USB function.

Press USB [9].

2 Connect an optional USB device (Digital music player or USB storage media) to the \leftarrow (USB) port [8] as shown below.

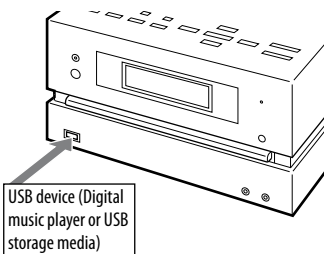

When USB cable connection is necessary, connect the USB cable supplied with the USB device to be connected.

See the operation manual supplied with the USB device to be connected for details on the operation method.

When the USB device is connected, the display changes as follows: "READING" → "ATRAC AD¹⁾" or "STORAGE DRIVE²⁾"

- ¹⁾ When connecting a digital music player.
- ²⁾ When connecting USB storage media. The volume label is displayed next if recorded.

Note

It may take about 10 seconds before "READING" appears depending on the type of USB device connected.

3 Start playback.

Press \blacktriangleright (or USB $\blacktriangleright\|$ on the unit) [9].

4 Adjust the volume.

Press VOLUME +/- (or VOL +/- on the unit) [16].

Other operation

To	Press
Pause playback	$\ $ (or USB $\blacktriangleright\ $ on the unit) [9]. To resume play, press the button again*.
Stop playback	\blacksquare [13]. To resume play, press \blacktriangleright (or USB $\blacktriangleright\ $ on the unit) [9]. To cancel resume play, press \blacksquare [13] again.
Select a folder	$\text{Folder icon} +/-$ [15].
Select a file	\lll / \ggg [15].
Find a point in a file	Hold down \lll / \ggg [15] during playback, and release the button at the desired point.
Select Repeat Play	REPEAT [18] repeatedly until "REP" or "REPI" appears.
Remove the USB device	Hold down \blacksquare [13] on the unit in stop mode until "NO DEVICE" appears, then remove the USB device.

* When playing a VBR MP3 file, the system may resume playback from a different point.

To change the play mode

Press PLAY MODE [22] repeatedly while the USB device is stopped. You can select normal play (" Folder icon " for all files in the folder on the digital music player), shuffle play ("SHUF" or " Folder icon SHUF"), or program play ("PGM").

Notes on the USB device

- Do not connect the system and the USB device through a USB hub.
- With some connected USB devices, after an operation is performed, there may be a delay before it is performed by this system.
- This system does not necessarily support all the functions provided in a connected USB device.
- The playback order for the system may differ from the playback order of the connected USB device.
- Always hold down **■** [13] and make sure that “NO DEVICE” appears before removing the USB device. Removing the USB device while “NO DEVICE” is not displayed may corrupt the data on it or damage the USB device itself.
- Do not save other types of files or unnecessary folders on a USB device that has audio files.
- Folders that have no audio files are skipped.
- Files are played back in the order that they are transferred to the USB device.
- The maximum numbers of folders and files that can be contained on a single USB device are as follows:
 - Digital music player: 65,535 groups (maximum 999 tracks per group)
 - USB storage media: 999 files
 The maximum number of files and folders may vary depending on the file and folder structure.
- The audio formats that you can listen to with this system are as follows:
 - MP3: file extension “.mp3”
 - Windows Media Audio file: file extension “.wma”
 - AAC: file extension “.m4a”
 Note that even when file names have the above file extensions, if the actual file differs, the system may produce noise or may malfunction.
- Compatibility with all encoding/writing softwares, recording devices, and recording media cannot be guaranteed. Incompatible USB device may produce noise or interrupted audio or may not play at all.

Using optional audio components

- 1 Connect additional audio component to the AUDIO IN jack [6] on the unit using an audio analog cord (not supplied).
- 2 Turn down the volume.
Press VOLUME – (or VOL – on the unit) [16].
- 3 Select the AUDIO IN function.
Press AUDIO IN [9] on the unit.
- 4 Start playing the connected component.
- 5 Adjust the volume.
Press VOLUME +/- (or VOL +/- on the unit) [16].

Adjusting the sound

To add a sound effect

To	Press
Generate a more dynamic sound (Dynamic Sound Generator X-tra)	DSGX [12] on the unit.
Set the sound effect	EQ [12] repeatedly to select "BASS" or "TREBLE," and then press +/- [15] repeatedly to adjust the level.

Changing the display

To	Press
Change information on the display ¹⁾	DISPLAY [10] repeatedly when the system is on.
Check the clock when the system is off	DISPLAY [10] when the system is off ²⁾ . The clock is displayed for 8 seconds.

¹⁾ For example, you can view CD/MP3 disc information or the USB device information, such as the track or file number or folder name during normal play, or the total playing time while the player is stopped. You can also view DAB station information such as the service name, channel label, preset number, frequency, DLS (Dynamic Label Segment), or ensemble label.

²⁾ The STANDBY indicator **[2]** on the unit lights up when the system is off.

Notes on the display information

- Characters that cannot be displayed appear as ".".
- The following are not displayed:
 - total playing time for a CD-DA disc depending on the play mode.
 - total playing time and remaining playing time for an MP3 disc and USB device.
- The following are not displayed correctly:
 - folder and file names that do not follow either the ISO9660 Level 1, Level 2 or Joliet in the expansion format.
- The following are displayed:
 - ID3 tag information for MP3 files when ID3 version 1 and version 2 tags are used (up to 62 characters for an MP3 disc).
 - ID3 tag information for "ATRAC" files when ID3 version 2 tags are used.
 - up to 8 characters of service name, up to 128 characters of DLS (Dynamic Label Segment) and up to 16 characters of ensemble label.

Other Operations

Creating your own program

(Program Play)

Use buttons on the remote to create your own program.

1 Select the desired function.

CD


Press CD [9] to select the CD function.

USB

 
Press USB [9] to select the USB function.

2 Press PLAY MODE [22] repeatedly until "PGM" appears while the system is stopped.

3 Press I◀◀/▶▶I [15] repeatedly until the desired track or file number appears.

When programming files, press  +/- [15] repeatedly to select the desired folder, and then select the desired file.

Example: When programming tracks on a CD



Selected track or file number

Total playing time of program (including selected track or file)

4 Press ENTER [14] to add the track or file to the program.

CD

"- .- -" appears when the total program time exceeds 100 minutes for a CD, or when you select a CD track whose number is 21 or over, or when you select an MP3 file.

USB

The total program time cannot be displayed, so "- .- -" appears.

5 Repeat steps 3 through 4 to program additional tracks or files, up to a total of 25 tracks or files.

6 To play your program of tracks or files, press ▶ [9].

The program remains available until you open the disc tray or remove the USB device. To play the same program again, press ▶ [9].

To cancel Program Play

Press PLAY MODE [22] repeatedly until "PGM" disappears while the system is stopped.


To delete the last track or file of the program

 
Press CLEAR [20] while the system is stopped.

 
Presetting radio stations

You can preset your favorite radio stations and tune them in instantly by selecting the corresponding preset number.

 
Use buttons on the remote to preset stations.

- 1 Tune in the desired station (see “Listening to the radio” (page 14)).
- 2 Press TUNER MEMORY .


 


- 3 Press +/-  repeatedly to select your desired preset number.

If another station is already assigned to the selected preset number, the station is replaced by the new stations.

- 4 Press ENTER .
- 5 Repeat steps 1 through 4 to store other stations.

You can preset up to 20 DAB, 20 FM and 10 AM stations. The preset stations are retained for about half a day even if you disconnect the power cord or if a power failure occurs.

- 6 To call up a preset radio station, press TUNING MODE  repeatedly until “PRESET” appears, and then press +/-  repeatedly to select the desired preset number.

Note on presetting DAB stations

You can preset a DAB service only when it can be received.

Using the Timers

The system offers two timer functions. If you use the Play Timer with the Sleep Timer, the Sleep Timer has priority.

Sleep Timer:

You can fall asleep to music. This function works even if the clock is not set.

Press SLEEP [23] repeatedly.

If you select "AUTO," the system automatically turns off after the current disc stops or in 100 minutes.

Play Timer:

You can wake up to CD, tuner or optional USB device at a preset time.

Use buttons on the remote to control the Play Timer. Make sure you have set the clock.

- 1 Prepare the sound source.
Prepare the sound source, and then press VOLUME +/- [16] to adjust the volume.
To start from a specific track or file, create your own program (page 19).
- 2 Press CLOCK/TIMER SET [17].
- 3 Press ◀▶/▶▶ [15] repeatedly to select "PLAY SET," and then press ENTER [14].
"ON" appears, and the hour indication flashes.
- 4 Set the time to start playing.
Press ◀▶/▶▶ [15] repeatedly to set the hour, and then press ENTER [14].
The minute indication flashes. Use the procedure above to set the minutes.

- 5 Use the same procedure as in step 4 to set the time to stop playing.
- 6 Select the sound source.
Press ◀▶/▶▶ [15] repeatedly until the desired sound source appears, and then press ENTER [14]. The display shows the timer settings.
- 7 Press I/⏻ [1] to turn off the system.
The system turns on 15 seconds before the preset time. If the system is on at the preset time, the Play Timer will not play.

To activate or check the timer again

Press CLOCK/TIMER SELECT [17], press ◀▶/▶▶ [15] repeatedly until "PLAY SEL" appears, and then press ENTER [14].

To cancel the timer

Repeat the same procedure as above until "TIMER OFF" appears, and then press ENTER [14].

To change the setting

Start over from step 1.

Tip

The Play Timer setting remains as long as the setting is not canceled manually.

Troubleshooting

- 1 Make sure the power cord and speaker cords are correctly and firmly connected.
- 2 Find your problem in the checklist below, and take the indicated corrective action.
If the issue persists, contact your nearest Sony dealer.

If the STANDBY indicator flashes

Immediately unplug the power cord, and check the following items.

- If your system has a voltage selector, is the voltage selector set to the correct voltage?
- Are you using only the supplied speakers?
- Is anything blocking the ventilation holes on the top or back of the system?

After the STANDBY indicator **2** stops flashing, reconnect the power cord, and turn on the system. If the issue persists, contact your nearest Sony dealer.

General

Sound comes from one channel, or the left and right volumes are unbalanced.

- Place the speakers as symmetrically as possible.
- Connect only the supplied speakers.

Severe hum or noise.

- Move the system away from sources of noise.
- Connect the system to a different wall socket.
- Install a noise filter (available separately) to the power cord.

The remote does not function.

- Remove any obstacles between the remote and the remote sensor **3** on the unit, and position the unit away from fluorescent lights.
- Point the remote at the system's sensor.
- Move the remote closer to the system.

CD/MP3 player

The sound skips, or the disc will not play.

- Wipe the disc clean, and replace it.
- Move the system to a location away from vibration (for example, on top of a stable stand).
- Move the speakers away from the system, or place them on separate stands. At high volume, speaker vibration may cause the sound to skip.

Play does not start from the first track.

- Press PLAY MODE **22** repeatedly until both "PGM" and "SHUF" disappear to return to normal play.

Starting playback takes more time than usual.

- The following discs take a longer time to start playback.
 - a disc recorded with a complicated tree structure.
 - a disc recorded in multisession mode.
 - a disc that has not been finalized (a disc to which data can be added).
 - a disc that has many folders.

USB device

Are you using a supported USB device?

- If you connect an unsupported USB device, the following problems may occur. See “Playable USB devices” (page 30) for the supported device types.
 - The USB device is not recognized.
 - File or folder names are not displayed on this system.
 - Playback is not possible.
 - The sound skips.
 - There is noise.

“OVER CURRENT” appears.

- A problem has been detected with the level of electrical current from the USB (USB) port [8]. Turn off the system and remove the USB device from the USB (USB) port [8]. Make sure there is no problem with the USB device. If this display pattern persists, contact your nearest Sony dealer.

There is no sound.

- The USB device is not connected correctly. Turn off the system, then reconnect the USB device and check if the USB MEMORY indicator [5] lights up.

The sound is distorted.

- The bit rate used when encoding the files was low. Send files encoded with higher bit rates to the USB device.

There is noise or the sound skips.

- Turn off the system, then reconnect the USB device.
- The music data itself contains noise. Noise may have been introduced when creating music data due to the conditions of the computer. Create the music data again.

- When using the USB storage media, copy the files to your computer, format the USB storage media in FAT16 or FAT32 format, and copy the files to the USB storage media again.*

The USB device cannot be connected into the USB (USB) port [8].

- The USB device is being connected backwards. Connect the USB device in the correct orientation.

The USB storage media which has been used on another device does not work.

- It may be recorded in an unsupported format. If so, first take the precaution of backing up important files on the USB storage media by copying them to your computer hard disk. Next, format the USB storage media with a FAT16 or FAT32 file system and transfer the backed-up audio files onto the USB storage media again.*

“READING” is displayed for a long time.

- It may take a while to finish reading the USB device if there are many folders or files on it. Thus, we recommend following these guidelines.
 - Total folders on USB device: 100 or less
 - Total files per folder: 100 or less

Erroneous display

- Send the music data to the USB device again, as the data stored in the USB device may have been corrupted.

Play does not start.

- Turn off the system, then reconnect the USB device.
- Connect the USB device that this system can play.
- Press ► (or USB ►|| on the unit) [9] to start play.

Continued 

Play does not start from the first track.

- Set the play mode to Normal Play mode.

Files cannot be played back.

- USB storage media formatted with file systems other than FAT16 or FAT32 are unsupported.*
- If you use partitioned USB storage media, only files on the first partition can be played.
- Files that are encrypted or protected by passwords, etc. cannot be played back.

* This system supports FAT16 and FAT32, but some USB storage media may not support all of these FAT. For details, see the operation manual of each USB storage media or contact the manufacturer.

Tuner

Severe hum or noise, or stations cannot be received. ("TUNED" or "ST" flashes on the display.)

- Connect the antenna properly.
- Find a location and an orientation that provide good reception, and then set up the antenna again.
- Keep the antennas away from the speaker cords, the power cord and the USB cable to avoid picking up noise.
- Connect a commercially available external antenna.
- Consult your nearest Sony dealer if the supplied AM antenna has come off the plastic stand.
- Turn off nearby electrical equipment.

"TUNED" does not appear in the display (DAB only).

- Check all antenna connections, then perform the DAB Automatic Scan procedure (see page 12).
- The current DAB service may not be available. Press +/- (or TUNE +/- on the unit) **15** to select a different service.

- If you have moved to another area, some services/frequencies may have changed and you may not be able to tune into your usual broadcast. Perform the DAB Automatic Scan procedure to re-register the contents of broadcasts. (Performing this procedure clears all previously stored presets.)

To improve tuner reception

Turn off CD player power by using the CD power management function. By default, CD power is turned on.

- 1** Press FUNCTION **9** repeatedly to select the CD function, and then turn off the system.
- 2** After "STANDBY" stops flashing, press I/⏏ **1** on the unit while holding down ■/CANCEL **13** on the unit. "CD POWER OFF" appears. With CD player power turned off, disc access time is increased. To turn on CD player power, repeat the procedure until "CD POWER ON" appears.

To reset the system to factory settings

If the system still does not operate properly, reset the system to factory settings.

Use buttons on the unit to reset the system to its factory default settings.

- 1** Disconnect and reconnect the power cord, and then turn on the system.
- 2** Press **15** - **15**, ■/CANCEL **13** and I/⏏ **1** at the same time.
All user-configured settings, such as preset radio stations, timer, and the clock, are deleted.

Messages

CD/MP3 player, Tuner

CD OVER: You have reached the end of the disc while pressing ►► [15] during playback or pause.

COMPLETE: The preset operation ended normally.

INVALID: You pressed an invalid button.

LOCKED: The disc tray does not open. Contact your nearest Sony dealer.

NO DISC: There is no disc in the system, or you have loaded a disc that cannot be played.

NO PRESET (DAB only): There is no stored preset station.

NO SERV (DAB only): There is no supported DAB broadcast in your country or region.

NO STEP: All of the programmed tracks or files have been erased.

NO TEXT (DAB only): There is no text information in the received service.

PUSH SELECT: You tried to set the clock or timer during timer operation.

PUSH STOP: You pressed PLAY MODE [22] during playback.

READING: The system is reading information of the disc. Some buttons are not available.

SET CLOCK: You tried to select the timer when the clock is not set.

SET TIMER: You tried to select the timer when the Play Timer is not set.

STEP FULL: You tried to program more than 26 tracks or files (steps).

TIME NG: The Play Timer start and end times are set to the same time.

USB device

ATRAC AD: An ATRAC Audio Device is connected.

ERROR: The USB device could not be recognized or an unknown device is connected.

INVALID: You have made an invalid or currently prohibited operation.

NO DEVICE: No USB device is connected or the connected USB device has been stopped.

NO STEP: All of the programmed tracks or files have been erased.

NO TRACK: No playable file is loaded in the system.

NOT SUPPORTED: An unsupported USB device is connected.

PLEASE WAIT: The system is readying for usage of an USB device.


 


 


 
 

 
 
 
 
 
 
 
 
 
 
 


 

 
READING: The system is recognizing the USB device.

REMOVED: The USB device has been removed.

STEP FULL: You tried to program more than 26 tracks or files (steps).

STORAGE DRIVE: USB storage media is connected.

Display examples

Display	indicates
	2 (two)
	5 (five)
	6 (six)
	8 (eight)
	0 (zero)
	A
	B
	D
	G
	H
	K
	M
	O
	Q
	R
	S
	Z
	
	”
	\$
	%
	,
	.
	?
	@
	^

Precautions

Discs that this system CAN play

- Audio CD
- CD-R/CD-RW (audio data/MP3 files)

Discs that this system CANNOT play

- CD-ROM
- CD-R/CD-RW other than those recorded in music CD format or MP3 format conforming to ISO9660 Level 1/Level 2, Joliet or multisession
- CD-R/CD-RW recorded in multisession that have not ended by “closing the session”
- CD-R/CD-RW of poor recording quality, CD-R/CD-RW that have scratches or are dirty, or CD-R/CD-RW recorded with an incompatible recording device
- CD-R/CD-RW which is finalized incorrectly
- Discs containing files other than MPEG 1 Audio Layer-3 (MP3) files
- Discs of non-standard shape (for example, heart, square, star)
- Discs that have adhesive tape, paper, or sticker attached to them
- Rental or used discs with attached seals where the glue extends beyond the seal
- Discs that have labels printed using ink that feels tacky when touched

Notes on discs

- Before playing, wipe the disc with a cleaning cloth from the center out to the edge.
- Do not clean discs with solvents, such as benzene thinner, or commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose discs to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight.

On safety

- Completely disconnect the power cord (mains lead) from the wall socket (mains) if it is not going to be used for an extended period of time. When unplugging the unit, always grip the plug. Never pull the cord itself.
- Should any solid object or liquid get into the system, unplug the system, and have it checked by qualified personnel before operating it again.
- The AC power cord can be changed only by a qualified service facility.

On placement

- Do not place the system in an inclined position or in locations that are extremely hot, cold, dusty, dirty, or humid or lacking adequate ventilation, or subject to vibration, direct sunlight or a bright light.
- Be careful when placing the unit or speakers on surfaces that have been specially treated (for example, with wax, oil, polish) as staining or discoloration of the surface may result.
- If the system is brought directly from a cold to a warm location or is placed in a very damp room, moisture may condense on the lens inside the CD player, and cause the system to malfunction. In this situation, remove the disc, and leave the system turned on for about an hour until the moisture evaporates.

On heat buildup

- Heat buildup on the unit during operation is normal and is not cause for alarm.
- Do not touch the cabinet if it has been used continuously at a high volume because the cabinet may have become hot.
- Do not obstruct the ventilation holes.

On the speaker system

This speaker system is not magnetically shielded, and the picture on nearby TV sets may become magnetically distorted. In this situation, turn off the TV, wait 15 to 30 minutes, and turn it back on. If there is no improvement, move the speakers far away from the TV.

Cleaning the cabinet

Clean this system with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as thinner, benzene, or alcohol.

Specifications

Main unit

Amplifier section

DIN power output (rated):
18 + 18 watts (6 ohms at 1 kHz, DIN)
Continuous RMS power output (reference):
25 + 25 watts (6 ohms at 1 kHz, 10% THD)
Music power output (reference):
38 + 38 watts (6 ohms at 1 kHz, 10% THD)
Inputs:

AUDIO IN (stereo mini jack):
voltage 250 mV, impedance
47 kilohms
• (USB) port: Type A, maximum
current 500 mA

Outputs:

PHONES (stereo mini jack): accepts
headphones of 8 ohms or more
SPEAKER: accepts impedance of 6 to
16 ohms

USB section

Supported bit rate

MP3 (MPEG 1 Audio Layer-3):
32 — 320 kbps, VBR
ATRAC: 48 — 352 kbps
(ATRAC3plus), 66/105/132 kbps
(ATRAC3)
WMA: 32 — 192 kbps, VBR
AAC: 48 — 320 kbps

Sampling frequencies

MP3 (MPEG 1 Audio Layer-3):
32/44.1/48 kHz
ATRAC: 44.1 kHz
WMA: 44.1 kHz
AAC: 44.1 kHz

CD player section

System: Compact disc and digital audio
system

Laser Diode Properties

Emission duration: continuous
Laser Output*: Less than 44.6 μ W
* This output is the value measurement
at a distance of 200mm from the
objective lens surface on the Optical
Pick-up Block with 7mm aperture.

Frequency response: 20 Hz — 20 kHz
Signal-to-noise ratio: More than 90 dB
Dynamic range: More than 90 dB

Tuner section

DAB tuner section:

Frequency range*
Band-III: 174.928 (5A) — 239.200
(13F) MHz
* For details, see "DAB frequency table"
(page 29).

Antenna: FM/DAB lead antenna
Antenna terminal: 75 ohms, F female

FM stereo, FM/AM superheterodyne tuner

FM tuner section:

Tuning range: 87.5 — 108.0 MHz (50 kHz
step)

Antenna: FM lead antenna
Antenna terminals: 75 ohms unbalanced
Intermediate frequency: 10.7 MHz

AM tuner section:

Tuning range: 531 — 1,602 kHz (with 9 kHz
tuning interval)

Antenna: AM loop antenna, external
antenna terminal
Intermediate frequency: 450 kHz

DAB frequency table (Band-III)

Frequencies are displayed to two decimal places on this system.

Frequency	Label	Frequency	Label
174.928 MHz	5A	209.936 MHz	10A
176.640 MHz	5B	211.648 MHz	10B
178.352 MHz	5C	213.360 MHz	10C
180.064 MHz	5D	215.072 MHz	10D
181.936 MHz	6A	216.928 MHz	11A
183.648 MHz	6B	218.640 MHz	11B
185.360 MHz	6C	220.352 MHz	11C
187.072 MHz	6D	222.064 MHz	11D
188.928 MHz	7A	223.936 MHz	12A
190.640 MHz	7B	225.648 MHz	12B
192.352 MHz	7C	227.360 MHz	12C
194.064 MHz	7D	229.072 MHz	12D
195.936 MHz	8A	230.784 MHz	13A
197.648 MHz	8B	232.496 MHz	13B
199.360 MHz	8C	234.208 MHz	13C
201.072 MHz	8D	235.776 MHz	13D
202.928 MHz	9A	237.488 MHz	13E
204.640 MHz	9B	239.200 MHz	13F
206.352 MHz	9C		
208.064 MHz	9D		

Speaker

Speaker system: Full Range 10 cm, cone type

Nominal impedance: 6 ohms

Dimensions (w/h/d): Approx. 140 × 245 × 210 mm

Mass: Approx. 1.9 kg net per speaker

General

Power requirements: 230 V AC, 50/60 Hz

Power consumption: 65 watts

Dimensions (w/h/d) (excl. speakers):

Approx. 200 × 132 × 298 mm

Mass (excl. speakers): Approx. 3.7 kg

Supplied accessories: Remote Commander (1), R6 (Size AA) batteries (2), AM loop antenna (1), FM/DAB lead antenna (2)

Design and specifications are subject to change without notice.



- Standby power consumption: 0.5 W
- Halogenated flame retardants are not used in the certain printed wiring boards.
- Halogenated flame retardants are not used in cabinets.

Playable USB devices

You can play back the following Sony USB devices on this system. Other USB devices cannot be played back on this system.

Verified Sony digital music player (as of January 2007)

Product name	Model name
Walkman®	NW-E103 / E105 / E107
	NW-E205 / E207
	NW-E303 / E305 / E307
	NW-E403 / E405 / E407
	NW-E503 / E505 / E507
	NW-E002 / E002F / E003 / E003F / E005 / E005F
	NW-A605 / A607 / A608
	NW-A1000 / A1200 / A3000
	NW-HD5
	NW-S603 / S605 / S703F / S705F / S706F
	NW-S202 / S202F / S203F / S205F

Verified Sony USB storage media (as of January 2007)

Product name	Model name
MICROVAULT	USM512EX / 1GEX / 2GEX
	USM128J / 256J / 512J / 1GJ / 2GJ / 4GJ / 8GJ
	USM512JX / 1GJX / 2GJX / 4GJX
	USM256H / 512H / 1GH / 2GH / 4GH
	USD2G / 4G / 5G / 8G

Check the websites below for the latest information about compatible devices.

For customers in the U.S.A.:

<<http://www.sony.com/shelfsupport>>

For customers in Canada:

English <<http://www.sony.ca/ElectronicsSupport/>>

French <<http://fr.sony.ca/ElectronicsSupport/>>

For customers in Europe:

<<http://sonydigital-link.com/dna>>

For customers in Latin America:

<<http://www.sony-latin.com/pa/info>>

For customers in Asia and Oceania:

<<http://www.css.ap.sony.com/>>

Notes

- Do not use USB devices other than these USB devices. Operation of models not listed here is not guaranteed.
- Operation may not always be ensured even when using these USB devices.
- Some of these USB devices may not be available for purchase in certain areas.

Notes on Walkman

- You cannot play back Linear PCM audio on this system.
- You cannot play back the ATRAC Advanced Lossless audio format on this system.
- You cannot play back music recorded directly to a Walkman without using a computer on this system.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>