# SONY

# **Micro HI-FI Component System**

**Operating Instructions** 

# CMT-CPZ1DAB

© 2006 Sony Corporation Printed in China http://www.sony.net/

# WARNING

Speakers

Antennas

DAB external antenna.

settings.

Find a location and an orientation that provide

Keep the antenna away from the speaker cords and

With a DAB external antenna (not supplied), you

We recommend that you use the supplied FM/DAB

can obtain higher DAB broadcast sound quality.

lead antenna only temporarily until you install a

Before unplugging the DAB antenna, make sure

the system is turned off to preserve your own DAB

good reception, and then set up the antenna.

the power cord to avoid picking up noise.

speakers to prevent slipping.

#### To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not place objects filled with liquids, such as vases, on the apparatus. Connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Do not expose batteries or apparatus with batteryinstalled to excessive heat such as sunshine, fire or the like.

# Hooking up the system securely

Attach the supplied speaker pads to the bottom of the



as a CLASS 1 LASER product. This marking s located on the rear

#### **European model only** Excessive sound pressure from earphones and headphones can cause hearing loss.

### Notice for customers: the following information is only applicable to equipment sold in countries applying EU Directives

The manufacturer of this product is Sony Corporation, 1-7-1 Konan, Minato-ku, Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

AM loop antenna

FM/DAB lead antenn

(Extend it horizontally.)

To DAB external antenna 🗲

(not supplied)

FM/DAB lead antenna

(Extend it horizontally

Connect brown sid



**Disposal of Old Electrical & Electronic** (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product

Applicable accessories: Remote commander


### Note on DualDiscs


A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

#### Music discs encoded with copyright protection technologies

This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

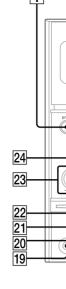

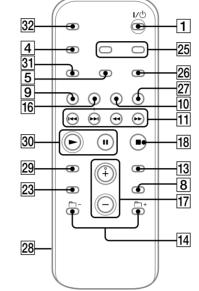

# To use the remote



# Notes on using the remote

1 Press I/(<sup>1</sup>) (power) 1 to turn on the system, then press FUNCTION 8 repeatedly to switch the

When carrying this system

protect the CD mechanism

4 Unplug the power cord.

procedure

Power

Wall socke

Connect the power cord to a wall socket.

If the plug does not fit the wall socket, detach the supplied

plug adaptor (only for models equipped with an adaptor).

function to CD.

Use buttons on the unit to perform the following

2 Make sure that no disc is loaded in the disc slot to

3 Hold down ■ (stop)/CANCEL 18 and then press DSGX 24 and □ + 14 until "LOCK" appears.

# To set the clock

- 1 Turn on the system. Press  $I/\bigcirc$  (power) **1**. Select the clock set mode.
- 3 Set the time

perform the procedure below.

remote) 13.



is created.

- 75-ohm coaxial cable with F male type connector (not supplied)

Connect white side

SPEAKER




2-691-497-**14**(1)






# **Basic Operations**

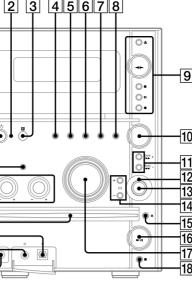

### Before using the system

Slide and remove the battery compartment lid 28, and insert the two supplied R6 (size AA) batteries,  $\overline{ullet}$  side first, matching the polarities shown below.

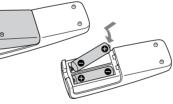

• With normal use, the batteries should last for about six months. • Do not mix an old battery with a new one or mix different types of

• If you do not use the remote for a long period of time, remove the batteries to avoid damage from battery leakage and corrosion.

Press CLOCK/TIMER SET 25 on the remote. If the current mode appears on the display, press 11 on the remote repeatedly to select "CLOCK SET?" and then press ENTER **13** on the remote.

Press | | | | on the remote repeatedly to set the hour, and then press ENTER **13** on the remote. Use the same procedure to set the minute. The clock settings are lost when you disconnect the power cord or if a power failure occurs.

#### To run the DAB Automatic Scan

When you turn on the system for the first time after you purchase the system, DAB Automatic Scan starts automatically and creates a list of available services. If you want to run the DAB Automatic Scan again,

**1** Press DAB AUTO SCAN **6** on the unit.

"DAB Auto Scan? Push ENTER" appears.

2 Press PUSH ENTER on the unit (or ENTER on the

Scanning begins. "DAB Auto Scan" appears. Depending on the DAB services available in your area, scanning may take a few minutes.



When scanning is complete, a list of available services

• If your country or region does not support DAB broadcast, "No

Service" appears. • Do not press any button on the unit or the remote during DAB

Automatic Scan. Scanning is interrupted and service list may not be created properly. In this case, run the DAB Automatic Scan again.

• If you move to another area, repeat this procedure to store the stations for your new area.This procedure clears all previously stored presets.

• Before unplugging the DAB antenna, make sure the system is turned

off to preserve your own DAB settings.

This tuner does not support data services.

#### Selecting a music source

Press the following buttons (or press FUNCTION 8 repeatedly).

To select	Press
CD	CD 16 on the remote.
Tuner	TUNER/BAND 10.
DAB	DAB 27 on the remote.
Таре	TAPE <b>9</b> on the remote.
Component (connected using an audio cord)	FUNCTION <b>8</b> repeatedly until "MD" appears.

## Adjusting the sound

#### To adjust the volume Press VOLUME +/- on the remote (or turn the VOLUME control on the unit) 17

#### To add a sound effect

io add a sound che	
То	Press
Generate a more dynamic sound (Dynamic Sound Generator X-tra)	DSGX 🛿 on the unit.
Set the sound effect	EQ 23 on the remote repeatedly to select "BASS" or "TREBLE," and then

press +/- **11** on the remote

repeatedly (or turn the BASS

or TREBLE control 23 on the unit) to adjust the level.

### Playing a CD/MP3 disc

- **1** Select the CD function.
- Press CD 16 on the remote.
- **2** Load a disc.

Insert a disc in the disc slot 22 with the label side up.



3 Start playback. Press  $\blacktriangleright$  (play) 30 on the remote (or CD  $\blacktriangleright$ II (play/ pause) **16** on the unit).

То	Press
Pause playback	II (pause) 30 on the remote (or CD ►II (play/pause) 16 on the unit). To resume play, press the button again.
Stop playback	■ (stop) <b>18</b> .
Remove a disc	Press CD ▲ (eject) 15 on the unit.
Select a group on an MP3 disc	+/- 14. Or turn the jog dial 12 on the unit and press PUSH ENTER 13 on the unit (turn the jog dial 12 on the unit during playback until "GROUP" appears and then press PUSH ENTER 13 on the unit to select the desired group).
Select a track or file	<ul> <li>Ideal (go back/go forward)</li> <li>[1]. Or turn the jog dial [12] on the unit and press PUSH ENTER</li> <li>[13] on the unit. To cancel, press CANCEL [18] on the unit.</li> </ul>
Find a point in a track or file	Hold down ◀◀/▶▶ (rewind/ fast forward) 11 during playback, and release the button at the desired point.
Select Repeat Play	REPEAT 26 on the remote repeatedly until "REP" or "REP 1" appears.

#### To change the play mode

Press PLAY MODE **5** repeatedly while the player is stopped. You can select normal play (""" for all MP3 files in the group on the disc), shuffle play ("SHUF" or " SHUF\*"), or program play ("PGM"). When playing a CD-DA disc, 🛅 (SHUF) Play performs the same operation as SHUF Play.

#### Notes on loading disc

 When you turn on the system, the disc is not pulled into the disc slot until "No Disc" appears in the display. Do not attempt to push in the disc until "No Disc" appears.

- If you load a disc that is not playable by this system, it will be ejected automatically.
- Do not load an 8 cm disc with an adaptor. Doing so may cause the system to malfunction. • When you remove a disc, handle the disc by its edge and pull it straight out of the disc slot. Do not touch the surface
- Note on the jog dial

Only the first 9 characters are displayed when performing the group search, track search, or file search.

#### Notes on Repeat Play

• All tracks or files on a disc are played repeatedly up to five times. • "REP 1" indicates that a single track or file is repeated until you stop

#### Notes on playing MP3 discs

- types of files or unnecessary groups on a disc that Do not save other has MP3 files. • Groups that have no MP3 files are skipped.
- MP3 files are played back in the order that they are recorded onto the disc.
- The system can only play MP3 files that have a file extension of

• If there are files on the disc that have the ".MP3" file extension, but that are not MP3 files, the unit may produce noise or may

- malfunction. • The maximum number of
- -groups is 256 (including the root folder).
- -MP3 files is 511. -MP3 files and groups that can be contained on a single disc is 512.
- -directory levels (the tree structure of files) is 8. • Compatibility with all MP3 encoding/writing software, recording
- device, and recording media cannot be guaranteed. Incompatible MP3 discs may produce noise or interrupted audio or may not play

#### Notes on playing multisession discs

at all.


• If the disc begins with a CD-DA (or MP3) session, it is recognized as a CD-DA (or MP3) disc, and other sessions are not played back. • A disc with a mixed CD format is recognized as a CD-DA (audio)

### Listening to the radio

Before you can receive DAB, you must complete the DAB Automatic Scan procedure (see "Before using the system").

- 1 Select "DAB," "FM" or "AM." Press TUNER/BAND 10 repeatedly. You can also select DAB directly by pressing DAB 27 on the
- remote. **2** Select the tuning mode.
- Press TUNING MODE **5** repeatedly until "AUTO"
- appears **3** Tune in the desired station.

Press +/- on the remote (or TUNING +/- on the unit) 11. Scanning stops automatically when a station is tuned in, and then "TUNED" and "STEREO" (for stereo programs) appear.

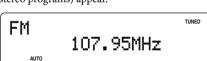

When you tune in a DAB station or an FM station that provides RDS services, the service name or station name appears on the display.

#### To stop automatic scanning (FM/AM bands only)

Press (stop) 18 on the remote.

#### To tune in a station with a weak signal (FM/AM

bands only) If "TUNED" does not appear and the scanning does not stop, press TUNING MODE **5** repeatedly until "AUTO" and "PRESET" disappear, and then press +/- on the remote (or TUNING +/- on the unit) 11 repeatedly to tune in the desired station.

#### To reduce static noise on a weak FM stereo

station Press FM MODE **26** on the remote repeatedly until "MONO" appears to turn off stereo reception.

#### Notes on listening to DAB stations

•When tuning in a DAB station, it may take a few seconds before you hear any sound. • Primary service is automatically received when secondary service

## Playing a tape

ends

**1** Select the tape function.

Press TAPE **9** on the remote.

- **2** Insert a tape.
- Press TAPE  $\triangleq$  (eject) 9 on the unit, and load a TYPE I (normal) tape into the cassette holder with the side you want to play facing forward. Make sure there is no slack in the tape to avoid damaging the tape or the tape deck.
- **3** Press DIRECTION **5** on the unit repeatedly to select " $\overrightarrow{\phantom{a}}$ " to play one side. Select " $\overrightarrow{\phantom{a}}$ " or " $(\overrightarrow{\phantom{a}})$ " to play both sides.

#### **4** Start playback.

Press  $\blacktriangleright$  (play) 30 on the remote (or TAPE  $\triangleleft$ (play) 9 on the unit). Press the button again to play the reverse side.

Го	Press
Pause playback	<ul> <li>II (pause) 30 on the remote (or TAPE II (pause) 9 on the unit).</li> <li>To resume play, press the button again.</li> </ul>
Stop playback	(stop) $\boxed{18}$ on the remote (or TAPE $\blacksquare$ (stop) $\boxed{9}$ on the unit).
Rewind or fast forward	✓ → (rewind/fast forward) 11.

### Changing the display

o change	Press
nformation on he display*	DISPLAY $\boxed{4}$ repeatedly when the system is on.
Display mode See below.)	DISPLAY 4 repeatedly when the system is off.
name (during norr is stopped) —DAB station inforr preset number, free ensemble label	n view: rmation such as the track or file number, group nal play), or the total play time (while the player nation such as the service name, channel label, quency, DLS (Dynamic Label Segment), or the following display modes.
N I	

Display mode	When the system is off, <sup>1)</sup>
Clock	The clock is displayed.
Power Saving	The display is turned off to conserve
Mode <sup>2)</sup>	power. The timer and clock continue
	to operate.

<sup>1)</sup> The STANDBY indicator lights up when the system is off. <sup>2)</sup> When the system is in Power Saving Mode, the following function are unavailab -setting the clock

-total playing time for a CD-DA disc depending on the play mode.

-elapsed playing time of an MP3 file encoded using a VBR (variable

-group and file names that do not follow either the ISO9660 Level

-ID3 tag information for MP3 files when ID3 version 1 and version

–up to 124 characters of ID3 tag information using uppercase letters (A to Z), lower-case letters (a to z), numbers (0 to 9), and

symbols (! " # \$ % & ' ( ) \* + , - . / : ; < = > ? @ [ \ ] ^ ` { | } ~).

-up to 16 characters of service name, up to 128 characters of DLS

(Dynamic Label Segment) and up to 16 characters of ensemble

Using optional audio components

Connect headphones to the PHONES jack **19** on the

To connect an optional analog component

Connect additional analog component to the ANALOG

IN jack 20 on the unit using an audio analog cord (not

supplied). Turn down the volume on the system, and

then press FUNCTION **8** repeatedly to select "MD".

Connect a component with a digital optical input jack

to the CD DIGITAL OUT jack 21 on the unit using

a digital optical cord (square, not supplied). You can

digitally record from a CD-DA disc onto the connected

You cannot make a digital recording of copy guarded discs and MP3

tracks using a digital component connected to this system

To connect an optional digital component

To connect an optional headphones

label using upper case letters (A to Z), lower-case letters (a to z), numbers (0 to 9), and symbols (! " # \$ % & ' () \* + , - . / :; < = > ?

-changing the CD power manage function.

Notes on the display information

-total playing time for an MP3 disc.

-remaining playing time for an MP3 file

1, Level 2 or Joliet in the expansion format.

The following are not displayed correctly;

• The following are not displayed;

• The following are displayed;

2 tags are used.

@[\]^\_`{|}~).


unit

component.

bit rate).

# Creating your own CD program (Program Play)

- Use buttons on the remote to create your own program. 1 Press CD 16 to select the CD function.
- 2 Press PLAY MODE 5 repeatedly until "PGM" appears while the player is stopped.
- 3 Press I / II repeatedly until the desired track number appears. When programming MP3 files, press 📇 +/- 14
- repeatedly to select the desired group, and then select the desired file

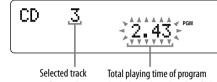

(including selected track or file) or file number

4 Press ENTER 13 to add the track or file to the program.

"- - -" appears when the total time exceeds 100 minutes for a disc, or when you select a CD track whose number is 21 or over, or when you select an MP3 file.

- **5** Repeat steps 3 through 4 to program additional tracks or files, up to a total of 25 tracks or files.
- 6 To play your program of tracks or files, press ► (plav) 30
- The program remains available until you eject the disc. To play the same program again, select the CD function, and press  $\blacktriangleright$  (play) 30.

# To cancel Program Play

Press PLAY MODE **5** repeatedly until "PGM" disappears while the player is stopped.

To delete the last track or file of the program Press CLEAR **29** while the player is stopped.

To view program information, such as total track number of the program Press DISPLAY 4 repeatedly.

You can also use the jog dial 12 on the unit to select files in step 3. Turn the jog dial 12 and press PUSH ENTER 13 on the unit to select the desired group, and then select the desired fil

# Presetting radio stations

You can preset your favorite radio stations and tune them in instantly by selecting the corresponding preset number

Use buttons on the remote to preset stations.

1 Tune in the desired station (see "Listening to the

2 Press TUNER MEMORY 31.



**3** Press +/- **11** repeatedly to select your desired preset number. If another station is already assigned to the selected

preset number, the station is replaced by the new stations.

- 4 Press ENTER 13.
- **5** Repeat steps 1 through 4 to store other stations. You can preset up to 20 DAB, 20 FM and 10 AM stations. The preset stations are retained for about half a day even if you disconnect the power cord or if a power failure occurs.
- **6** To call up a preset radio station, press TUNING MODE **5** repeatedly until "PRESET" appears, and then press +/-11 repeatedly to select the desired preset station

### Note on presetting DAB stations

You can preset a DAB service only when it can be received.

# **Recording onto a tape**

You can record on a TYPE I (normal) tape in two ways: CD Synchro Recording:

You can record an entire CD onto a tape.

- Manual Recording: You can record just the portions you like from a sound source, including connected audio components.
- Use buttons on the unit to control tape recording. 1 Load a recordable tape with the side you want to
- record facing forward. **2** Prepare the tape deck for recording.
- Press FUNCTION **8** repeatedly to select the tape function.
- Press DIRECTION **5** on the unit repeatedly and select " $\rightleftharpoons$ " to record on one side, or " $\rightleftharpoons$ " or " $\rightleftharpoons$ " or " $\rightleftharpoons$ " to record on both sides To switch the recording sides of the tape, press
- TAPE  $\checkmark$  (play)  $\bigcirc$  repeatedly (" $\blacktriangleright$ " appears for recording on the front, and "◀" for the reverse side), and then press TAPE  $\blacksquare$  (stop) 9.
- **3** Prepare the recording source. For CD Synchro Recording: Press FUNCTION **8** repeatedly to select the CD function.
- Load the disc you want to record. When recording a group from an MP3 disc, press PLAY MODE 5 repeatedly to select "," and then press  $\square +/- 14$  repeatedly to select the desired
- To record only your favorite CD tracks in your desired order, perform steps 2 through 5 of "Creating your own CD program.
- For Manual Recording: Select the desired source to record.
- 4 Set the tape deck to stand by for recording. For CD Synchro Recording: Press CD SYNCHRO 7 For Manual Recording:
- Press TAPE REC 9. **5** Start recording.
- While recording, you cannot listen to other sources.
- For CD Synchro Recording: Press TAPE **II** (pause) **9**. When the recording is completed, the CD player and the tape deck stop automatically. If both sides of the tape are being recorded on, and the tape reaches the end of the front side part-way through a track, the entire track is recorded again from the beginning of the reverse side. For Manual Recording:
- Press TAPE **II** (pause) **9**, and then start playing the desired recording source. If there is noise while recording from the tuner,
- reposition the appropriate antenna to reduce the noise.

# To stop recording

Press TAPE (stop) 9 or CD (stop) 18 (for CD Synchro Recording only).

#### To pause recording (Manual Recording only) Press TAPE **II** (pause) **9**.

• Recording stops if you change to a different function. • You cannot eject the disc during CD Synchro Recording.

Tips • If you stop the CD Synchro Recording by pressing CD  $\blacksquare$  (stop)  $\boxed{18}$ , the tape stops after making about a 4 seconds blank (un

space before stopping. • When you record on both sides, be sure to start from the front side. If you start from the reverse side, recording stops at the end of the reverse side.

# Using the Timers

The system offers three timer functions. You cannot activate both the Play Timer and the Rec Timer at the same time. If you use either with the Sleep Timer, the Sleep Timer has priority.

# Sleep Timer:

You can fall asleep to music. This function works even if the clock is not set. Press SLEEP 32 on the remote repeatedly. If you select "AUTO," the system automatically turns off after the

# **Play Timer:**

You can wake up to CD, tape or tuner at a preset time.

current disc or tape stops or in 100 minutes.

### **Rec Timer:**

You can record a preset radio station at a specified time. Use buttons on the remote to control the Play Timer and the Rec Timer. Make sure you have set the clock.

- **1** Prepare the sound source.
- For Play Timer:
- Prepare the sound source, and then press VOLUME +/- 17 to adjust the volume.
- To start from a specific CD track or MP3 file, create your own CD program.
- For Rec Timer:
- Tune in the preset radio station.
- 2 Press CLOCK/TIMER SET 25.

- 3 Press I / II repeatedly to select "PLAY SET?" or "REC SET?" then press ENTER 13.
- "ON TIME" appears, and the hour indication flashes. 4 Set the time to start playing or recording.
- Press **I** (**) I** repeatedly to set the hour, and then press ENTER 13 The minute indication flashes. Use the procedure
- above to set the minute. 5 Use the same procedure as in step 4 to set the time to stop playing or recording.
- **6** Select the sound source or prepare the tape. For Play Timer:
- Press | | | | repeatedly until the desired sound source appears, and then press ENTER 13. The display shows the timer settings.
- For Rec Timer: Load a recordable tape and press TAPE 9 to select the tape function.
- Press DIRECTION **5** on the unit repeatedly and select " $\overrightarrow{\leftarrow}$ " to record on one side, or " $\overrightarrow{\leftarrow}$ " or "( $\overrightarrow{\leftarrow}$ )" to record on both sides.
- To switch the recording sides of the tape, press (play) 30 repeatedly ("▶" appears for recording on the front, and " $\blacktriangleleft$ " for the reverse side), and then press (stop) **18**.
- 7 Press  $I/\bigcirc$  (power) 1 to turn off the system. The system turns on 15 seconds before the preset time. If the system is on at the preset time, the Play Timer and the Rec Timer will not play or record.

#### To activate or check the timer again Press CLOCK/TIMER SELECT 25, press H 11

appears, and then press ENTER 13. To cancel the timer Repeat the same procedure as above until "TIMER

repeatedly until "PLAY SELECT?" or "REC SELECT?"

OFF?" appears, and then press ENTER **13**. To change the setting

# Start over from step 1.

• The Play Timer setting remains as long as the setting is not canceled • The Rec Timer is canceled automatically after the Rec Timer has been activated.

# • The volume is reduced to minimum during the Rec Timer.

- following item.

- of the system? After the STANDBY indicator **2** stops flashing, reconnect the power cord, and turn on the system. If

General

cord.

Tuner

only).

system").

Tape deck

dropout.

Download from Www.Somanuals.com. All Manuals Search And Download.

received.

# Troubleshooting

 Make sure the power cord and speaker cords are correctly and firmly connected.

- 2 Find your problem in the checklist below, and take the indicated corrective action.
- If the issue persists, contact your nearest Sony dealer.

# If the STANDBY indicator flashes

- Immediately unplug the power cord, and check the • If your system has a voltage selector, is the voltage selector set to the correct voltage?
- Are the + and speaker cords short-circuited? • Are you using only the supplied speakers? Is anything blocking the ventilation holes on the rear
- the issue persists, contact your nearest Sony dealer.

### There is no sound.

• The specified station may have temporarily stopped

#### Sound comes from one channel, or the left and right volumes are unbalanced.

• Place the speakers as symmetrically as possible. • Connect only the supplied speakers.

#### Severe hum or noise.

• Move the system away from sources of noise. • Connect the system to a different wall socket. Install a noise filter (available separately) to the power

#### The remote does not function.

• Remove any obstacles between the remote and the remote sensor **3** on the unit, and position the unit away from fluorescent lights.

- Point the remote at the system's sensor.
- Move the remote closer to the system.

# CD/MP3 player

### The sound skips, or the disc will not play.

• Wipe the disc clean, and replace it. • Move the system to a location away from vibration (for example, on top of a stable stand).

• Move the speakers away from the system, or place them on separate stands. At high volume, speaker vibration may cause the sound to skip.

### Play does not start from the first track.

• Return to Normal Play by pressing PLAY MODE 5 repeatedly until both "PGM" and "SHUF" disappear.

## Starting playback takes more time than usual.

• The following discs take a longer time to start playback. -a disc recorded with a complicated tree structure.

- -a disc recorded in multisession mode.
- -a disc that has not been finalized (a disc to which data can be added).
- -a disc that has many groups.

### Severe hum or noise, or stations cannot be

#### •Connect the antenna properly.

- Find a location and an orientation that provide good reception, and then set up the antenna again. • Connect a commercially available external antenna.
- Keep the antenna away from the speaker cords and the power cord to avoid picking up noise.
- Consult your nearest Sony dealer if the supplied AM antenna has come off the plastic stand.
- Turn off nearby electrical equipment

### "TUNED" does not appear in the display (DAB

- Check all antenna connections, then perform the DAB Automatic Scan procedure (see "Before using the
- The current DAB service may not be available. Press +/- on the remote (or TUNING +/- on the unit) 11 to select a different service.
- If you have moved to another area, some services/ frequencies may have changed and you may not be able to tune into your usual broadcast.
- Perform the DAB Automatic Scan procedure to re-register the contents of broadcasts. (Performing this procedure clears all previously stored presets.)

### The sound exhibits excessive wow or flutter or

• Clean the capstans and pinch rollers. Also, clean and demagnetize the tape heads. See "Precautions" for details.

#### To improve tuner reception Turn off CD player power by using the CD power

management function. By default, CD power is turned on.

You cannot change the setting in Power Saving Mode.

Use buttons on the unit to turn off CD player power.

1 Press FUNCTION 8 repeatedly to select the CD

**3** After "STANDBY" stops flashing, press **I**∕(<sup>1</sup>) (power)

"CD POWER OFF" appears. With CD player power

turned off, disc access time is increased. To turn on

CD player power, repeat the procedure until "CD

To reset the system to factory settings

If the system still does not operate properly, reset the

Use buttons on the unit to reset the unit to its factory

2 Press TAPE ■ (stop) 9, DISPLAY 4 and 1/

stations, timer, and the clock, are deleted.

**Complete! :** The preset operation ended normally.

**No Disc :** There is no disc in the player, or you have

No Preset (DAB only): There is no stored preset station.

**No Service (DAB only) :** There is no supported DAB

**No Step :** All of the programmed tracks have been

**No Tab :** You cannot record because the overwrite

Over : You have reached the end of the disc while

PUSH SELECT! : You tried to set the clock or timer

Push STOP! : You pressed PLAY MODE 5 during

SET CLOCK! : You tried to select the timer when the

SET TIMER! : You tried to select the timer when the Play

**Step Full! :** You tried to program more than 25 tracks or

pressing ►► (fast forward) 11 during playback or

**No Tape :** There is no tape in the tape deck.

Not in Use : You pressed an invalid button.

end times are set to the same time

during timer operation.

Timer or Rec Timer is not set

Discs that this system CAN play

•CD-R/CD-RW (audio data/MP3 files)

1/Level 2, Joliet or multisession

ended by "closing the session"

Discs that this system CANNOT play

•CD-R/CD-RW other than those recorded in music CD

format or MP3 format conforming to ISO9660 Level

•CD-R/CD-RW recorded in multisession that have not

•CD-R/CD-RW of poor recording quality, CD-R/CD-

recorded with an incompatible recording device

•Discs of non-standard shape (for example, heart,

•CD-R/CD-RW which is finalized incorrectly

RW that have scratches or are dirty, or CD-R/CD-RW

• Discs containing files other than MPEG 1 Audio Layer-

• Discs that have adhesive tape, paper, or sticker attached

Rental or used discs with attached seals where the glue

• Discs that have labels printed using ink that feels tacky

• Before playing, wipe the disc with a cleaning cloth from

• Do not clean discs with solvents, such as benzine

thinner, or commercially available cleaners or anti-

• Do not expose discs to direct sunlight or heat sources

such as hot air ducts, nor leave it in a car parked in

playback

clock is not set.

files (steps).

Audio CD

•CD-ROM

3 (MP3) files

square, star)

when touched

Notes on discs

direct sunlight.

extends beyond the seal

• An 8 cm disc with an adaptor

the center out to the edge.

static spray intended for vinyl LPs.

to them

Precautions

protection tab has been removed from the cassette.

OFF TIME NG! : The Play Timer or Rec Timer start and

LOCKED : Contact your nearest Sony dealer

loaded a disc that cannot be played

broadcast in your country or region.

system to factory settings. You cannot reset the system to

1 Disconnect and reconnect the power cord, and then

All user-configured settings, such as preset radio

**2** Press  $I/\bigcirc$  (power) **1** to turn off the system.

1 while holding CD 🔳 (stop) 18

factory settings in Power Saving Mode.

(power) **1** at the same time

POWER ON" appears.

function.

default settings.

turn on the system

Messages

erased

•The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall socket, even if the unit itself has been turned off.

- Completely disconnect the power cord (mains lead) from the wall socket (mains) if it is not going to be used for an extended period of time. When unplugging the
- unit, always grip the plug. Never pull the cord itself. Should any solid object or liquid get into the system, unplug the system, and have it checked by qualified personnel before operating it again
- The AC power cord can be changed only by a qualified service facility.

#### On placement

On safety

- •Do not place the system in an inclined position or in locations that are extremely hot, cold, dusty, dirty, or humid or lacking adequate ventilation, or subject to vibration, direct sunlight or a bright light.
- •Be careful when placing the unit or speakers on surfaces that have been specially treated (for example, with wax, oil, polish) as staining or discoloration of the surface may result.
- If the system is brought directly from a cold to a warm location or is placed in a very damp room, moisture may condense on the lens inside the CD player, and cause the system to malfunction. In this situation, remove the disc, and leave the system turned on for about a few hours until the moisture evaporates.

#### On heat buildup

- •Heat buildup on the unit during operation is normal and is not cause for alarm • Do not touch the cabinet if it has been used
- continuously at a high volume because the cabinet may have become hot.
- •Do not obstruct the ventilation holes.

#### On the speaker system

This speaker system is not magnetically shielded, and the picture on nearby TV sets may become magnetically distorted. In this situation, turn off the TV, wait 15 to 30 minutes, and turn it back on.


If there is no improvement, move the speakers far away from the TV.

#### Cleaning the cabinet

Clean this system with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as thinner, benzine, or alcohol.

#### To prevent a tape from being accidentally recorded over

Break off the cassette's overwrite protection tab from side A or B as illustrated.

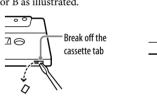

To later reuse the tape for recording, cover the broken tab with adhesive tape.

#### About a tape longer than 90 minutes

The use of the tape with more than 90 minutes of play time is not recommended except for long, continuous recording or playback.

#### Cleaning the tape heads

Use dry- or wet-type cleaning cassette (available separately) after every 10 hours of use, before you start an important recording, or after playing an old tape. Failure to clean the tape heads can cause degraded sound quality or an inability of the unit to record or play tapes. For details, refer to the instructions of the cleaning cassette.

#### Demagnetizing the tape heads

Use a demagnetizing cassette (available separately) after every 20 to 30 hours of use. Failure to demagnetize the tape heads can cause an increase in noise, a loss of high frequency sound, and an inability to completely erase tapes. For details, refer to the instructions of the demagnetizing cassette.

# Specifications

#### Main unit

Amplifier section DIN power output (rated): 60 + 60 W (4 ohms at 1 kHz, DIN) Continuous RMS power output (reference): 75 + 75 W (4 ohms at 1 kHz, 10%

#### THD)

CD DIGITAL OUT: Optical Wavelength: 660 nm PHONES (stereo mini jack): Accepts headphones with an impedance of 8

### SPEAKER: Accepts impedance of 4 ohms

CD player section ystem: Compact disc and digital audio system

- Laser Diode Properties Emission Duration: Continuous Laser Output\*: Less than 44.6µW
- \* This output is the value measurement at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block with 7 mm aperture. Frequency response:  $20 \text{ Hz} 20 \text{ kHz} (\pm 1 \text{ dB})$

#### Wavelength: 770 - 810 nm

Tape deck section Recording system: 4-track 2-channel, stereo

# Tuner section DAB tuner section

Frequency range Band-III: 174.928 (5A) - 239.200 (13F) MHz \* For details, see "DAB frequency table" below Antenna: FM/DAB lead antenna Antenna terminal: 75 ohms, F female

- FM stereo, FM/AM superheterodyne tuner
- FM tuner section: Tuning range: 87.5 108.0 MHz (50 kHz step) Antenna: FM lead antenna
- Antenna terminals: 75 ohms unbalanced Intermediate frequency: 10.7 MHz AM tuner section:
- Tuning range: 531 1,602 kHz (with the tuning interval set at 9 kHz) Antenna: AM loop antenna Antenna terminals: External antenna terminal

Intermediate frequency: 450 kHz

Frequency	Label	Frequency	Labe
174.928 MHz	5A	209.936 MHz	10A
176.640 MHz	5B	211.648 MHz	10B
78.352 MHz	5C	213.360 MHz	10C
80.064 MHz	5D	215.072 MHz	10D
81.936 MHz	6A	216.928 MHz	11A
83.648 MHz	6B	218.640 MHz	11B
85.360 MHz	6C	220.352 MHz	11C
87.072 MHz	6D	222.064 MHz	11D
88.928 MHz	7A	223.936 MHz	12A
90.640 MHz	7B	225.648 MHz	12B
92.352 MHz	7C	227.360 MHz	12C
94.064 MHz	7D	229.072 MHz	12D
95.936 MHz	8A	230.784 MHz	13A
97.648 MHz	8B	232.496 MHz	13B
99.360 MHz	8C	234.208 MHz	13C
01.072 MHz	8D	235.776 MHz	13D
02.928 MHz	9A	237.488 MHz	13E
04.640 MHz	9B	239.200 MHz	13F
06.352 MHz	9C		
208.064 MHz	9D		

Speaker system: 2-way, bass-reflex type

Speaker units Woofer: 13 cm dia., cone type

Tweeter: 2.5 cm dia., soft-dome-type Nominal impedance: 4 ohms Dimensions (w/h/d): Approx. 160 × 240 × 265 mm


Mass: Approx. 3.2 kg net per speaker General

### Power requirements: 230 V AC, 50/60 Hz

Power consumption: 60 watts Dimensions (w/h/d) (excl. speakers): Approx. 175  $\times$  240  $\times$  300 mm Mass (excl. speakers): Approx. 3.9 kg

Supplied accessories: Remote Commander (1)/R6 (size AA) batteries (2)/ AM loop antenna (1)/FM/DAB lead antenna (2)/Speaker pads (8)

US and foreign patents licensed from Dolby Laboratories Design and specifications are subject to change without notice

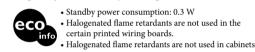

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com