



MODEL : STm.57w
MOBILE PRINTER



**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTION**



Disposal of Old Electrical&Electronic Equipment(Applicable in the European Union and other European countries with separate collection systems)


This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronics equipment. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Table of Contents


| | |
|---------------------------------------|----|
| 1. Unpacking | 2 |
| 2. Product overview | 3 |
| 3. Installation & Usage | 4 |
| 3-1. Control Panel Usage | 4 |
| 3-2. Battery Installation | 5 |
| 3-3. Battery removal | 6 |
| 3-4. Battery Charging | 7 |
| 3-5. Battery Charger Usage | 8 |
| 3-6. Usage of Cigar Jack for charging | 9 |
| 3-7. Belt clip usage | 10 |
| 3-8. Roll Paper Installation | 11 |
| 3-9. Leather case Usage | 12 |
| 3-10. Shoulder Strap Usage | 13 |
| 3-11. Self Test | 14 |
| 4. Peripherals Connection | 17 |
| 4-1. Wifi(802.11b/g) Connection | 17 |
| 4-2. Interface Cable Connection | 18 |
| 5. Printer Cleaning | 19 |
| 6. Product Specification | 20 |
| 6-1. Specification | 20 |
| 7. CPCL Command Compatibility | 22 |

1. Unpacking

Standard

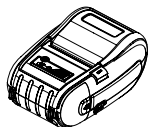


Printer

 


Battery




Belt Buckle

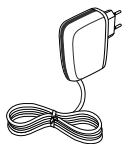


Recharger

 

USB Shilded Cable

 

Serial Cable

 

Roll paper



CD

 


Quick Manual

Optional




Battery Holder
(Cradle)



Cigar jack



 
Printer case




shoulder strap

2. Product overview

Front

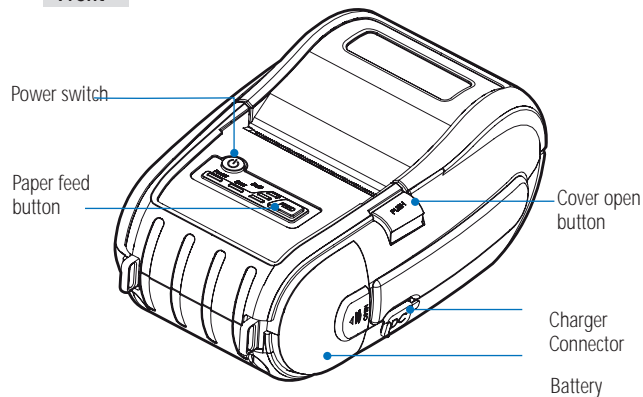


Side

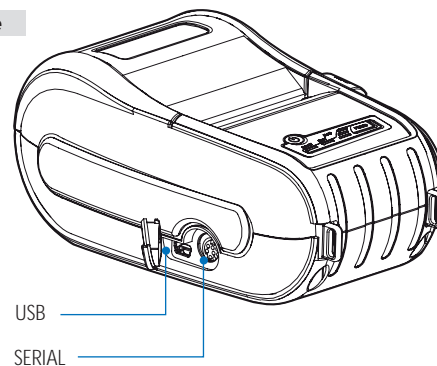


3. Setting Up the Product

3-1. Control Panel Usage

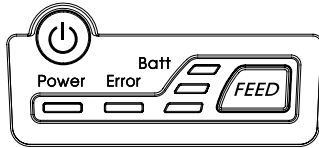


| Button | Name | function |
|--------|---------------------|--|
| | Power button | This button is used to turn the printer on and off. When the printer is off, press this button for approximately 2 seconds and it will turn on the power. When you press this button in a state that the printer is on, the printer will turn off. |
| | Paper Feed Button | Paper output can be done manually by pressing this button. Additionally, self-testing and Hexadecimal Dumping can be processed. 1. Refer to "3-10" for self test information. 2. Refer to the service manual regarding Hexadecimal Dumping. |
| | Battery Status Lamp | 1. If the Batt, LED are Lit, the battery is fully charged. 2. If you can hear beeping sound and LED light is turned off, it means that the battery is at the lowest level. 3. If the battery is not charged at all, the printer turns off automatically. |
| | Error Lamp | If the red light is turned on, it means that the paper cover is open. |

3-2. Installing battery

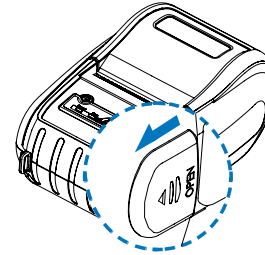


Push the Open to the direction as pointed by arrow in the image.

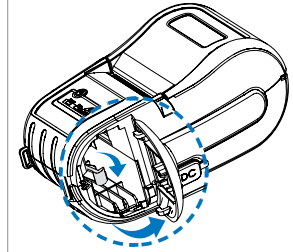


Open the battery cover and push up the hook to the direction as above.

1 2
3

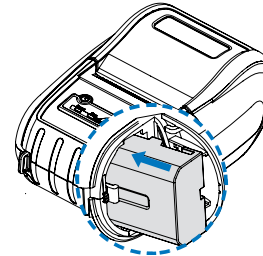

Insert the battery inside printer as shown.

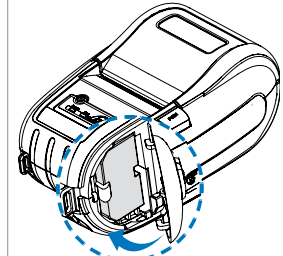


Close the battery cover once you inserted the battery completely.

NOTE

As the battery is not charged at the time of your purchase, charge the battery prior to using the product.
(Use the battery charger and/or the optional battery holder.)


3-3. Battery removal

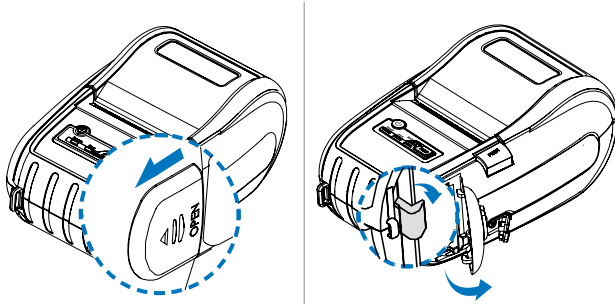

Push the Open into the direction indicated with the arrow in the image.


Push up the hook after opening the battery cover.

1 2
3

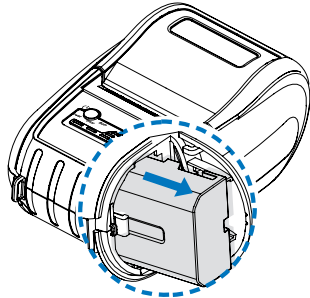

Pull out the battery as shown above.

3-4. Battery Charging

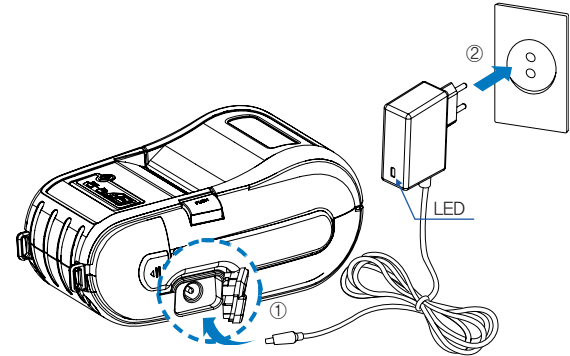

1. The battery can be charged only when the temperature is 0~40°C
2. Be sure that the printer is turn off and the battery to be charged is installed.
3. Connect the charger to the printer.
4. Recharging will now be started.

3-4-1 The status of lamp in charging


| Status | charging | charging complete |
|---------------|----------|-------------------|
| Charging Lamp | Red | Green |

NOTE

1. Unless the exclusive charger is used provided by the manufacturer, the printer can be damaged, and the manufacturer is not liable for the consequential damage.
2. Before removing the battery, make sure that power is turned off.
3. Printer does not work in the status of being connected with charger only.
4. The battery should be installed to operate printer.
5. While charging, do not turn on the power.
6. Do not operate the print while charging the battery.
7. Do not connect the charger while the printer is operated.

3-5. Battery charger Usage

Optional

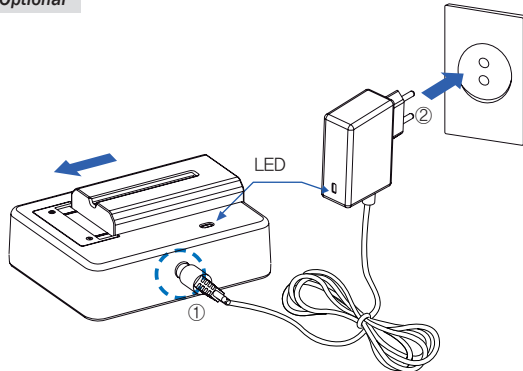

1. Please press the battery into the holder until you can hear a snapping sound.
2. Insert DC JACK ① into the end completely as the direct shown above.
3. Plug the power cord to electrical outlet.
4. While charging the battery, red light turns on.
Once the charge is completed, green light turns on.
Check the state of code connection when error occurs blinking on red light.

3-5-1 The status of lamp in charging



| Status | charging | charging complete |
|---------------|----------|-------------------|
| Charging Lamp | Red | Green |

NOTE

In the case the battery is not fixed properly in the holder, the red lamp will be blinking.
Then, extract and reinsert the battery.

3-6 Usage of Cigar Jack Charger for charging

Optional

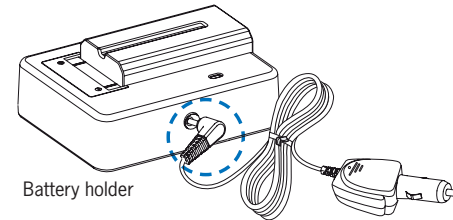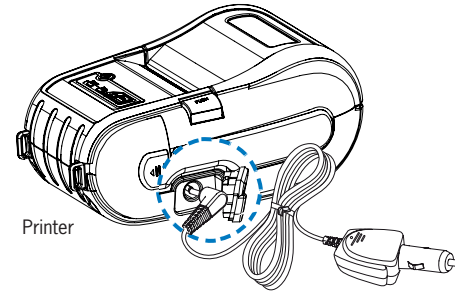


Connect the car cigar JACK charger into the printer or battery holder.

| | |
|--------|-----------------|
| Input | 12 ~ 24V |
| Output | 8.4V 0.8 ~ 1.2A |

NOTE


Use the Cigar Jack offered by the manufacturer.

3-7. Belt clip Usage

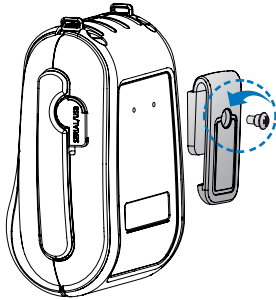


Insert the belt hook screw into the hole of the belt hook.

1
2

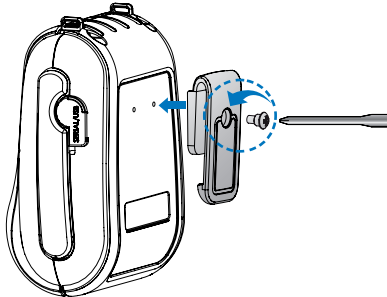


As shown above, fasten the screw with a screw driver.

3-8. Roll Paper Installation

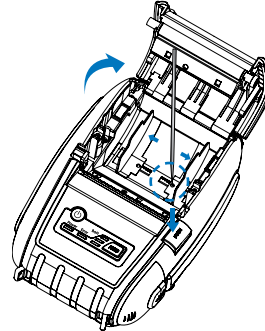


Open the paper cover pressing the open button. Insert a sharp tool into the paper guide hole and push it in the direction of arrow as shown above.

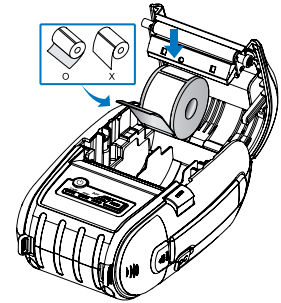


Put the paper in the right direction after adjusting the paper guide matching the paper width. (Remove the paper core when it is used all)

1 2
3 4

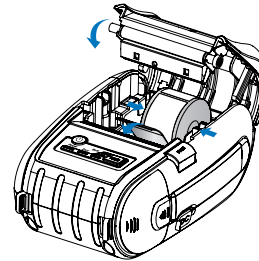


Pull out a short length of the paper and shut the paper cover.

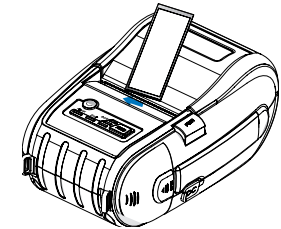


Press the Feed Key once to arrange the paper.

3-9. Leather Case Usage

Optional

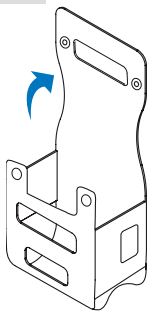


Open the Velcro

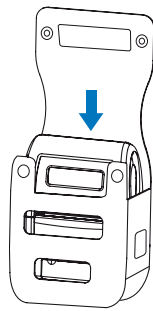

Put the printer into the leather case following the direction shown in the image.


1
2
3

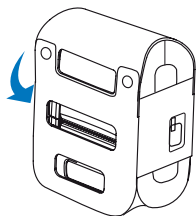


Close the Velcro

3-10. Shoulder Strap Usage

Optional

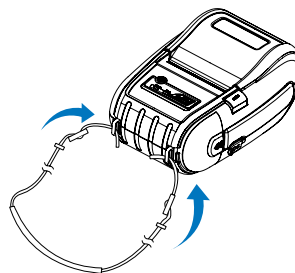


Insert the strap into the hook on the printer.

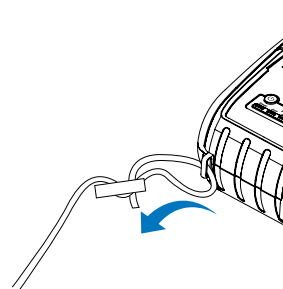


Place the end of strap into the hook of shoulder strap.

1
2
3
4

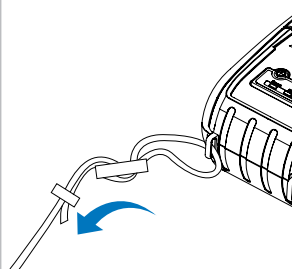


After pulling out the end of strap tightly, put it into the clip to be fastened.

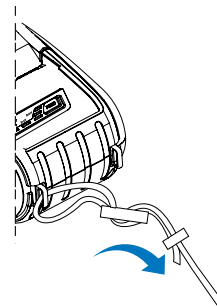


Fasten the strap in the opposite side with the sample way.

3-11. Self Test

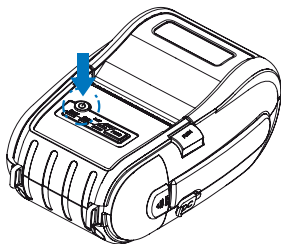

Turn off the power pressing the power button for approximately 3 seconds.

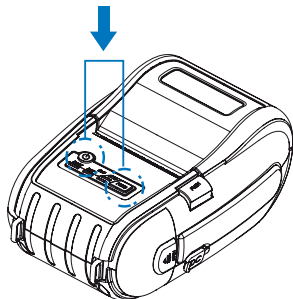


While you are pressing the FEED button, press the power button

1
2
3


NOTE

1. To print ASCII pattern additionally, press the Feed button once more
2. After printing ASCII pattern, the self test will be finished automatically.
3. If the Feed button is not pressed to print ASCII pattern, self test will be finished automatically after 30 seconds.

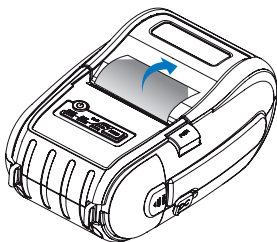

The printout is produced.

The sample of self test printout

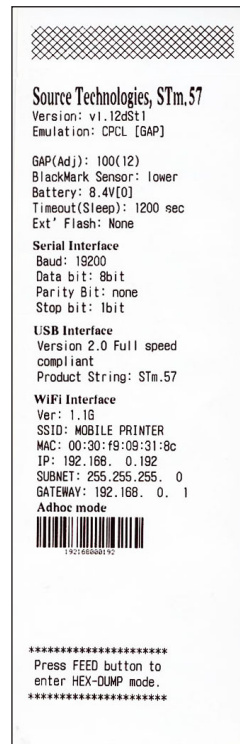

4. Peripherals Connection

When the printer is installed initially or when you face a problem, you can run the self test and check the information about

-Control Circuit, Mechanism, Print Quality, ROM Version


After checking with self-test and no issues are found, you can examine other devices and software. This function is working independent of devices and software.

● Motor protection from being overheated

The motor should be stopped and cooled about more than 30 seconds after continuous printing 1.5 meter

This product can communicate with other devices via Wifi(802.11b/g) communication and cable.

4-1 Wifi(802.11b/g) Connection

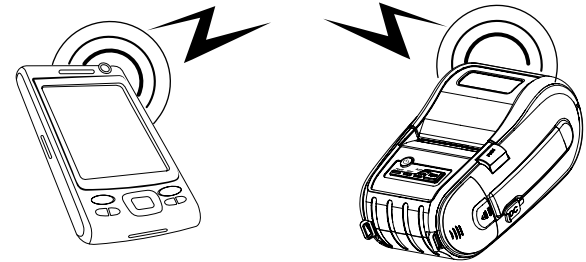


1. The Printer can be connected to devices equipped with wifi(802.11b/g) communication capacity (PDAs, PCs, etc.)
2. Use the wifi(802.11b/g) connection function supported by the device to connect to the printer.

✔ NOTE

Refer to the wifi(802.11b/g) Manual for more details on connection.

4-2. Interface Cable Connection

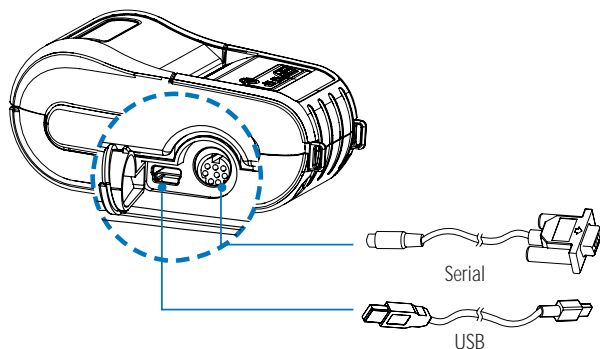

1. Connect USB or Serial cable into the cable connector on the printer.

NOTE

Use the cable offered by the manufacturer (USB, Serial)


2. Connect the interface cable into the USB or Serial port of the device (PDA, PC, etc.)

5. Printer cleaning

If the interior of the printer is dusty, printing quality can lowered. In such a case, follow the instructions below to clean up the printer.

NOTE

1. Make sure to turn the printer power off prior to cleaning
2. Regarding print head cleaning, as the print head sets very hot during printing, turn off the printer power and wait approximately 10 minute before commencement.
3. When cleaning the print head, take care not to touch the heated portion of the print head. The print head subject to be damaged by static electricity.
4. Take care not to allow the print head to become scratched and /or damaged in any way.

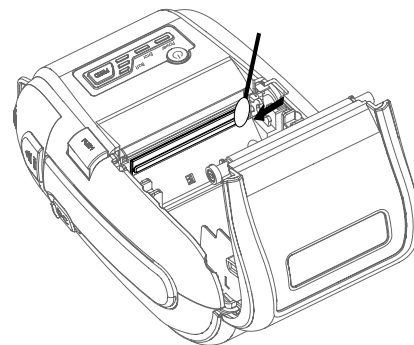

1. Use an applicator swab moistened with an alcohol solution to clean the print head and remove any dusts.
2. Once the cleaning is completed, insert paper roll into the printer few minutes later and close the printer cover.

Preventing Overheating

To prevent the motor from overheating, continuous driving of the printer should be 1.5 m or less in print length. Set the pause time for 30 seconds or more after driving the printer.

6. Pritner Specification

6-1. Specification

| | | |
|-----------------|-------------------|--|
| Printing Method | | Direct Thermal |
| Printing Speed | | 80mm/sec |
| Resolution | | 203 DPI X 203 DPI |
| Character | | ALPHA NUMERIC Character, Extension Character |
| Barcode | | Code 39, Code 93, UCC/EAN-128, Code 128, UPC-E, UPC-A, EAN-8, EAN-13, EAN-14, UPC and EAN 2 or 5 digit extensions, Plessey, FIM, Postnet, Interleaved 2-of-5, MSI, Codabar |
| Emulation | | CPCL |
| Driver | | Window CE 4.2&5.0, Window Mobile 5.0 |
| Sensor | | Black-mark, Gap, cover open |
| Paper | paper type | Thermal Paper |
| | width | 58mm |
| | thickness | 65 μ l |
| | External Diameter | Max. ϕ 56mm |
| | Internal Diameter | 12.5mm +/-0.5mm |
| Reliability | TPH | 100km |
| | Battery | Continuous Printing 54min Standby for 19hours Printing length: 249.8M |
| Communications | standard | Serial(RS-232C), USB, Wireless Lan *802.11b/g |
| Battery Charger | input | AC100~240V, 50/6 Hz |
| | output | 8.4V , 800~1400mA |
| Battery | Battery type | Li-ion |
| | output | 7.4V, 2200mAh |
| | Charging time | 3hours 40min |
| Size | WXDXH(mm) | 104 X 74 X 154 |
| | WXDXH* | 4.0 X 2.9 X 6.0 |

| | | |
|-----------------------|-----------|---------------------|
| Weight | | 500g |
| Environmental sealing | | IP42 |
| Temperature | operation | 5~40 $^{\circ}$ C |
| | storage | -20~60 $^{\circ}$ C |
| Humidity | operation | 35 ~ 80% |
| | storage | 10 ~ 90% |

7. CPCL Command Compatibility

NOTE

| Compatible | Compatible with only commanders provided by the manufacturer. | Partially Compatible | Not Compatible |
|------------|---|----------------------|----------------|
| ○ | ● | △ | x |

| Printer Commands | Compatibility |
|-----------------------------|---------------|
| PRINT | ○ |
| FORM | ○ |
| JOURNAL | ○ |
| UNITS | ○ |
| Comments | ○ |
| TEXT | Compatibility |
| TEXT | ○ |
| FONT-GROUP(FG) | ○ |
| TEXT CONCATENATION | ○ |
| MULTILINE(ML) | ○ |
| COUNT | ○ |
| SETMAG | ○ |
| SCALABLE TEXT | X |
| Linear Bar Codes | Compatibility |
| BARCODE | ○ |
| BARCODE-TEXT | ○ |
| Two-Dimensional Bar Codes | Compatibility |
| PDF417 (PORTABLE DATA FILE) | ○ |
| MAXICODE | ○ |
| QRCODE | ● |
| DATAMATRIX | ● |
| GS1(RSS) | ● |

| Graphics | Compatibility |
|-------------------|---------------|
| BOX | ○ |
| LINE | ○ |
| INVERSE-LINE | ○ |
| PATTERN | ○ |
| GRAPHICS | ○ |
| PCX | ○ |
| Advanced Commands | Compatibility |
| CONTRAST | ○ |
| tone | ○ |
| JUSTIFICATION | ○ |
| PAGE-WIDTH | ○ |
| PACE | ○ |
| NO-PACE | ○ |
| WAIT | ○ |
| REWIND | X |
| TENSION | X |
| SPEED | ○ |
| SETSP | ○ |
| ON-OUT-OF-PAPER | X |
| ON-FEED | ○ |
| PREFEED | ○ |
| POSTFEED | ○ |
| PRESENT-AT | X |
| COUNTRY/CODE PAGE | ○ |
| FORMAT FILES | ○ |
| BEEP | ○ |
| CUT | X |
| PATIAL-CUT | X |
| MCR | ● |

| Line Print Mode | Compatibility |
|---------------------------------|---------------|
| SETLP | ○ |
| SETLF | ○ |
| Moving With X and Y Coordinates | ○ |
| LMARGIN | ○ |
| SETBOLD | ○ |
| SETSP | ○ |
| Special ASCII Characters | ○ |
| SETFF | ○ |
| SET-TOF | ○ |
| SETLP-TIMEOUT | ○ |

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>