

Quick Start Guide

Speco Technologies DVR-4TN/8TN/16TN

speco technologies
simply unique.

Customer Service: 1-800-645-5516 x196
www.specotech.com

READ THIS FIRST!

This document is intended to serve as a quick reference page for initial set-up. It is recommended that the user read the entire instruction manual before beginning. Basic programming can be accomplished by simply reading the appropriate instructions first, then scroll through the easy to operate "On Screen Display" and make changes.

Please note that the Accessory Kit and Shipping Box contain the following items:

- 1 - Quick Set-Up Guide
- 1 - Manual for SpecoRemote™ & SpecoPlayer™
- 1 - Digital Video Recorder
- 1 - IR Remote Controller
- 1 - User's Manual
- 1 - Power cord
- 1 - CD-Rom (includes manuals, HDD storage calculator and player software)
- 2 - Rack mount ears

Passwords:

Local DVR Password (Admin) = 1234

Local DVR Password (User) = 4321

SpecoRemote™ Password = Same as local password

The following list represents features that most users will need to be familiar with. Please review the list and refer to the specific pages listed in the manual. Please read the appropriate section of the manual thoroughly and perform the function on the DVR before attempting to contact technical support.

Please note that numbers 1 & 2 MUST be performed before making your first recordings.

Please refer to configuration section of User Manual.

- 1 Set Time/Date:
- 2 Format HDD
- 3 Scheduled Recording
- 4 Motion Detect Recording
- 5 Optimize Record Time/FPS settings
- 6 Network & Internet Setup
- 7 Playback
- 8 Video Backup



Do not block the fan on the unit - enough airflow is needed to protect the unit from over heating.

Front Panel & Functions

The unit's front panel controls enable the user to control the unit and preset programmable functions.



LED Definition

The DVR-4TN/8TN/16TN Series LEDs on the front panel are described as follows:

Power LED (Green)

The LED should be lit when the power is connected.

HDD LED (Yellow)

The LED should be lit while the HDD is processing data.

Alarm LED (Red)


The LED should be lit when an alarm is triggered.

Network LED (Green)

The LED should be lit when the DVR-4TN/8TN/16TN series unit is connected to a network and blink when any data is being transferred.

REC LED (Green)

The LED should blink while the DVR-4TN/8TN/16TN series unit is recording.

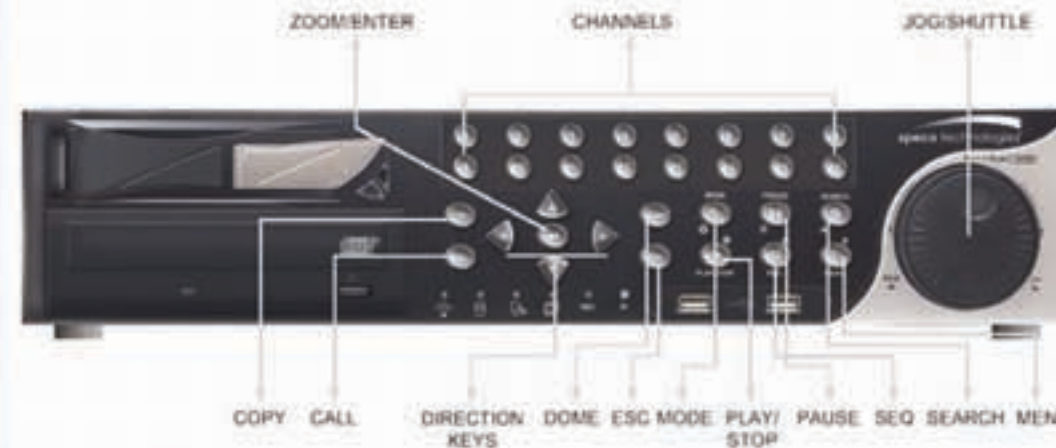

Function Keys

The DVR-4TN/8TN/16TN series unit function keys on the front panel are described to the right for normal operation.

JOG SHUTTLE: Operation instructions on back page.

COPY

Used to quick export video to an external device, including USB CD-RW and ThumbDrive, etc. For more detailed operation instructions refer to section 4.7.1 to export video.

CALL

Press to enter call monitor control mode.

Direction Keys

* In Zoom mode, these keys function as Direction keys.

* In the OSD setup menu, the Direction keys are used to move the cursor to previous or next fields. To change the value in the selected field, press UP / DOWN keys.

DOME

Press this key to enter dome control mode. Please refer to Section 4.6 Dome Control for more details about controlling operation.

ESC

Press to cancel or exit from certain mode or OSD menu without changing the settings.

MODE

Press repeatedly to select desired main monitor display format. There are three view modes available: full screen, 4-window (2x2) and 16-window (4x4). Refer to Section 4.1.1 Viewing Modes for more detailed information.

PLAY/STOP

Press this key to switch between live image and playback video.

FREEZE

- Press FREEZE while viewing live image, the live video will be frozen, but the date / time information shown on the monitor will continue updating. Press FREEZE again to return to live mode.
- Press FREEZE while playing recorded video, the playback video will be paused. Press LEFT / RIGHT to move the recorded video reverse / forward by a single step. Press FREEZE again to continue playing video.

SEQ (Sequence)

Press to start automatic sequencing of the video coming in from the installed cameras.

SEARCH

In both Playback and Live mode, the user can press SEARCH to call up the Search menu for searching and playing back recorded video by date and time or events.

MENU

Press this key to call up the OSD setup menu.

ZOOM/ENTER

- In OSD menu or selection interface, press this key to make the selection or save settings.
- In live full screen view mode, press to view a 2x zoom image; press key again to return.

CHANNEL


- When in both Live and Playback mode, press the CHANNEL key to view the corresponding video in full screen. The number of the CHANNEL keys corresponds to the number of cameras supported by the unit.
- When in dome control mode, the key named "1" is used to access the Set/Go preset menu; the key named "2" is used to hide or display the dome setting parameters.

Quick Start Guide Speco Technologies DVR-4TN/8TN/16TN


Customer Service: 1-800-645-5516 x196

JOG/SHUTTLE on Front Panel


The jog/shuttle knob, shown in the figure below:

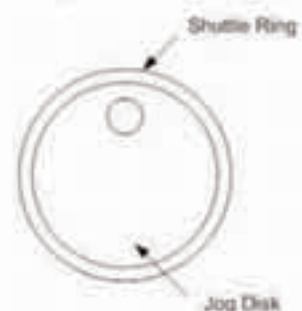

It is a combination of a shuttle ring with an embedded jog disk, which is used to provide wide latitude in playback control. Note that the jog/shuttle knob is active only when the DVR unit is in Playback mode.

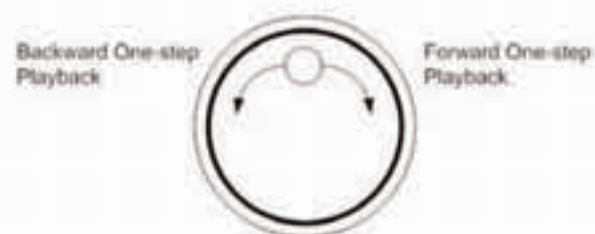


While playing back video, you can use the shuttle ring to select different speeds of forward and backward playing. Rotating the shuttle ring counterclockwise causes the unit to playback in fast forward/ backward playing speed. According to the angle you rotate the shuttle ring, you can choose the playing speed from 1x, 2x, 4x, 8x, 16x, and 32x, in both forward and reverse directions, shown in the figure below:

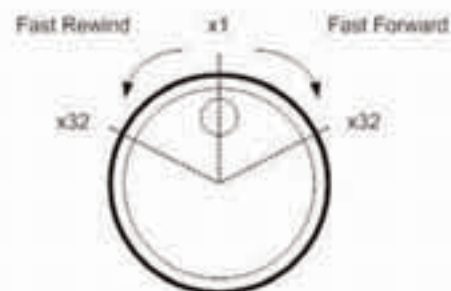

Inside the shuttle ring is the jog disk, shown in the illustration below, it can turn completely in either direction. Once you freeze the video, you can use the jog disk to go to single-step play back. Clockwise rotation causes forward one-step playback; and counterclockwise rotation causes backward one-step playback.

Rear Panel Connections

There are several connectors on the rear panel of the DVR-4TN/8TN/16TN series DVRs. The following figure shows the connectors by name and a detailed description of each connector follows.

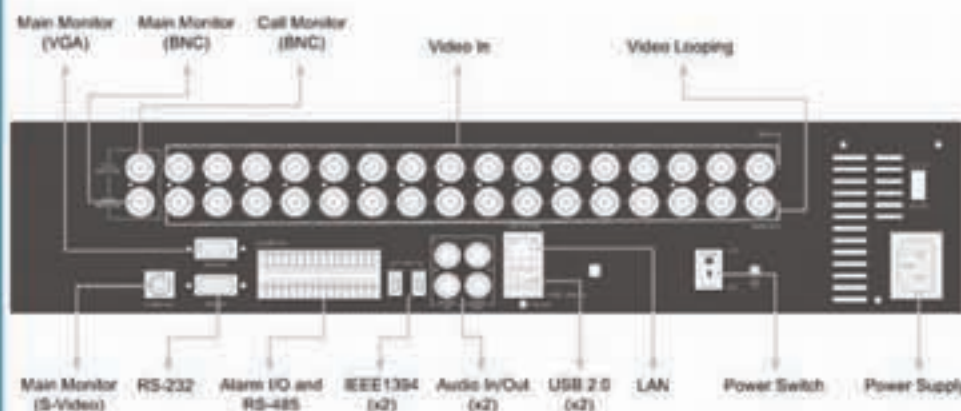

Main Monitor (S-Video/ BNC/ VGA)

S-Video, BNC and VGA output connectors are available for connecting to a main monitor. The main monitor displays live image and playback recorded video in full screen or multiple window format.

RS-232C

The unit provides a RS-232C communication port for sending and receiving signals.

Alarm I/O & RS485 Port

The unit provides an Alarm I/O and RS485 port that offers user the flexibility required to connect the unit to another device.

IEEE1394 (x2)

DVR-4TN/8TN/16TN series unit is equipped with two IEEE1394 (FireWire) ports for extended connections.

Audio In / Out

The DVR-4TN/8TN/16TN series unit provides one channel of audio recording and playback. The Audio In RCA connector is offered for connecting an audio source device (e.g. external amplified microphone) to the unit. The Audio Out RCA connector is available for connecting an audio output device (e.g. amplified speakers) to the unit.

USB 2.0 (x3)

There are two USB2.0 ports on the rear panel and one on the front panel to allow users to connect external USB devices to the unit, such as a ThumbDrive.

The DVR-4TN/8TN/16TN allows the user to preset the OSD settings using a USB mouse.

LAN (RJ-45)

The DVR-4TN/8TN/16TN series is capable of networking. The LAN port allows the DVR-4TN/8TN/16TN series to access the network/Internet through a 10/100 Ethernet connection.

Power Switch

Used to power up and shut down the unit.

Call Monitor (BNC)

The call monitor is used to display full screen video of all installed cameras in sequence. The BNC call monitor connector allows the user to connect an optional call monitor to the DVR-4TN/8TN/16TN series unit.


Video Input

A group of BNC connectors are available for video inputs from installed cameras. The number of connectors is equal to the number of channels; the DVR-4TN/8TN/16TN units have 4/ 8/ 16 BNC connectors on the rear panel, respectively.

Camera Looping

Groups of BNC connectors are positioned on the rear panel for looping out video input.

Typical System Configuration Illustration

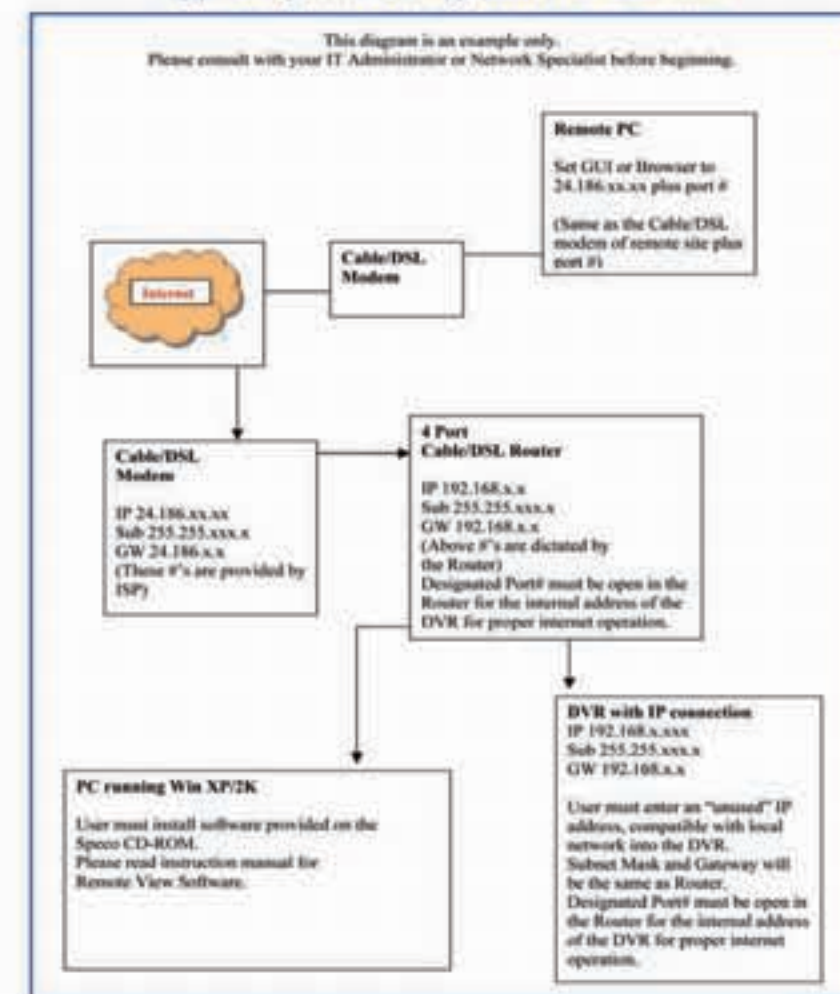

www.specotech.com
1-800-645-5516 X 196

speco technologies

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>