

The logo for Speco Technologies features a blue curved line above the text "speco technologies" in a lowercase, sans-serif font, with a trademark symbol (TM) to the right.

speco technologies™

DVR-4CF

USER MANUAL



Speco Technologies
200 New Highway
Amityville, NY 11701
631-957-8700




INDEX

1. SAFETY PRECAUTIONS	2
2. INTRODUCTION	3
2.1 PRODUCT INTRODUCTION	3
2.2 APPLICATION	3
3. FEATURES	4
4. PACKING LIST	5
5. INSTALLATION.....	6
5.1 CONNECTORS ON THE REAR PANEL.....	6
6. NAME and FUNCTION of EACH PART	7
6.1 FRONT PANEL BUTTONS AND CONTROLS	7
6.2 REAR PANEL BUTTONS AND CONTROLS.....	9
7. OPERATING PROCEDURE.....	10
7.1 POWER ON.....	10
7.2 MONITORING MODE	10
7.3 RECORD DISPLAY.....	11
7.4 PLAYBACK DISPLAY.....	12
7.5 NOTE!	13
8. SYSTEM SETUP.....	14
8.1 MENU.....	14
8.2 SYSTEM SETUP	15
8.2.1 TIME SET	16
8.2.2 PASSWORD SET	17
8.2.2.1 PASSWORD CHANGE	18
8.3 CAMERA SETUP	20
8.3.1 CAMERA SETTING	22
8.4 RECORD SETUP	23
8.4.1 RECORD MODE.....	24
8.5 BUZZER SETUP.....	26
8.5.1 SENSOR TYPE:.....	27
8.6 EVENT LIST	28
8.6.1 TIME SEARCH.....	29
8.6.2 EVENT SEARCH.....	30
8.7 CF CARD SETUP	31
8.7.1 SELECT TIME.....	32
8.7.1.1 COPY	33
8.7.2 FORMAT/ ERASE	34
8.8 HARD DRIVE SETUP	35
8.8.1 HDD FORMAT:	36


The author assumes no responsibility for any errors or omissions that may appear in this document nor does it make a commitment to update the information herein.

1. SAFETY PRECAUTIONS

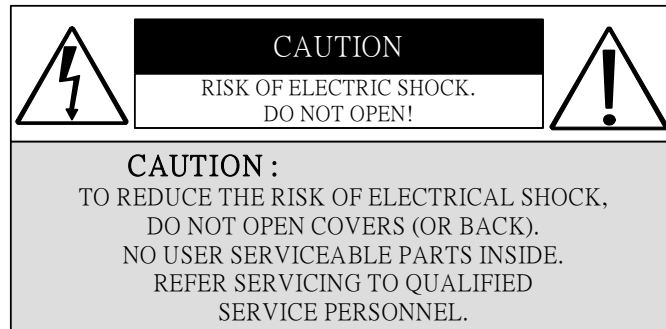

It is advised to read the Safety Precaution Guide through carefully before operating the product, to prevent any possible danger.

 **WARNING:** Alert the user to the presence of un-insulated “dangerous voltage”.

 **CAUTION:** Alert the user the presence of important operating and maintenance (Servicing) instructions in the literature accompanying the appliance.

The power cord is the main power connection. Therefore, constantly plug and unplug of the power cord might result in malfunction of the product.

Do not install the product in an environment where the humidity is high.

Unless the product is waterproof or weatherproof, otherwise poor image quality may quality.

Do not drop the product or subject them to physical shocks.

Except for vandal-proof or shockproof product, otherwise malfunctions may occur.

Never keep the product to direct strong light.

It can damage the product.

Do not spill liquid of any kind on the product.

If it gets wet, wipe it dry immediately. Alcohol or beverage can contain minerals that corrode the electronic components.

Do not expose to extreme temperatures.

Use the product at temperatures within $-10^{\circ}\text{C} \sim +50^{\circ}\text{C}$.

2. INTRODUCTION

2.1 Product Introduction

World leading technology not only perfect for office safety, personnel home security, public environments, industry surveillance, school, and so on. Quick and simple installation, the best choice for your own ultimate protection.

The state-of-art 4-channel digital recording system, equipped with advanced embedded CPU operating system, powerful MPEG4 compression technology. Standalone type DVR system that is based on embedded OS, replacing the conventional DVR. The most user-friendly surveillance System (supports Chinese user interface), user can operate the functions by controlling the front panel, using time and event to playback recorded materials, efficient live recording and playback functions, convenient CF card function that supports ATA HDD, and the most useful storage device of removable Hard Disc Drive. Password protection on remote controlling. What more can you expect!

2.2 Application

- **Security:**
ATM (auto teller machine), bank, gas station, shop and parking lot.
- **Factory/ Office:**
Factory, warehouse, remote technology support, conference room, and outdoor parking lot.
- **Education/ Military/ Government Organization:**
Important facilities, important areas, rapid transit system, and railroad safety.
- **Recreation/ Activities:**
Sports and news broadcast.
- **Home:**
Elevator, doorway, community safety, and hotels.
- **Hospital/ Kindergarten:**
Hospital and isolated ward, home for the aged, kindergarten, and baby nourishing center.

3. FEATURES

- **Auto video input detection**

Auto detects video input (NTSC/ PAL) and supports combine use of color and b/w cameras.

- **Supports high quality digital video recording**

Adopts MPEG4 compression technology (NTSC: 30fps/ PAL: 25fps).

- **Video Size**

- **Video Resolution**

- NTSC: 640x 224
 - PAL: 640x 272

- **Monitoring Resolution**

- NTSC: 720x 480
 - PAL: 720x 576

- **Replaces the conventional VCR.**

Stores video on hard disks instead of VCR tapes. Large disk capacity, there is no need to replace the recording medium.

- **Built-in motion detection function.**

Motion detection sensitivity rate may be setup under motion detection function.

- **High efficient event recording, saving storage capacity.**

Motion detection function enables recording only when system detects motion, thus increases the amount of time available for recording.

- **Easy access to the desired record.**

Time & date search supports instant retrieval of images and alarm event search makes searching simpler.

- **Data can be stored in CF card.**

Cards inserted in the CF card slot makes it easier to back up recordings and transfer images to a PC.

- **Removable hard disk box.**

Removable hard drive mechanism allows you to backup important data with ease.

- **Live monitoring through internet from anywhere (optional).**

Built-in TCP/ IP network interface (auto detects and switches to 10/ 100Base T).

4. PACKING LIST

Check to make sure all of the items shown below are included in your product package. If something is missing, contact your dealer as soon as possible.

(1) DVR (digital video recorder)



(2) Power adapter




(3) Power Cord (Plug type differs depending on area)



5. INSTALLATION

5.1 Connectors on the Rear Panel


Please setup the connection by following the illustration shown below (network is an optional function):

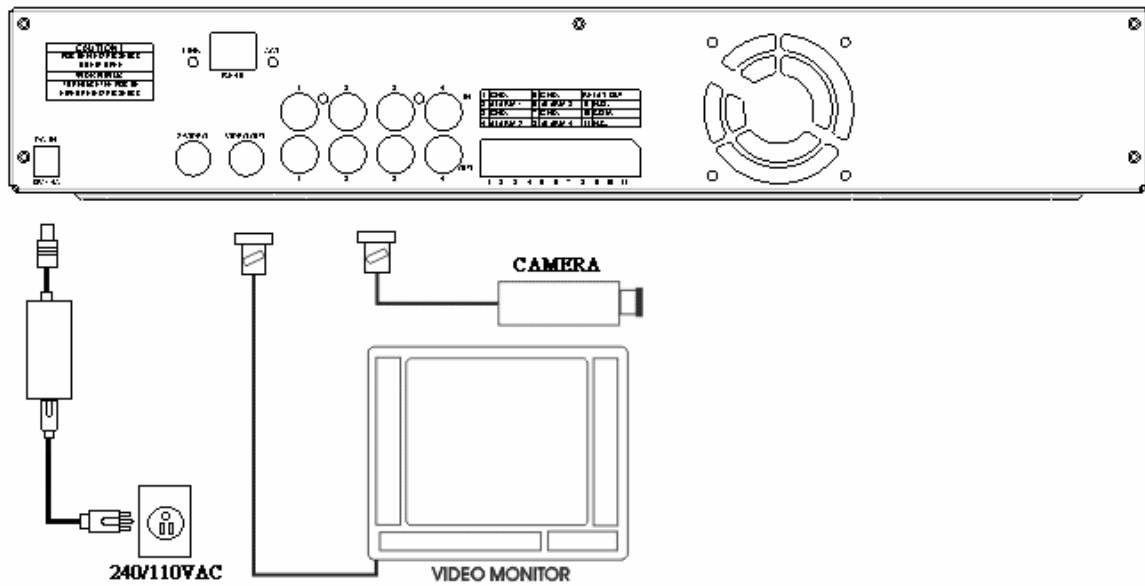


6. NAME and FUNCTION of EACH PART

6.1 Front Panel Buttons and Controls

1. Removable HDD Box

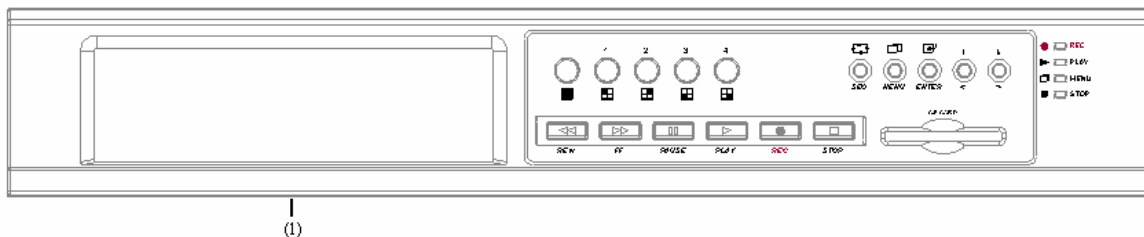

2. Front Panel Button Definition

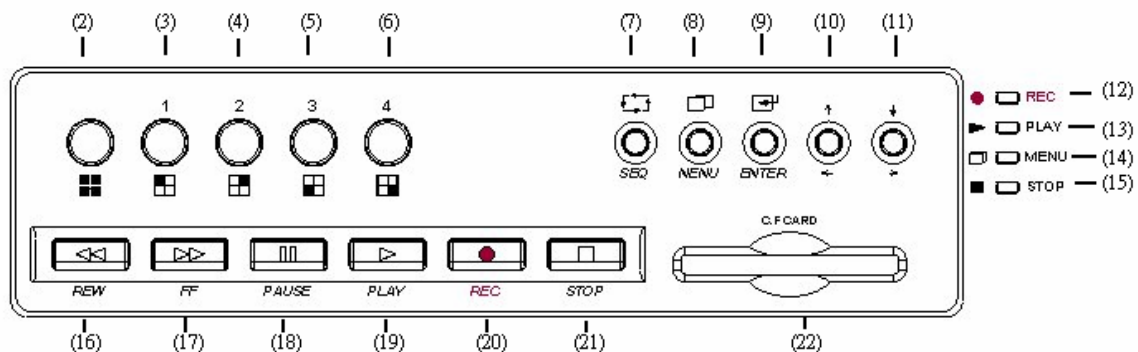


- (2) QUAD : Press this button under monitoring or quad mode to show quad display.
- (3) CH 1 : Press this button under monitoring or record mode to show CH 1 in full-screen.
- (4) CH 2 : Press this button under monitoring or record mode to show CH 2 in full-screen.
- (5) CH 3 : Press this button under monitoring or record mode to show CH 3 in full-screen.
- (6) CH 4 : Press this button under monitoring or record mode to show CH 4 in full-screen.
- (7) SEQ : Press this button under monitoring or record mode, all channels are displayed full-screen in turn repeatedly.
- (8) MENU : Press this button under monitoring mode to enter setup menu and under setup mode to return to the previous selection.
- (9) ENTER : Press this button to confirm after data input.
- (10) UP/ LEFT : Press this button to move the cursor up or down.
- (11) DOWN/ RIGHT : Press this button to move the cursor left or right.
- (12) REC LED : LED lights while recording.

- (13) PLAY LED : LED lights while playing playback.
- (14) MENU LED : LED lights when entering setup menu.
- (15) STOP LED : LED lights when entering stop mode.
- (16) REC : Press this button under monitoring mode to start recording.
- (17) STOP : Press this button under playback to return to start monitoring.
- (18) PAUSE : Press this button under playback to pause playback.
- (19) REW : Press this button under playback to start reverse scanning.
- (20) PLAY : Press this button under playback mode to start playback.
- (21) F.F. : Press this button under playback mode to start fast-forward scanning.
- (22) CF-CARD SLOT

--

6.2 Rear Panel Buttons and Controls

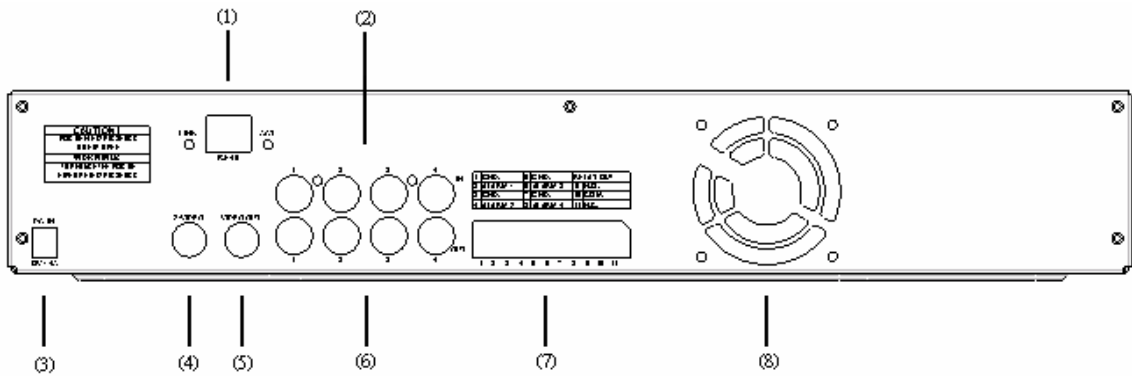

- (1) RJ45: Internet connection terminal (optional).
- (2) Video Input [VIDEO IN]: Connect to cameras.
- (3) DC 12V (4A) [Power Input terminal]: power socket.
- (4) S-Video Output [S-VIDEO OUT]: Connect to the monitor.
- (5) Video Output [VIDEO OUT]: Connect to the monitor.
- (6) Video Loop [VIDEO LOOP].
- (7) I/O Block [I/O BLOCK]: Terminal function description is shown below.

No.	Name	Function
1	GND	Ground Terminal (signal)
2	ALARM 1	Alarm Input Terminal
3	GND	Ground Terminal (signal)
4	ALARM 2	Alarm Input Terminal
5	GND	Ground Terminal (signal)
6	ALARM 3	Alarm Input Terminal
7	GND	Ground Terminal (signal)
8	ALARM 4	Alarm Input Terminal
9	N.O.	Alarm Output (Normal Open)
10	COM	Alarm Output Terminal (NC/ NO COM)
11	N.C.	Alarm Output (Normal Close)

- (8) Cooling Fan.

7. OPERATING PROCEDURE

7.1 Power On

Each time after power on, DVR will auto-detect its peripherals (self-testing, warm-up, auto detects the hard disk and starts CF-card testing, and etc.)

The system will detect the video input and judge whether the video system is NTSC or PAL. When video input is unable to be detected (VIDEO LOSS), the system will send out an alarm, press-on any button to stop the alarm (it will not affect the actual recording).


7.2 Monitoring Mode

This mode is a default for our system after power on. Under this mode, system supports live view for monitoring. Press 《REC》 button, the system enters the record mode, press 《PLAY》 button to start playback, press 《MENU》 button to enter the menu setup display. During record or playback, press 《STOP》 button to stop the current activity and returns to monitoring mode. Under main menu, press 《MENU》 to return to monitoring mode.

During playback, press 《STOP》 button to return to monitoring mode. Press again to change the speed (FF1, FF2 or FF3), or press 《REW》 button to start reverse playback.



- ⊙ To reset (under quad or single display), press 《PAUSE》 button 5 times, the message《ALL SETTING DATA IS INITIALIZED.》will be displayed by flashing 3 times, and after reset the password will be set as default value (11111).
- ⊙ When reset procedure has been completed, the message “DVR RESET COMPLETED. TURN OFF AND ON THE DVR” will be displayed, then please restart the DVR.

7.3 Record Display

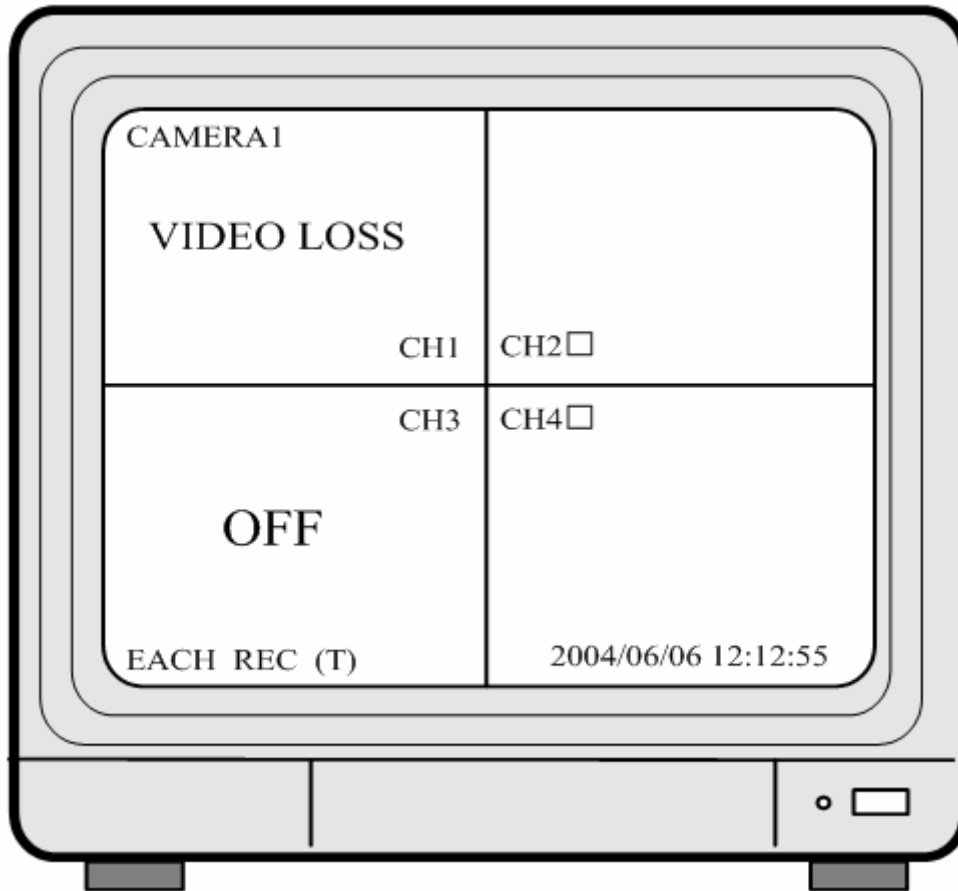

- Note:** CH1: No block figure next to CH1 indicates that it is not recording.
 EACH: Record Type QUAD: Record Type
 (T): TIMER RECORD (A): ALARM RECORD (M): MIX RECORD
 (□): Currently under recording.
 VIDEO LOSS: Video input unable to be detected.
 CAMERA1: Name for CH 1.
 OFF: Channel is set to “OFF”.

7.4 Playback Display

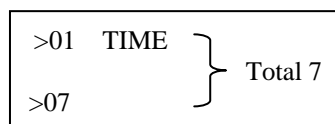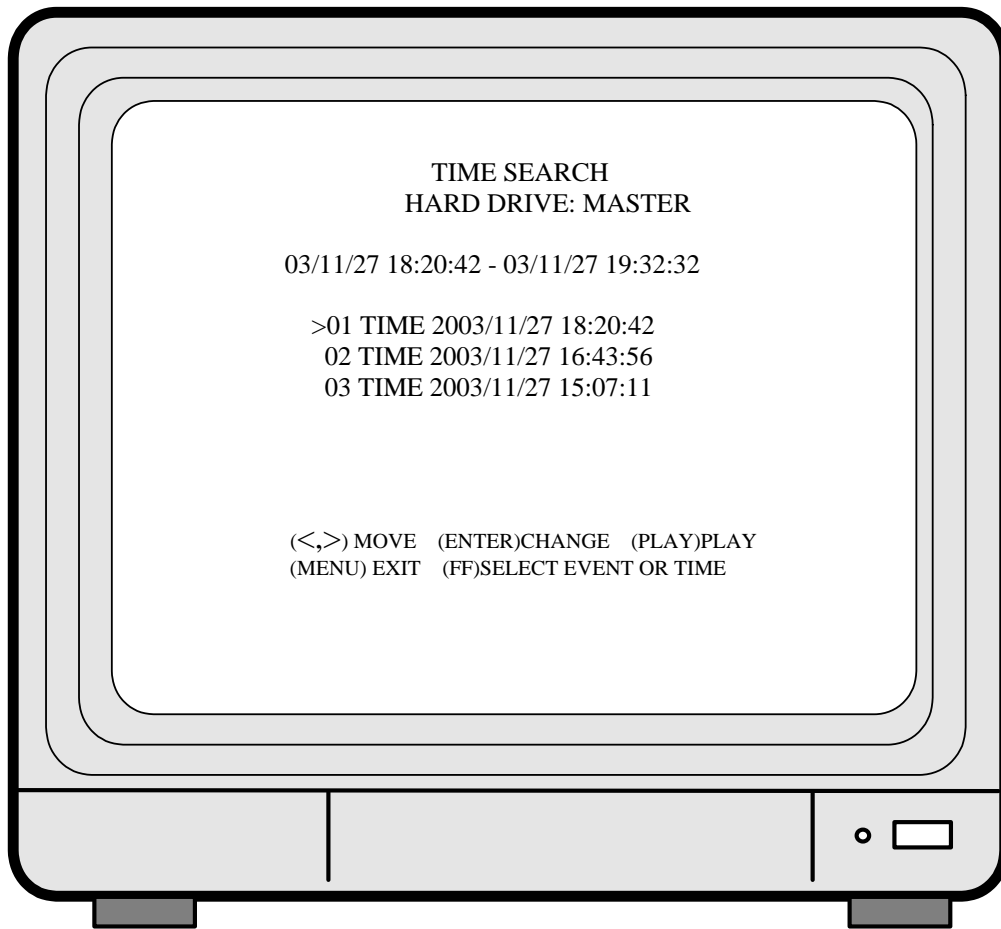


1. First press 《STOP》 button to stop record, then press 《PLAY》 button to enter search display.
2. Press 《FF》 button, then 《PLAY》 button to playback data from old to new. Use 《↑》 and 《↓》 button to move the cursor to the desired playback time, press 《PLAY》 button to start playback.
3. When wish to view recorded videos of a specific time, use 《FF》 button, 《↑》 or 《↓》 button, and 《ENTER》 button to make changes.
4. During playback press《PAUSE》button to pause and press《PLAY》button to play.
5. Press 《FF》 button to fast-forward playback.
6. Press 《REW》 button to reverse playback.
7. Press 《STOP》 button to stop playback.

7.5 Note!

1. “Auto Sequence” function operates only during recording or under live status (Dwell Time: 5 seconds). Sequencing will bypass a channel with video loss if programmed accordingly (Example: Video Loss occurs on CH3, sequencing order: CH1→CH2→CH4→QUAD).
2. To deactivate “Auto Sequence” function, press 1, 2, 3, 4, or QUAD.
3. Withdrawing the CF card, each time before the system (DVR) enters recording or playback status, it auto detect the hard disk (detection time is about 5 seconds and WD brand hard disk is about 30seconds).
4. When coping data from the hard disk to a CF card, make sure that the data has been completely copied onto the CF card, before withdrawing it from the slot. Otherwise, error may occur, system displays “CF CARD REMOVED”, and auto returns to live display.
5. Camera name may only be viewed during recording display and under live display.


8. SYSTEM SETUP

8.1 Menu

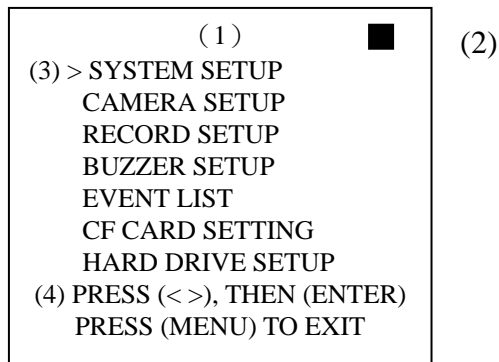

(1) MAIN MENU: Item subject (First menu layer does not have a subject).

(2) Menu Layer Indication: The device consists of four menu layers.

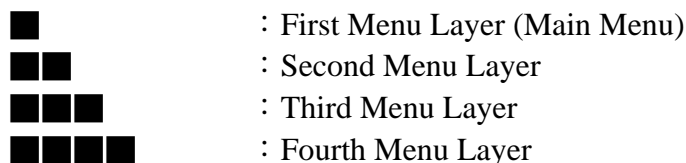

(3) Menu Operation and Setup

Press 《←》 or 《→》 button to move the cursor (>).

Press 《ENTER》 button enter the sub menu.


Press 《MENU》 button:

- Under second or third menu layer, the system will return to the previous menu layer (second layer to first layer or third layer to second layer) and auto updates the modified data.
- Under main menu (first menu layer), the system will enter live mode.

Press 《ENTER》 button, to increase or decrease the setting values that has been highlighted.


(4) Menu Layer Operation Guide

8.2 System Setup

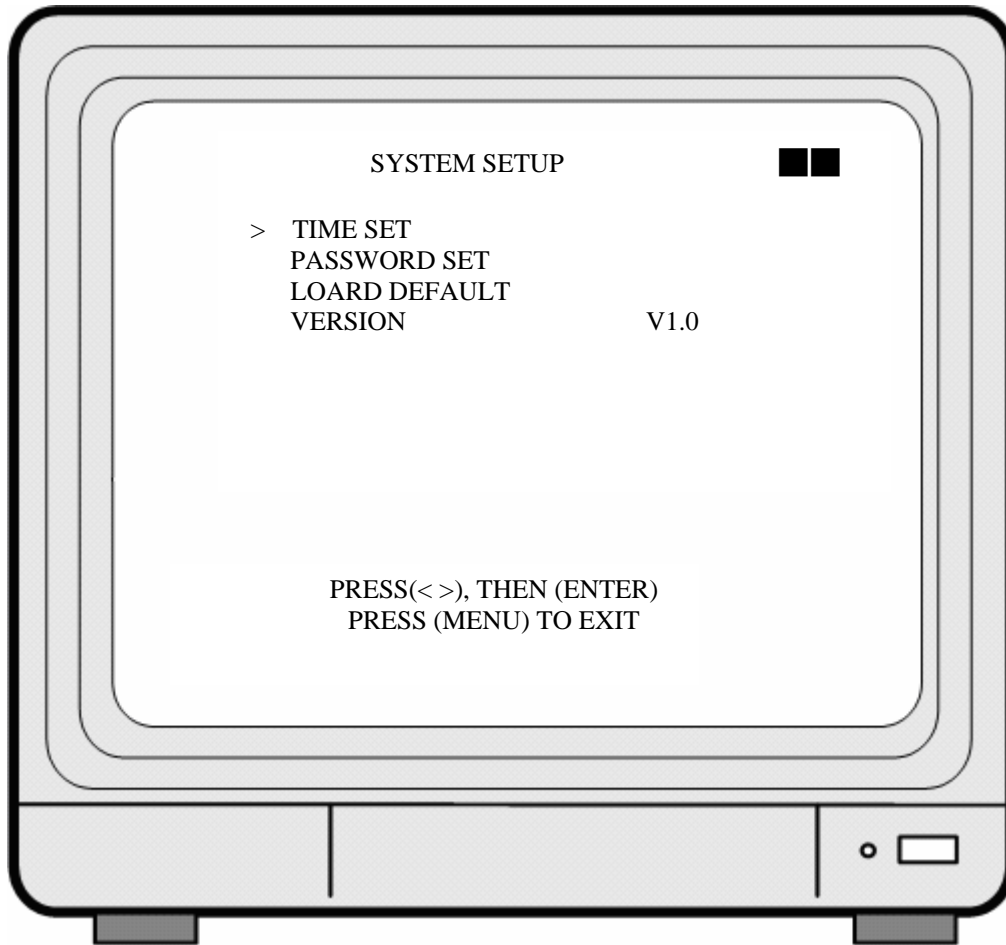


1. Cursor (>) position indicates the current function selected.
2. Press 《←》 and 《→》 button to move the cursor.
3. Press 《ENTER》 button to proceed.
4. Press 《MENU》 button to exit “System Setup”.
5. “System Setup” is situated on the second menu layer. Under this menu layer user may setup the system time, password, and return system to default value, etc (VERSION displayed represents the FIRMWARE version).

8.2.1 TIME SET

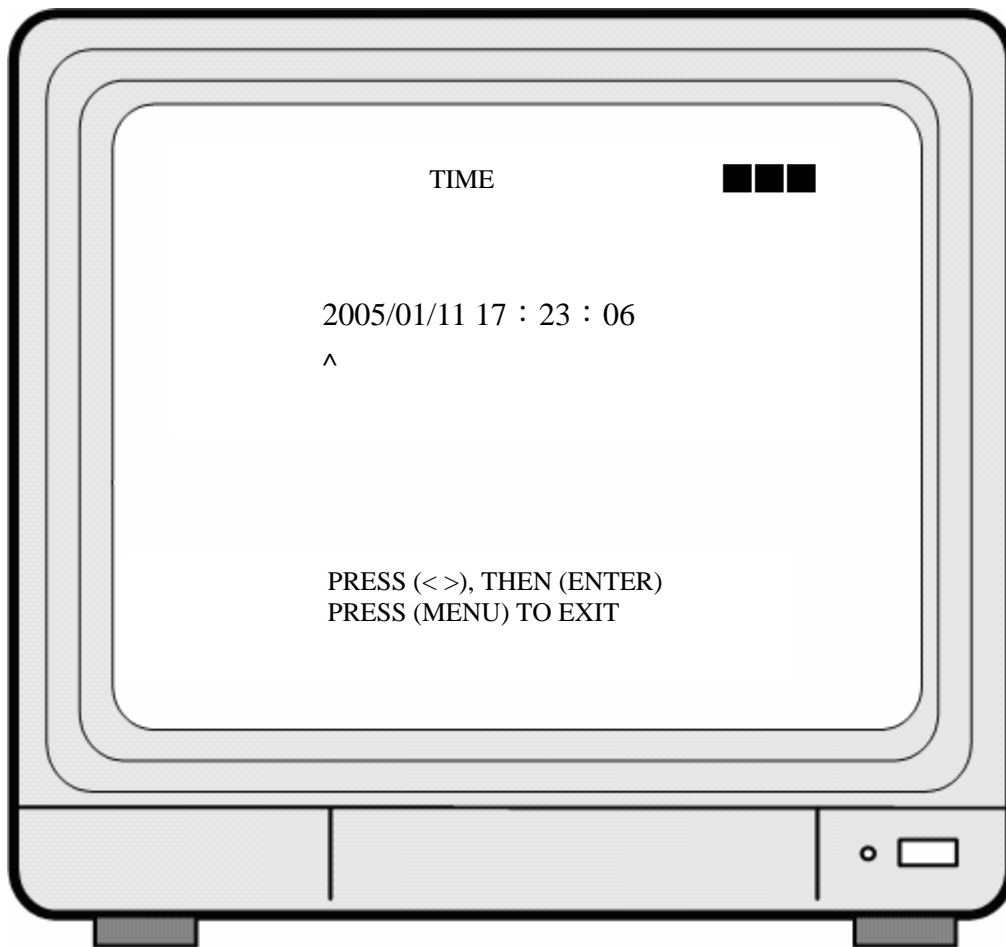


1. Cursor (^) position indicates the current time and date selected.
2. Use 《←》 or 《→》 button to move the cursor.
3. Use 《ENTER》 button to setup time and date.
4. Use 《MENU》 button to exit “Time Setup”.

8.2.2 PASSWORD SET

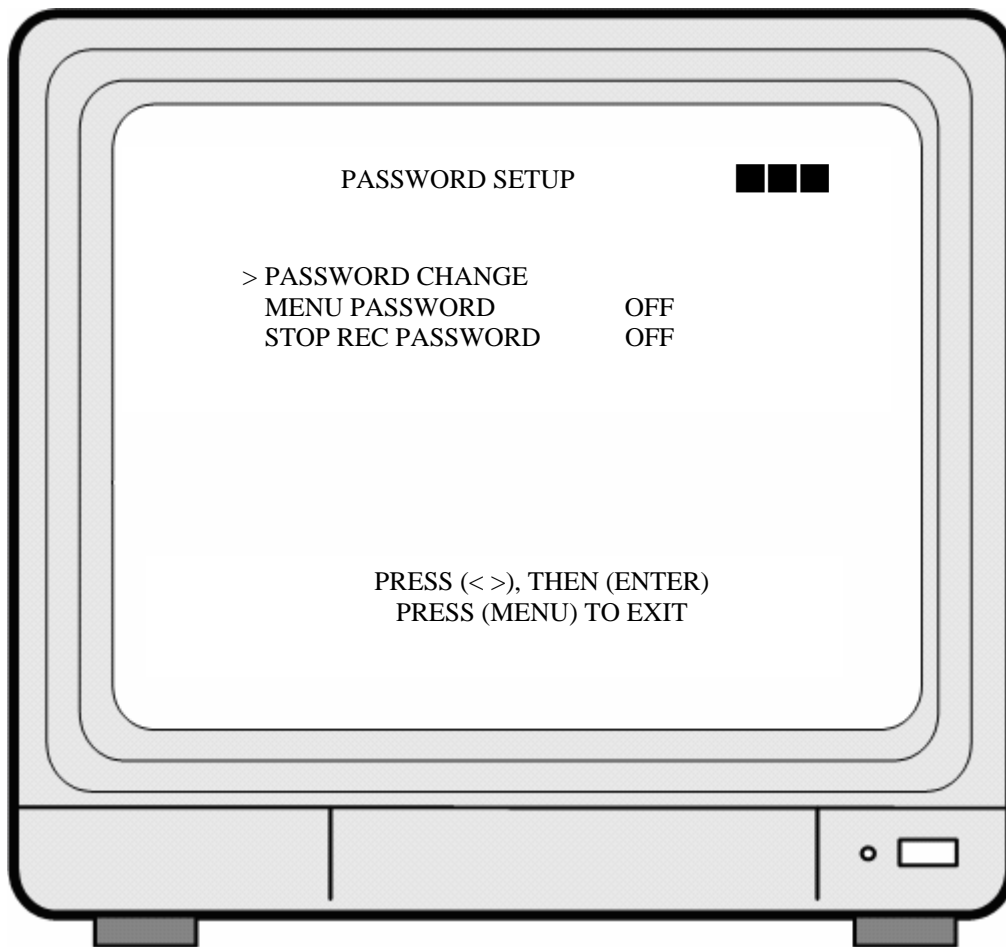

1. Cursor (>) position indicates the current function selected.
2. Use 《←》 and 《→》 button to move the cursor to the desired item .
3. Use 《ENTER》 button to make changes.
4. Use 《MENU》 button to exit “Password Setup”.
5. When the password is setup to “ON”, user will be requested to enter the correct password for entering from live display to menu selection (Default Password: 111111).
6. When password is setup to “ON”, user will be requested to enter the correct password to stop recording (Default Password: 111111).

8.2.2.1 PASSWORD CHANGE

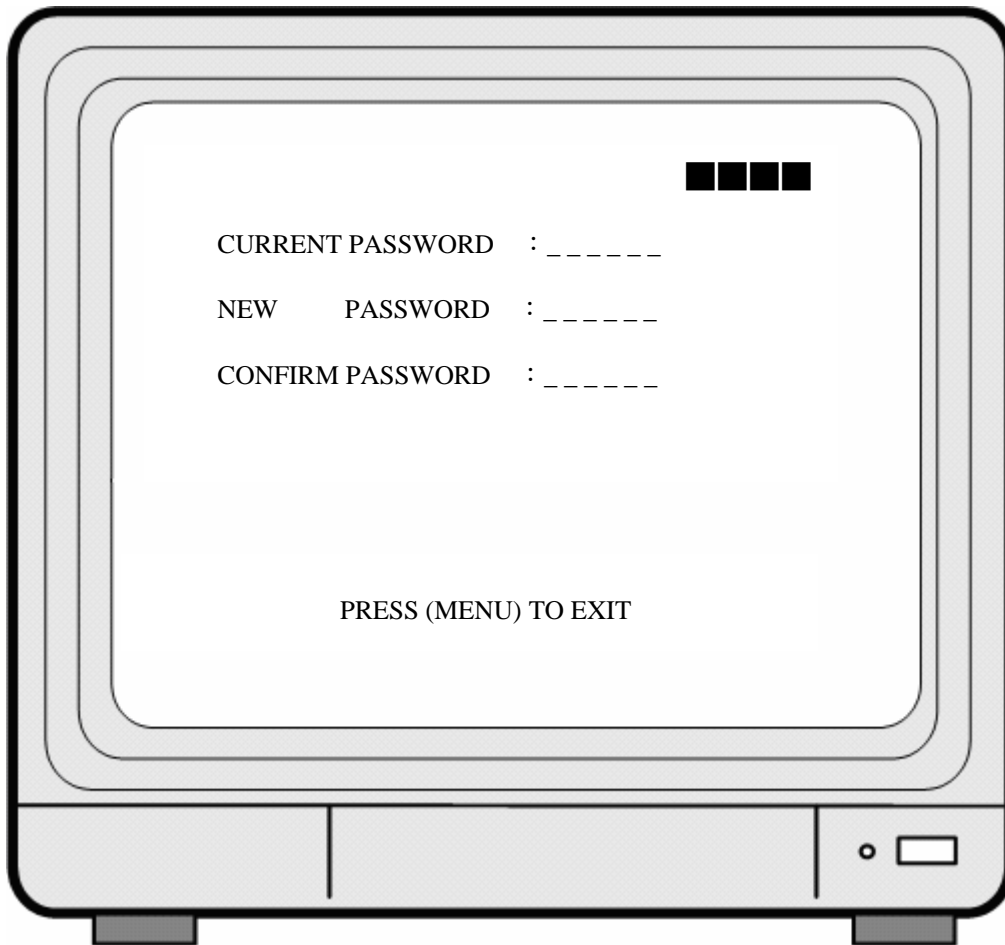


1. Press 《ENTER》 button to show the display above.
2. Enter the current password (CURRENT PASSWORD).
3. Enter new password (NEW PASSWORD).
4. Confirm the new password (CONFIRM PASSWORD).
5. When password change is successful, the system will display “PASSWORD CHANGED”.

※ Default Value: 11111


If password entered is incorrect, you will receive a message “NO PASSWORD CHANGED” to inform you (message flashes three times) and the system returns to “Password setup” selection.

8.2.3 LOAD DEFAULT

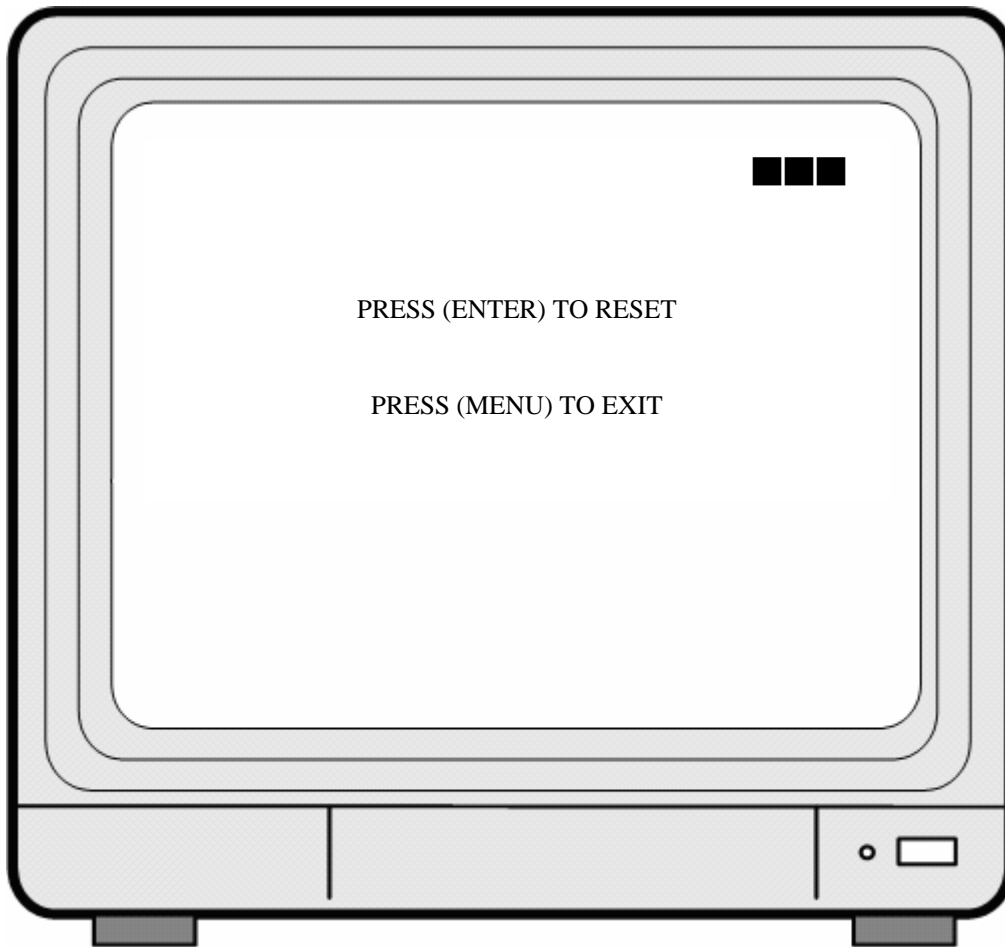

1. Press 《ENTER》 button to show the display above.
2. Press 《ENTER》 button the message 《ALL SETTING DATA IS INITIALIZED》 will be displayed by flashing 3 times, and returns to default value. When reset procedure has been completed, the message “DVR RESET COMPLETED TURN OFF AND ON THE DVR” will be displayed, please restart the DVR.
3. Press 《MENU》 button to exit “Load Default Setup” selection.

8.3 Camera Setup

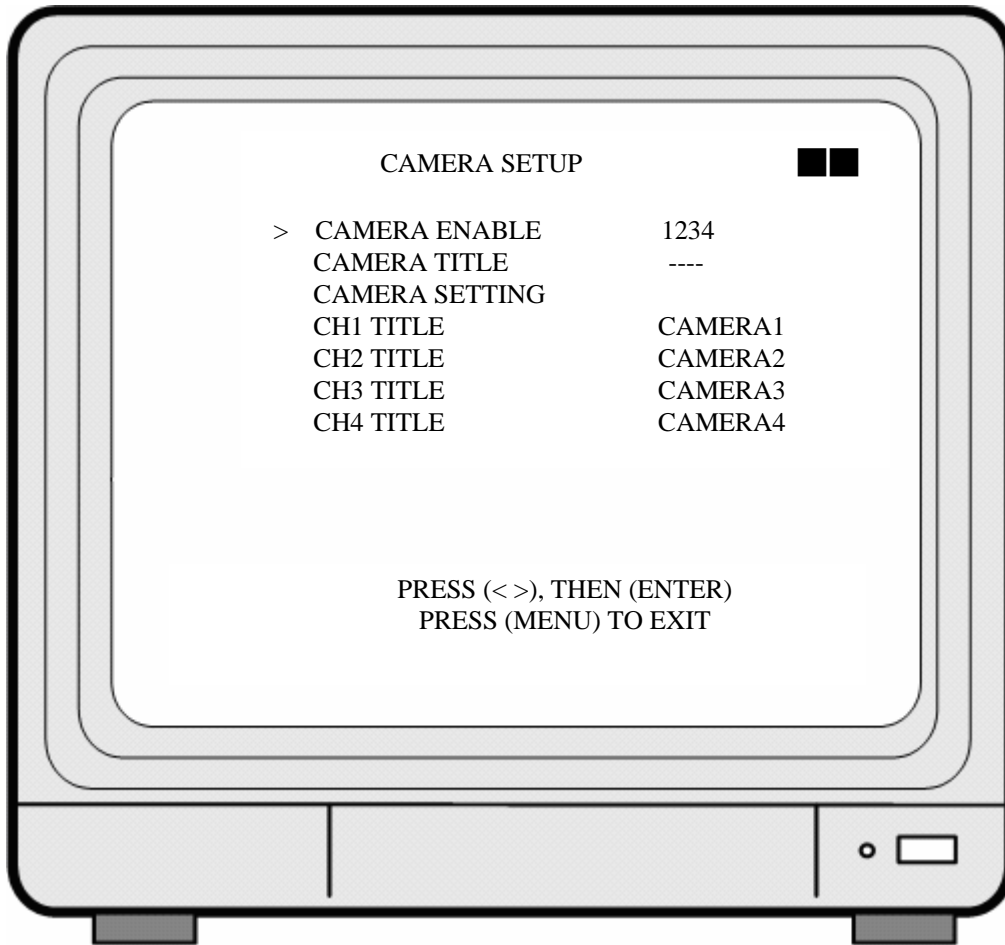


1. Cursor (>) position indicates the current function selected.
2. Press 《←》 and 《→》 button to move the cursor.
3. Press 《ENTER》 button to proceed.
4. Press 《MENU》 button to exit.
5. “Camera Setup” is situated on the second menu layer. Under this menu layer user may setup camera name (camera name for CH1, CH2, CH3 and CH4), standard camera setup, etc.
6. Press《ENTER》button to change the camera view combination (select to view the desired channel).
(It consists of 16 different optional camera view combinations)
 - 1) Select (- - - -), all cameras are disabled (no image display).
 - 2) Select (1 2 3 4), all cameras are operational (quad image display).
 - 3) Select (- - - 4), only camera four is operational (CH4 image display only).
7. When proceeding “CH1 TITLE”, press 《ENTER》 button to show the display below:

CH1 TITLE V
 CAMERA1
 12345678

“V” indicates the position of the cursor. Press «←» and «→» button to move the cursor, and press «ENTER» button to change the title (maximum 8 characters).
8. All channel titles are setup the same way.


Once the user formats the hard disk drive, the camera title returns to its default setting (CAMERA1/ CAMERA2/ CAMERA3/ CAMERA4). It is because this setup is stored in the hard disk drive.

8.3.1 CAMERA SETTING

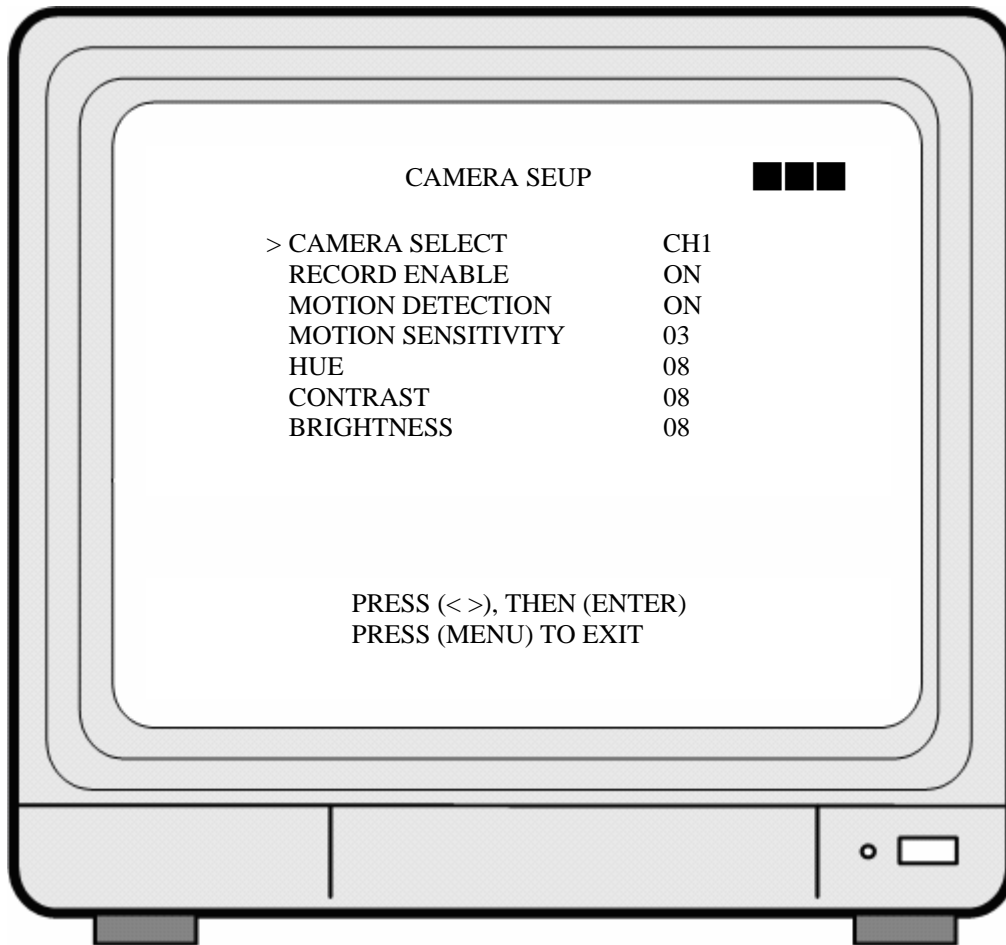

1. Cursor (>) position indicates the current function selected.
2. Press «←» and «→» button to move the cursor to the desired item.
3. Press «ENTER» button to make changes.
4. Press «MENU» button to exit “CAMERA SETUP” selection.
5. CAMERA SELECT: Press «ENTER» button to select the desired channel.
6. RECORD ENABLE: Press «ENTER» button to switch the channel recording ON/ OFF.
7. MOTION DETECTION: Press «ENTER» button to switch the motion detection function ON/ OFF.
8. MOTION SENSITIVITY: Press «ENTER» button to setup the motion sensitivity rate (5 sensitivity rate values, 01 most sensitive).
9. HUE: Press «ENTER» button to adjust the color of cameras (15 color adjustment values, default value: 08).
10. CONTRAST: Press «ENTER» button to adjust the camera contrast (15 contrast adjustment values, default value: 08).
11. BRIGHTNESS: Press «ENTER» button to adjust camera brightness (15 color adjustment values, default value: 08).

8.4 Record Setup

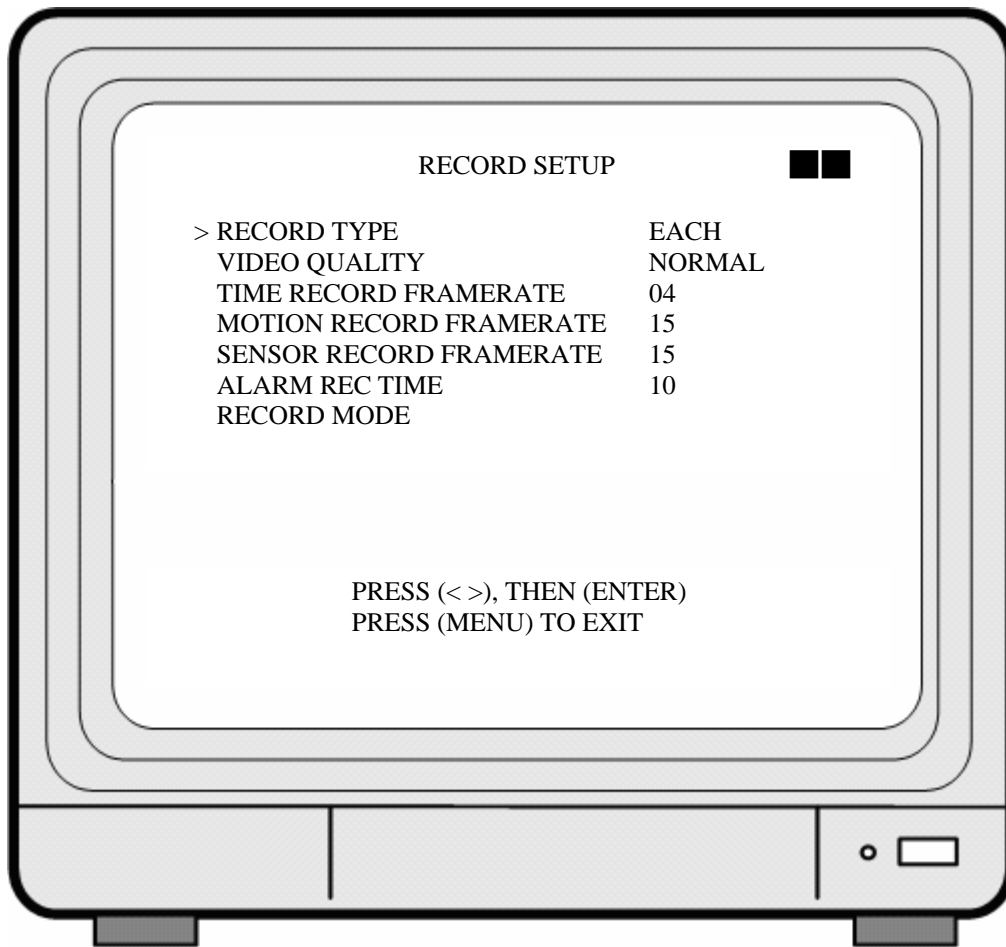

1. Cursor (>) position indicates the current function selected.
2. Use 《←》 and 《→》 button to move the cursor to the desired item.
3. Use 《ENTER》 button to make changes.
4. Use 《MENU》 button to exit “RECORD SETUP” selection.
5. “Record Setup” is situated on the second menu layer. Under this selection user may setup the following function: Record Type, Video Quality, Time Record Framerate, Motion Record Framerate, Sensor Record Framerate, Alarm Record Time, and Record Mode.
6. RECORD TYPE: Press 《ENTER》 button to select between “QUAD” and “EACH” mode.
7. VIDEO QUALITY: Press 《ENTER》 button to select different quality recordings (HIGH, NORMAL or LOW).
8. TIME RECORD FRAMERATE: Press《ENTER》button to setup the recording speed when “T” mode is setup under schedule record mode.
9. MOTION RECORD FRAMERATE: Press《ENTER》button to setup different recording speeds per channel, suitable when the recording speed under

schedule record mode is setup to “M” (mix) or “A” (alarm).


10. **SENSOR RECORD FRAMERATE:** Press 《ENTER》 button to setup different recording speed, when a sensor device has been triggered (this setup is only active when the recording speed under schedule record mode is setup to “M”(Mix) or “A” (Alarm)).

NTSC:30,15,10,7,5,4,3,2,1fps.

PAL :25,12,8,6,4,3,2,1fps.


11. **ALARM REC TIME:** Press 《ENTER》 button to setup sensor recording time after a sensor device has been triggered (this setup functions is only active when the recording speed under schedule record mode is setup to “A”(Alarm)).

8.4.1 RECORD MODE

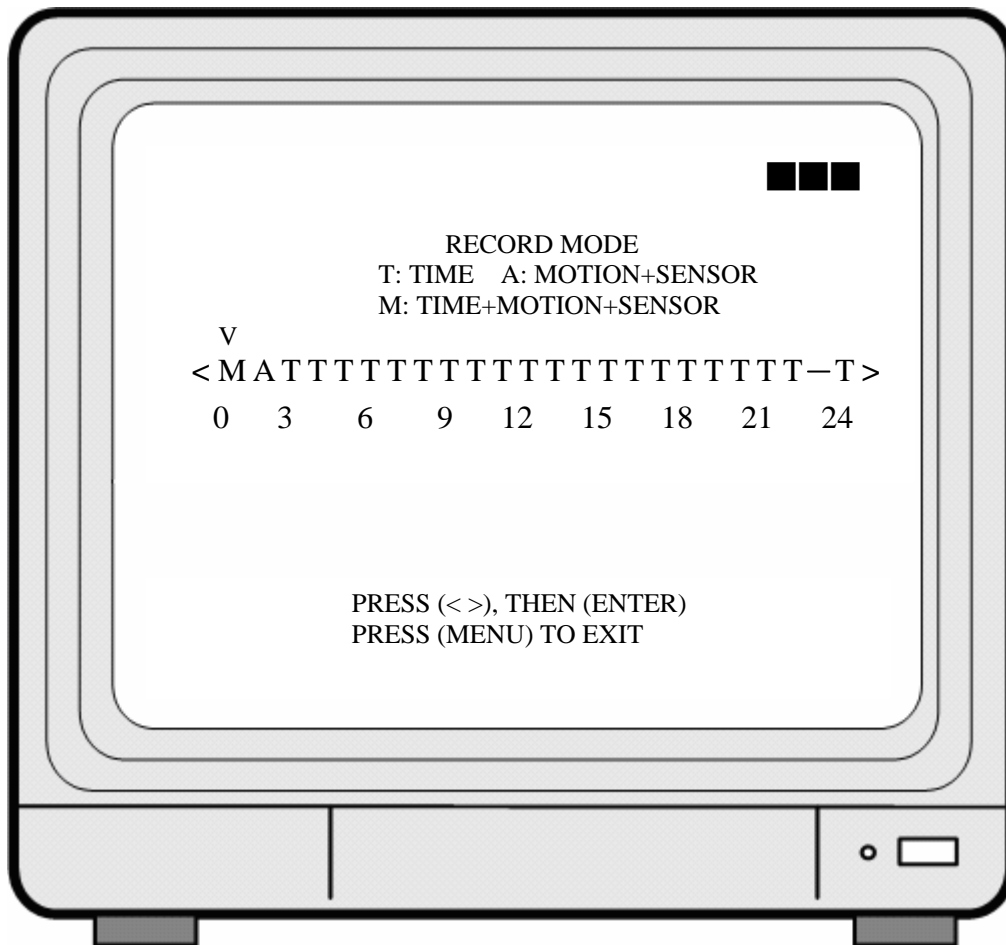

1. Cursor (V) position indicates the current function selected.
 2. Use 《←》 and 《→》 button to move the cursor to the desired item (time).
 3. Use 《ENTER》 button to make changes.
 4. Use 《MENU》 button to exit “SECHDULE RECORD MODE” selection.
 5. T: Time, indicates continuous record.
 6. M: TIME+MOTION+SENSOR.
 - (1) When motion has been detected, it will be recorded by “Motion Record Speed”.
 - (2) When sensor has been triggered, it will be recorded by “Sensor Record Speed”.
 - (3) Otherwise, it is recorded by “Time Record Speed”.
 7. A: MOTION+SENSOR
 - (1) When motion has been detected, it will be recorded by “Motion Record Speed”.
 - (2) When sensor has been triggered, it will be recorded by “Sensor Record Speed”.
- ※ When both “MOTION” and “SENSOR” has been triggered, it will be recorded by “Motion Record Speed”.


8.5 Buzzer Setup

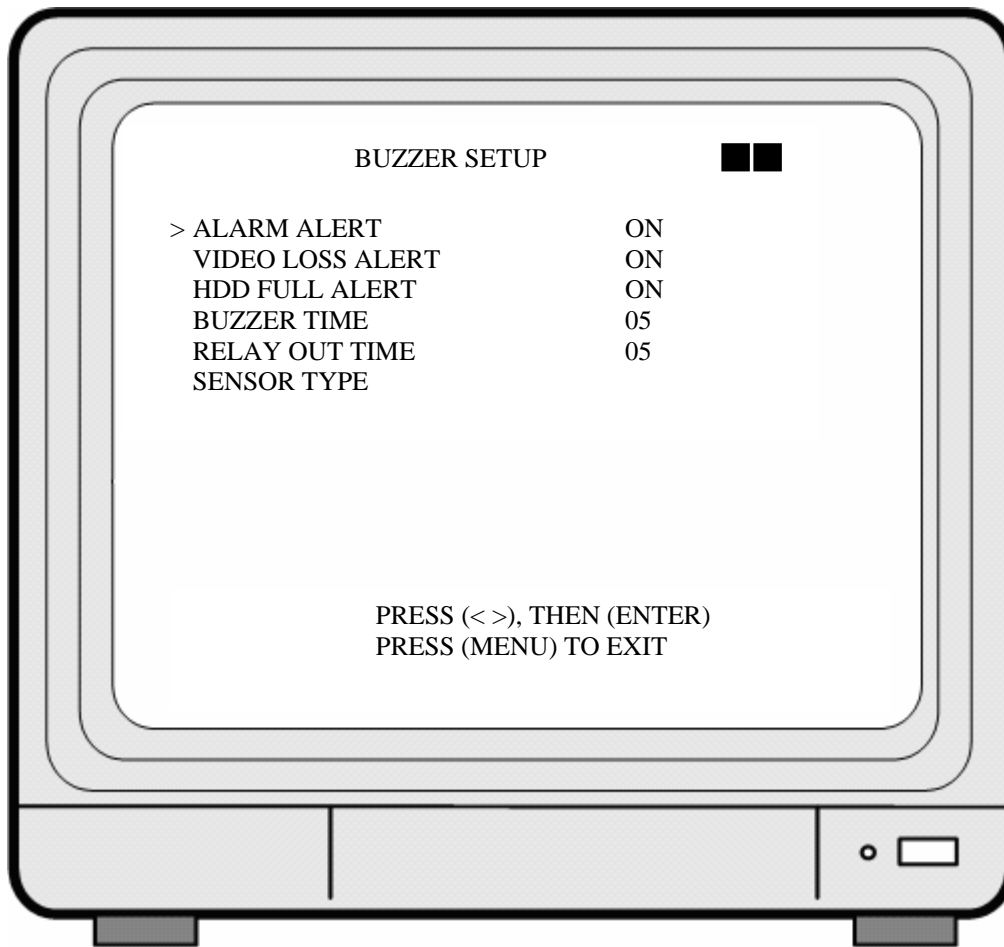

1. Cursor (>) position indicates the current selected position.
2. Press 《←》 and 《→》 button to move the cursor to the desired item (time).
3. Press 《ENTER》 button to proceed.
4. Press 《MENU》 button to exit “BUZZER SETUP” selection.
5. “BUZZER SETUP” is situated on the second menu layer. Under this menu layer user may setup “ALARM ALERT”, “ VIDEO LOSS ALERT”, “ HDD FULL ALERT”, “ BUZZER TIME”, “ RELAY OUT TIME”, and “ SENSOR TYPE”.
6. ALARM ALERT: Press 《ENTER》 button to setup “ON” or “OFF”, whether to trigger the alarm when motion event has been detected (this setup is only active when the system is under record status and schedule record is setup to “M”(Mix) or “A” (Alarm)).
7. VIDEO LOSS ALERT: Press 《ENTER》 button to setup “ON” or “OFF”, whether to trigger the alarm when video loss has been detected (this setup is only active when the system is under record or live status).


8. HDD FULL ALERT: Press 《ENTER》 button to setup “ON” or “OFF”, whether to trigger the alarm when hard disk is full (this setup is only active when the system is under record status).
9. BUZZER TIME: Press 《ENTER》 button to setup the buzzer time to continuous (CONT), and press any button to release this setup.
10. RELAY OUT TIME: Press 《ENTER》 button to setup the relay out time to continuous (CONT), and press any button to release this setup.

8.5.1 SENSOR TYPE:

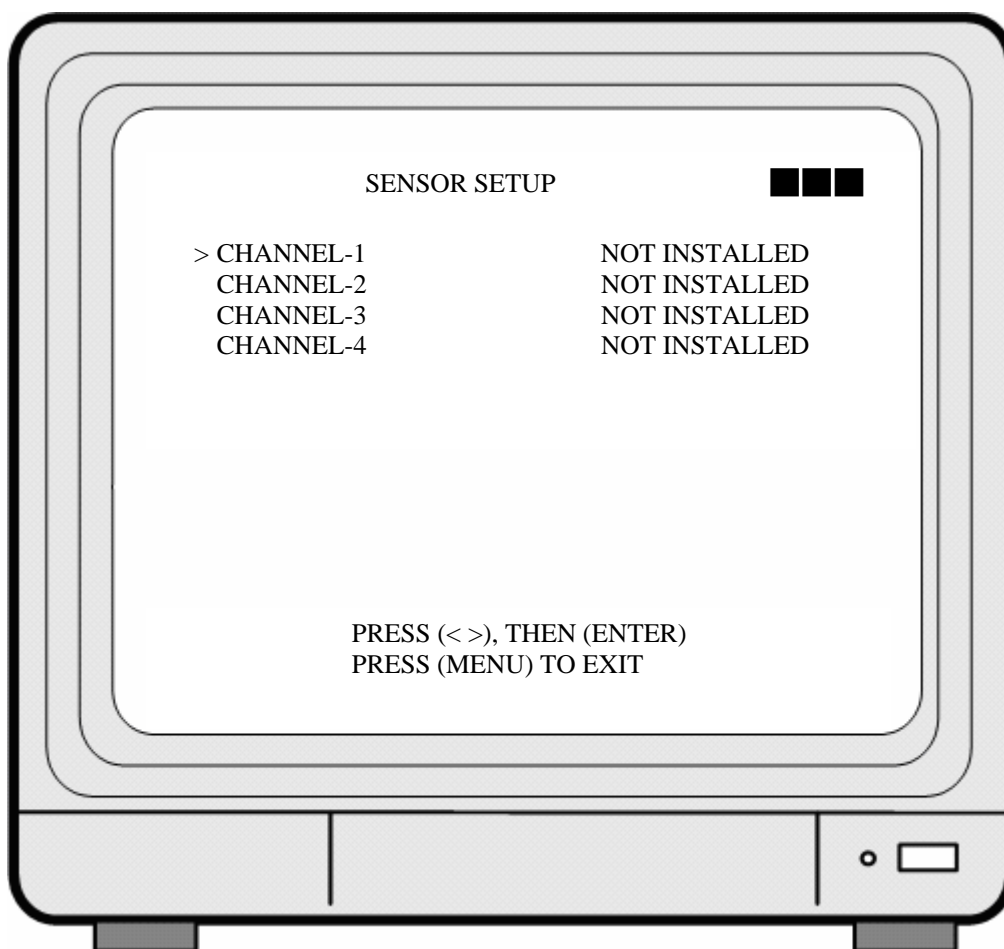


1. Cursor (>) position indicates the current selected position.
2. Press《←》and《→》button to move the cursor to the desired item (CH1~CH4).
3. Press 《ENTER》 button to make changes.
4. Press 《MENU》 button to exit “SENSOR SETUP” selection.
5. CHANNEL-1: Press《ENTER》button to setup “NO” (Normal Open) or “NC” (Normal Close).
6. CHANNEL-2 ~ CHANNEL-4: Please follow the setup shown above (CHANNEL-1).

8.6 Event List

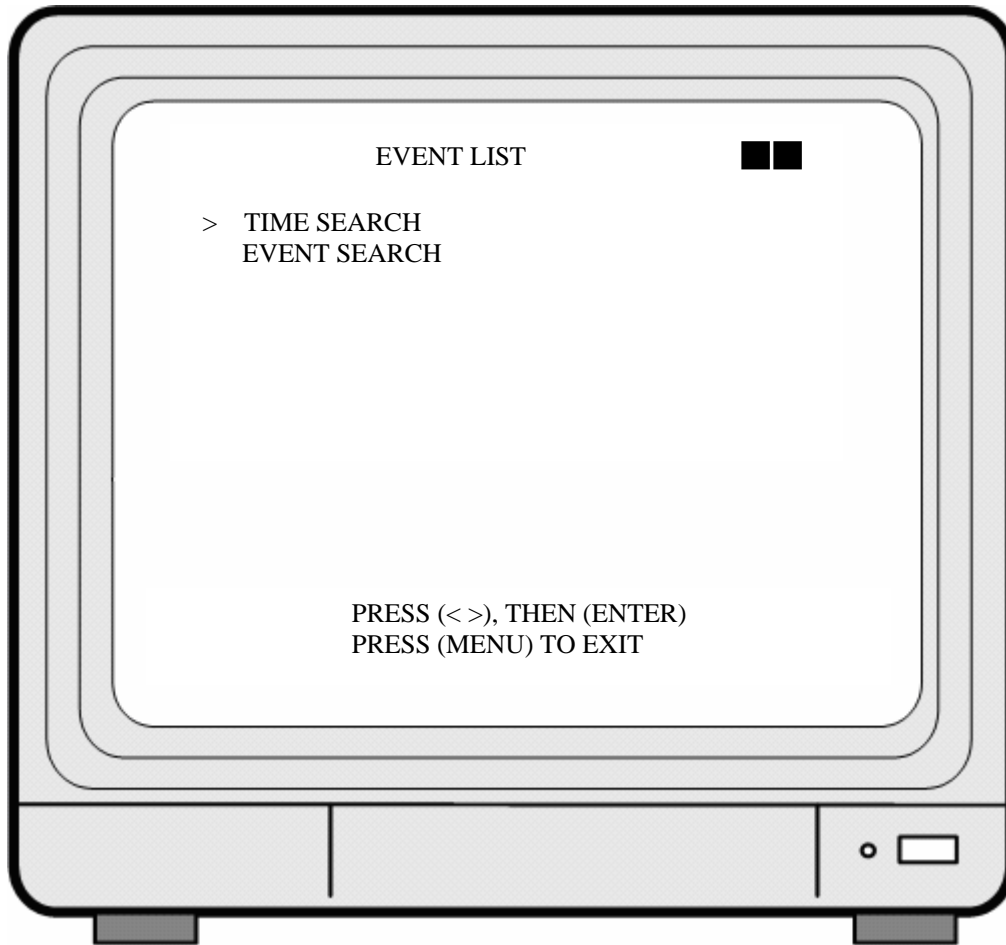


1. Cursor (>) position indicates the current function selected.
2. Press 《←》 and 《→》 button to move the cursor to the desired item.
3. Press 《ENTER》 button to proceed.
4. Press 《MENU》 button to exit “EVENT LIST” selection.
5. “EVENT LIST” is situated on the second menu layer. Under this menu layer user may setup “TIME SERACH” or “EVENT SEARCH”.

8.6.1 TIME SEARCH

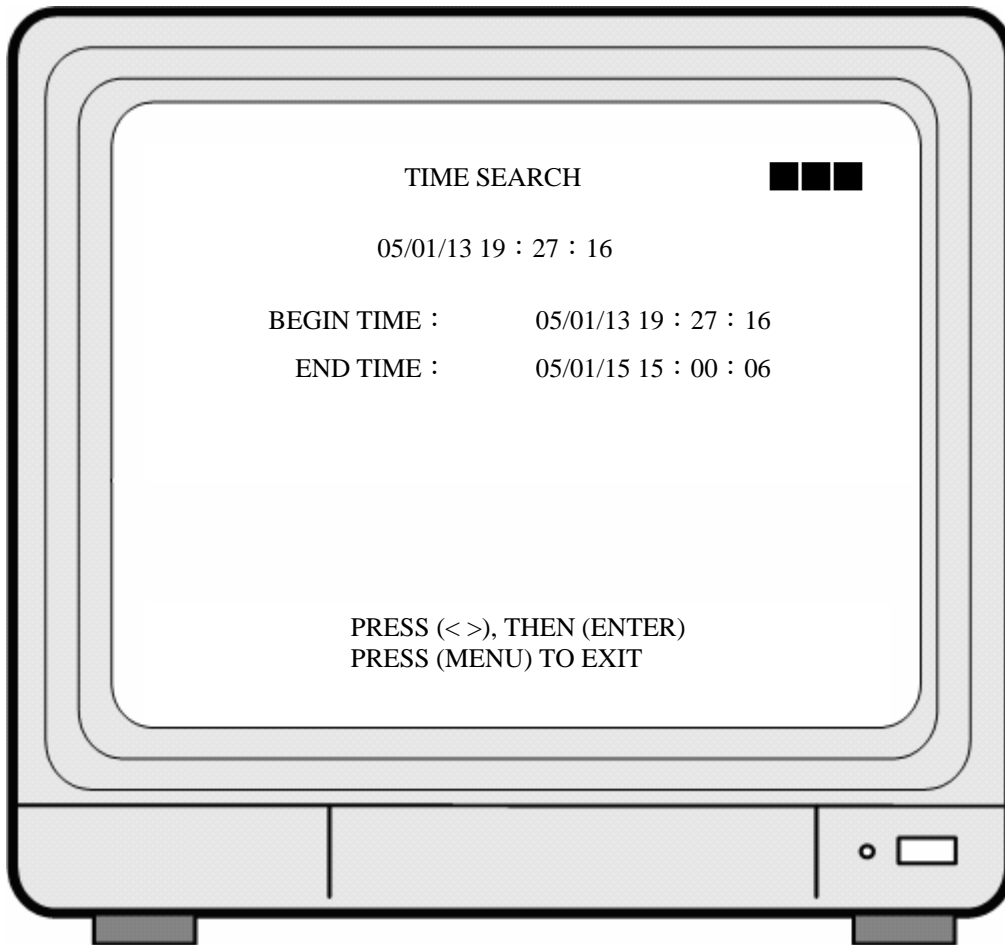

1. TIME SEARCH: Displays system recording time (begin and end).
2. Press 《←》 and 《→》 button to select the desired time and date.
3. Press 《ENTER》 button to setup playback starting time and date.
4. Press 《MENU》 button to exit “TIME SEARCH” selection.
5. Press 《PLAY》 button to play.

8.6.2 EVENT SEARCH

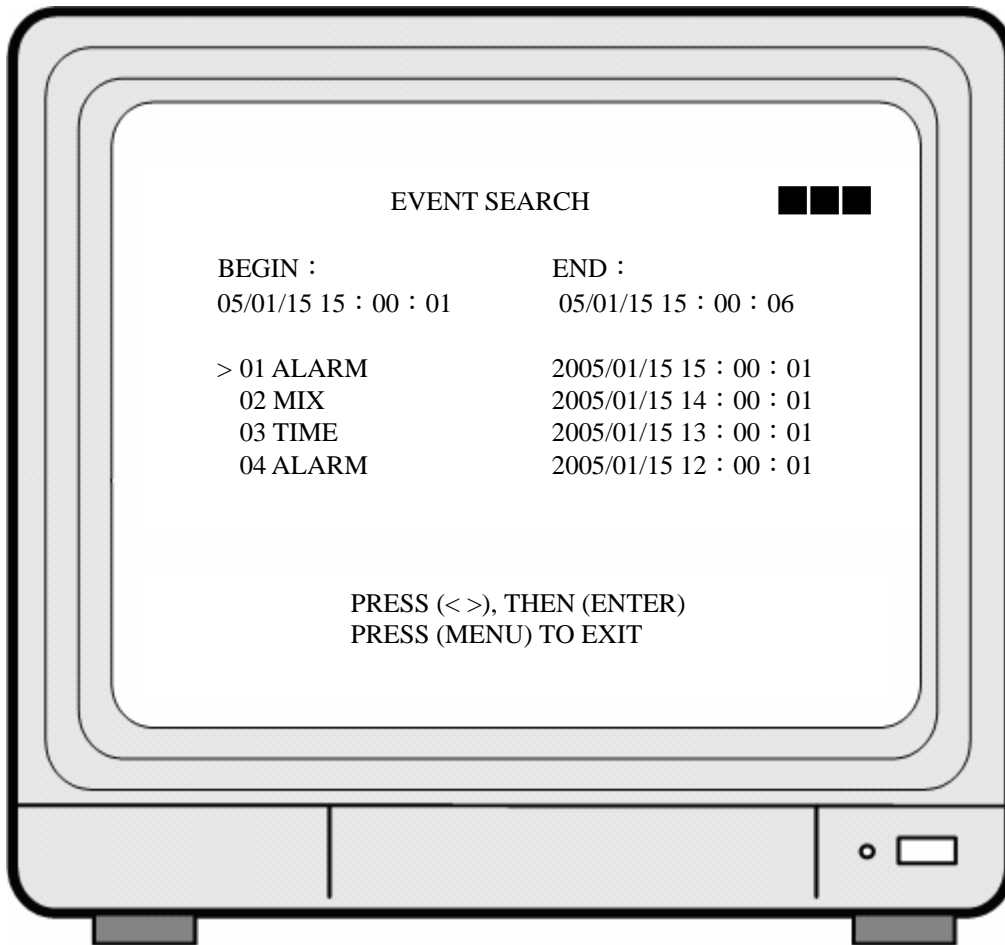


1. EVENT SEARCH: Displays all recording events, every page consists of 7 events, and maximum 63 stored events.
2. Press 《←》 and 《→》 button to select the desired event to playback.
3. Press 《MENU》 button to exit “EVENT SEARCH” selection.
4. Press 《PLAY》 button to play.

※ BEGIN : END :
05/01/15 15 : 00 : 01 05/01/15 15 : 00 : 06


Displays the beginning and end time of each event.

8.7 CF Card Setup

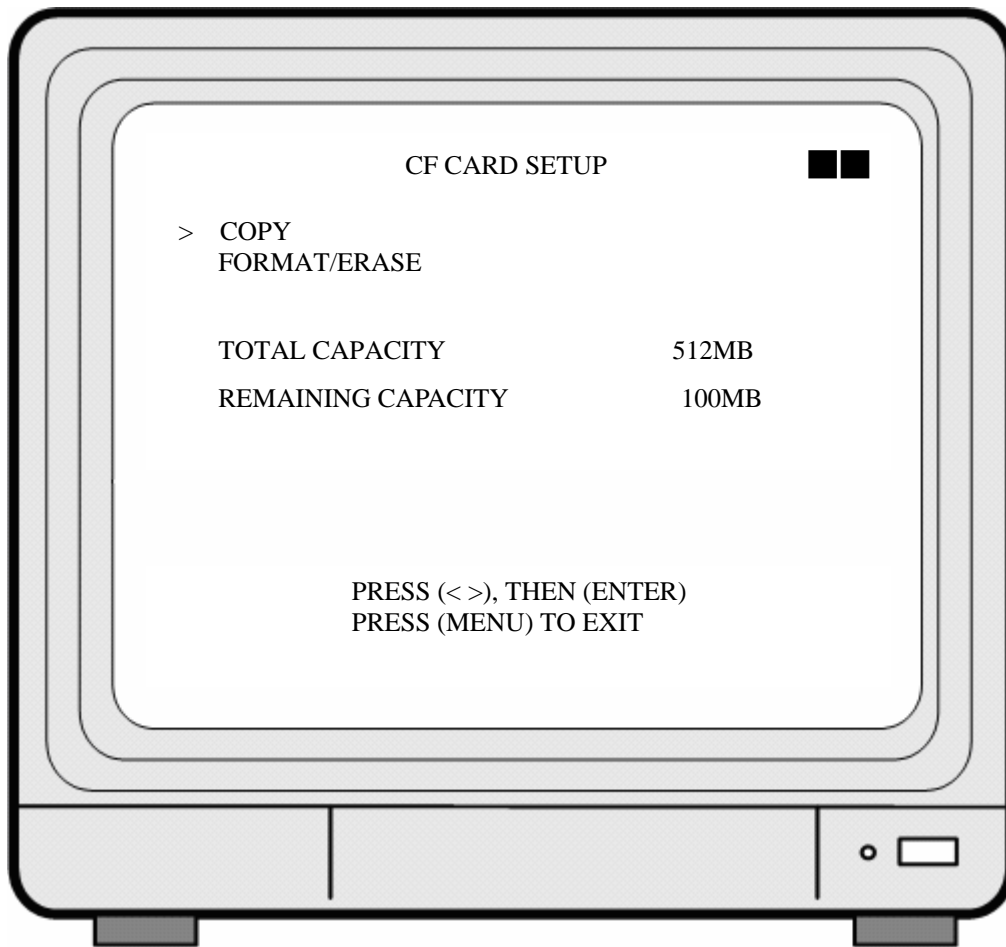

1. Cursor (>) position indicates the current function selected.
 2. Press 《←》 and 《→》 button to select the desired item.
 3. Press 《ENTER》 button to proceed.
 4. Press 《MENU》 button to exit “CF CARD SETUP” selection.
 5. “CF CARD SETUP” is situated on the second menu layer. Under this menu layer user may setup to “COPY” or “FORMAT/ ERASE”.
 6. TOTAL CAPACITY: CF Card total capacity (MB per unit).
 7. REMAINING CAPACITY: CF Card remaining capacity (MB per unit).
 8. When remaining capacity equals zero, indicates that there’s no storage space available. Please format the CF Card (FORMAT/ ERASE).
- ※ Note! When the screen displays “NO CF CARD EXIST”, indicates that the system can not detect the CF-card.
- ※ Note! Format the CF card (FORMAT/ ERASE) before first time use.
- ※ Please do not use the format (FORMAT) function supplied by the personal computer, data may be lost due to such action.


8.7.1 SELECT TIME

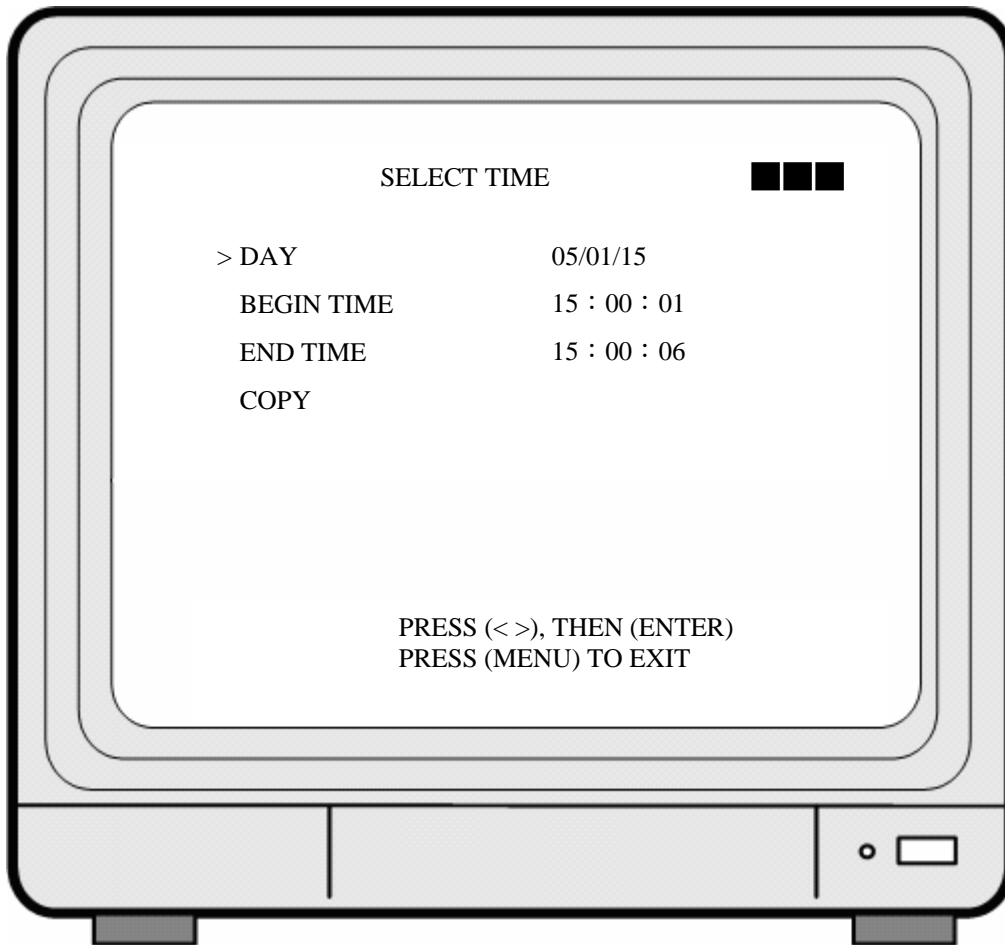

1. SELECT TIME: Displays the newest event date, begin and end time.
2. Press 《←》 and 《→》 button to select the desired item.
3. Press 《ENTER》 button to setup the desired date and time to proceed copy (COPY) function.
4. Press 《MENU》 button to exit “SELECT TIME” selection.


- ※ When the message “CF CARD FULL” is displayed on the screen, indicates that storage capacity (CF Card) is empty. Please format (FORMAT/ERASE) to proceed.
- ※ When the message “Time Input Error” is displayed on the screen, indicates that the time date entered is incorrect or no data. The system auto returns to CF Card setup selection.

8.7.1.1 COPY

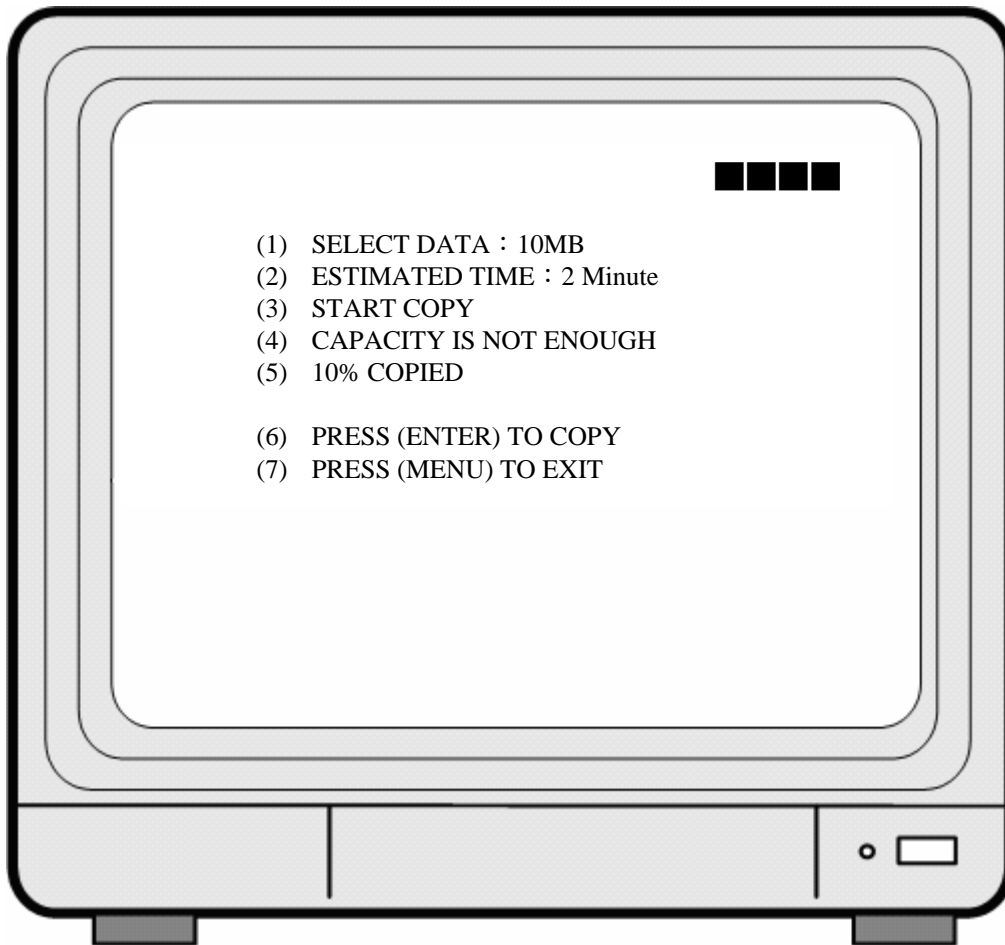

- (1) Data capacity.
- (2) Estimated time to complete data copy.
- (3) Request to confirm copy.
- (4) When the data capacity is greater than the remaining storage capacity, the message “CAPACITY IS NOT ENOUGH” will be displayed.
- (5) Data copy percentage completed.
- (6) Press 《ENTER》 button to start copy.
- (7) Press 《MENU》 button to exit “Copy Display”.


8.7.2 FORMAT/ ERASE

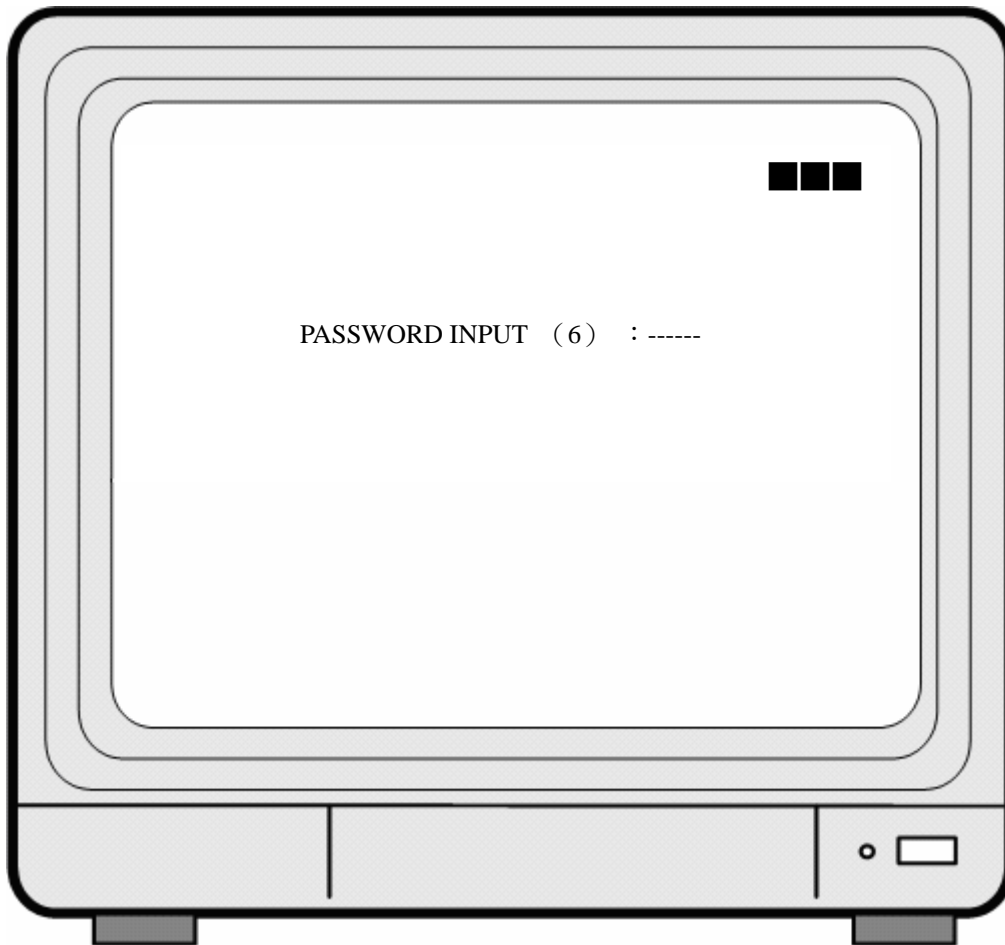

1. When proceeding “FORMAT/ ERASE” function, the above display will be shown.
2. When password entered is correct, the screen will display the message “PASSWORD CORRECT”, “CF CARD FORMATED” (flashes 3 times), indicates CF Card format is successful.
3. When password entered is incorrect, the screen will display “PASSWORD INCORRECT” (flashes 3 times), and returns to “CF CARD SETUP” selection.


※ This password equals to hard disk format password.

8.8 Hard Drive Setup

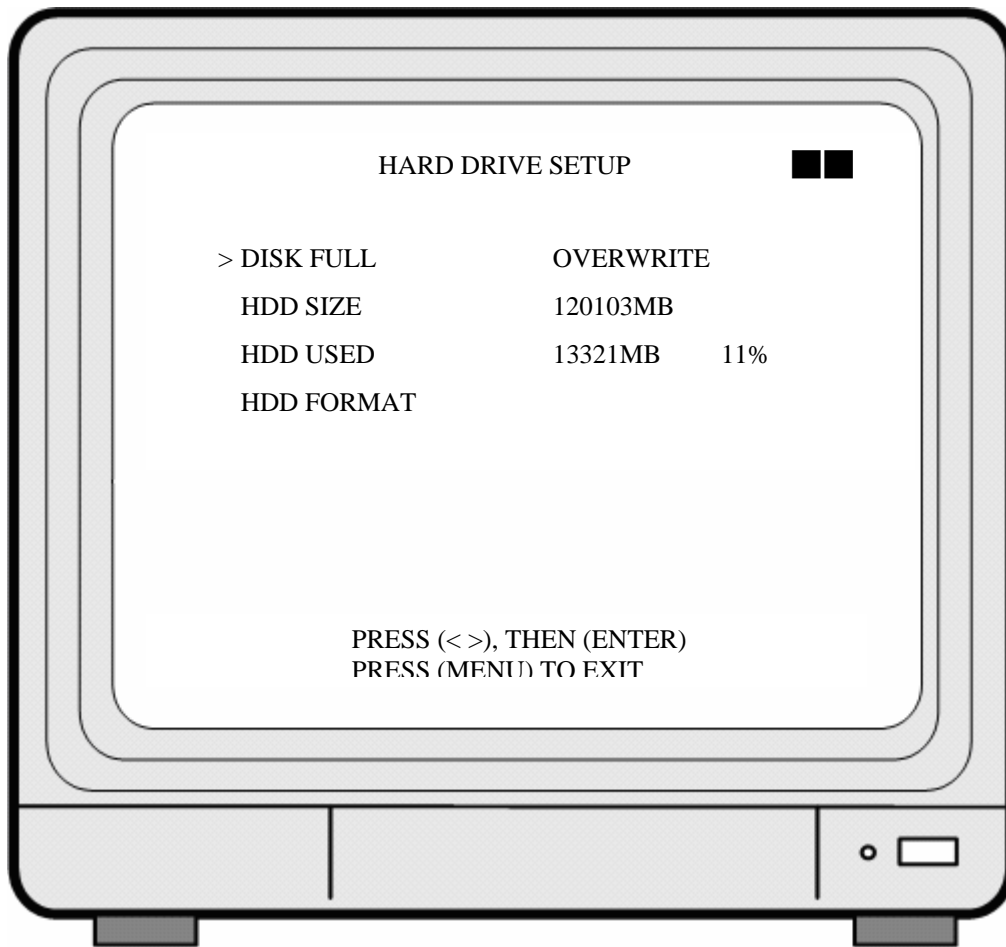


1. Cursor (>) position indicates the current function selected.
2. Press 《←》 and 《→》 button to select the desired item.
3. Press 《ENTER》 button to make changes or to proceed.
4. Press 《MENU》 button to exit “HARD DRIVE SETUP” selection.
5. “HARD DRIVE SETUP” is situated on the second menu layer. Under this menu layer user may setup to overwrite or format the hard disk.
6. DISK FULL: Press 《ENTER》 button to setup “ON” or “OFF”, whether to overwrite or stop recording when the hard disk is full.
7. HDD SIZE: Displays hard disk capacity.
8. HDD USED: Displays the capacity already used.

8.8.1 HDD FORMAT:

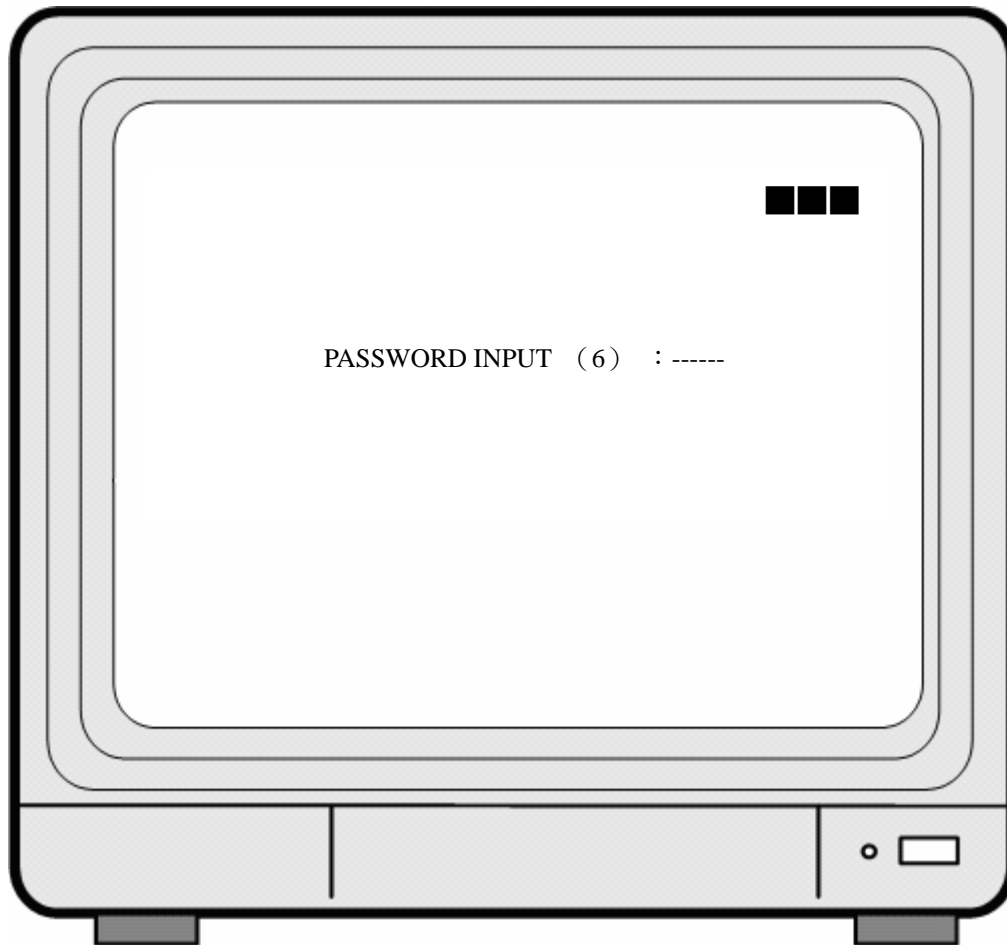

1. When proceeding “HDD FORMAT” function, the above display will be shown.
2. When password entered is correct, the screen will display the message “HDD FORMATTED” (flashes 3 times), indicates hard disk format is successful.
3. When password entered is incorrect, the screen will display “PASSWORD INCORRECT” (flashes 3 times), and returns to “HARD DRIVE SETUP” selection.

MEMO

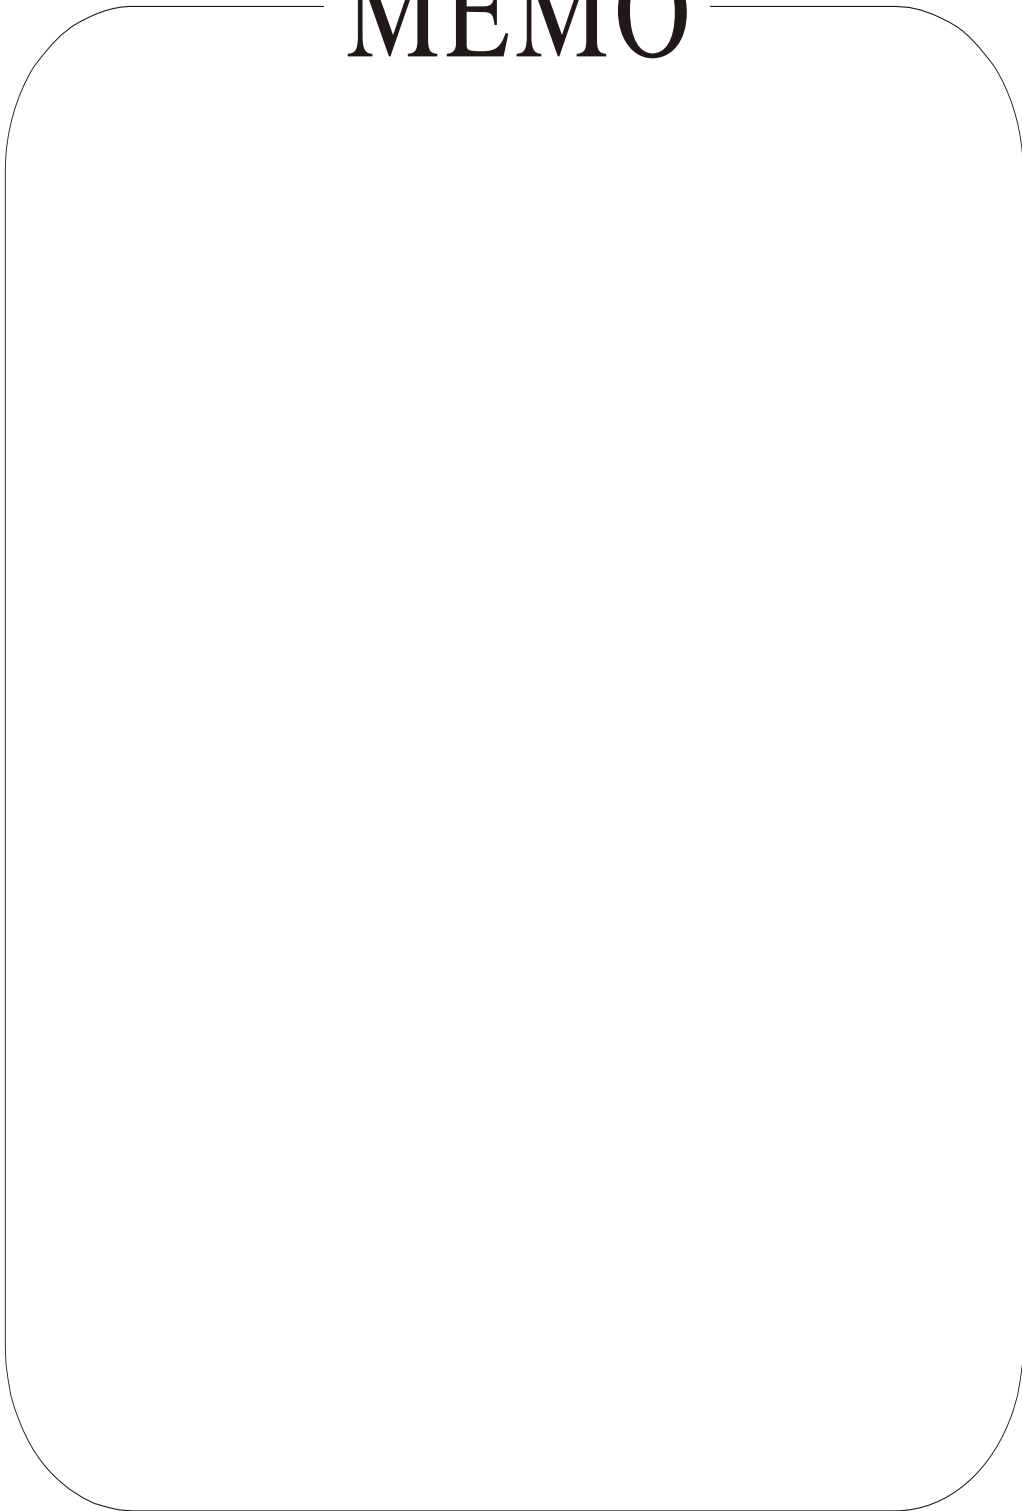A large, empty rounded rectangular box with a thin black border, intended for writing a memo.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>