


Speed Queen

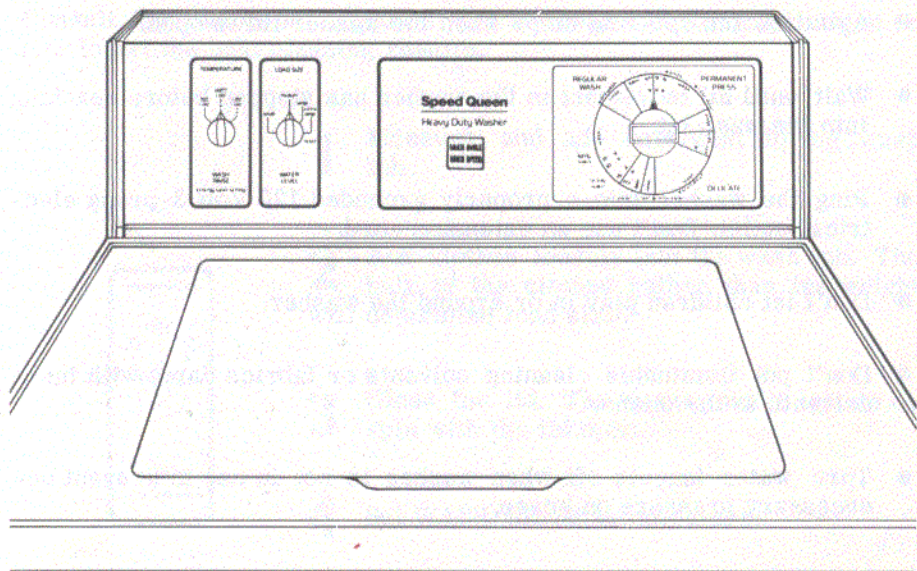

AUTOMATIC WASHER OPERATING INSTRUCTIONS

Models
HA 5591
and
HA 5590

Speed Queen Company
Ripon, WI. 54971

Part No. 30221
5/84

A Raytheon Company

TO WASH CLOTHES

Consult the Handbook (supplied with the washer) for information on how to get the best cleaning results.

1 Measure and add detergent to the wash tub.

2 Add clothes loosely into the wash tub. The bulk of the clothes rather than the weight will determine load size.

 
 
3 Close the lid. The washer won't agitate or spin with the lid open.

4 Set WASH/RINSE temperatures.

5 Set WATER LEVEL control. Use reset if agitation has started and more water is needed.

6 Select cycle according to the type of fabric being washed. Push the timer knob in and turn clockwise to the desired cycle and wash time.


7 Pull the timer knob out to start the water fill. Agitation will begin when water reaches the level you select.

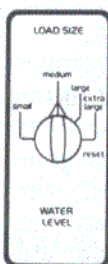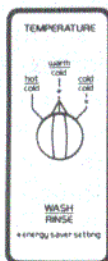

THE WASHER WILL STOP (PAUSE) FOR APPROXIMATELY TWO MINUTES BEFORE THE WASH AND RINSE SPINS. DO NOT TURN THE TIMER THROUGH THESE PAUSES. THEY ARE PART OF THE CYCLE.

OPERATING INSTRUCTIONS


TIMER.....Although the washer cycles are automatic, the timer may be reset to lengthen, shorten or repeat a portion of a cycle.

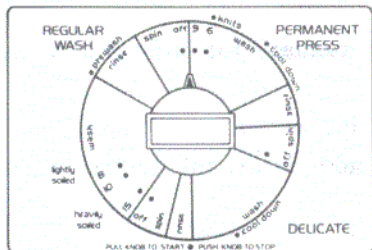


TO SET OR RESET THE TIMER


PUSH TIMER KNOB IN TO STOP THE WASHER. HOLD TIMER KNOB IN FIRMLY WHILE TURNING IT CLOCKWISE TO THE SETTING DESIRED. PULL TIMER KNOB OUT TO START WASHER.

AUTOMATIC CYCLES.... **REGULAR**— Use for sturdy items, like play or work clothes, towels, T-shirts, etc. For the best results when cleaning heavily soiled items, use a longer wash time (15 minutes maximum). This cycle uses regular agitation and fast spin.

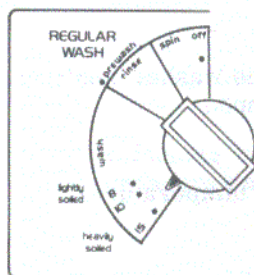


PERMANENT PRESS — Use for permanent press items and synthetics. The permanent press cycle automatically cools the temperature of the fibers before the spin. After wash agitation stops, the wash tub spins slowly, partially drains and then stops. Cold water will then be automatically added to the wash tub, until the water level you previously selected is reached. This can happen more than once depending on the water level selected. When the "cool-down" is complete, the washer will pause for approximately one minute before continuing the cycle. This cycle uses regular agitation. The first spin is slow and the final spin is fast.

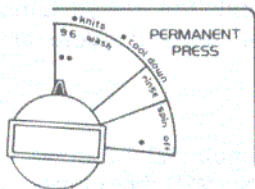

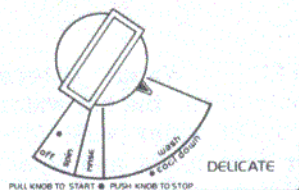

DELICATE — Wash delicate items you usually wash by hand on this cycle. There is an automatic cold rinse. The cycle has a "cool-down" like the permanent press cycle.

The wash portion of this cycle alternates between short periods of agitation and longer periods of soaking. This method insures gentle handling. This cycle uses gentle agitation and slow spin.

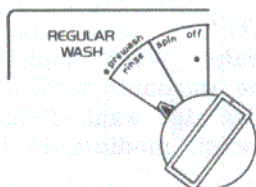

PREWASH — Prewash items that are heavily soiled or stained. The water temperature is controlled by the rinse portion of the temperature knob. Wash items immediately after prewashing.

SOAKING — Soak items that are heavily soiled or stained. Set the timer knob at **PREWASH**. The water temperature is controlled by the rinse portion of the temperature knob. After loading the washer, pull the timer knob out to start the water fill. After the washer has filled and

agitated for a few minutes, push the timer knob in to stop the washer. After the desired soaking time is completed, turn the timer knob to spin. Pull the timer knob out to start spinning. Wash the load immediately after soaking.

CARING FOR YOUR WASHER

CONTROL PANEL

Clean the control panel with a damp cloth or sponge.

Don't use scouring pads or abrasive cleaners like cleansers.

WASHER CABINET AND TOP

Your washer has an acrylic enamel cabinet and a porcelain enamel top. Clean the cabinet and top with a soft, damp cloth. Appliance wax can be used.

Do not use scouring pads or abrasive cleaners like cleansers.

CYCLE CHART

(Times are approximate)

PERMANENT PRESS

Washer fills	Time will vary depending on water level setting
Agitate	9 min. (maximum length)
Pause	1 min. 50 sec.
Cool down (partial drain & fill) . .	Time will vary depending on water level setting
Pause	1 min.
Spin	1 min. 30 sec.
Spin & Spray	40 sec.
Spin	1 min. 30 sec.
Pause	30 sec.
Rinse fill	Time will vary depending on water level setting
Pause	20 sec.
Agitate	3 min.
Pause	1 min. 50 sec.
Spin	6 min.

REGULAR

Washer fills	Time will vary depending on water level setting
Agitate	15 min. (maximum length)
Pause	1 min. 50 sec.
Spin	1 min. 30 sec.
Spin & Spray	1 min.
Spin	1 min. 30 sec.
Pause	30 sec.
Rinse fill	Time will vary depending on water level setting
Pause	20 sec.
Agitate	5 min.
Pause	1 min. 50 sec.
Spin	7 min.

DELICATE

Washer fills	Time will vary depending on water level setting
Soak	1 min.
Agitate	45 sec.
Soak	3 min. 30 sec.
Agitate	45 sec.
Soak	2 min.
Agitate	45 sec.
Pause	1 min.
Cool down (partial drain & fill) . .	Time will vary depending on water level setting
Pause	1 min.
Spin	1 min. 30 sec.
Spin & Spray	40 sec.
Spin	1 min. 20 sec.
Pause	30 sec.
Rinse fill	Time will vary depending on water level setting
Pause	20 sec.
Agitate	1 min.
Pause	1 min. 50 sec.
Spin	4 min. 30 sec.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>