

1920x1200 Uncompressed DVI over Cat5e/6 KVM Extender - 330ft (100m)

SV565UTPHDU / SV565UTPDUV



*actual product may vary from photos

DE: Bedienungsanleitung - de.startech.com

FR: Guide de l'utilisateur - fr.startech.com

ES: Guía del usuario - es.startech.com

IT: Guida per l'uso - it.startech.com

NL: Gebruiksaanwijzing - nl.startech.com

PT: Guia do usuário - pt.startech.com

For the most up-to-date information, please visit: www.startech.com

Manual Revision: 06/27/2014

Download from Www.Somanuals.com. All Manuals Search And Download.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. Regardless of any direct acknowledgement elsewhere in the body of this document, StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

Table of Contents

Introduction	2
Packaging Contents	2
System Requirements.....	2
Product Overview	3
Front View - SV565UTPHDU	3
Rear View - SV565UTPHDU	3
Front View - SV565UTPDUV	4
Rear View - SV565UTPDUV	4
LED Indicators.....	5
Cabling.....	5
Installation	6
Hardware Installation	6
Verifying Installation	8
Troubleshooting	9
Specifications	13
Technical Support	14
Warranty Information	14

Introduction

Packaging Contents

- 1 x Local Extender Unit
- 1 x Remote Extender Unit
- 2 x Mounting Brackets
- 1 x HDMI Cable
- 1 x USB Cable
- 2 x Universal Power Adapters
- 6 x Power Cords (2 sets, NA/EU/UK)
- 1 x Quick Start Guide

System Requirements

- A USB-compatible computer with an HDMI/DVI output
- USB 1.1 or 2.0 Keyboard / Mouse
- An HDMI/DVI display
- A minimum of Cat 5e (UTP) cable with two Cat 5e RJ45 connectors (if using surface cabling)

OR

- A minimum of Cat 5e UTP cabling with two information outlets and two Cat 5e patch cords with Cat 5e RJ45 connectors (if using premise cabling).

NOTE: While Cat 5e UTP is the minimum category of twisted pair cabling, for the best experience, and to minimize interference and cross-talk, Cat 6 STP or better is strongly recommended. When using Cat 5e cabling, the layout and quality of your cable runs and connections become extremely important. Please refer to the Cabling section on page 5 for more detailed information. Any reference to Cat 5e cabling should be read as Cat 5e or better.

Product Overview

Front View - SV565UTPHDU



Rear View - SV565UTPHDU

Local Unit



Remote Unit



Front View - SV565UTPDUV



Rear View - SV565UTPDUV

Local Unit



Remote Unit



LED Indicators

Power LED (Green)	On: The system is powered and ready to use Off: The system is not powered
Link LED (Green)	On: Local and Remote extenders are able to communicate across the link Off: There is no communication between the local and remote extenders
USB LED (Green)	On: The local extender and the host computer are communicating with each other and working Flashing: The host has suspended communication with the local extender Off: The host and the local extender are not communicating or not connected
Video LED (Green)	On: HDCP (digital rights management) content is being transmitted Flashing: Video (non-HDCP) content is being transmitted Off: No video is being transmitted

Cabling

Solid core Category 6 STP cable with Category 6 RJ45 connectors is recommended for best performance. Using Cat 5e or unshielded Cat 6 cabling may leave your signal more susceptible to interference and noise which may result in poor video performance or reduced extension distance.

Cable Type	Maximum Distance		Notes
	Uncoiled	Coiled	
Solid Core Cat 5e UTP	100m (330 ft)	70m (229 ft)	High susceptibility to electrical interference
Solid Core Cat 5e STP	100m (330 ft)	80m (262 ft)	Moderate susceptibility to electrical interference
Solid Core Cat 6 UTP	100m (330 ft)	100m (330 ft)	High susceptibility to electrical interference
Solid Core Cat 6 STP	100m (330 ft)	100m (330 ft)	Recommended
Solid Core Cat 7 STP	100m (330 ft)	100m (330 ft)	Recommended

Installation

Hardware Installation

Preparing your site


1. Determine where the computer is to be located and set up the computer.
2. Determine where you want to locate the remote desktop, including the monitor, keyboard, mouse and any other USB device(s).
3. If you are using surface cabling, the product supports a maximum distance of 100m (330 ft).

OR

If you are using premise cabling, ensure Cat 5e cabling is installed between the two locations with Cat 5e information outlets located near both the computer and the USB device(s), and the total length, including patch cords, is no more than 100m.


Installing the Local Extender Unit

1. Place the local extender unit near the computer.
2. Connect the supplied USB cable to the USB port on the local extender, and an available USB 2.0/1.1 Type A Port on the computer.
3. Connect the supplied video cable to the local extender (HDMI/DVI In), and an available HDMI/DVI Port on the computer.

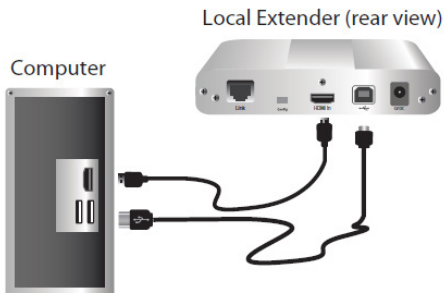

Installing the Remote Extender Unit

1. Place the remote extender unit near the monitor and USB device(s) in the desired remote location.
2. Connect an HDMI/DVI cable (not included) to the remote extender (HDMI/DVI Out) to the monitor.
3. Plug your USB Device(s) into the USB ports on the remote extender.

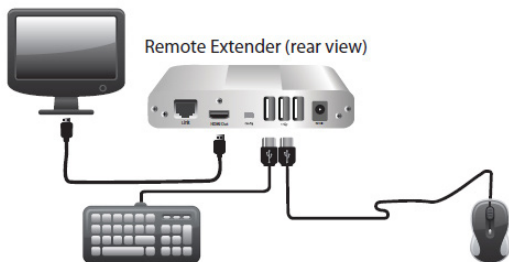


Connecting the Local Extender to the Remote Extender

With Surface Cabling

1. Plug one end of the Cat 5e cabling (not included) into the Link port (RJ45) on the local extender.
2. Plug the other end of the Cat 5e cabling into the Link port (RJ45) on the remote extender.


With Premise Cabling

1. Plug one end of a Cat 5e patch cord (not included) into the Link port (RJ45) on the local extender.
2. Plug the other end of the patch cord into the Cat 5e information outlet near the host computer.
3. Plug one end of the second Cat 5e patch cord (not included) into the Link port (RJ45) on the remote extender.
4. Plug the other end of the second patch cord into the Cat 5e information outlet near the USB device(s).

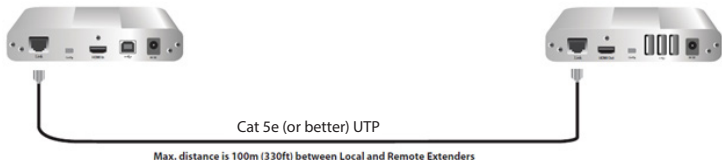

Connecting Power to the Local and Remote Extenders

1. Plug the supplied 5V, 3A power adapter into a suitable AC outlet near the local extender.
2. Connect the power adapter to the local extender.
3. Plug the supplied 5V, 3A power adapter into a suitable AC outlet near the remote extender.
4. Connect the power adapter to the remote extender.

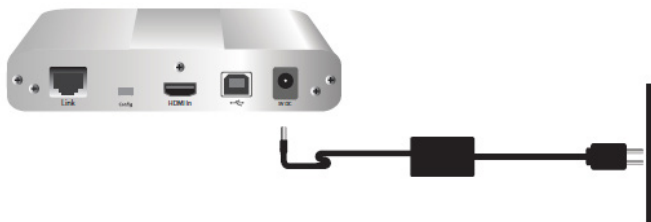

Connecting a USB Device

1. Install any software required to operate the USB device(s). Refer to the documentation provided for your USB device(s).
2. Connect the USB device to the device port on the remote extender.
3. Check that the USB device is detected and installed properly in the operating system.

Verifying Installation

1. On the local and remote extender units, check that the Power, Link, USB, and Video LEDs are on. If the Link LED is off, then the cabling between the local and remote extenders is not installed properly or is defective.

2. Check to see if the USB LED is on and the Video LED is blinking or on, if they are not, this indicates there is no USB data or video data. Check the video and USB connections to the host computer, and the video connection to the monitor. Check to see if any USB devices are connected to the remote extender.
3. If the product is not displaying video or your USB device fails to be detected by your operating system, consult the Troubleshooting section in this guide.

Troubleshooting

PROBLEM	CAUSE	SOLUTION
All LEDs on local extender are off.	The local extender is not receiving power from the power adapter.	<ol style="list-style-type: none"> 1. Ensure that the power adapter is properly connected to the local extender. 2. Check that the power adapter is connected to a live source of electrical power.
All LEDs on remote extender are off.	The remote extender unit is not receiving power from the power adapter.	<ol style="list-style-type: none"> 3. Ensure that the power adapter is properly connected to the local extender. 4. Check that the power adapter is connected to a live source of electrical power.
Link LEDs on local extender and remote extenders are off.	There is no connection between the local and remote extenders.	<ol style="list-style-type: none"> 5. Ensure a Cat 5e cable is connected between the local and remote extenders. Ensure Cat 5e STP or better cabling with conductor RJ45 connectors is used. 6. Connect a new short Cat 5e patch cord between the local and remote extenders to determine if the original Cat 5e cable is defective. 7. Ensure the Cat 5e cable is as straight as possible (i.e. not coiled).

PROBLEM	CAUSE	SOLUTION
Link LED on local extender is on, USB LED on local extender is off	<ul style="list-style-type: none"> • The host computer is not powered on. • The local extender is not connected to the computer. • The computer does not support USB hubs. • The USB cable is defective. • The unit is malfunctioning. 	<ol style="list-style-type: none"> 1. Disconnect all USB devices from the remote extender. 2. Disconnect the local extender from the computer. 3. Disconnect the local and remote extenders from the power adapters. 4. Reconnect the local extender to the power adapter. 5. Reconnect the remote extender to the power adapter. 6. Reconnect the USB devices to the remote extender. 7. Reconnect the local extender to the computer. 8. If the USB LED continues to stay off, contact Technical Support.

PROBLEM	CAUSE	SOLUTION
All LEDs on both the local and remote extenders are on, but the USB device does not operate correctly or is detected as an "Unknown Device" in the operating system	<ul style="list-style-type: none"> The USB device is malfunctioning. The computer does not recognize the USB device. The application software for the device is not operating. The KVM extender product is malfunctioning. 	<ol style="list-style-type: none"> Disconnect the KVM extender product from the computer. Connect the USB device directly to the USB port on the computer. If the device does not operate properly, consult the user documentation for the USB device. Update your system BIOS, chipset or USB Host controller drivers from your System/Motherboard manufacturer's website. Make sure the operating system has all the latest updates installed. If the device operates properly when directly connected to the computer, connect another device (of a different type) to the KVM extender product. Connect the KVM extender product to the computer. If the second device does not operate, the KVM extender product may be malfunctioning. Contact Technical Support for assistance. If the second device does operate properly, the first device may not be
Blinking Video on the Sink (Monitor)	<ul style="list-style-type: none"> A poor quality or damaged Cat 5e cable is being used. The cabling is coiled. 	<ol style="list-style-type: none"> Remove all loops in the Cat 5e cable. Confirm extender operation with a Cat 5e patch cable.

PROBLEM	CAUSE	SOLUTION
Video frames are being dropped	<ul style="list-style-type: none"> The extender is not compatible with HDMI. 	<ol style="list-style-type: none"> Contact Technical Support.
Video LED is off	<ul style="list-style-type: none"> One or both of the HDMI/DVI cables are not connected, are of poor quality or are malfunctioning. The sink or source is not supported. The KVM extender product is malfunctioning. 	<ol style="list-style-type: none"> Confirm extender operation with HDMI/DVI cables that are less than 5m (16' 4") in length. Confirm extender operation with a Cat 5e patch cable. Contact Technical Support.

Specifications

	SV565UTPHDU	SV565UTPDUV	
Video Signal	HDMI	DVI	
Connectors	Local Extender Unit: 1 x HDMI (19-pin) female 1 x USB type B female 1 x RJ45 female 1 x DC Power	Local Extender Unit: 1 x DVI-D (24-pin) female 1 x USB type B female 1 x RJ45 female 1 x DC Power	
	Remote Extender Unit: 1 x HDMI (19-pin) female 3 x USB type A female 1 x RJ45 female 1 x DC Power	Remote Extender Unit: 1 x DVI-D (24-pin) female 3 x USB type A female 1 x RJ45 female 1 x DC Power	
	Compatible Cabling	Cat 5e or better UTP / STP	
	Maximum Cable Length	100m / 330ft	
Maximum Video Resolution	1080p, 1920x1200, 4k	1920x1200	
Maximum Data Transfer Rate	USB 2.0: 30Mbps		
Power Adapter(s)	5V DC, 3A		
Enclosure Material	Aluminum		
Operating Temperature	0°C to 40°C (32°F to 104°F)		
Storage Temperature	-20°C to 70°C (-4°F to 158°F)		
Humidity	20~80% RH (Non-Condensing)		
Dimensions	112 x 175 x 30 mm		

Technical Support

StarTech.com's lifetime technical support is an integral part of our commitment to provide industry-leading solutions. If you ever need help with your product, visit www.startech.com/support and access our comprehensive selection of online tools, documentation, and downloads.

For the latest drivers/software, please visit www.startech.com/downloads

Warranty Information

This product is backed by a two year warranty.

In addition, StarTech.com warrants its products against defects in materials and workmanship for the periods noted, following the initial date of purchase. During this period, the products may be returned for repair, or replacement with equivalent products at our discretion. The warranty covers parts and labor costs only. StarTech.com does not warrant its products from defects or damages arising from misuse, abuse, alteration, or normal wear and tear.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

Hard-to-find made easy. At StarTech.com, that isn't a slogan. It's a promise.

StarTech.com is your one-stop source for every connectivity part you need. From the latest technology to legacy products — and all the parts that bridge the old and new — we can help you find the parts that connect your solutions.

We make it easy to locate the parts, and we quickly deliver them wherever they need to go. Just talk to one of our tech advisors or visit our website. You'll be connected to the products you need in no time.

Visit www.startech.com for complete information on all StarTech.com products and to access exclusive resources and time-saving tools.

StarTech.com is an ISO 9001 Registered manufacturer of connectivity and technology parts. StarTech.com was founded in 1985 and has operations in the United States, Canada, the United Kingdom and Taiwan servicing a worldwide market.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>