

# Refrigerator

---

Use and Care  
Manual

**SUMMIT**

# index

Welcome .....	3
Quick Installation Guide .....	3

## ingenious model

Parts and Features Ingenious Model .....	4
Quick Reference Guide Ingenious .....	5
<b>Where to Start</b> .....	6
Choosing a location .....	6
Positioning .....	6
Installation .....	7
Levelling .....	7
Minimum requirements for correct electrical installation .....	8
<b>Know Your Product</b> .....	9
Temperature Control .....	9
General Temperature Control .....	10
Air Regulator .....	10
<b>Exterior Display</b> .....	12
Express Chill Zone Function .....	12
Exterior Temperature Control .....	16
Power Cool Function .....	16
Holidays Function .....	16
Alarm Function .....	16
Lock Function .....	17
Energy Saver .....	17
Smart Station .....	18
Smart Fill Ice Factory .....	19
<b>Compartments</b> .....	22
Fruits & Veggies Crisper .....	22
Deli Fresh Compartment .....	22
Meat Keeper .....	22
Humidity Control .....	23
Take&Go Egg Box .....	23
Express Chill Zone .....	24
Safety Glass Spill Guard Shelf .....	24
<b>Shelves</b> .....	25
Medium Shelf .....	25
Wide Shelf .....	25
Double Capacity Shelf .....	25
Jumbo Drinks Shelf .....	25
Dairy Shelf .....	25
Air Flow .....	26
How to Get the Most from Your Refrigerator .....	27
Cleaning and Servicing Your Refrigerator .....	29
Increased Temperatures of Areas Close to Freezer .....	29
General Precautions .....	29
Holidays and Absences .....	30
Moving .....	30
Power Outages .....	30
Normal Operating Sounds .....	31
Changing the Bulb .....	31
Frequently Asked Questions and Operating Guide .....	32

## welcome

Our aim is to make your life better every day; that's why we create appliances which adapt to your lifestyle and through their technology allow you to enjoy each moment.

Today we invite you to join this world, so you can discover the ingenuity and versatility that our line of refrigerators offers you.

You will find all of the information you need for running your refrigerator inside this booklet. We invite you to read it and to enjoy your new product.

Thank you for choosing us.

Before beginning, we've included a quick guide and a brief description of the most important parts of your new refrigerator.

## quick installation guide

**1 choosing a location**  
Select a large, clean, and dry space.

 
**2 positioning**  
Allow for a 5 cm space on each side, 10 cm at the back, and between 5 and 10 cm at the top.

**4 installation**  
Let the refrigerator stand for 6 to 8 hours.  
**THIS IS VERY IMPORTANT SO THAT THE GAS CAN SETTLE.**

**3 packaging**  
Remove all packaging including tape, cardboard, plastic, and Styrofoam.

**5 cleaning**  
Before connecting the plug, clean the refrigerator with a cloth or soft sponge and a neutral soap.

**6 connection**  
Connect the plug to the correct outlet. Leave it empty and closed for 4 hours before usage.

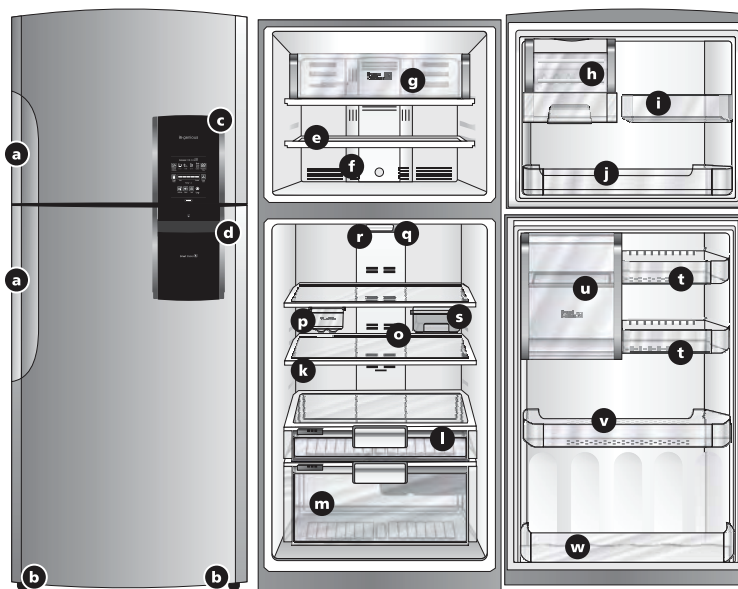

## Ingenious Model

### Exterior

- a** Handles
- b** Wheels - Levellers
- c** Display
- d** Access to Smart Station

### Inside Freezer

- e** Shelves
- f** Air Regulator
- g** Express Chill Zone
- h** Smart Fill Ice Factory
- i** Medium Shelf
- j** Wide Shelf
- k** Shelves
- l** Multiple Use Compartment
- m** Fruits and vegetables compartment

### Inside Cooler

- o** Air Flow Outlets
- p** Take & Go Egg Box
- q** Internal Temperature Control
- r** Refrigerator Light
- s** Cold Meats Compartment
- t** Medium Shelf
- u** Smart Station
- v** Double Capacity Shelf
- w** Jumbo Drinks Shelf

## quick reference guide for the ingenious model

For more details on the use and the specifications of the benefits described below, we recommend you consult the rest of the manual.

### 1 smart station

Specially designed to allow easy organisation of your favourite foods. Furthermore, thanks to its external access you will always have these on hand. Not having to open the refrigerator door, thanks to this special access, will help save energy. (pg. 18)

### 2 express chill zone

Inside the freezer you'll find this separate compartment designed to rapidly cool your favourite foods and drinks. You can control it from the exterior display and it will let you know when your foods and drinks are ready. (pg. 12)

### 3 smart fill ice factory

This no-spill ice-maker has a removable cylinder which can be easily filled and when in place, automatically fills the ice-trays. It also comes with a storage box that can be used as an ice-bucket. (pg. 19)

### 4 take & go egg box

You can take this multipurpose egg box wherever you want. In addition, it's designed to hold loose eggs or a carton. You can also put the **Take&Go** in the "Double Capacity" shelf at the door. (pg. 23)

### 5 power cool

The **Power Cool** function is great for rapidly cooling a large amount of room temperature food once it's placed in the refrigerator. As soon as you get back from the supermarket, simply activate it and it will rapidly cool the refrigerator interior. (pg. 16)

### 6 exterior display

Practically designed to allow you to operate certain additional functions like the **Express Chill Zone**, as well as the refrigerator temperature. (pg. 12)

## where to start?

### choosing a location

 
Choose a place for your refrigerator. We recommend a large space that can be kept clean and dry to prevent oxidation.

### positioning


To ensure that the refrigerator works correctly, it's important that air can circulate. We recommend the following minimum surrounding distances:

model	ingenious	ingenious	prismatic	prismatic	glass	glass
<b>Capacity</b>	400 litres	510 litres	400 litres	510 litres	400 litres	510 litres
<b>Total Dimensions (closed doors)</b>	<b>cm</b>	<b>cm</b>	<b>cm</b>	<b>cm</b>	<b>cm</b>	<b>cm</b>
<b>Depth</b>	69.32	70.28	76.02	78.18	76.58	78.16
<b>Width</b>	66.22	74.37	66.22	74.37	66.22	73.91
<b>Total Dimensions (open doors)</b>						
<b>Depth</b>	125.85	138.80	126.07	138.83	125.70	138.61
<b>Width</b>	107.06	120.35	111.14	124.51	111.64	124.42

- 10 cm on both sides, 10 cm at the back, between 5 and 10 cm on top.
- Don't position it near heat-generating appliances such as hobs, heaters, or in areas exposed to sunlight. This could overwork the refrigerator, making it less efficient and increasing energy consumption.
- Don't lean it against a wall.

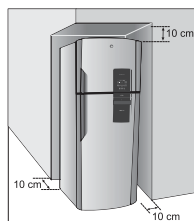

 
Observing these distances and recommendations will guarantee you a fully-functioning product, as it will prevent the components from direct contact with walls and furniture, thus avoiding unpleasant sounds.

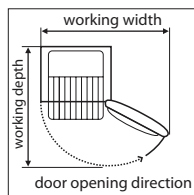

### installation

You must remove all packaging including: tape, cardboard, plastic, and/or Styrofoam (EPS).

 The refrigerator must not be connected to an energy source before installation.

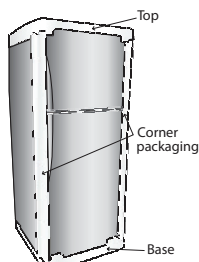

### important

Let the refrigerator stand for 6 to 8 hours before connecting it to allow the cooling gas and the compressor oil to settle.

 
 
 
## levelling

To level the refrigerator use the two levelling screws found on the base at the front. Make sure that the refrigerator is placed on level ground. Adjust the levelling screws to ensure that the refrigerator doesn't move during day-to-day use.

Turn the screws anti-clockwise to lift the front of the refrigerator and clockwise to lower it.

The front part of the refrigerator should be a little higher than the back causing it to tilt backwards slightly. Levelling requires two people; one to tilt the unit backwards and the other to turn the screws.

To level it, lift the front by turning the screws until there is a 48 mm (1.9 in) gap between the floor and the base of the refrigerator, as indicated in the figure on the right.

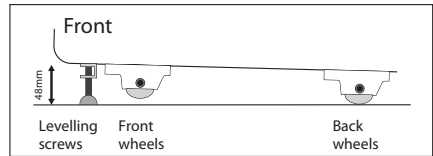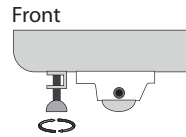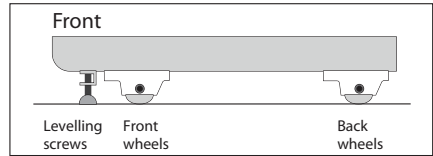

## observe the following when installing:

**important** – after leaving the refrigerator to stand 6 to 8 hours and before plugging it in:

1. Clean the interior of your refrigerator with a cloth or soft sponge, and a neutral soap or a soda bicarbonate solution.
2. Plug it in to the correct outlet.
3. Leave it on, empty and closed, for 4 hours before putting food inside.
4. Avoid opening the door before optimum temperature has been reached.
5. If you want to move your refrigerator to another location, disconnect it. When it has been repositioned repeat steps 3 and 4.

## caution

**In the case of physical, mental or sensorial difficulties (including children), or if you don't have sufficient experience or knowledge to handle this product, you will need the assistance of a capable adult to ensure safety.**

**Children should always be supervised. This product is not a toy.**

 
 
## minimum electrical requirements:

Check the voltage and frequency characteristics in accordance with your country of residence.

Country	Nominal Characteristics
Mexico	115 V ~ 60 Hz
Brasil	127 V ~ 60 Hz / 220 V ~ 60 Hz
Europa	220 V - 240 V ~ 50 Hz
Medio Oriente	220 V - 50 Hz / 110 V ~ 60 Hz
Peru	220 V ~ 60 Hz
Ecuador	115 V ~ 60 Hz
Venezuela	115 V ~ 60 Hz
Colombia	115 V ~ 60 Hz
Chile	220 V ~ 50 Hz
El Salvador	115 V ~ 60 Hz
Argentina	220 V ~ 50 Hz
Canada	115 V ~ 60 Hz

## electrical installation:

1. Install your refrigerator to the closest outlet. The use of an extension cord is not recommended
2. Where possible, avoid connecting other electrical appliances to the same outlet as your refrigerator while it's in use. This will prevent fluctuations in voltage and overheating of the refrigerator.
3. To connect and disconnect your refrigerator, take the cord by the plug and remove it. Never pull on the cable.
4. Your refrigerator comes equipped with a type "Y" polarised power cord, which includes a grounding cable. Do not remove the ground prong by using a two-prong adaptor, or cut the cable to replace the original plug for a two-prong plug.
5. If you live in a region where there are voltage and frequency variations, don't connect your refrigerator into the outlet. You must install an automatic voltage regulator with a minimum power of 500 Watts for 1000 Watts. Make sure the regulator can handle your region's variations in tension.
6. **If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**

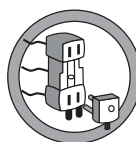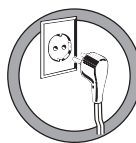

### important:

Ignoring the above-mentioned advice places the responsibility for any personal or material risk entirely with the customer.



## know your product

The refrigerator is designed to work within the room temperatures specified in the table below.

**note:** The internal temperature can be affected by factors such as the location of the refrigerator, the room temperature, and how often the doors are opened. Adjust the temperature controls accordingly to compensate for these factors.

For Chile and Europe:

Temperature Range	Temperatura ambiente		
	Symbol	Maximum	Minimum
Temperate	SN	32°C	10°C
Mild Temperate	N	32°C	16°C
Subtropical	ST	38°C	16°C
Tropical	T	43°C	16°C

For Brazil, Ecuador, Colombia, and Argentina:

Values in Celsius Degrees		
Class	Symbol	Room Temperate Range within which our products are designed for use. (Storage temperatures should comply with these.)
Temperate	SN	+10 to +32
Mild Temperate	N	+16 to +32
Subtropical	ST	+18 to +38
Tropical	T	+16 to +43

 
## temperature control

The internal temperatures of the freezer compartments and the cooler can be regulated to allow them to be adjusted for suitable conservation of food. When using your refrigerator for the first time, we recommend maintaining the original factory positions (in mid-position). Let it stand for 4 to 6 hours to allow the temperature to stabilise.

If you need to change the temperature after this period you can adjust it with the controls.

## general temperature control

The refrigerator control has temperature graduations for both compartments that vary from minimum (least cold) to maximum (coldest). If needs be, adjust the control and monitor the food for a couple of hours. You can readjust it until you obtain the desired refrigeration level. You will have to wait between 4 and 6 hours until the refrigerator reaches the selected temperature.

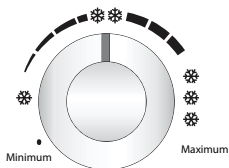

Turn the knob towards **Minimum** for less chill or towards **Maximum** for greater chill.

position	when to use
Minimum	Cold days Few foods stored Infrequent door opening
Medium	Recommended for normal use
Maximum	Hot Days Many foods stored Frequent door opening


**note:** For some models the temperature control is located on the exterior control or display. If your model has an external control or display, see page 72 to understand how it works.

## air regulator

 Your refrigerator has an additional control that regulates the air flow between the freezer and the cooler. It's calibrated in the factory to ensure optimum function, so we recommend you don't alter its position.

If you wish to adjust it, put a coin into the central slot. By turning it to the right you'll generate greater air flow to the freezer, accelerating the freezing process. However, you'll notice that the cooler will take longer to reach the correct temperature.

By turning the control to the left, the air flow to the cooler will increase, delaying the freezing process according to the following guide:

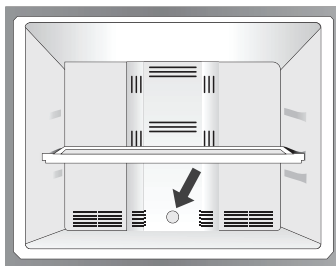

regulator position			
Freezer Temperature	Least cold	Suggested	Coldest
Cooler Temperature	No variation		

## important

Changing the position of the air regulator will alter the time it takes the cooler to reach the correct temperature but not the temperature itself.

**note:** Do not overfill the refrigerator. Leave space between food and use the shelves provided to hold everything. This will facilitate the necessary air circulation and prevent it from lower performance.

 
## cautions

1. The room temperature influences the performance of your refrigerator. The higher the external temperature, the colder the selected temperature in the cooler should be.
2. We recommend selecting a lower temperature if you frequently open the cooler door.
3. When placing your food inside the refrigerator, try not to block the airways. This will allow adequate circulation and keep the inside temperature stable and uniform, thus only freezing the items in the freezer.
4. Use the top compartment to freeze food, conserving it for longer. Use the lower compartment to refrigerate food. If your refrigerator has a rapid cooling compartment, you should take into account that some fresh fruit and vegetables are cold-sensitive and it is not a good idea to keep them in this compartment.

## exterior display

(only available with certain models)

Some models have an external display that will allow you to operate certain functions additional to those that come as standard.

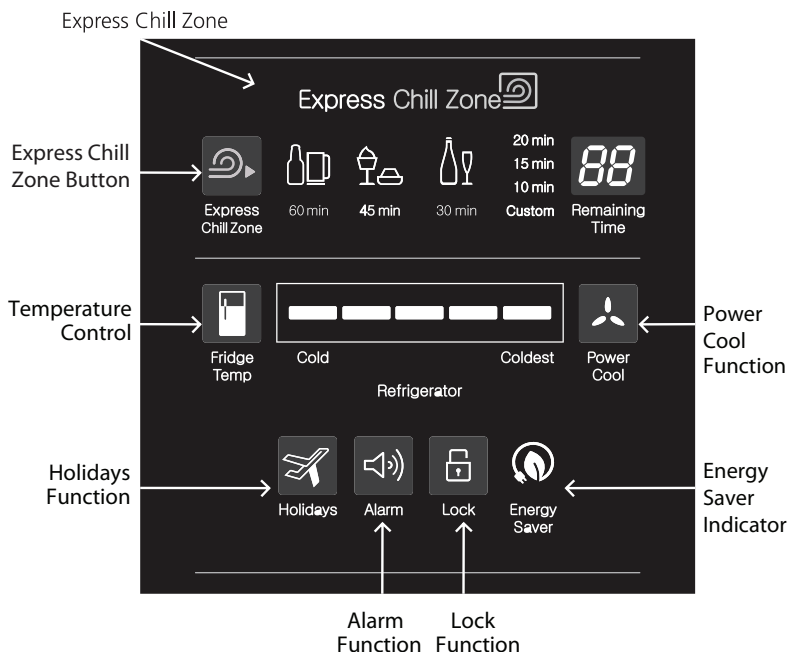

## express chill zone function

 
(only available with certain models)

Designed to rapidly cool food and drinks. Via the exterior panel you can control the functions of the express chill zone; the area found at the top part of the freezer. This is labelled with the letter d in the original "Parts and Features" on page 4.

Alternatively, consult the express chill zone section on page 12.

The express chill zone, with its predetermined cooling temperatures for food and drink, offers great versatility.

On top of this, it gives you three timing options of 20, 15, or 10 minutes, so that you can select the option which best suits your needs.

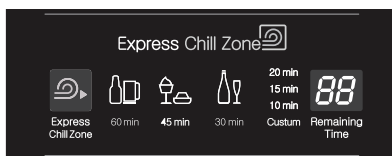

**note:** Before activating the Express Chill Zone Function, you must deactivate the Holidays or Power Cool functions. If you activate Holidays or Power Cool while the express chill zone function is on, you will hear an alarm that signals the programmes can't be carried out.

## how does it work?

First, place the food and drink that you want to cool rapidly into the express chill zone. Make sure to lower the bottom hatch of the express chill zone before closing the freezer door.

To activate the express chill zone, press the express chill zone button on the display a number of times until you reach the desired time. After 5 seconds it will start to work.

A countdown clock on the display screen will show the remaining time. When the time is up, an alarm will sound, the countdown clock will read "0" and the button light will flash for a minute, indicating that your food and drink are ready to be taken out. The alarm will sound until you press the express chill zone button.

The express chill zone Function will deactivate automatically:

- a. If you keep pressing the **express chill zone** button, thereby exiting the programme before the required time has lapsed.
- b. If you press the **express chill zone** button once the programme is completed and the alarm is sounding.
- c. Once the cooling time has lapsed, the alarm has sounded for one minute and stopped.

## table of recommended chilling times

**note:** Times vary depending on the initial temperature of your foods and drinks. If upon programme completion, the items haven't reached the desired temperature, you can add additional minutes using the display. The **express chill zone** can be reprogrammed after 5 minutes have passed since last use. If you decide to cool your items for longer, be alert for when the alarm rings to indicate the foods and drinks are ready and remove them from the compartment. This will prevent them from freezing, which is especially important for carbonated beverages.

The following table outlines the times required to cool room temperature drinks (25° to 30°) in the **express chill zone**:

Beverages	Times
Red Wine	30 min
White Wine	45 min
Sparkling Wine	45 min
Beers	60 min
Sodas	45 min

TIP: If you use the cooler for beer and soda, you can bring them to the perfect temperature before your guests arrive using the express chill zone.

**important:** You should not store carbonated drinks with the intention of freezing them in the express chill zone. This programme should only be used to cool them. DO NOT exceed the recommended times. Your alarm will sound for a minute after the time has lapsed, which is when you need to take your items out of the compartment. Ignoring the above-mentioned advice places the responsibility for any consequences entirely with the customer.

You can also use the express chill zone to accelerate some desserts preparation. Below you will find some recipes to get the best of the express chill zone.

---

### **Strawberry Charlotte:**

#### **Ingredients**

##### **Filling:**

1 cup of whipping cream  
 ½ cup of sugar (to taste)  
 2 cans of sweetened condensed milk  
 The juice of 8 limes  
 Grated lime rind to taste  
 Strawberries (blackberries, raspberries, kiwis or any fruit you prefer are also suitable)

##### **Base:**

Lady fingers  
 Brandy or cognac to soak the lady fingers (to taste)

##### **Method:**

For the base: Line the base and sides of the dish with the lady fingers.  
 If you prefer, soak them with brandy or cognac.

##### **Filling:**

Whip the cream at maximum speed, adding sugar little by little to sweeten to taste. Whip until firm peaks form in the cream. Whip the condensed milk in another bowl, adding lime juice little by little until the milk thickens. Add grated lime rind to taste

Pour a layer of the condensed milk with lime over the lady fingers, and then cover with strawberries and the whipped cream. Cover with another layer of lady fingers, then the condensed milk with lemon, and strawberries again.

Refrigerate and serve cold.

---

### **Rice Pudding:**

#### **Ingredients**

1 cup of rice  
 3 cups of water  
 A pinch of salt  
 1 cinnamon stick  
 1 litre of milk  
 ¾ cup of sugar  
 1 spoonful of vanilla extract  
 Ground cinnamon to taste

##### **Method:**

Put the rice, water, cinnamon stick and salt in a large saucepan. Heat and bring to boil, then lower the heat and cover the pan, leaving it to cook until almost all the water is absorbed.

Add the milk and sugar turn up the heat and stir constantly until the mixture thickens. Add the vanilla and leave on the heat for 2 minutes. Remove from the heat and leave to cool for 30 minutes. Spoon the mixture into a large serving bowl or into small bowls, and refrigerate.

Sprinkle with a little ground cinnamon to decorate.

---

## Chocolate Covered Strawberries:

### Ingredients

1/2 kg of strawberries

300 g of dark cooking chocolate

You can use any chocolate you prefer, be it white, milk chocolate or dark chocolate.

### Method:

Wash and disinfect the strawberries, leaving the stalks on. Once they are washed and disinfected, dry them carefully using a paper towel.

Put the strawberries on a tray that is either covered in aluminium foil or waxed, making sure that the strawberries are not touching each other.

Put this in the **express chill zone** so that they cool whilst you melt the chocolate.

Chop the chocolate into small pieces and melt in a bain-marie using tepid water.

Make sure that the water in the bain-marie doesn't boil; only heat to the temperature necessary to melt the chocolate.

Once the chocolate is melted, take the strawberries out of the **express chill zone**.

Remove the stalks and dip the strawberries in the melted chocolate.

Once covered, put them back on the tray. Once all the strawberries are covered and put back on the tray, put the tray in the refrigerator for 10 minutes before serving to allow the chocolate to stick better to the strawberries.

You should consume this dessert on the day you prepare it.

 
### important:

Desserts must be covered once they are in the express chill zone. You can cover them using paper or a lid.

In case your initial time concludes and you wish to keep using your Eexpress chill zone you must turn your container and press the time botton again.

## exterior temperature control

On models with the exterior door display, press the “Fridge Temp” to change the temperature level until the level you want lights up.




The “Cold” level (least cold) light is found on the left-hand side, and when all the lights are illuminated the refrigerator is at the “Coldest” temperature.

## power cool function

 This is designed to speed up the cooling and freezing of the entire refrigerator. We recommend activating this function once you return from the supermarket as you will be storing various room temperature items in the refrigerator.

**note:** BEFORE ACTIVATING THE POWER COOL FUNCTION, the Holidays and Express Chill Zone Functions must be deactivated as these functions cannot work simultaneously.

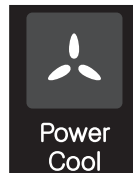

The Power Cool Function helps to cool your foods faster since the refrigerator will work at its maximum cooling power. After this time, the refrigerator will return to working as normal. It is activated by pressing the Power Cool button. This turns the LED light on, which indicates that the function has been activated.

## holidays function

This assists you in saving energy when you go on holidays. For periods longer than a fortnight we recommend you unplug the refrigerator, clean it, and leave the doors wide open.

To use this function, press the Holidays button; the LED indicator will light up telling you that the function is now activated. To deactivate it, the Holidays button must be pressed again. Once the cooler door is opened the function will deactivate automatically.

 
**note:** BEFORE ACTIVATING THE HOLIDAYS FUNCTION, the Power Cool and the Express Chill Zone functions must be deactivated as these functions cannot work simultaneously.



## alarm function

The Alarm Function is activated by pressing the Alarm button. The alarm will sound if this function has been activated and the door has been left open for a period of time longer than a minute; accordingly, if this function is not activated and the door is left open, the alarm will not sound. Activating this function helps you to avoid leaving the door open by mistake, thus preventing your refrigerator from being less efficient and consuming more energy.

The alarm will stop sounding once the door has been closed. To use this function, press the Alarm button until the light turns on. You can deactivate it at anytime by pressing the button again until the light turns off.

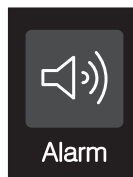



## lock function

This function blocks the exterior control of the display, preventing anyone else from changing its control configuration.

To use this

function, press the Lock button for 3 seconds; the button will then light up telling you that the function has been activated. If you press any button other than the Lock button, the light will flicker and you will hear a beeping sound that indicates the display is blocked. To deactivate this function, simply repress the Lock button for 3 seconds and the light will go off, indicating the function has been disabled. We recommend that you activate the Lock Function when you need to clean the display.



## energy saver

This indicator informs you when your refrigerator is working at its maximum energy saving level. It will automatically light up at the very moment the refrigerator starts to save energy.

The indicator light will turn on only if:

- You go on a trip for a period longer than 5 days.
- The door is not opened constantly (dependent on your refrigerator load as well as the room temperature).
- You activate the Holidays Function.

 


## smart station

(only available with certain models)

The Smart Station provides quick access to a special zone in your refrigerator.

This compartment allows you to easily grab food without having to open the refrigerator door. It comes with a multi-positional shelf that you can adjust according to your needs.

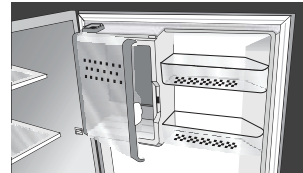

The Smart Station has both internal and external access. You can put your foods into the refrigerator via the internal access, while the external access lets you take out food from this compartment without opening the refrigerator door. This will make your refrigerator more energy-efficient.

To open the Smart Station's internal compartment press the button located beside the medium shelves in the centre.

Press it and pull it towards you to open the door. To close, push it until you hear a click.



## suggestions on how to get the most from your Smart Station

Your Smart Station's capacity offers you maximum versatility and is perfectly adaptable to your lifestyle. Below are some suggestions of its many uses:

Furthermore, you can also put ingredients for a specific recipe into your Smart Station; for instance, a cake, sauce or pasta, etc.

Later, you can access these quickly without having to open the refrigerator door each time you need a new ingredient.

On top of all this, the external access door to your Smart Station can be opened out and used to temporarily hold up to 8 kg of food and drink.

### capacity

1 packet yellow cheese singles  
1 packet sausages  
1 packet ham (300 g)  
3 drinking yoghurts  
1 litre orange juice  
1 litre milk  
Jar of mayonnaise (370 g)

1 packet yellow cheese singles  
1 packet sausages or 4 of baby carrots  
2 drinking yoghurts  
8 Petit Suisse  
4 mini-cartons fruit juice  
2 mini-cartons milks

1 bottle of wine  
1 soda (1 ltr) or 1 juice (1 ltr)  
1 half-litre bottle of water  
3 cans of beer

4 fruit juices (250 ml each)  
2 hydrating drinks (500 ml each)  
Water bottle (1 ltr)  
1 bottle of juice (1 ltr)  
3 apples

1 disposable plate of food  
5 half-litre containers with individual portions ready for the week



**note:** Be careful that children do not hang or are left on the door because they can be hurt.

 
 
**note:** The Smart Station comes with an air conductor which brings cold air from the freezer to the Smart Station guaranteeing the perfect temperature for your favourite foods. Make sure to leave the airway clear.

In case of a spillage, you can take the following steps to easily clean the exterior door:

To remove and replace the exterior door of your Smart

Station you will need a small screwdriver:



1. Open the exterior access door
2. Use the flat part of the screwdriver to remove the door from the base on the left hand side.
3. Find the hinge and screw the screwdriver into it.
4. Once you have unscrewed the hinge, pull the door to the right until it comes away.
5. To replace the door, first attach it to the bolt on the right-hand side.
6. Slide the edge to the right using the screwdriver, and align it with the marked groove.
7. Use light movements until you hear a click indicating that the door is properly positioned.

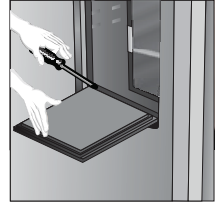

## smart fill ice factory

(only available with certain models)

  This no-spill ice-maker with removable cylinder feeds directly into the ice-tray. It comes with a storage box that can hold up to 900g of ice.

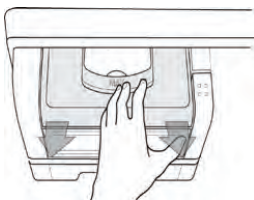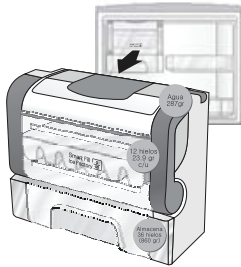

### starting up:

Remove the water cylinder found at the top of the Smart Fill Ice Factory (SFIF) by pulling the top middle part towards you.

 
Once removed, place the water cylinder on a flat surface. Open the top, which you'll find in the middle centre. To avoid spillages, make sure that there's no residual ice obstructing the valve of the cylinder before you fill it with water. Pour 180 ml of purified water into the cylinder or fill it to the maximum level.

Replace the top, placing pressure on the middle. It's essential that it's secure in the centre in order to avoid water leaking out.

Put the cylinder back in its original position making sure it's securely connected. You should be able to see and hear the water filling the ice-tray which indicates that the cylinder is correctly installed.


**note:** It's important that once you have completed the above steps you make sure that the water cylinder is correctly installed to prevent water freezing in the cylinder's interior.

**caution:** Only fill with drinking water.

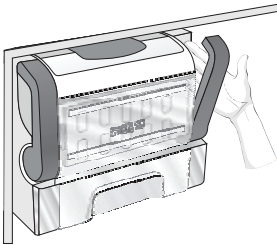

## removal of ice

 
1. After a while, your ice cubes will be ready for use. To remove them, pull the handle slowly towards you until it's fully down. At this point it will be necessary to pull the handle a little more forcefully until you hear the ice fall into the lower compartment of your Smart Fill Ice Factory.
2. This compartment can hold up to 3 complete releases of the ice-tray. To remove the ice, simply lift and pull the storage box that you will find in the lower part. This box is designed to be brought wherever you wish. To make more ice, repeat the process.

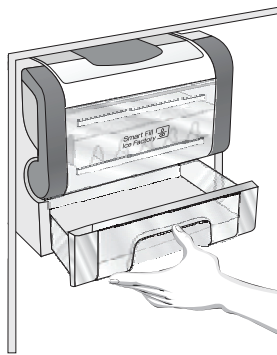

**note:** The cylinder can only hold one load at a time. Before repeating the process, make sure that the tray is empty.

**note:** The ice produced may vary in size.

 **important:** When removing the ice cubes, pull the handle all the way down. You will feel resistance at this point, but you need to pull a little more so that the ice-tray twists and releases the ice into the lower compartment. Once this point has been reached, the process is complete.

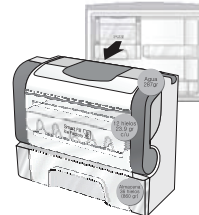

## cleaning the smart fill ice factory

When cleaning your Smart Fill Ice Factory it is imperative that you only use a soft sponge with water and a neutral soap. Afterwards, leave it to dry.

 
 
 
 
DO NOT use a steel wool sponge or detergent to clean the SFIF (specially the ice-bucket), as this could affect how it works, change how it looks, and affect the flavour of your ice cubes.

## cleaning the cylinder

Only use a soft sponge with water and a neutral soap to clean. Afterwards, leave it to dry. Don't use steel wool sponges or detergents, knives or forks as these could scratch or damage the central valve. If there's frozen water inside the cylinder, let it melt or use tepid water to speed up the process.

## cleaning the tray

1. Firstly, open the front door where you see a small lip on the right-hand side. Pull the door towards you until completely open.
2. Then, to remove the ice-tray from its fitting, take it by the right-hand side and at the same time, pull it down and towards you. Finally, pull it out by the centre, keeping it horizontal.
3. To replace the ice-tray in the Smart Fill Ice Factory, align the short sides with the lateral fittings and push it until it's completely inserted.
4. Afterwards, push the tray by the right-hand side until you hear a click, which will ensure the tray securely in place while working.
5. Close the lid of the Smart Fill Ice Factory. Your device will be ready for use once again.

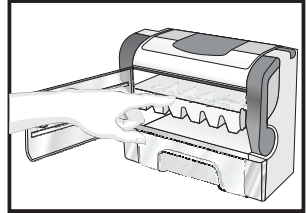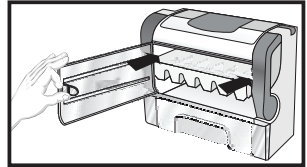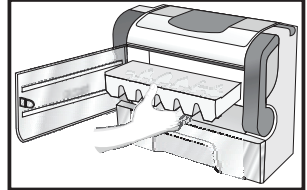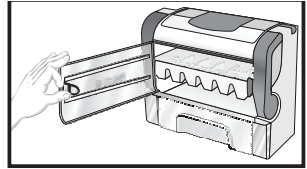


**important:** Use tepid water to remove residual ice which will form with regular use of the Smart Fill Ice Factory. This residue could form on the lid you use to fill the water cylinder, the cylinder valve, and the ice-box, thus affecting the working of different parts of the system.

Don't use ice-picks, forks, or knives to remove the residual ice as to do so could damage the Smart Fill Ice Factory.

## compartments
 
### fruits & veggies crisper

Designed to keep your fruit and veg fresh.

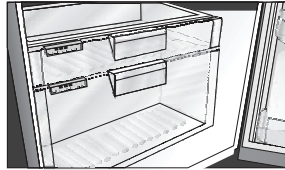

### deli fresh compartment

 
 
(only available with certain models)

This compartment has been designed to give you greater organisational space inside your cooler. It can be used to hold delicate fruits and vegetables.

To remove the drawers:

Pull on the drawer by the top lip.

Gently lift it and pull on it again until it slides out completely.

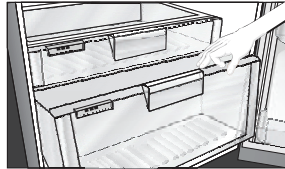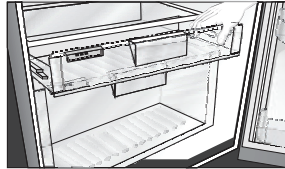


### meat keeper

(only available with certain models)

This Gourmet compartment has been designed for the storage of cheeses and cold meats. It attaches to one of the cooler shelves and can be slid from one side to the other at your convenience.

To remove this compartment:

 Pull it towards you and lift it up until the device comes away.

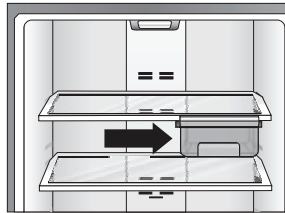


## humidity controls

The humidity controls can be found in the Fruits & Veggies Crisper and the Deli Fresh Compartment.

The primary function of this control is to maintain the humidity at a suitable level for the storage of your items, thus conserving them for longer. When used correctly, the humidity control allows an air flow to travel inside the compartment in accordance with your needs.

 We recommend that you keep the control turned off to conserve leafy green vegetables, and turned on to conserve fruits.

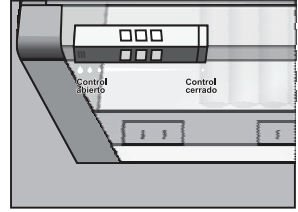


## take&go egg box

(only available with certain models)

This innovative egg box attaches to one of the cooler shelves and can be slid from side to side at your convenience.

It can hold up to 12 eggs (loose or in a carton) and is designed to be put in different parts of your cooler; underneath the shelf, on top of it, or inside the “Double Capacity” shelf located on the inside of the refrigerator door.

 As well as this, because of its portable nature, you can use it to store and carry sauces and leftovers.

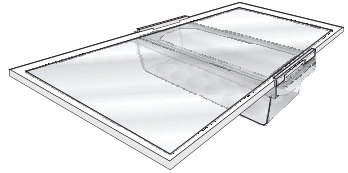

In certain models the egg box can't be hung from the shelf.

## express chill zone

(only available with certain models)

 
This practical compartment has been devised to rapidly cool foods and drinks. Closing the lid causes the express chill zone temperature

to be lower than that of the rest of the freezer. This allows you to rapidly cool items such as bottles of wine, beer, and food. It can also be used to accelerate the freezing process, saving you time.

The control for this compartment is found on the exterior display of your refrigerator.

For details on how to use this, see page 12.

If you don't wish to use the express chill zone, you can lift the lid and use the space in the same way as the rest of the freezer.

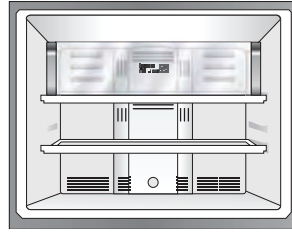

## safety glass spill guard shelves

The shelves which your refrigerator comes with are made from high-resistance glass.

 
They can be positioned in various places, depending on your needs.

The maximum load of the cooler shelves is 18kg, while the freezer shelf can hold 15kg.

## how to remove the shelves


If you need to remove the cooler shelves:

1. Remove all items from the shelf.
2. Hold the front part of the shelf with both hands.
3. Pull it towards you, taking care not to let go of until it has been completely removed from the refrigerator.
4. To return it to its original position, place it on the protruding holds, holding it with both hands until it's securely in place.
5. To change around the other shelves, repeat the above steps.

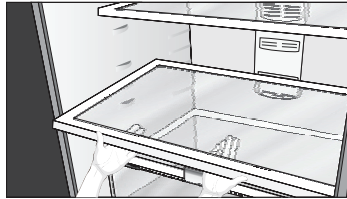

## freezer shelves

 1. Remove all items from the shelf.
2. Hold the front part of the shelf with both hands. Lift it gently and pull it towards you without letting go.
3. To return it to its original position, place it on the desired rail and push it until securely positioned.
4. To change around the other shelves, repeat the above steps.

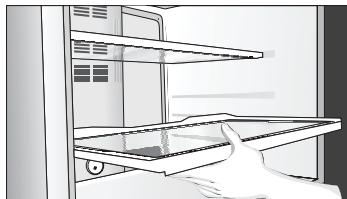



## shelves

### a medium shelf

(only available with certain models)

The smaller size of this shelf makes it very versatile. It is ideal for storing jars or shorter containers.

This shelf can only be positioned as seen in the image on the right. We recommend you only remove it if you wish to clean it.

### b wide shelf

(only available with certain models)

 
This shelf is the only one of its kind on the market which can store gallon-sized containers

### c double capacity shelf

This shelf is the only one of its kind on the market which can store gallon-sized containers

### d jumbo drinks shelf

This shelf provides enough space to store tall bottles (1.5 ltr or 2.5 ltr).

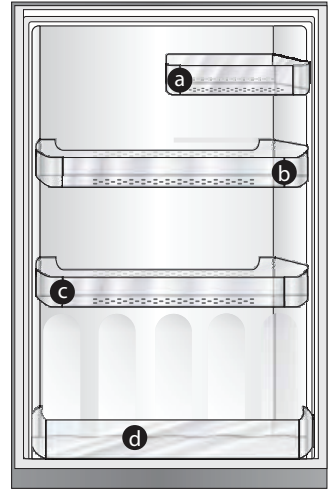

## to remove any of the refrigerator shelves for cleaning, follow the below instructions:

1. Remove all items from shelf.
2. Hold the shelf and pull it upwards to free it.
3. To replace it, put it back on to the shelf supports, and push it. Make sure it slots back into place fully.

### dairy shelf

(only available with certain models)

This shelf has a rotating lid which you must ensure to close before shutting the door of your refrigerator.

Make sure that your items don't prevent the lid from closing.



**note:** When cleaning your refrigerator, remember that you must use a soft sponge and neutral soap so as not to damage your product's features.

 
## air distribution

Your refrigerator's air flow system is entirely automatic and intuitive. You don't need to defrost your refrigerator as this will happen automatically.


(No Frost System)

This system ensures the optimal conservation of your food as it increases air flow and distributes it evenly throughout the refrigerator. Furthermore, a suitable temperature is maintained via a level sensor which activates the air flow in the refrigerator when necessary.

**important:** Avoid placing objects too close to the air conductor grille in your freezer which leads to your Smart Station, as this could prevent air from flowing correctly into the Smart Station.

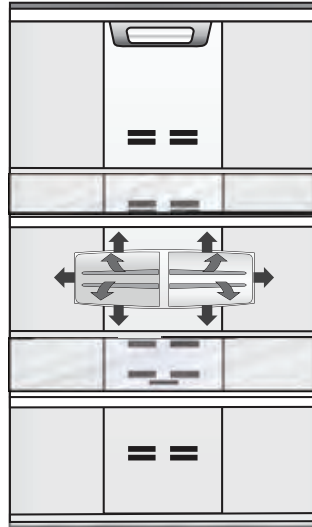

 **note:** The Smart Station comes with an air conductor which brings cold air from the freezer to the Smart Station guaranteeing the perfect temperature for your favourite foods.

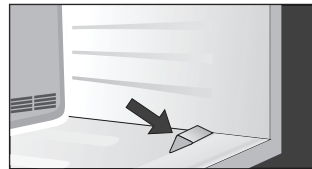

**important:** The air flow exits must never be obstructed.

## getting the most from your refrigerator

### After Buying Your Foodstuffs

After getting home from the supermarket, refrigerate or freeze perishable foods as soon as possible.

We recommend that you press the Power Cool button so that the food can quickly reach a suitable temperature.

To make sure that liquids which may leak from meat packaging don't contaminate other foods in your refrigerator, we recommend that you keep all meat in the Meat Keeper provided with some models. If your model doesn't contain this feature, store your meat products in plastic bags.

### How to Store Your Food

- Store cooked food in closed containers and place them on a shelf above where raw foodstuffs are being stored. This will avoid contamination.
- To prevent contamination between different foods we recommend keeping food in lidded containers, wrapped up, or well-sealed using aluminium foil, plastic wrap, or a lunch-box.
- Do not store food in an open tin, transfer it into another container as oxygen in the air could react with the metal and damage your health.
- Ham, cold meats, and cheese should be kept in individual sealed bags or airtight plastic containers.
- Allow hot foods to cool somewhat before storing them inside small containers in the refrigerator. You will save light and prevent other foods in the refrigerator from being heated and thus adversely affected.
- Make sure that jugs of flavoured or natural water have secure lids to prevent undesirable odours affecting them.
- If you wish, store your fruit and vegetables in plastic bags in your refrigerator drawers. This micro-environment will prevent different gases from mixing and thus conserve your food for longer.
- We recommend you don't wash fruit and vegetables before storing them in the refrigerator, as doing so could damage the skin and increase decomposition rate. If they are very dirty, keep them in a plastic bag so that they don't taint the other foods stored in the compartment.
- We recommend the refrigeration of eggs. Don't wash them before storing, as this could damage their natural protective layer, and thus contaminate the interior of the egg. Keep them in their protective carton, with the air pocket facing upwards (the thick part). Wash them just before use to avoid contaminating the food you're preparing. For the same reason, abide by the use-by date.

Fruit and garden produce which should not be mixed. To avoid undesired flavours and odours be aware of the following information:  
 Cabbage, celery, carrots, figs, and potatoes absorb apple and pear odours.  
 Figs and grapes absorb turnip odours.  
 Mushrooms and figs absorb onion odours.

- If you need additional space to store your vegetables, the following fruits and garden produce can be kept on the higher shelves as they are more cold-resistant: artichoke, broccoli, peas, spinach, cabbage, leek, turnip, spring onions, and parsley. To prevent them from drying out and their aromas from mixing put them in plastic bags.
- Don't keep garlic in the refrigerator as the cold and darkness promote germination.
- With other models it is recommended that you keep milk near an airway. However, with our air flow system you can store it on the refrigerator door shelves as the air is distributed evenly throughout.
- Sodas and beers keep perfectly on the upper door shelves, where they are easily accessible and exposed to the cold quickly and directly.
- When putting in and taking out food and drink try not to leave the door open too long. This will reduce your refrigerator's energy consumption and make it more efficient.
- When freezing food, prepare small portions and place them in such a way that the air in the freezer can circulate around them. This will make freezing time faster and ensure you use the entire portion.
- Always take heed of use-by dates on frozen food as indicated by the manufacturer.
- Do not place sealed glass containers which have any liquids inside in the freezer, as these could break and cause an accident.
- Products such as sorbet or pieces of ice should not be consumed at too cold temperature.
- When putting a food item into the freezer try to avoid putting it on top of or too close to an item that is already frozen.

The following fruits and garden produce should be stored in the crisper due to their delicate nature:

Asparagus, blackberries, mushrooms, strawberries, figs, and grapes.

To protect them further we recommend you keep them in the Veggie Balcony, which comes with certain models. This has been designed to ensure that delicate foods are not bruised and that those little odds and ends don't get lost and go off, which could affect the rest of your food.

Avoid storing food in the freezer for excessive durations of time. See the following quick reference guide:

#### Maximum storage times for frozen food

 
Time	1 month	3 months	6 months	9 months	12months
Food	Sausages Ham Ice-cream Desserts	Fish Seafood Shrimp Prawns	Pork	Fruit pulp Vegetables	Chicken Beef

**note:** If you own the Ingenious Model and want to go to the troubleshooting section and customer service, go to page 32.

## solving problems

### cleaning and servicing your refrigerator


- Always disconnect your refrigerator before any type of servicing.
- Never use toxic products, abrasives, or steel-wool sponges as these will damage the surface of your product.
- Use a soft sponge or damp cloth, and a neutral soap to wash. Rinse the refrigerator, and dry it with a clean and dry cloth. You can also use a solution of bicarbonate of soda (one tablespoon dissolved in two litres of tepid water) to clean the inside.
- Don't use steel-wool sponges or sharp objects as these could scratch the refrigerator or its shelves.
- To make cleaning easier all our models come with high-resistance glass shelves with anti-spill edges. These give you time to clean liquid spillages before they spread.
- Use a brush, cloth, or sponge to remove dust build-up from the condenser. Try to do this at least once every 6 months.

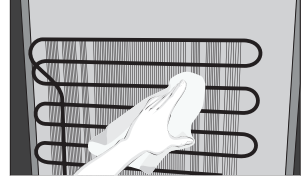

### heating of areas near the freezer

Your refrigerator comes with an anti-condensation mechanism.

 The heating of some areas external to your refrigerator is normal. This happens to prevent water droplets from condensing on the outside of your refrigerator. However, if room temperature and humidity are higher than usual, light condensation may form. Dry with a cloth.

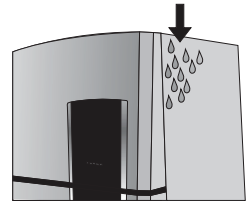

### general precautions

- Don't touch the inside of the freezer door with wet hands.
- Don't let children hang from the doors or play near the refrigerator when the door is open, as they may injure themselves, bang into it, or get trapped.
- Don't let children hang from shelves or the Smart Station door, as excessive weight could break these.
- Sometimes, it can cause trouble to reopen the refrigerator door immediately after closing. This normal occurrence is a result of a vacuum formation inside the refrigerator, caused by air at different temperatures combining. Wait 10 to 15 seconds and the doors will open easily once again.

Before throwing out your old refrigerator or freezer, take the following precautions to prevent the risk of a child entrapment.

- Take off the doors
- Leave the shelves in place so that children may not easily climb inside.

## holidays and absences

- For absences greater than a fortnight unplug your refrigerator.
- Leave your refrigerator, including the ice-box, clean and empty.
- Leave the door partly-opened, using something to block it from closing, as this will facilitate ventilation and prevent bad odours from building up.
- For short absences you can leave your refrigerator plugged in. Remember to save energy by activating the Holidays Function.
- Remember that power outages can occur when you are not at home.

## moving

**important:** If you have to lay the unit on its side for transportation purposes, make sure to place it on its left-hand side (looking at the front of the refrigerator).

Before moving your refrigerator from its place, make sure the levelling screws are not touching the floor so that the wheels can freely move the refrigerator.

**important:** After moving your refrigerator, follow the installation instructions so that the refrigerant gas and the compressor oil can settle.

## power outages

- The majority of energy supply interruptions are corrected within a few hours. Your refrigerator's interior temperature will not be affected within the first 4 hours. If the power outage persists for more than 6 hours, we suggest placing bags of ice in both the cooler and the freezer to conserve the food.
- Avoid opening refrigerator doors.
- If you notice variations in the voltage, we recommend that you turn off and/or disconnect your refrigerator until the voltage returns to normal. Increases and decreases in the light intensity from the bulbs indicate these variations are occurring.
- If your model comes with the Power Cool, Holidays, and Express Chill Zone functions, these will be deactivated (indicated by the lights switching off). This won't affect your refrigerator upon the power returning, but you will have to reactivate these functions to continue using them.

## normal operating sounds

While in operation, your refrigerator will make some typical sounds. Below, you can find a description of the normal operating sounds:

- Cracking. You hear this when the ice breaks. It's the same sound which occurs when the ice-trays are removed from the freezer and exposed to room temperature.
- Compressor noise. This is a characteristic of the motor. It means that the compressor is working.
- Gas expansion noise. This is a noise similar to water boiling.
- Cooling system noise. This is characteristic of the ventilator, which shows that the system is functioning. It is commonly heard when you close the refrigerator door.

## changing the light bulb

Some models have lighting in the cooler and the freezer, while others only have a cooler light.

To replace the bulb, following the instructions below:

1. Disconnect your refrigerator.
2. Remove the bulb cover by pressing inwards on the sides of the cover, moving the cover downwards from the front. Once the cover has come away from the upper supports, pull it towards you to remove it from the temperature control.
3. Remove the bulb by turning it anti-clockwise.
4. Replace the bulb with another of the same electrical characteristics and dimensions.
5. Once you have changed the bulb, put the light bulb cover back on by aligning the back tabs of the cover with the temperature control slots. Then, push the cover upwards until you hear a click.

### **important:**

Some models come with LED lighting for their food compartment. If this component ceases to work, blows, or there are variations in brightness, you have to phone a skilled technician as to ensure coverage by the guarantee it must be he/she who replaces the component.

# frequently asked questions and operating guide

Problem	Probable Cause	What to Do
<b>Refrigerator isn't working</b>	Power Fault.	<ul style="list-style-type: none"> <li>* Check the energy supply.</li> <li>* Make sure that the plug is properly connected to the socket.</li> <li>* Check the mains fuse.</li> </ul>
	Low voltage (this can be noticed by the bulb lights flickering in the house).	Install an automatic voltage regulator with a minimum power of 500 Watts and a minimum current of 10 Amps.
	Defective plug socket.	Plug another device into the socket to check it, and change the plug if necessary.
	Disconnected plug.	Connect the plug.
	Damaged supply cable.	Call an authorised service centre.
<b>Express Chill Zone, Turbo Cool, and/or Alarm won't activate</b>	You are trying to activate a function while another is already activated.	Deactivate the activated function, and then select the one you wish.
<b>Express Chill Zone's Alarm Function won't stop sounding</b>	You have removed the drink or food from the Express Chill Zone but you haven't deactivated the function to turn off the alarm.	Press the Express Chill Zone Function to stop the alarm sounding.
<b>Functions display won't activate</b>	Lock Function is activated.	Deactivate the Lock Function to be able to activate the functions display.
<b>Express Chill Zone hasn't cooled the drinks and/or foods</b>	An inadequate cooling time has been selected, with too big a load of goods to be chilled.	Cooling times vary in accordance with the size of the load of drinks or foods, and their initial temperature. As a result, it is recommended that you select the same time again or an option of even more time, and leave until your items have the desired temperature reached.
	The lid of the Express Chill Zone is open.	Close the lid of the Express Chill Zone and reprogramme the time.
<b>Cooler or freezer door is difficult to open</b>	A vacuum is created when you close and try to re-open the cooler and freezer doors in too quick succession.	<ol style="list-style-type: none"> <li>1.- Wait a few minutes for the vacuum pressure to dissipate (don't try to open it immediately).</li> <li>2.- Open the freezer door first, and then the cooler door.</li> </ol>
<b>When filling the cylinder, water spills out when the door is open or close.</b>	There is spillage in the water tank.	It is possible that the seal tank has not been located in the correct position.
	The water tank is overflowing.	Do not fill the container to the top. The maximum water level is marked on the cylinder.
<b>The water from the water dispenser tastes unusual.</b>	The dispenser has not been filled by pure drinking water.	The dispenser must be filled by pure drinking water.
	The dispenser has not been filled cleaned.	Clean the tank for the first time of use, and it is recommendable to clean it every 30 days.
	The water tank has been cleaned with detergents and odorous cleaning products.	Don't use detergents or odorous cleaning products.
	The water dispenser is not used regularly.	If you don't use your water tank frequently throw the water, and clean the system.



# frequently asked questions and operating guide

Problem	Probable Cause	What to Do
<b>Smart Fill Ice Factory won't release ice</b>	The cylinder hasn't been positioned correctly, and the ice-trays can't be filled with water.	Pour water into the cylinder again. Make sure that the cylinder has been positioned properly by watching for water falling into the trays.
	You aren't giving it that extra pull to twist the ice-tray.	Pull the handle more firmly until completely twisting the tray.
	The ice-tray has an excess of scale.	Clean with a soft sponge.
<b>Smart Fill Ice Factory - It has become difficult to open water cylinder lid</b>	Water has spilt onto the lip area of the cylinder or this has been filled to excess. Ice has been generated, impeding the opening of the lid.	Clean the ice accumulation with tepid water.
	The lid of the cylinder has not been properly closed.	Press the lid of the cylinder in the middle. Remove ice residue, which may be near the valve, with tepid water.
<b>Smart Fill Ice Factory - When filling the cylinder, water spills out from the lower part where the valve is.</b>	The valve was obstructed by ice.	Check that the tray doesn't have ice stuck to it, or that there isn't an excess of water.
<b>Ice-tray hasn't been filled to maximum capacity</b>	The programme has an in-built system to prevent over-filling and ice sticking.	Take out the cylinder and fill it up to maximum capacity.
<b>Ice cubes vary in size</b>	The water cylinder wasn't filled up to the maximum level.	Don't add more water as this could spill out and/or could mean more force will be required to release the ice cubes.
	The refrigerator is resting on a sloped floor, and/or it itself is inclined. Thus, some ice-tray cubes might not get fully filled. (The water cylinder has the exact volume space for water as the ice-tray.)	The variation in size of ice cubes is normal.
	The refrigerator must have a certain incline backwards. This may cause the ice-tray to lie slightly unevenly.	
<b>Smart Station isn't chilling</b>	Freezer duct or grille obstructed.	Check that there aren't any objects or foods obstructing the air-way in the freezer's air flow grille (grille at the front of the compartment).
<b>Unusual Noises</b>	It has been installed in an unsuitable place.	See the installation instructions.
	The levelling is not adequate.	Adjust the levelling knobs.
	The accessories are not well positioned.	Adapt them in accordance with instructions.
<b>Refrigerator is not cooling items</b>	It has been installed in an unsuitable place.	See installation instructions.
	The air circulation is obstructed.	Don't allow air outlets to be obstructed.
	Door is being left open for excessive amounts of time.	Only open refrigerator doors for necessary time.
	The knob on the exterior temperature display has been incorrectly set.	See operating and user guide.
<b>External Condensation</b>	Refrigerator is exposed to direct heat or sunlight.	See installation instructions.
	Elevated humidity in the atmosphere (higher than 75 % RH).	It is normal for atmospheric humidity to be higher than 75%.
<b>External condensation on exterior door (depending on model)</b>	The access door is not being closed properly.	Check that there aren't any objects inside the access door keeping it from closing.
	On high temperature and high humidity environments your refrigerator may show condensation on the access door.	This is a normal condition in the performance of the unit. Sweep it with a dry cloth whenever you feel it is needed.



**FELIX STORCH, INC.**

770 Garrison Avenue  
Bronx, NY 10474

**TEL 718-893-3900**

**FAX 718-842-3093**

[info@summitappliance.com](mailto:info@summitappliance.com)

[www.summitappliance.com](http://www.summitappliance.com)

## **PARTS AND LABOR WARRANTY INFORMATION**

SUMMIT Appliances are manufactured to provide outstanding value, and your satisfaction is our goal on every product. All SUMMIT major appliances carry a one year limited warranty on both parts and labor. All refrigerators and freezers carry an additional four years on the compressor. Certain exclusions may apply.

Certain models (including SUMMIT ranges, wall ovens, and cook tops) are manufactured for us in the U.S. and carry the manufacturer's warranty (also one year parts and on-site labor).

For details on specific warranty issues, please refer to the warranty packed with the product, or contact us.

Your warranty rights are protected by mailing back the registration card packed with each unit.

## **GENERAL PARTS AND LABOR WARRANTY**

Summit warrants, to the original purchaser of every new unit, the cabinet and all parts thereof, to be free from defects in material or workmanship, under normal and proper use and maintenance service as specified by Summit and upon proper installation and start-up in accordance with the instruction packet supplied with each Summit unit. Summit's obligation under this warranty is limited to a period of 12 months from the date of original purchase.

Any parts, covered under this warranty, that are determined by Summit to have been defective, within the above said period, are limited to the repair or replacement, including labor charges, of defective parts or assemblies. The labor warranty shall include pre-approved standard straight time labor charges only and reasonable travel time, as determined by Summit.

## **COMPRESSOR WARRANTY**

In addition to the warranty period stated above, Summit warrants its hermetically sealed compressor to be free from defects in both material and workmanship, under normal and proper use and maintenance, for a period of 60 months from the date of original purchase. Compressors determined by Summit to have been defective within this extended time period will, at Summit's option, be either repaired or replaced with a compressor or compressor parts of similar design and capacity. The above said extended compressor warranty applies only to hermetically sealed parts of the compressor and DOES NOT apply to any other parts or components, including, but not limited to, cabinet, paint finish, temperature control, refrigerant, metering device, driers, motor starting equipment, fan assembly, or any other electrical component, etc.

## **WARRANTY CLAIMS**

All claims for labor or parts must be made directly through Summit. All claims should include: model number of the unit, the serial number of the cabinet, proof of purchase, date of installation, and all pertinent information supporting the existence of the alleged defect. In case of compressor warranty, the compressor model tag must be returned to Summit along with the above listed information. All claims should be filed within 30 days of completed repair or the warranty claim could be refused.

## **THINGS NOT COVERED BY THIS WARRANTY**

Summit's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additional limitations below. This warranty neither assumes nor authorizes any person to assume obligations other than those expressly covered by this warranty.

Revised 07/20/12



**FELIX STORCH, INC.**

770 Garrison Avenue  
Bronx, NY 10474

**TEL 718-893-3900**

**FAX 718-842-3093**

[info@summitappliance.com](mailto:info@summitappliance.com)

[www.summitappliance.com](http://www.summitappliance.com)

- **NO CONSEQUENTIAL DAMAGES:** Summit is not responsible for economic loss; profit loss; or special, direct, indirect, or consequential damages, including without limitation, losses or damages arising from food or product spoilage claims whether or not on account of refrigeration failure.
- **WARRANTY IS NOT TRANSFERRABLE:** This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, express or implied, including any warranty of merchantability or fitness for a particular purpose.
- **IMPROPER USE:** Summit assumes no liability for parts or labor coverage for component failure or other damages resulting from improper usage or installation or failure to clean and/or maintain product as set forth in the warranty packet provided with the unit.
- **ALTERATION, NEGLIGENCE, ABUSE, MISUSE, ACCIDENT, DAMAGE DURING TRANSIT OR INSTALLATION, FIRE, FLOOD, ACTS OF GOD:** Summit is not responsible for the repair or replacement of any parts that Summit determines have been subjected after the date of manufacture to alteration, neglect, abuse, misuse, accident, damage during transit or installation, fire, flood, or act of God.
- **IMPROPER ELECTRICAL CONNECTIONS:** Summit is not responsible for the repair or replacement of failed or damaged components resulting from electrical power failure, the use of extension cords, low voltage, or voltage drops to the unit.
- **NO IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE:** There are no other warranties, expressed, implied or statutory, except the parts & labor warranty and the extended compressor warranty specifically described above. These warranties are exclusive and in lieu of all other warranties, including implied warranty and merchantability or fitness for a particular purpose. There are no other warranties which extend beyond the description on the face hereof.
- **OUTSIDE CONTIGUOUS UNITED STATES:** This warranty does not apply to, and Summit is not responsible for, any warranty claims made on products sold or used outside the Contiguous (48) United States. To be clear, this warranty excludes the states of Alaska and Hawaii and all off-shore territories.

#### [REQUESTING SERVICE](#)

If you are in need of service, please either fill out a service request on our website, <http://www.summitappliance.com/support>, or call us at 800-932-4267 or 718-893-3900. Please be prepared to give us the following information: your name, address, phone, email, model, serial, date of purchase, place of purchase, and the problem you are having.

Revised 07/20/12

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>