

Carveasy™ Electric Knife

Instruction Booklet

This book covers the use and care of the following Sunbeam Electric Knives:


EK3800 Sunbeam Carveasy™

EK5600 Sunbeam Carveasy Pro™

Please read these instructions carefully
and retain for future reference.



 EK5600

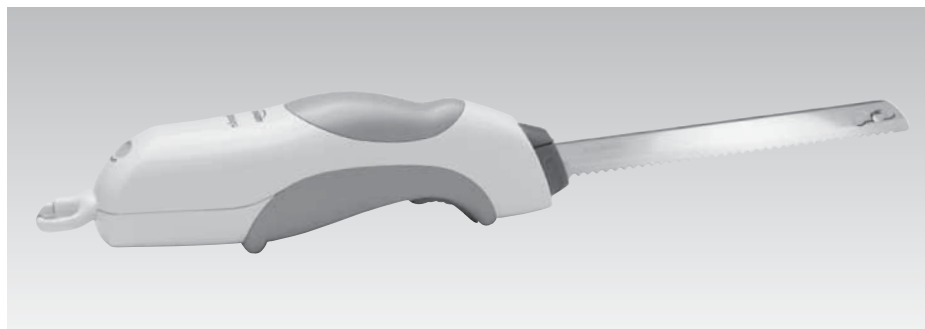

EK3800

Contents

Sunbeam's Safety Precautions	1
Features of your Sunbeam Carveasy Pro	2
Features of your Sunbeam Carveasy	3
Using your Sunbeam Carveasy Knife	4
Slicing Hints	5
Care and Cleaning	6

Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşılığundan emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM ELECTRIC KNIFE.

- Caution is necessary when handling the blades.

Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never leave an appliance unattended while in use.
- Serrated edges of the blades are very sharp.
- Do not allow children to play with blades.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

Features of your Sunbeam Carveasy™ Pro

Blade release button

Soft touch ergonomic handle

Extra long stainless steel blades

Double movement safety trigger

Neon power light

Handy hang up loop

EK5600 Pictured

Micro serrated stainless steel blades

Serrated stainless steel blades are durable and sharp for efficient slicing and carving.

Blade release button

Conveniently located at the top of the handle for thumb action release of the stainless steel blades.

Double movement safety trigger

Located under the handle for ease of operation, the index-finger trigger action, allowing the most comfortable position for carving. The double movement trigger system provides added safety.

Neon power light

The neon power light indicates when the Carveasy Pro™ is plugged in and switched on.

Handle

Convenient and simple to operate. The ergonomic design provides comfort, versatility and control when carving both vertically and horizontally.

Handy hang up loop

The handy hang-up loop enables the product to be stored conveniently for easy access any time.

Safety guards

For safe fitting and removal of blades

Features of your Sunbeam Carveasy™

Blade release button

Soft touch ergonomic handle

Extra long stainless steel blades

Double movement safety trigger

Neon power light

Handy hang up loop

EK3800 Pictured

Micro serrated stainless steel blades

Serrated stainless steel blades are durable and sharp for efficient slicing and carving.

Blade release button

Conveniently located at the top of the handle for thumb action release of the stainless steel blades.

Double movement safety trigger

Located under the handle for ease of operation, the index-finger trigger action, allowing the most comfortable position for carving. The double movement trigger system provides added safety.

Neon power light

The neon power light indicates when the Carveasy™ is plugged in and switched on.

Handle

Convenient and simple to operate. The ergonomic design provides comfort, versatility and control when carving both vertically and horizontally.

Handy hang up loop

The handy hang-up loop enables the product to be stored conveniently for easy access any time.

Safety guards

For safe fitting and removal of blades

Using your Sunbeam Knife

1. Interlock blades together before inserting into the appliance. To assemble blades, grasp shaft ends below the safety guards and slip the rivet on the tip of the other blade. See Figure 1. Bring blades together ensuring tips remain together.

Note: Always use both blades when operating the Carveasy™ and the Carveasy™ Pro.

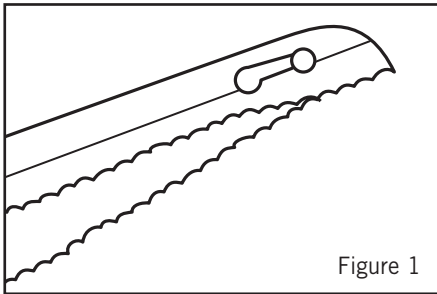 


Figure 1

2. Hold assembled blades by the safety guards and slide shafts gently into the blade slot until clipped into position. See Figure 2.

Warning: Only when blades are fitted should the cord be connected to the power outlet.

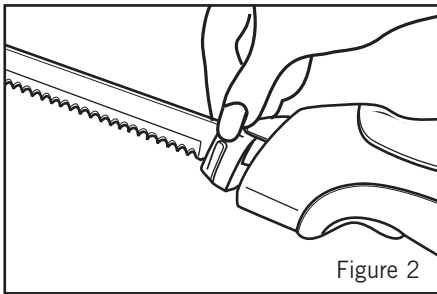 


Figure 2

3. Insert the plug into a 230-240 volt (AC only) power outlet and ensure the cord is well away from the blades. Holding the knife with one hand, slide and press the double movement safety trigger positioned

under the handle to activate the motor. Releasing the switch will automatically stop the motor.

Warning: Avoid contact with moving parts. Keep hands, hair, clothing and other utensils away from moving blades during operation to prevent personal injury and/or damage to the knife.

4. When slicing is completed, turn the power off at the power outlet and remove the plug. Slide back the Blade Release, hold the blades by the safety guards with the cutting edge facing downward and pull the blades out of the slots. See Figure 3.

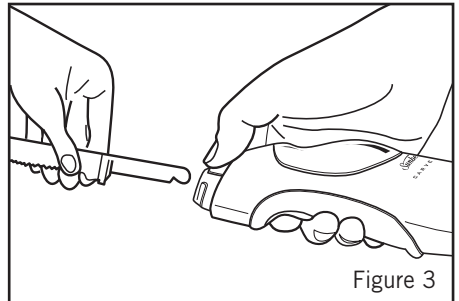 


Figure 3

Warning: The blades of your Sunbeam Carveasy™ and Carveasy™ Pro are sharp! Handle with extreme care. We recommend using the guard sleeve provided when handling the blades. Do not fit or remove blades whilst the knife is connected to the power outlet. Do not allow children to operate the appliance.

Slicing Hints

Always place food to be sliced on a wooden or plastic cutting board. Do not slice food on china; metal or bench tops, as scratching may occur. Guide blades through food.

A sawing action is not necessary. Do not force blades through food. To maintain the sharpness of blades, do not cut through bones, fruit pips or stones or any other hard substances.

For best results when carving meat and poultry allow cooked meat to stand for 10-15 minutes before slicing. this allows the juices to set and makes carving easier and neater.

Before carving meat or chicken, remove skewers. If desired, string may be left around the meat whilst carving. The use of a carving fork to steady the meat assists in carving straight, even slices. Do not attempt to sharpen blades.

We recommend when slicing foods like bread, a light smear of cooking oil, margarine or similar, on the inside of the blades will reduce the friction.

Care and Cleaning

Warning: Ensure the unit is switched off and the plug removed from the power outlet before removing the blades and/or cleaning.

Unlock the blades by sliding apart. Always hold blades by the shaft end, behind the safety guard, when handling and cleaning. Wash the blades in hot soapy water with a soft cloth or sponge. Rinse thoroughly and dry completely. Do not use abrasive scouring

pads or powders on blades. After cleaning, always store blades in plastic sleeves. To clean motor housing wipe with a soft damp cloth.

Before storing your knife, a light smear of cooking oil or similar on the inside of the blade is suggested.

Notes

Notes

12 Month Replacement Guarantee

In the unlikely event that this appliance develops any malfunction within 12 months of purchase (3 months commercial use) due to faulty materials or manufacture, we will replace it for you free of charge.

Should you experience any difficulties with your appliance, please phone our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand. Alternatively, you can send a written claim to Sunbeam at the address listed below. On receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the appliance is defective, advise you on how to obtain a replacement or refund.

Your Sunbeam 12 Month Replacement Guarantee naturally does not cover misuse or negligent handling and normal wear and tear.

Similarly your 12 Month Replacement Guarantee does not cover freight or any other costs incurred in making a claim. Please retain your receipt as proof of purchase.

The benefits given to you by this guarantee are in addition to your other rights and remedies under any laws which relate to the appliance.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law and under the New Zealand Consumer Guarantees Act.

In Australia you are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Should your appliance require repair or service after the guarantee period, contact your nearest Sunbeam service centre.

For a complete list of Sunbeam's authorised service centres visit our website or call:

Australia

www.sunbeam.com.au

1300 881 861

Units 5 & 6, 13 Lord Street
Botany NSW 2019 Australia

New Zealand

www.sunbeam.co.nz

0800 786 232

26 Vestey Drive, Mt Wellington
Auckland, New Zealand

Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

In Australia

Visit www.sunbeam.com.au

Or call 1300 881 861

In New Zealand

Visit www.sunbeam.co.nz

Or call 0800 786 232

 is a registered trademark.

'Carveasy' is a trademark of Sunbeam Corporation.

Made in China.

Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet.

© Copyright. Sunbeam Corporation Limited 2011.

ABN 45 000 006 771

Units 5 & 6, 13 Lord Street
Botany NSW 2019 Australia

Unit 3, Building D
26 Vestey Drive
Mt Wellington Auckland
New Zealand

Sunbeam Corporation is a division of GUD Holdings Ltd.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>