

Sungale

CD802



Digital Photo Frame User's Manual



For ongoing product improvement, this manual is subject to modification without prior notice.

Download from Www.Somanuals.com. All Manuals Search And Download.

User Notice

This product has met electronic emissions standards required. It can be used safely at home.



Contents

Before Operation

Product Introduction	2
Safety Precautions	3
Package Contents	5
Photo Frame Overview	6

Basic Operation

Remote control	7
Power Connection	8
Insert a memory card	9
Photos	10
Videos	12
Music	13
Calender	14
File	15

Advanced Operation

Enter Setting Interface	16
Photo Set up	17
Calender setup	18
Video setup	19
Music setup	19
System setup	20

Customer Management

Question&Answer	22
Troubleshooting	23
Specifications	23

Before Operation

Product Introduction

Our Digital Photo Frame is a convenient image frame that keeps your favorite images at your fingertips.

With its bright and vivid LCD screen, the Digital Photo Frame eliminates the need for tedious photo printing and injects a new level of convenience into your life.

With its diverse file management functions, this Digital Photo Frame allows you to relive wonderful memories anytime.

You can use the Digital Photo Frame to enjoy memories by presenting them with refined images.

Before Operations

Safety Precautions

Please read the following guidelines carefully to ensure user safety.

Power Precautions

⚠ WARNING: indicates information that, if neglected, could result in serious injury and/or death to the user.

⚠ CAUTION: indicates information that, if neglected, could result injury to the user and/or material damage.

 
01. Use only the authorized power supply product. Failure to do so could result in product malfunction.




02. When connecting the power source, make sure that your hands are free of moisture. Failure to do so could result in electrical shock.




03. Make sure that the power supply is firmly plugged in and not loose. Failure to do so could result in electrical shock.

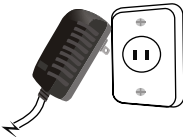

 04. Do not let the power cord get overly entangled and do not place any heavy objects on the cord. Failure to do so could result in electrical shock.

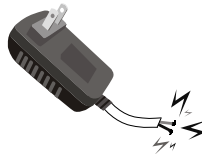

 05. Do not connect the power supply to an electrical power strip with other various connections. Failure to do so could result in fire.



06. Disconnect the power supply during inclement weather conditions that include thunder and lightning. Failure to do so could result in fire.



 
Before Operations

Safety Precautions

Please read the following guidelines carefully to ensure user safety and avoid malfunction.

Product Related Precautions


01. Dropping the product or subjecting it to a significant impact can cause critical damage.

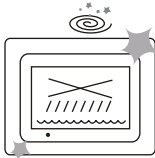


02. Spilling water or any other liquid on the product can cause critical damage.



 
03. Striking or scratching the LCD screen may cause critical damage.

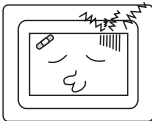

 
04. When cleaning the LCD screen, turn off the power and wipe it gently with a soft cloth.



 05. Do not subject the product to severe humidity and/or heat.

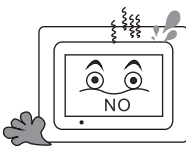



 
06. Make sure to power off the unit before disconnecting the power supply.

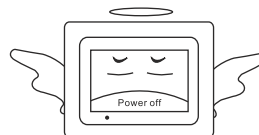

Before Operations

Package Contents

   
For the improvement of product performance and/or quality, the basic components may be modified without prior notice. The components may differ slightly in appearance with the provided images.

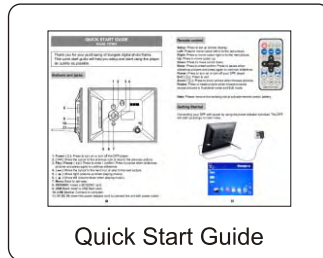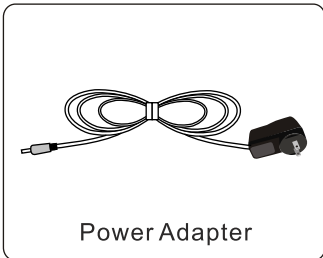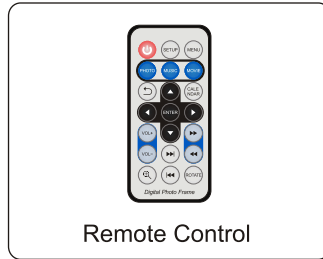

Before Operations

Photo Frame Overview

 The package contents may differ slightly in appearance with the provided images

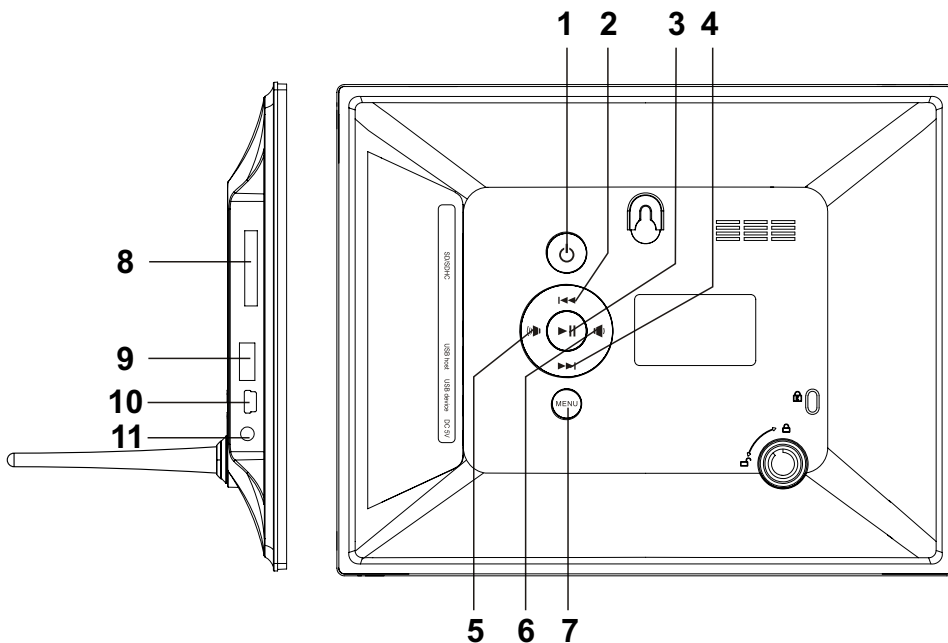

- 1. Power (⏻):** Press to turn on or turn off the DPF player.
- 2. (⏮):** Move the cursor to the previous icon or skip to the previous picture.
- 3. Play / Pause (▶⏸):** Press to enter / confirm; Press to pause when slideshow pictures and press again to continue slideshow.
- 4. (▶⏭):** Move the cursor to the next icon or skip to the next picture.
- 5. (🔊):** Move right (volume up when playing music).
- 6. (🔊):** Move left (volume down when playing music).
- 7. Menu:** Back to last step.
- 8. SD/SDHC:** Insert a SD/SDHC card.
- 9. USB Host:** Insert a USB flash stick.
- 10. USB Device:** Connect to computer.
- 11. 5V DC IN:** Insert the power adaptor cord to connect the unit with power outlet.

Basic Operations

Remote Control

Power:

Press to turn on or turn off your DPF player.

Setup:

Press to set up picture display.

Enter:

Press to enter/confirm; Press to pause when slideshow pictures and press again to continue slideshow.

Navigation buttons:

- ▲ Press to move cursor up.
- ▼ Press to move cursor down.
- ◀ Press to move cursor left or to the last picture.
- ▶ Press to move cursor right or to the next picture.

EXIT:

Press to exit from the present interface.

ZOOM:

Press to zoom picture when browse pictures.

ROTATE:

Press to rotate picture when browse pictures except in thumbnail pictures mode and Edit mode.

SLIDE SHOW:

Press to slide the pictures in the thumbnail pictures mode.

Note: Remove Insulating Tab to activate battery.



Basic Operations

Power Connection



1. Connect the power adapter to the DC IN jack on the left side of the frame.
2. Plug in the power socket.
3. The frame will automatically power on.

 
Insert a memory card

Insert card in the direction indicated by the arrow on the top of the card (the side of the memory card on which sticker is affixed face the frame).

SD/SDHC card is compatible with this unit.

Aligning the memory card upside down may cause user-error damage.

This may nullify the warranty.

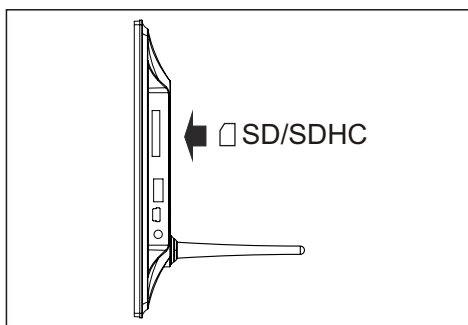


Basic Operations

Insert a memory card

USB Removable Storage Devices

 Insert USB removable storage device into the USB port on the side of the frame.

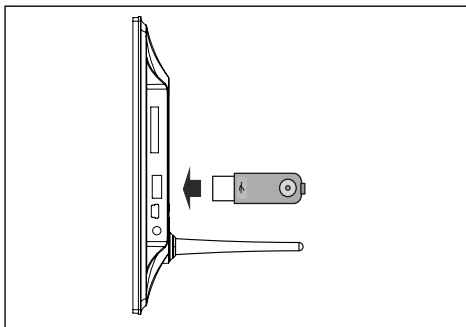

NOTE: This device will read USB first and will not recognise the memory card if you insert a memory card and extra USB memory together at the same time.

Removing the Memory Card

When removing a memory card from the frame, pull the card straight away from the unit. Avoid bending the card.

Select SD card or USB device

On the main menu, press EXIT, and select to read SD card or USB device.



 
 
 
Basic Operations

Photos

Display Photos

Note: The frame will display pictures in the memory card or USB device automatically if there is a memory card or USB device is inserted to the frame before connecting power.

In the main menu, select PHOTO icon and press ENTER to enter into the storage selecting mode, select the storage and press ENTER again. Select the desired photo and press ENTER to begin a photo slide show.

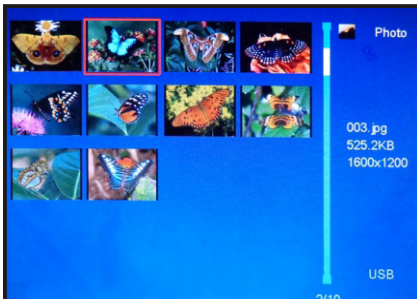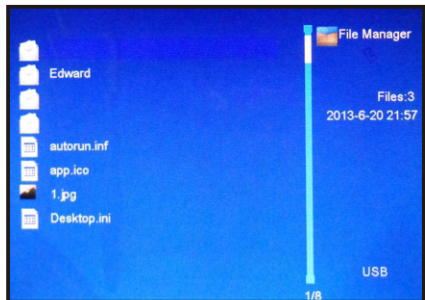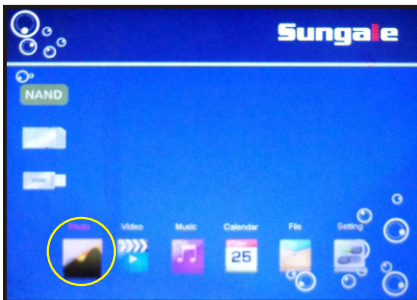

Basic Operations

Photos

 
Thumbnail Mode

When displaying, press ▲ or ▼ to move to previous or next photo, press EXIT to enter into Thumbnail Mode.

Select the Return icon in Thumbnail Mode and press ENTER to return to previous menu.

Rotate a Photo

When displaying images on the Browse Mode, press the ROTATE on the remote control to rotate the displaying photo for 90nce an operation.

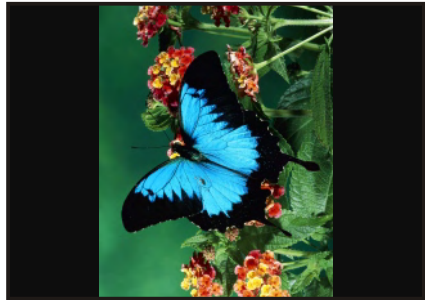

Zoom in/out a photo

Press the shortcut button Zoom on the remote control to zoom in or zoom out the desired photo.

Exit

Press EXIT on the remote control or press the **MENU** button on the back of unit to return to the previous menu.

Advanced Operations


Videos

View Videos

1. Select the **"Video"** icon on the screen.



2. A list of Video files stored on your media will appear on the screen. Use the up and down keys on the remote control to select the desired video then press **"Enter"**. You can press the (▶||) to pause/play.

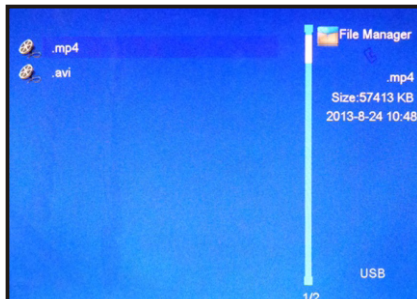 

3. You may zoom in on the video by pressing the **"Zoom"** button on the remote control.

 
4. The next video will play automatically on the list. You may also select another video using the up and down keys on your remote control.

Advanced Operations


Music

Listen to Music

1. Select the **"Music"** icon on the screen.

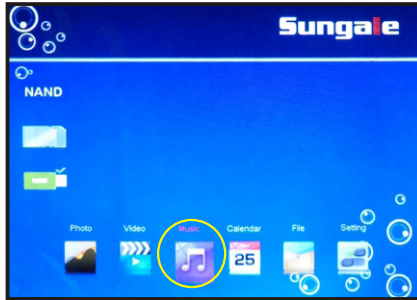

2. A list of MP3 files stored on your media will appear on the screen. Use the up and down keys on the remote control to select the desired the song then press **"Enter"**. You can press the (▶||) to pause/play.

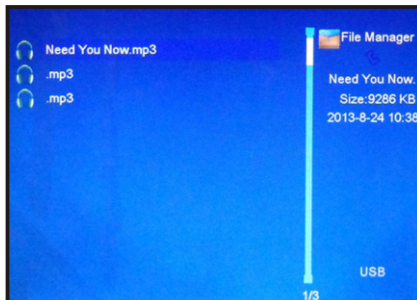 


3. The next song will play automatically on the song list. You may also select another song using the up and down keys on your remote control.

Basic Operations

Calendar

Select the Calendar icon in the main menu, and press **ENTER** to display the calendar.
Press the navigation buttons to select the date in further or past.
Press **ENTER** to change the display mode.

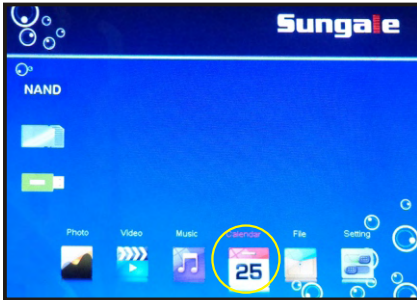 

Exit

 
Press EXIT on the remote control to return to the main menu.

Note: After plug off, the calendar and clock need to be reset.


Advanced Operations

File

1. Select the "File" icon on the screen.

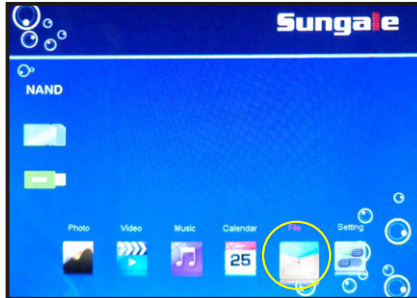

 2. Select the photo you want to copy using the up and down keys on your remote control and press (▶) the key. You will see a list on the screen.

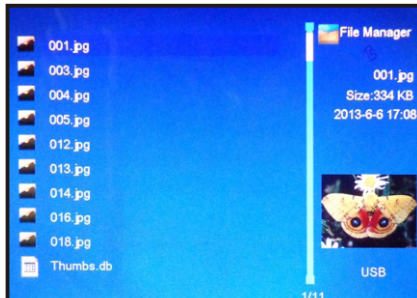

3. The list will display "copying to internal", "delete files", "Cancel" item for selection.

4. Move cursor to select and press "OK" to confirm your operation.

5. Press "Exit" to return.

Advanced Operations

Setting

Enter Setting Interface

Tip 1. Press the SETUP button on the remote control to enter the Setting interface.

Tip 2. Select Setting icon in the main menu and press ENTER to enter Setting interface.



Tip 3. Choose Photo setup, Calendar setup, Video Setup, Music Setup or System setup, and press **ENTER** to setup.


Setting Menu guide

Press "▲" or "▼" to select the setting item, and press "**ENTER**" to confirm, press "◀" or "▶" to change the value.

Advanced Operations

Setting

 Photo Set up:

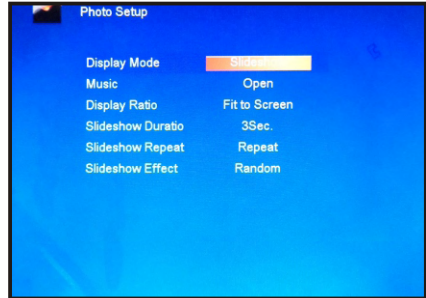

Display Mode

Select to set the display mode to preview photos in slideshow mode, browse mode or Thumbnail mode.

Music

Select to play music or not in slideshow mode.

Display Ratio

Select to set the photo displaying type

Slideshow Duration

Select to set the time the photo remains on the screen in slideshow mode.

Slideshow Repeat

Select to set slideshow repeatedly or once.

 
 
Slideshow Effect

Select to set the transfer effect in slideshow mode

Advanced Operations

Setting

Calender setup

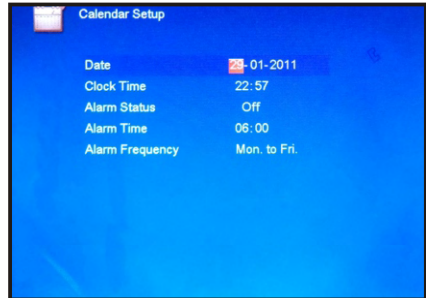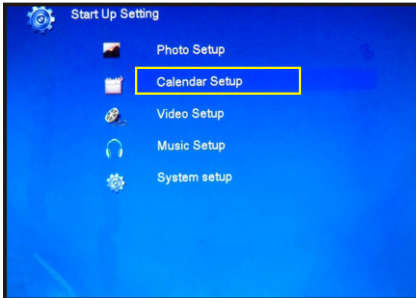

Date

Select to set the date of the unit.

Clock Time

Select to set the time of the unit.

Alarm Status

Select to turn on or turn off the alarm function.

Alarm Time

Select to set the time of the alarm.

Alarm Frequency

 
 
Select to set the alarm frequency.

Note: When setting date and time, press "◀" or "▶" to select date and time, press "▲" or "▼" to change the value.

Advanced Operations

Setting

Video setup

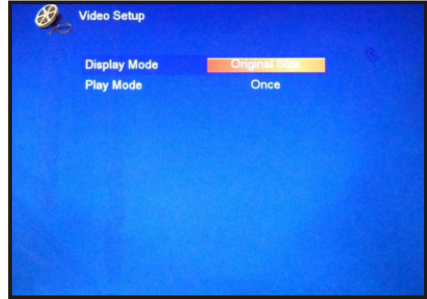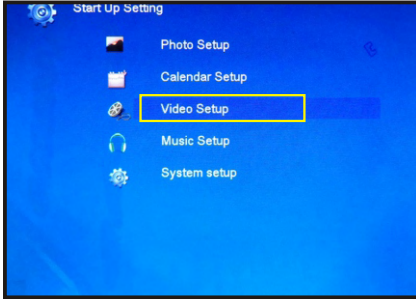



Display Mode

Select to set **Full Screen** or **Original Size** when playing video.

Play Mode

Select to set the mode when playing video.

  Music setup

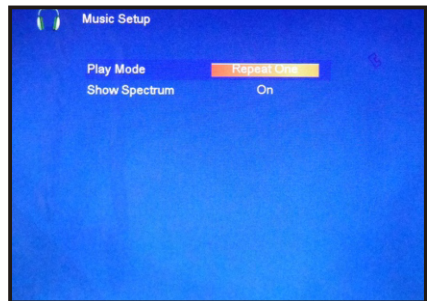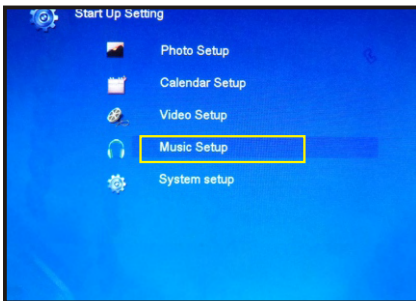

Play Mode

Select to set the mode when playing music.

 
 
Show Spectrum

Select to turn on or turn off the spectrum effect.

Advanced Operations

Setting

System setup

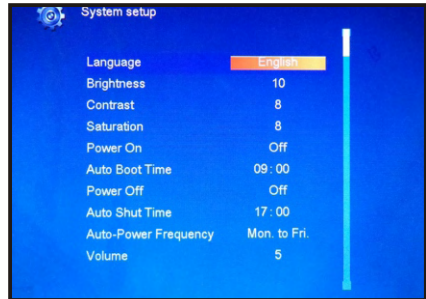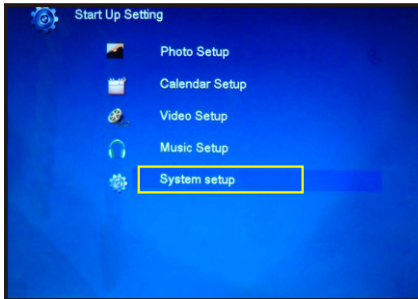

Language

Select to set display language

Brightness

Select to adjust the brightness of the screen

Contrast

Select to adjust the contrast of the screen.

Saturation

Select to adjust the saturation of the screen.

Power on

Select to turn on the unit automatically or not.

Auto Boot Time

Select to set the time to turn on the unit automatically

Power off

Select to turn off the unit automatically or not

 
 
Auto Shut Time

Select to set the time to turn off the unit automatically.

Advanced Operations

Setting

System setup

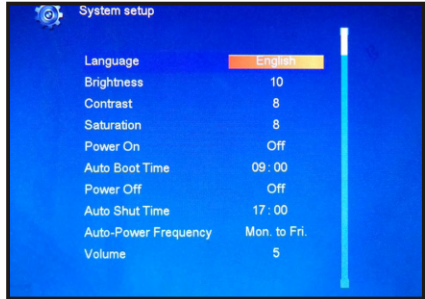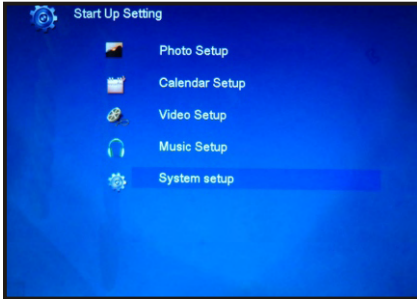

Auto-power Frequency

Select to set the frequency of turn on and turn off the unit automatically.

Volume

Select to adjust the volume of the unit.

Version

Select to show the software number

Reset Default Setting

Select to reset the unit to factory default

Customer Management

Question & Answer

This chapter will attempt to solve common problems that one may experience with the Multimedia DPF. If this guide does not solve your problem, do not dismantle the machine yourself.

Question	Answer
What is the main function of the digital photo frame?	Using the digital photo frame, you can display images, calendar and clock.
What memory card are compatible with the digital photo frame?	The unit can be compatible with SD/SDHC card
Why picture display seems slow?	You are viewing high-resolution pictures, it can take some time to display.
Why the unit can't display pictures?	Make sure the pictures are in JPEG format. Make sure you have inserted a card or USB device properly and selected the PHOTO icon in the main menu.
How can I see the photo file list?	Please set display mode of photo to Thumbnail. you can see the photo file list in thumbnail mode.

Customer Management

Troubleshooting

Some simple checks or a minor adjustment eliminate common problems:

No power

1. Check the power button is on.
2. Check the power outlet is operational.
3. Check the power cord is no damaged.
4. Check the power plug is firmly connected to photo frame.

Can not read the card

1. Check the card is no damaged.
2. Check the card is connected the photo frame correctly.
3. Pull out the card, and then insert again.

Photo Frame is not working

Trun off the power, and then turn it on again.

Specifications

TFT LCD type:	Digital
Screen dimension:	8 inches (4:3)
Resolution:	800x600 pixels
Support Photo display	
Support Audio	
Support Video	
Internal memory:	2GB
Memory cards supports:	SD/SDHC
USB connection:	1xUSB host, 1xUSB device
Power:	AC Adapter, Input 110-220V; Output 5V

Environmental operating ranges

Operation: 32~95 F, Humidity 0~85%
Storage: -4~140 F, Humidity 10~90%

Note: All data are provided for reference purposes only. Sungale reserves the right to make any changes without prior notice.

FCC and Safety Information

• FCC Part 15.19

This device complies with Part 15 of the FCC Rules .Operation is subject to the following two conditions: (1) this device may not cause harmful interference , and (2) this device must accept any interference received ,including interference that may cause undesired operation .

• FCC part 15.21

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

• FCC part 15.105

Note : This equipment has been tested and found to comply with the limits for a Class B digital device ,pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation .This equipment generates, uses, and can radiate radio frequency energy and ,if not installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular installation .If this equipment does cause harmful interference to radio or television reception ,which can be determined by turning the equipment off and on ,the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

LIMITED WARRANTY

The limited warranty set forth below is given by the manufacturer with respect to Sungale brand DPF players and other consumer electronics products purchased and used in the United States of America. The manufacturer warrants this product against defects in material or workmanship as follows:

LABOR: For a period of ninety (90) days from the date of purchase if this Product is defective, the manufacturer will repair or replace the Product, at its option, at no charge. After this ninety (90) days period up to one year, a labor charge of US\$30.00 will be charged for each service.

PARTS: For a period of one year from the date of purchase, the manufacturer will supply, at no charge, new or rebuilt replacement parts in exchange for defective parts. After this one year period, the manufacturer will charge the new or replacement parts.

This warranty does not cover: (1) customer instruction, installation or set up; (2) cosmetic damage or damage due to accident, misuse, abuse, or negligence; (3) commercial use of the Product; (4) modification of any part of the Product; (5) damage due to improper operation, improper maintenance, or connection to an improper voltage supply; (6) damage due to an attempted repair of the Product by anyone other than a facility authorized by the manufacturer to service the Product; (7) consumables (such as fuses and batteries). This warranty is valid only in the United States.

The product must be accompanied by a copy of the original retail purchase receipt. If no proof of purchase is attached, the warranty will not be honored and repair cost will be charged.

This warranty is valid with attach written documentation detailing the complaint to the outside or inside of the carton.

This warranty is invalid if the factory applied serial number has been altered or removed from the Product.

The manufacturer reserves the right to modify any design of this product without prior notice.

To obtain warranty service, you must deliver the product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, plus proof of purchase, to:

Service Center
13941 Central Ave,
Chino, CA 91710
Tel: **800-473-5156**

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THE SERVICE CENTER SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Digital Photo Frame

Sungale

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>