

1.5" Key Chain Digital Photo Frame User's Manual




Thank you for purchasing the product. While you may find it cute, this product is also powerful, allowing you to download and display many of your favorite photos. This product can be taken with you wherever you go.

Features :

- 1.5 " CTSN full color display
- Slide show playback
- Built-in memory holds up to 52 digital photos
- Copy, cut and paste photos from your PC
- Rechargeable battery supports up to 2 hours
- USB 2.0 for rapid file transfers
- Compatible with Windows 2000/XP/Vista
- Contrast and back light adjustable
- Clock function
- Auto shut-off

Buttons:

- ▲/▼ : Press the buttons to up and down to select items.
- OK: Press the button enter or confirm.
- POWER: Press to power on the unit, and keep on pressing to power it off.
- RESET: Use the button to reset the unit to factory default.
- USB: Use the supplied USB cable to connect the DPF to the PC.

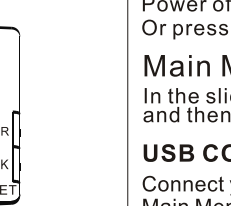

Power on/off:


Power on: To power on the unit, hold the POWER button for 3s., Or connect your DPF to the PC with the USB cable. It will enter into the photos slide show automatically.
Power off: In the slide show mode, hold the POWER button for 3s., Or press OK to enter the main menu to select OFF, then, press OK.

Main Menu:

In the slide show mode, press the OK button, and then enter the Main Menu mode.

USB CONNECT

Connect your frame to PC with USB cable. In the Main Menu mode, press the OK button to enter the USB CONNECT menu, and then press ▲ or ▼ to select YES or NO to complete connecting or not. Remove the USB cable from PC to disconnect.

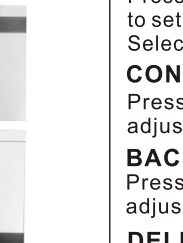

CLOCK

Press ▲ or ▼ to select the CLOCK menu, then press OK. Select DISPLAY CLOCK to show a digital clock, select ANALOG CLOCK to show an analog clock, and select SET CLOCK, continue press OK to choose items and press ▲ or ▼ to adjust date and time. Select CANCEL to exit.

SLIDE SHOW

Press ▲ or ▼ to select SLIDE SHOW and press OK. Select ON and press OK, use ▲ or ▼ to adjust the interval time of slide show, then press OK to begin photo slide show. Select OFF to enter step show and select CANCEL to exit.

AUTO OFF

Press ▲ or ▼ to select AUTO OFF and press OK. Select ON and press OK to set auto off the unit, press ▲ or ▼ to set the desired time of turning it off. Select CANCEL to exit.

CONTRAST

Press ▲ or ▼ to select CONTRAST and press OK, then press ▲ or ▼ to adjust the contrast, press OK again to exit.

BACKLIGHT

Press ▲ or ▼ to select BACKLIGHT and press OK, then press ▲ or ▼ to adjust the back-light, press OK again to exit.

DELETE

1. Find the photo you would like to delete by press ▲ or ▼ in the slide show mode
2. In the main menu, press ▲ or ▼ to select DELETE and press OK. Select DELETE ONE and press OK to delete the photo you'd like to delete.
3. To delete all the photos at once, select DELETE ALL and press OK.

OFF

Press ▲ or ▼ to select OFF and press OK to turn off the key chain.

EXIT

Press ▲ or ▼ to select EXIT and press OK to exit the main menu and start a photo slide show.

Downloading Photos to the Keychain with PC:

1. Connect your keychain to PC with the USB cable.
2. Press the OK button on your key chain to go to the Main Menu. Select "USB CONNECT" from the list of options and press the OK button. Select "YES" and press the OK button to complete connecting.
3. On your PC, the DPF Mate should automatically appear.
4. Find your desired photos from "My computer" or "Desktop" to store in your keychain.
5. You can adjust the way your photo will be displayed by clicking different keys, such as +, -, Rotate L, Rotate R, or click the photo to move it directly, and then clear.
6. Click Add to add the given photos into the digital frame document.
7. When you finished selecting all the photos that you want to store in your digital frame, click Download (It can hold up to 50 photos).

Deleting/Saving Photos with PC:

1. Plug your key chain into your PC using the USB cable.
2. Press the OK button on your key chain to go to the Main Menu. Select "USB CONNECT" from the list of options and press the OK button. Select "YES" and press the OK button to complete connecting.
3. On your PC, the DPF Mate should automatically appear.
4. Select the photos you would like to delete and click "DELETE" from the option above the pictures.
5. Click Download, and the photos will be deleted from your key chain.
6. Select the photo you would like to save and click "Save" or "Save ALL" to save on your PC from your key chain.

FCC Part 15.19

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.21

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Part 15.105

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular instructions. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>