


Sungate

ID700WTA



Touch screen and Wi-Fi 7 inch eReader User Manual

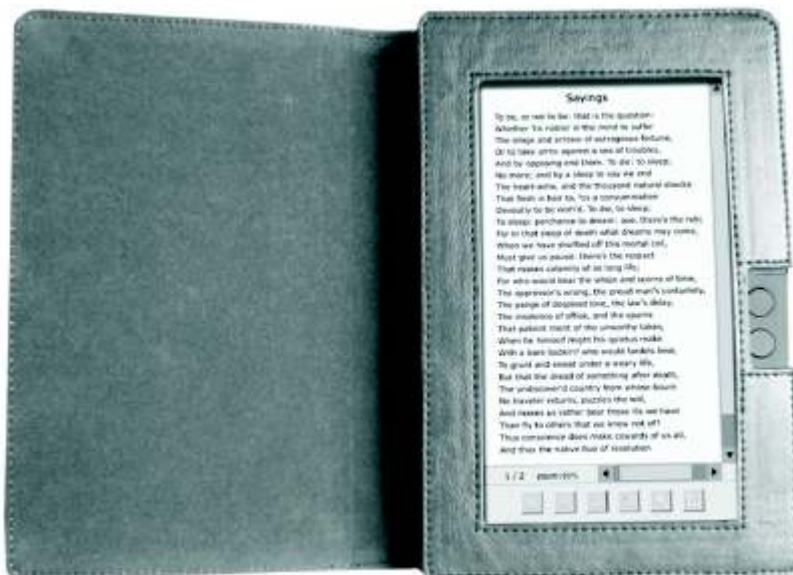

For ongoing product improvement, this manual is subject to modification without prior notice

User Notice

This product has met electronic emissions standards required. It can be used safely at home.



Contents

Before Operation

Product introduction	2
Product specification	3
Safety precautions	4
Parts and components	6
Power connection	7
PC connection	8

Basic operation

E-reader	9
Photo	12
Music	15
Video	16
Edit files	17
Note pad	18
Clock	19
Dictionary	20

Advanced operation

Setting	21
Weather	28
IP Radio	29
News	31
YouTube	32
Gmail	34
Picassa	35
Stock	36
Route	37
Screen calibration	38

Customer management

Question and answer	39
FCC and safety information	40

Before Operation

Product introduction

This Wi-Fi and touch screen eReader of Sungale's Cyberus series offers you great convenience to share vivid photos and surf on line with wireless networking capability.

Its powerful multi-function makes it your indispensable assistant in your daily life. You can:
show your favorite digital pictures, play audios and videos, read E-books, look for words from the internal dictionary. Inquire local weather condition by inputting zip code or city's name, listen to thousands of IP radio all around the world, download pictures from picassa, watch videos on YouTube, read Google and Yahoo news, receive G-mails, look over stock information, guiding traffic, make a note for the important issues, set up date and time as well as alarm. Besides, its built-in Li-battery allows you to take these functions anywhere. Its main menu's picture is as follow:



Tips: You should set up network before enjoying some of the functions listed above. Please find the network setting in "advanced operation" for reference.

Before Operation

Product Specifications

Audio file formats: wma, auto transfer mp3 to wma for storage

Video file formats: avi,

Picture file formats: JPG, TIF, PNG, BMP

E-book file formats: TXT,PDF

Language of eBook files supported: English and French

Memory cards support :SD/MMC

USB Connection: USB device

Brightness: 500:1

Contrast: 250cd/m²

Power: AC Adapter Input 110-240V, DC 5V, 2A

Environmental operating ranges

Operation: 32~95F, Humidity 0~85%

Storage:-4~140F, Humidity 10~90%

Compatible operating system:Windows 2000, Windows XP, Windows Vista

Battery duration: Support above 3 hours play after being fully charged.

Customer support home page

The latest support information is available at the following home page address:

[Http://www.sungalewifi.com](http://www.sungalewifi.com)

Take a moment now to visit the web site!

You may receive product updates and other valuable information from the service supplier that can improve your experience with our product.

Note: It is recommended that this eReader is to be operated with your home wireless router or office wireless router. For complex office wireless surrounding, please ask your web manager to give assistance to link to the internet.

All data are provided for reference purposes only. Sungale reserves the right to make any changes without prior notice.

Before Operation

Safety precautions

Electric safety

Make sure to review the following guidelines to ensure user safety and avoid product failure.

Power Precautions

⚠ WARNING: indicates information that, if neglected, could result in serious injury and/or death to the user.

⚠ CAUTION: indicates information that, if neglected, could result injury to the user and/or material damage.


01. Use only the authorized power supply product. Failure to do so could result in product malfunction.




02. When connecting the power source, make sure that your hands are free of moisture. Failure to do so could result in electrical shock.




03. Make sure that the power supply is firmly plugged in and not loose. Failure to do so could result in electrical shock.

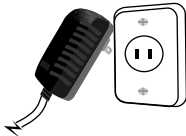

04. Do not let the power cord get overly entangled and do not place any heavy objects on the cord. Failure to do so could result in electrical shock.

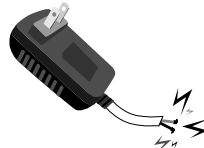

 05. Do not connect the power supply to an electrical power strip with other various connections. Failure to do so could result in fire.



06. Disconnect the power supply during inclement weather conditions that include thunder and lightning. Failure to do so could result in fire.




Before Operation

Safety precautions

Make sure to review the following guidelines to ensure user safety and avoid product failure.

Product Related


01. Dropping the product or subjecting it to a significant impact can cause critical damage.

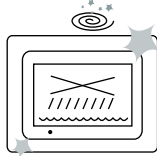


02. Spilling water or any other liquid on the product can cause critical damage.




03. Striking or scratching the LCD screen may cause critical damage.

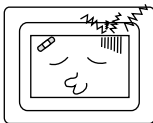

 
04. When cleaning the LCD screen, turn off the power and wipe it gently with a soft cloth.



05. Do not subject the product to severe humidity and/or heat.

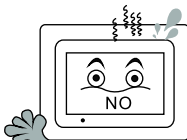

06. Make sure to power off the unit before disconnecting the power supply.

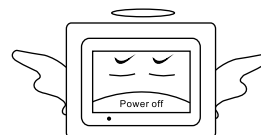

Before Operation






Parts and components

As Sungale is constantly working to improve its products' performance, these components may be modified without notice.

The components may differ slightly in appearance with the images provided.

Basic Components

These components are included with your product.

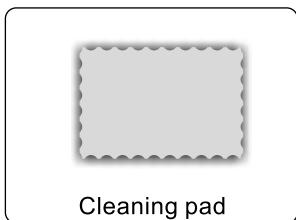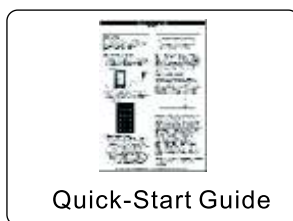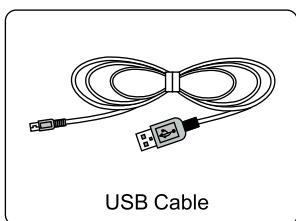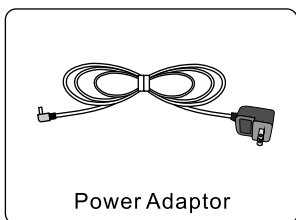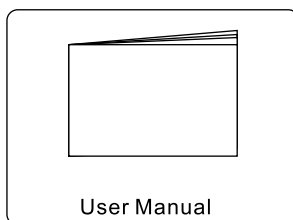

Before Operation

Power Connection

1. Connect the power adapter to the DC IN 5V jack on the eReader.
2. Plug the AC Adapter to a power jack to supply power to the eReader and charge up the built-in battery.



Tip:

1. When charging up the battery, the indicator beside the DC IN 5V jack will light up as red light, after charging up the battery for about 6 hours, the indicator will turn to green light, which means that the electrification for the eReader has been finished. It can support above 3 hours picture play after being fully charged.
2. If there is power in the built-in battery, you can use the player directly.
3. Please don't unplug the power adaptor when the duration of charge is less than 30 minutes, or it may cause a white screen.

After power connection, slide the power switch to ON, after a few seconds' booping, it will enter into the interface with two choices: Link to internet or go to main menu. Touch "Go to main menu" and it will turn to main menu interface.


Cards connection

Insert one memory card each time

When inserting a memory card into the eReader, refer to the image to make sure that both the memory card and the eReader are aligned correctly (the side of the memory card on which sticker is affixed should face the eReader)

SD/MMC cards are compatible with this unit. Aligning the memory card upside down may cause user-error damage. This may nullify the warranty.

When you have inserted the card correctly, there will be an SD icon appear on the right up corner of the screen.

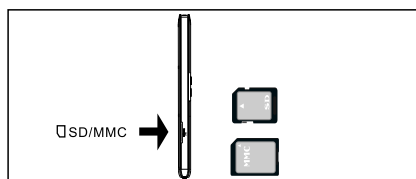


Remove the memory card

When removing a memory card from the cyberus, press the card to release it from the card slot and pull it straight away from the unit. Avoid bending the card.

Before Operation

PC Connection

Use the supplied USB cable to connect your eReader to your PC.

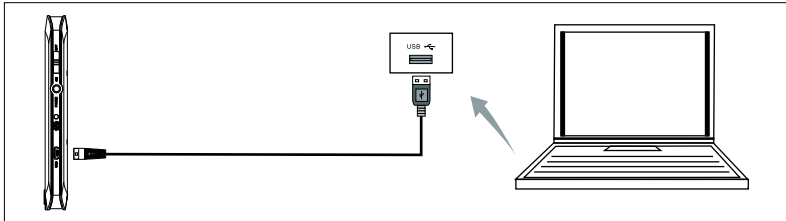

Note: The ASSP is a software in the internal memory developed by Sungale go manage the picture and audio files to optimize the utilization of the source of the memory. The ASSP is inapplicable to manage ebook and video files. Just use the unit as a regular storage device to manage ebook and video files after connecting the unit to the PC.

- Tips:**
1. If your PC has set as auto-run, you will enter into the ASSP interface directly, no operation needed.
 2. The PC installed the anti-virus software or other hold-up software will make the "autorun.inf" invalid. In this situation, the file is set as hidden file. If you want to autorun the ASSP, you can set your PC to display hidden files.
 3. When connecting PC with the eReader, you can only edit files by using the PC, the eReader will not function as in normal state.

Use ASSP

1. Click "Add File", your computer's files and folders will appear, double click the file or photo to add them to your eReader.
2. Hold on "Shift" or "Ctrl", you can download multi files or photos to your eReader. In this way, the photos downloaded will be stored at 1024X768 pixels to suit your eReader screen and the MP3 files will be transferred into WMA file. When you have finished the operation, please safely remove the USB cable from your PC.

Tip: You also can take the eReader as a regular storage device, select the photos from your computer, and then paste them in the eReader's internal memory. In this way, the photos will be stored without compression. If you want to optimize your internal memory, you can select the photos, then click the "Convert".

Attention: You may find a series of files named "WMEncoder.exe", "FileConverter.exe", "encoder.exe", "Autorun.inf" and "gdiplus.dll" in the internal memory of the unit. It is the ASSP software, and not a virus. You can use it according to the instruction above.

Attention: Once you format the internal memory of your eReader, the ASSP software will be deleted.


In this situation, you can still use the eReader as a regular storage device, you can copy, paste and delete files after connecting your eReader to the PC.

Basic operation


eReader

After power connection, slide the power switch on, after a few seconds' booting, it will auto enter into the main menu interface. Touch "ereader" → touch internal memory or memory card → touch the book name (or file folders and then touch file) you prefer to read, there will be a Tip jumped out → touch "Yes" to enter to the file page that you read last time. Touch "No" to enter into the first page of the book selected.

Note: The eBook format should be TXT. If you have chosen PDF format, a different clue will jump out.

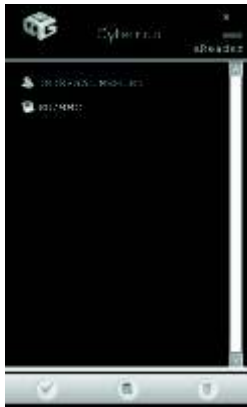

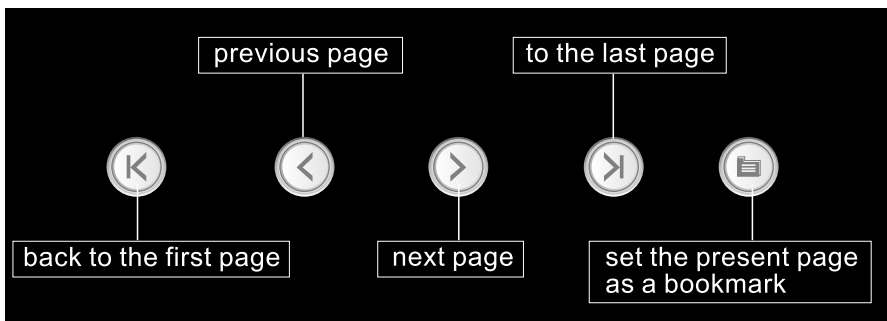

In the TXT format eBook reading interface, there are five icons in a row at the bottom.




Basic operation



eReader

Touch  and touch “yes” to set the present page as a bookmark.
Touch  and touch “no” to enter into the bookmark list.



There listed all bookmarks which combined by page number and the first sentence of the page that has been set as bookmark. Touch the desired bookmark to enter into the related page, touch  to exit.

Delete bookmark

In the bookmark list interface, touch  and it will turn from green to orange, then touch the bookmark to select the one you would like to delete, the selected bookmark will turn to red and blue (retouch the selected bookmark that you don't want to delete, it will turn to yellow), and then touch  to delete.



Basic operation

eReader

Touch eReader in the main menu, then touch internal memory or memory card to enter into the eBooks list, touch eBook name (in PDF formats), a clue will jump out: Please select an orientation. You may choose Landscape or Portrait to enter into the related mode as follow:

(Landscape)



how many pages you have read;
total pages


Magnification 51%,76%,114%,
171%256% are selectable

(Portrait)




In the PDF format eBook reading interface, you can adjust the interface by touching ▲ ▼ ◀ ▶

There are six icons below:

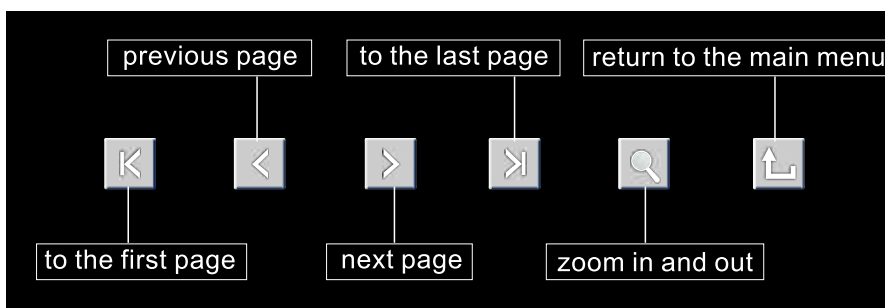


Basic operation



Photo

1. In the main menu, touch "Photos"
2. Touch "INTERNAL MEMORY" or memory card name if a SD or MMC card has been inserted correctly. You will enter into picture list.
3. Touch the picture that you want to display. It will play the picture and after 5 seconds without any operation on the screen, it will play the picture in full screen.
4. If you prefer to play picture one by one automatically, touch the .

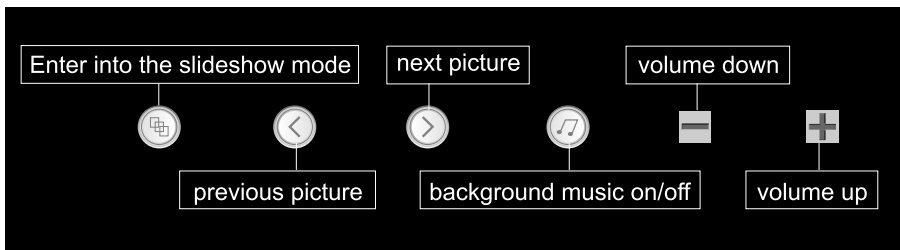

(step show mode)



If you prefer to add background music when playing the pictures, you may touch the screen, and touch , then touch  to play picture one by one with background music.

Basic operation

Photo

Moving pictures

If the screen doesn't show the whole picture, you may touch the picture's left/right/up/down area (as shown in the picture below) to see the whole picture.



But sometimes you may need to set up display mode first. Back to the main menu, touch "Setting" → touch "display" → touch "optimal" and then touch **X** to back to the main menu.



Then you can touch the left or right or up and down area of the picture to see the whole picture. Touch the center of the screen to exit.

Basic operation

Photo

Attention: When the picture is in full screen display,

1. If there is black area beside anyside of the picture, then the picture won't move when you touch any side of the picture.

2. If the picture whose resolution is 240 X400pixels is in full screen display, the picture won't move.

3. If the picture's width and height proportion is 800 : 480 pixels, then the picture won't move.


The picture moving rule also applies to Picasa picture show.

Basic operation







Music





In the main menu, touch “A/V”→ touch internal memory or memory card, you will enter into the audio and video name list.

Touch the desired music name to start playing. You may enter into the name list with music files only, and the selected music is playing at the bottom of the screen.


 Stand for music files.



When playing, touch  to pause, then touch  to continue playing. Touch  to make it mute, touch  to reinstate the sound. Touch  to turn down the volume, touch  to turn up.

When you have touched  repeatedly until you see , you should touch  to recover the voice. Touch  on the right up corner to exit.

Note: 1. The playing mode is: repeat all music files.





2. When the machine is playing one song, and you want to change another song, you need to touch  to exit to the music name list, then touch the song you want to play.

Basic operation

Video

In the main menu, touch “A/V”→touch internal memory or memory card to enter into the video and audio file list.



Touch the desired file to start playing,  stand for movie files. In the video playing interface, there are several icons below: turn to be mute/reinstate the sound, turn the volume down, turn the volume up. When you have touched  repeatedly until you see , you should touch  to recover the voice.




Note: After playing one video, it will auto return to the video list interface.


Basic operation

Edit files

(Files including eBook files, photos, audios and videos)


Copy and paste

Step 1. When you have entered the eBook (including the bookmarks) /photo/ music/video file list interface, touch  it will turn from green to orange, then touch the files you prefer to copy (the selected files will turn to red and blue. If you don't want to copy the selected file, please retouch it.)


Step 2. Touch  to exit, then enter into the folder that you want to copy the files to

Step 3. Touch  to start paste.

Step 4. After pasting, the files you have copied will be listed in the playing list.

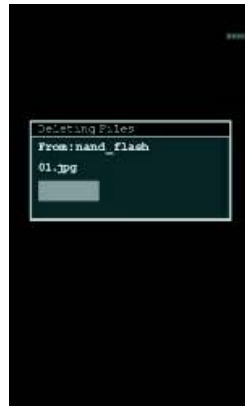

Delete

Step 1. When you have entered the eBook (including the bookmarks) /photo/ music/video file list interface, touch , it will turn from green to orange, then touch the files you prefer to delete (the selected files will turn to red and blue. If you don't want to delete the selected file, please retouch it.)

Step 2. Touch  to start deleting.



Basic operation

Note pad

 
In the main menu, touch “Note pad” to enter into the note list interface, which list the subjects of the recent 6 notes, touch any subject, its related note content and remind date would appear on the screen.

Note: There might be no note list at the very beginning of purchase



Add new note

Touch  to set up remind time and date. After setting the time and date by touching the four directional icon, touch  to input subject and note content.



Then touch  to confirm and back to the note list interface.

Delete note

In the note list interface, touch the note you would like to delete, there will be a “*” in front of the note, then touch  to delete directly. Touch  to exit.



Basic operation

Clock

Clock, calendar and alarm clock setting:

In the main menu, touch "Clock" to enter into the interface with clock and calendar, touch the directional icons to browse the calendar.



Touch the  to set up date, time and alarm clock. After setting, touch  to exit. When set up alarm clock, please make sure that the state is "ON"



When time for alarm clock is up, there will be clock appear on the screen with alarm bell ringing, touch the screen to back to the main menu.

Attention: Please make sure that the machine is working when alarm time is up. Or else the alarm clock won't work.


Basic operation





Dictionary

In the main menu, touch "DICT" to enter into the following interface:

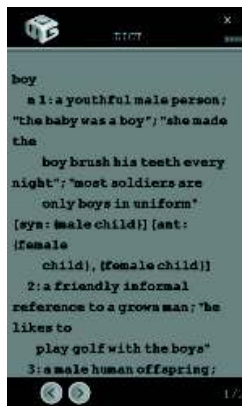

Input the word by touch the keyboard on the screen.



Then touch  to confirm, it will go to the explanation interface. Touch   to turn pages. Touch  to exit.

Basic operation

Setting

In the main menu, touch setting to set up items as follow:

Slide show time

5s, 10s, 15s optional, touch the time you want then it will auto return to the last interface.

Slide show mode

Random、Normal、Top_Bottom、Bottom_Top、Left_Right、Right_Left、Vertical_Close、Vertical_Open、Horizontal_Close、Horizontal_Open、Close、Open、TopL_BottomR、TopR_BottomL、BottomR_TopL、BottomL_TopR...

Display

Touch to set up display mode: optimal, original

Others

Touch "others" to enter into the interface with two choices:

1. Default: touch to recover the machine's setting to the original state
2. info: touch to find the version of the eReader and MAC ID information, etc.



For network setting, please refer to the next pages.

Basic operation

Setting

Network setting


There are three methods for you to access to network setting which including the first interface after power connection "Link to Internet" and "Setting→network" as well as when you operate functions that need successfully network linking.

The first method

Take the first interface after power connection for example. After power connection and the player has been turned on. You will see the following interface: Link to Internet and Go to main menu.



Touch "Link to Internet".

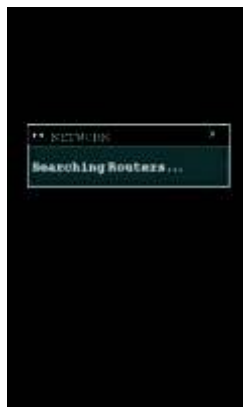

Basic operation

Setting

You may get the following results

Situation 1. No routers have been found.
At this situation, you may move the machine closer to the router or your PC.
And you may also check if your router is open.



Situation 2. There are several routers listed on the interface for your choice.



If there's a lock before the router name, it means that you need to input password of the router.

|||| shows the strength of router's signal. More signal will help you link to network easier.

Advanced operation

 
Setting

In the routers list, touch the router name you want and then touch "Yes" .



If you have chosen a router which has a lock, you need to input password for it.



You can use the keyboard to input password (Only numbers and letters are acceptable) When finished inputting password, touch  to confirm.


Then you will enter into a interface with two choice:

1. Auto IP with DHCP (Choose this option will be more convenient)
2. Statically set IP

Advanced operation

 
Setting

1. Auto IP with DHCP

Touch "Auto IP with DHCP" and then  . The machine will link to network automatically.

1. Statically set IP

Step 1. Touch "Statically set IP"

2. Input related information of IP, Mask, Gateway, PreDNS respectively by touching the keyboard at the left down corner of the screen. When finished, touch  to confirm.



About how to get the IP information, please refer to the operation as follow:

Tip: How to get your IP

1. Open your PC, click "Start", then, click "Run"



2. Input "cmd", then, click "OK"



3. Input "ipconfig/all", you will get your IP information similar as below:



For more information about IP, please visit our website.

Advanced operation

Setting

When linking to the internet successfully, you may see the following interface.



Touch "Go to main menu" and enjoy the Wi-Fi functions.

If you have problems of linking to network successfully, please refer to the tips on our website:
www.sungale.com
Click "Support" at the homepage
Click "Wi-Fi Series Service"
Click "Tips link to Wi-Fi"

The second method

In the main menu, touch Setting → touch Network to begin searching routers.



You may refer to the first method about how to finish the following operation.

Advanced operation

Setting

The third method

In the main menu, if you operate functions which need successful network link such as YouTube, Picasa, IP Radio, Weather, Gmail, Stock, News, etc. You may see the following interface which remind you to set up network.

Touch "Yes" to begin network setting. You may refer to the first method about how to finish the following operation.

Touch "No" to back to the main menu, and you may not be able to use those functions until successful network link.



After link to the internet successfully, you will enter into the following interface.



Touch "Continue" and then enjoy the Wi-Fi functions.

Advanced operation

Weather

Attention: All the functions mentioned below are based on the premise that you have successfully linked to the internet.

In the main menu, touch “Weather” to enter into the following interface:

There are two ways to get the weather information:

1. Input city name or local zip code and then touch 



2. Touch “Browse for U.S. and International Forecasts” to enter the country list interface.

Touch the numbers and country name to enter into related city name list.
Touch the city's name to get the weather information.

Touch  to exit.

Note: There listed almost all the country and main city names. When you touch some of the country names or city names, there might be no record, and the interface may show the reason of failure such as: Failed to download the cities of this country.

Advanced operation

IP Radio

Attention: All the functions mentioned below are based on the premise that you have successfully linked to the internet.




Step 1. In the main menu, touch "IP Radio" to enter into the country list interface. During this process, there might be a clue show that "Connecting network..." Please wait for a while in this situation.

Step 2. Touch country name to enter into city name lists.

Step 3. Touch city name to enter into radio lists.

Step 4. Touch radio to enter into the following interface:





Touch  to turn mute or reinstate to normal play, Touch  or  to decrease or increase the volume.


 
Advanced operation

IP Radio

Add stations to “My favorite”



1. In the radio list interface, touch  and it will turn from green to orange, touch the radio you prefer to add to “My favorite”, then touch  to add the radio to “My favorite”



2. In the radio list of My favorite, touch  input the radio's name and address, then touch  to confirm. Now the radio has been added to “My favorite”.



Delete stations

In the radio list of "My favorite", touch  and then touch the radio you want to delete, touch  to delete.

Advanced operation


News

Attention: All the functions mentioned below are based on the premise that you have successfully linked to the internet.

In the main menu, touch “News” to enter the interface with two choices: Google and Yahoo

Take “Google” news for example

Touch “Google” to enter into the interface as follow:

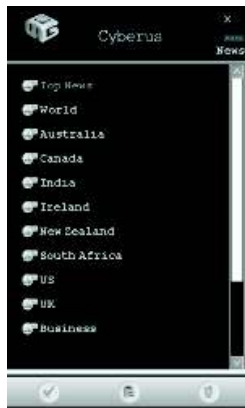

Touch the item you would like to read, it will enter into the interface as follow:



Touch ⏪ ⏩ to browse the previous or the next news, touch ⏴ ⏵ to turn pages.

Advanced operation

YouTube



Attention: All the functions mentioned below are based on the premise that you have successfully linked to the internet.

In the main menu, touch "YouTube" to enter into the interface with two choice above: Video and Most Viewed Videos

Touch "Most viewed videos" to enter into the interface with four choices: Today, This week, This Month, All time

Touch the item you prefer to watch, You may enter into the interface with 3 icons below: Browse previous video, play, browse next video.



Then touch  or the picture of the video to start play. At this time, you may need time to connect the network, please wait for a while patiently. Touch  to exit.

Advanced operation

YouTube

Watch you own YouTube

After connecting to the network successfully, touch the YouTube icon in the main menu to enter into the interface with three options: Video, Most Viewed Videos and My YouTube.


Touch “My YouTube” to enter into the interface showed in picture 1:




(picture 1)



(picture 2)

Input your user name by using the keyboard below and then touch , you will enter into the interface which listed your YouTube programs (only one video files will be showed on the screen at a time), and there are three icons at the bottom (Please refer to picture 2).

Touch  or  to browse previous or next video.

Touch  to play the present video.

At this time, you may need to wait for a while patiently to connect network.

Touch  to exit.


Tip1: My YouTube is a convenient tool by which you may watch the videos that you have collected and share them with your friends.

Tip2: You should own a registered user name on YouTube before using “My YouTube”




Advanced operation

Gmail

Attention: All the functions mentioned below are based on the premise that you have successfully linked to the internet.

In the main menu, touch "Gmail" to enter the log in interface of Gmail. Input the user name and password then touch  to enter into you e-mail receiving box.



Touch   to read the previous or next email. Touch  to exit.




Advanced operation

 
Picasa

Attention: All the functions mentioned below are based on the premise that you have successfully linked to the internet.


In the main menu, touch "Picasa" you will enter into the interface as follow:



Input the user name and password and then touch  to enter into the photo (or with photo folder) list interface, touch the photo to preview picture, there are several icons in a row at the bottom of the interface. Their functions are as follow:



1. download photos from picasa
2. previous photo in picasa
3. next photo in picasa
4. show pictures with background music
5. decrease volumn
6. Increase volumn of the music.

After downloading, a tip will appear at the bottom saying: success. Touch  to exit.

 

Advanced operation

Stock

Attention: All the functions mentioned below are based on the premise that you have successfully linked to the internet.

In the main menu, touch “Stock” to enter the following interface:



Input the stock symbol and touch , the detailed stock information will appear with tendency chart. Touch  to exit.



Advanced operation


Route

Attention: All the functions mentioned below are based on the premise that you have successfully linked to the internet.

In the main menu, touch “Route”, the following interface will appear:



Input zip codes or city name and then touch  , it will show the route of how to get to your destination

Touch  to see all the tips.



Query Record

You may touch Query Record in the interface showed in Picture 1, it will show all the route records that you have inquired before.

Advanced operation

Screen calibration

If the touch screen doesn't work or doesn't work correctly, you may need to adjust it through the following operation:

Step 1. In the main menu, keep pressing  (the right button on the frame) until "ereader" is selected and turn to yellow, then keep pressing  (the right button on the frame) five times. An interface as follow will appear:



Firstly the "+" will appear at the left down corner, after touching exactly the very center point of the "+" quickly, it will go to the left up corner, then keep touching the center point of the "+", it will go to the right up corner, right down corner and center of the screen respectively. After five times exact and quick touch in order, the screen calibration will be finished and auto return to the main menu interface.

Tips:

1. Please adjust the screen by using touch screen stick in order to touch exactly.
2. Please make sure that you are touching the very center of the "+" exactly. Please touch quickly or else it will be taken as touch twice, then the "+" will not appear in order and you may need to do it again until you have done correctly.
3. If you can not make it and you want to exit from the interface, the only way is to turn the power off and then on.

Customer Management

Question & Answer

Question	Answer
What photo formats are supported by this cyberus ?	JPG, TIF, PNG, BMP
Why player does not display picture quickly after inserting memory card?	If your picture is of high resolution, please wait for a moment. Or switch your picture by using the ASSP tool.
Why the touch panel doesn't work?	Please adjust the touch panel. See the screen calibration in Advance Operation.
Why functions including weather, IP Radio, News, YouTube, Gmail, Picassa, Stock, Route do not work?	1.Please make sure that you have successfully link to the internet. 2.Please make sure that you have input the correct information such as Zip Code and stock code. Some local areas' zip code may not be in the service range.
Why can't I link to the internet successfully and enjoy the related function?	If you have problems of linking to network successfully, please refer to the tips on our website: Visit www.sungale.com Click "Support" at the homepage Click "Wi-Fi Series Service" Click "Tips link to Wi-Fi"
Where to get ebooks?	Click www.sungale.com and find FAQs,there are a list about where to get ebooks. Make sure download ebooks in TXT and PDF format.
How to convert PDF or HTML into TXT files?	Click www.sungale.com and find FAQs, there are methods to convert PDF or HTML into TXT files.
What is the ASSP software?	The ASSP is a software in the internal memory to manage the picture and audio files to optimize the utilization of the source of the memory. It is inapplicable to manage ebook and video files.
How to put the ebook or video files into the memory?	Just use the unit as a regular storage device,copy and paste the files from the PC to the internal memory.
Which languages of eBook files are supported?	English and French

FCC and Safety Information

• FCC Part 15.19

This device complies with Part 15 of the FCC Rules .Operation is subject to the following two conditions: (1) this device may not cause harmful interference , and (2) this device must accept any interference received ,including interference that may cause undesired operation .

• FCC part 15.21

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

• FCC part 15.105

Note : This equipment has been tested and found to comply with the limits for a Class B digital device ,pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation . This equipment generates, uses, and can radiate radio frequency energy and ,if not installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular installation .If this equipment does cause harmful interference to radio or television reception ,which can be determined by turning the equipment off and on ,the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different form that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

LIMITED WARRANTY

The limited warranty set forth below is given by the manufacturer with respect to Sungale brand DPF players and other consumer electronics products purchased and used in the United States of America. The manufacturer warrants this product against defects in material or workmanship as follows:

LABOR: For a period of ninety (90) days from the date of purchase if this Product is defective, the manufacturer will repair or replace the Product, at its option, at no charge. After this ninety (90) days period up to one year, a labor charge of US\$30.00 will be charged for each service.

PARTS: For a period of one year from the date of purchase, the manufacturer will supply, at no charge, new or rebuilt replacement parts in exchange for defective parts. After this one year period, the manufacturer will charge the new or replacement parts.

This warranty does not cover: (1) customer instruction, installation or set up; (2) cosmetic damage or damage due to accident, misuse, abuse, or negligence; (3) commercial use of the Product; (4) modification of any part of the Product; (5) damage due to improper operation, improper maintenance, or connection to an improper voltage supply; (6) damage due to an attempted repair of the Product by anyone other than a facility authorized by the manufacturer to service the Product; (7) consumables (such as fuses and batteries). This warranty is valid only in the United States.

The product must be accompanied by a copy of the original retail purchase receipt. If no proof of purchase is attached, the warranty will not be honored and repair cost will be charged.

This warranty is valid with attach written documentation detailing the complaint to the outside or inside of the carton.

This warranty is invalid if the factory applied serial number has been altered or removed from the Product.

The manufacturer reserves the right to modify any design of this product without prior notice.

To obtain warranty service, you must deliver the product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, plus proof of purchase, to:

Service Center
13941 Central Ave,
Chino, CA 91710
Tel: **800-473-5156**

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THE SERVICE CENTER SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>