

TEAC

CD-X10i

Micro Hi-Fi System

OWNER'S MANUAL





Includes adapters for:

- iPod nano
- iPod with video
- iPod mini
- iPod with Click Wheel
- iPod with color display

Adapters sold separately:

- iPod with dock connector

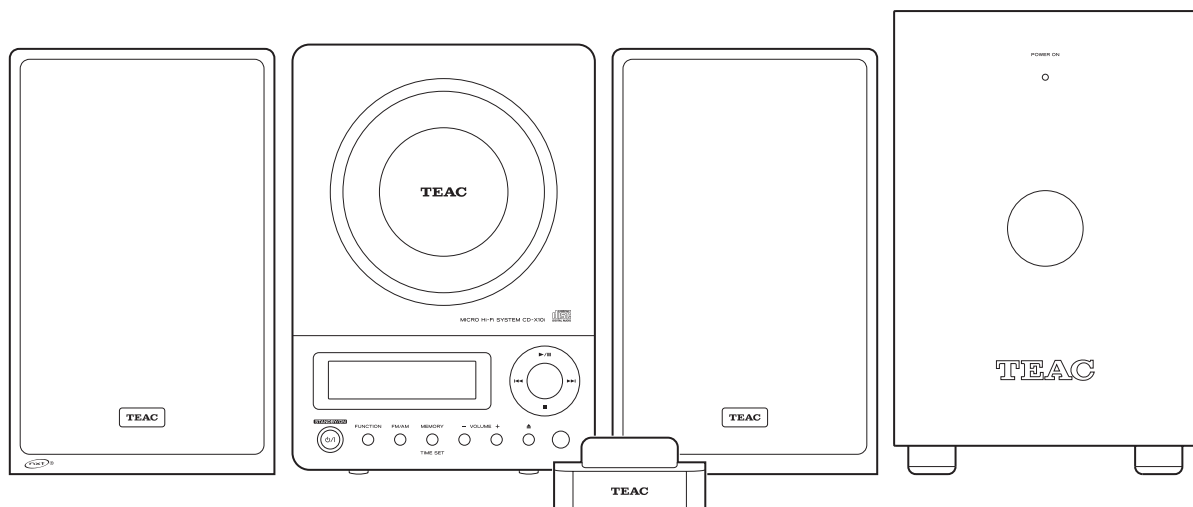

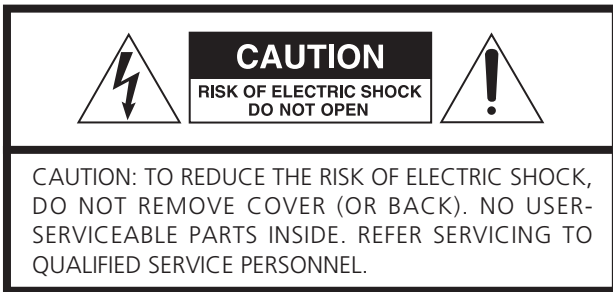

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION

- Read all of these Instructions.
- Save these Instructions for later use.
- Follow all Warnings and Instructions marked on the audio equipment.

1) Read Instructions — All the safety and operating instructions should be read before the product is operated.

2) Retain Instructions — The safety and operating instructions should be retained for future reference.

3) Heed Warnings — All warnings on the product and in the operating instructions should be adhered to.

4) Follow Instructions — All operating and use instructions should be followed.

5) Cleaning — Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

6) Attachments — Do not use attachments not recommended by the product manufacturer as they may cause hazards.

7) Water and Moisture — Do not use this product near water — for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.

8) Accessories — Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

9) A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



10) Ventilation — Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

11) Power Sources — This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.


12) Grounding or Polarization — This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

13) Power-Cord Protection — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

14) Outdoor Antenna Grounding — If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical."

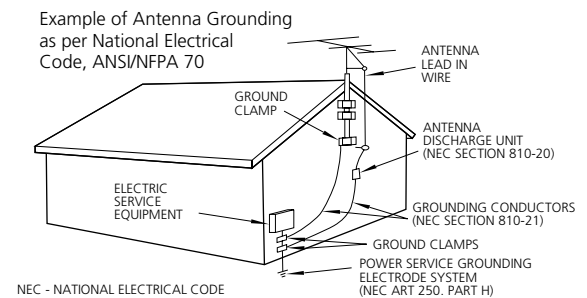

15) Lightning — For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

16) Power Lines — An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17) Overloading — Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in risk of fire or electric shock.

18) Object and Liquid Entry — Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

19) Servicing — Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

20) Damage Requiring Service — Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a) when the power-supply cord or plug is damaged.
- b) if liquid has been spilled, or objects have fallen into the product.
- c) if the product has been exposed to rain or water.
- d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e) if the product has been dropped or damaged in any way.
- f) when the product exhibits a distinct change in performance _ this indicates a need for service.

21) Replacement Parts — When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

22) Safety Check — Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

23) Wall or Ceiling Mounting — The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24) Heat — The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION

- Do not expose this apparatus to drips or splashes.
- Do not place any objects filled with liquids, such as vases, on the apparatus.
- Do not install this apparatus in a confined space such as a book case or similar unit.
- The apparatus draws nominal non-operating power from the AC outlet with its POWER switch in the off position.
- The apparatus should be located close enough to the AC outlet so that you can easily grasp the power cord plug at any time.
- An apparatus with Class I construction shall be connected to an AC outlet with a protective grounding connection.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

- DO NOT REMOVE THE EXTERNAL CASES OR CABINETS TO EXPOSE THE ELECTRONICS. NO USER SERVICEABLE PARTS ARE WITHIN!
- IF YOU ARE EXPERIENCING PROBLEMS WITH THIS PRODUCT, CONTACT TEAC FOR A SERVICE REFERRAL. DO NOT USE THE PRODUCT UNTIL IT HAS BEEN REPAIRED.
- USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

For U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the equipment and/or the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications to this equipments not expressly approved by TEAC CORPORATION for compliance will void the user's warranty.

This product has been designed and manufactured according to FDA regulations "title 21, CFR, chapter 1, subchapter J, based on the Radiation Control for Health and Safety Act of 1968", and is classified as class 1 laser product. There is not hazardous invisible laser radiation during operation because invisible laser radiation emitted inside of this product is completely confined in the protective housings.

The label required in this regulation is shown ①.

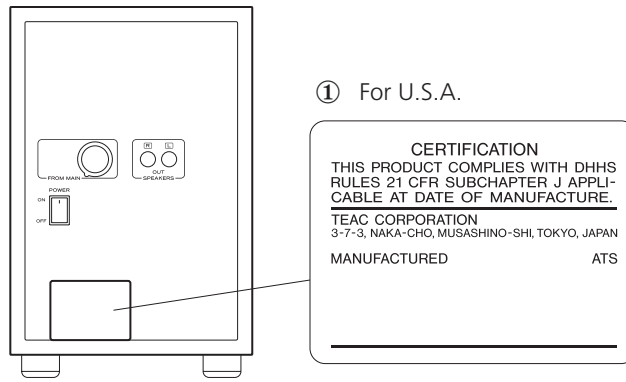

Rear panel of the Subwoofer

Optical pickup:

- Type : SF-P200Z
- Manufacturer : SANYO Electric Co., Ltd
- Laser output : Less than 0.5 mW on the objective lens
- Wavelength : 765 - 815 nm

For CANADA

AC POWER CORD CONNECTION

CAUTION:

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Pour le CANADA

CORDE DE CONNEXION CA

ATTENTION:

POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

Contents

Thank you for choosing TEAC. Read this manual carefully to get the best performance from this unit.

Before Using the Unit	4
Discs	5
Connections	6
Unit Functions.	8
Wall Mounting	10
Remote Control Unit.	10
Getting started	11
Basic Operation.	12
Listening to iPod	14
Listening to CD	16
Repeat Playback (CD)	17
Shuffle Playback (CD)	18
Programmed Playback (CD only)	18
Listening to an External Source	20
Listening to the Radio	21
Preset Tuning	22
Setting the Clock	23
Setting the Timer	24
Troubleshooting	26
Specifications	27

Before Using the Unit

Read this before operation

- As the unit may become warm during operation, always leave sufficient space around the unit for ventilation. The ventilation holes should not be covered. Make sure there is at least 5 cm of space on each side of the unit. Do NOT place anything on top of the unit.
- The voltage supplied to the unit should match the voltage as printed on the rear panel. If you are in any doubt regarding this matter, consult an electrician.
- Choose the installation location of your unit carefully. Avoid placing it in direct sunlight or close to a source of heat. Avoid locations subject to vibrations and excessive dust, heat, cold or moisture.
- Do not place the unit on any other electronic components.
- Do not open the cabinet as this might result in damage to the circuitry or electrical shock. If a foreign object should fall into the unit, contact your dealer or service company as soon as possible.
- When removing the power plug from a wall outlet, always pull directly on the plug. Do not pull on the line cord.
- To keep the laser pickup clean, do not touch it and always close the CD door after each use.
- Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry, lint-free cloth.
- Keep this manual in a safe place for future reference.

CAUTION: DO NOT MOVE THE UNIT DURING PLAYBACK

During playback, the disc rotates at high speeds. Do NOT lift or move the unit during playback. Doing so may damage the disc or the unit.

WHEN MOVING THIS UNIT

When changing places of installation or packing the unit for moving, be sure to remove the disc. Moving this unit with the disc loaded may result in malfunction or other damage.

Discs which can be played on this unit:

 
- Conventional audio CDs bearing the COMPACT DISC DIGITAL AUDIO logo on the label:



- Properly finalized CD-R and CD-RW discs

Note:

- Depending on the quality of the disc and/or the condition of the recording, some CD-R/CD-RW discs may not be playable.
- Copy-protected discs and other discs that do not conform to the CD standard may not play back correctly in this player. If you use such discs in this unit, TEAC Corporation and its subsidiaries cannot be responsible for any consequences or guarantee the quality of reproduction. If you experience problems with such non-standard discs, you should contact the producers of the disc.
- Always place the disc on the disc tray with the label side up. (Compact discs can be played or recorded only on one side.)
- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.



How to remove the disc



 
How to hold the disc

- Should the disc become dirty, wipe the surface from the center hole outward towards the outer edge with a soft, dry, lint-free cloth:



- Never use chemicals such as record (LP) sprays, antistatic sprays or fluids, benzine or thinner to clean the discs. Such chemicals will do irreparable damage to the disc's plastic surface.
- Discs should be returned to their cases after each use to avoid dust and scratches that may eventually cause your disc to skip.
- Do not expose discs to direct sunlight, high humidity, or high temperatures for extended periods. Long exposure to high temperatures will warp the disc.
- Do not play any disc that is warped, scratched, deformed or damaged. Playing such discs may cause irreparable harm to the playback mechanism.

- CD-R and CD-RW discs are more sensitive to the effects of heat and ultraviolet rays than ordinary CDs. It is important that they are not stored in a location with direct sunlight and keep your discs away from sources of heat such as radiators or heat-generating electrical devices.
- Printable discs aren't recommended because the label side might be sticky (or contain glue), which will damage the unit.
- Do not stick papers or protective sheets on the discs and do not use any protective coating spray.
- Use a soft oil-based felt-tipped pen to write information on the label side of a disc. Never use a ball-point or hard-tipped pen, as this may cause damage to the recorded side of the disc.
- Never use a stabilizer. Using commercially available CD stabilizers with this unit will damage the mechanisms and cause them to malfunction.
- Do not use irregular shape CDs (octagonal, heart shaped, business card size, etc.). CDs of this sort can damage the unit:




- If you are in any doubt as to the care and handling of any disc, read the precautions supplied with the disc, or contact the disc manufacturer directly.

Connections

CAUTION

- Turn off the power of all the equipment before making connections.
- Read instructions of each component you intend to use with this unit.
- Be sure to insert each plug securely. To prevent hum and noise, do not bundle the connection cords with the power cord.

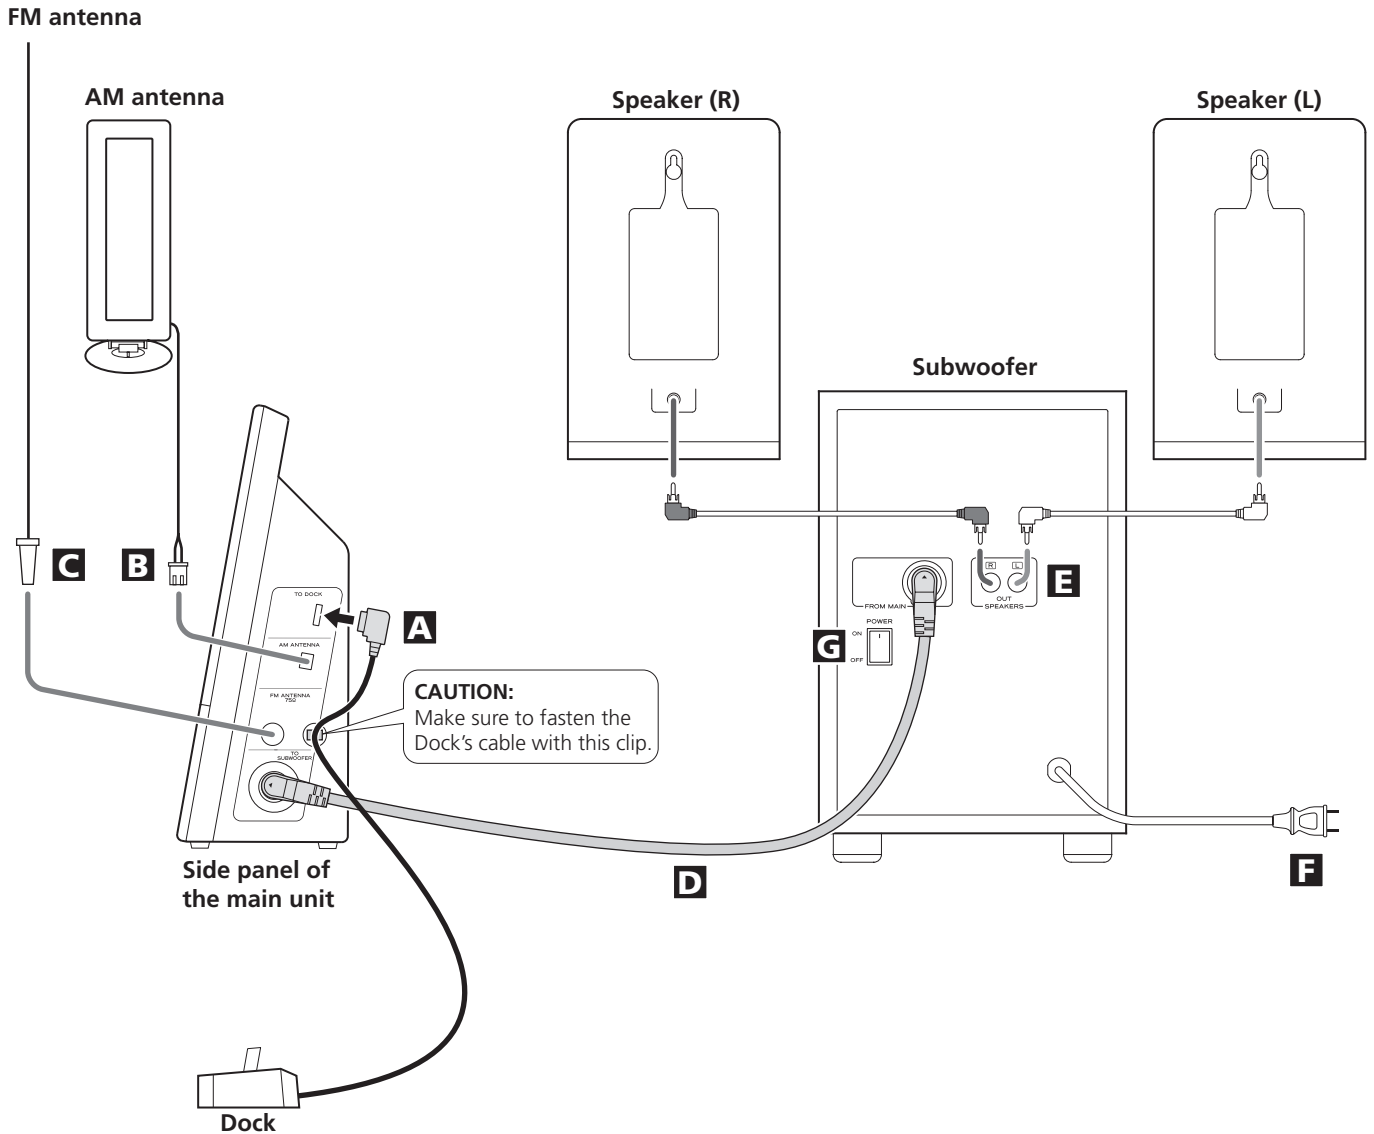

A iPod Dock


Connect the Dock to the "TO DOCK" port, and fasten the cable with the clip.

- Securely insert the plug in the direction as figured.

B AM loop antenna

Position the antenna for the best sound.

If you want, you can hook the AM antenna on a wall as shown below:

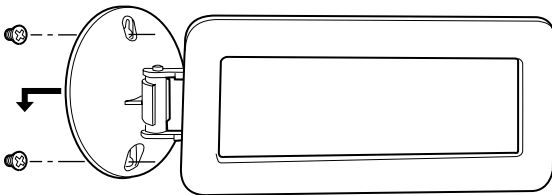


C FM antenna

While in FM mode, tune in an FM station and extend the lead to find the best position for reception. This antenna may need to be repositioned if you move your unit to a new location.

FM Outdoor Antenna

In an area where FM signals are weak, it will be necessary to use a 75-ohm unbalanced-type outdoor FM antenna using an optional (not supplied) matching transformer connected to an external antenna. Generally, a 3-element antenna will be sufficient; if you live in an area where the FM signals are particularly weak, it may be necessary to use one with 5 or more elements.

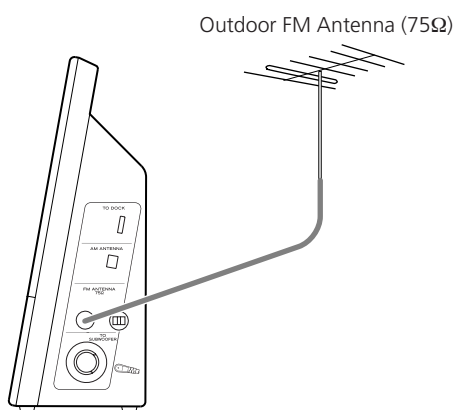

D Subwoofer

Connect the "TO SUBWOOFER" and the "FROM MAIN" sockets using the supplied cable.

- Connect the Connectors in the direction as figured.

E SPEAKERS

Connect the left speaker's plug to L, and the right speaker's plug to R.

- If not using the included speakers, make sure the speakers you use are at least 4 Ω impedance.
- Do not connect anything other than speakers to these terminals.

F AC Power Cord

Be sure to connect the power cord to an AC outlet which supplies the correct voltage.

Hold the power plug when plugging or unplugging the power cord. Never pull or yank on the power cord.

G POWER switch of the Subwoofer

Use this switch to turn the system on or off.


The equipment draws a nominal amount of power from the AC outlet even with its POWER switch in the OFF position.

- If the power switch of the subwoofer turned off, the settings kept in memory (clock, preset stations, timer setting) will be erased. To avoid losing your settings, it is advisable to keep this switch ON when not in use.



H AUX IN

You can connect a portable audio player to this jack. Connect the LINE OUT or PHONES jack (audio output jack) of the player using the supplied stereo mini plug cable.

When using the PHONES jack of your mini player, you must adjust the volume of the mini-player or you may hear no sound from your CD-X10i.

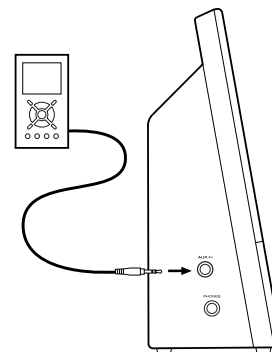

Unit Functions

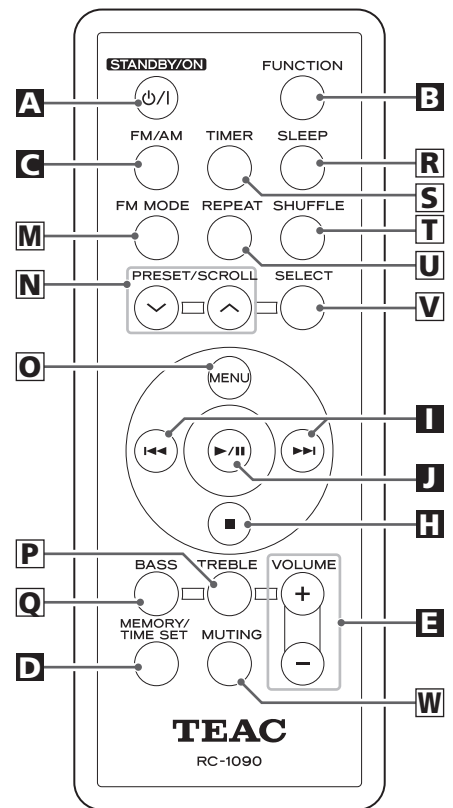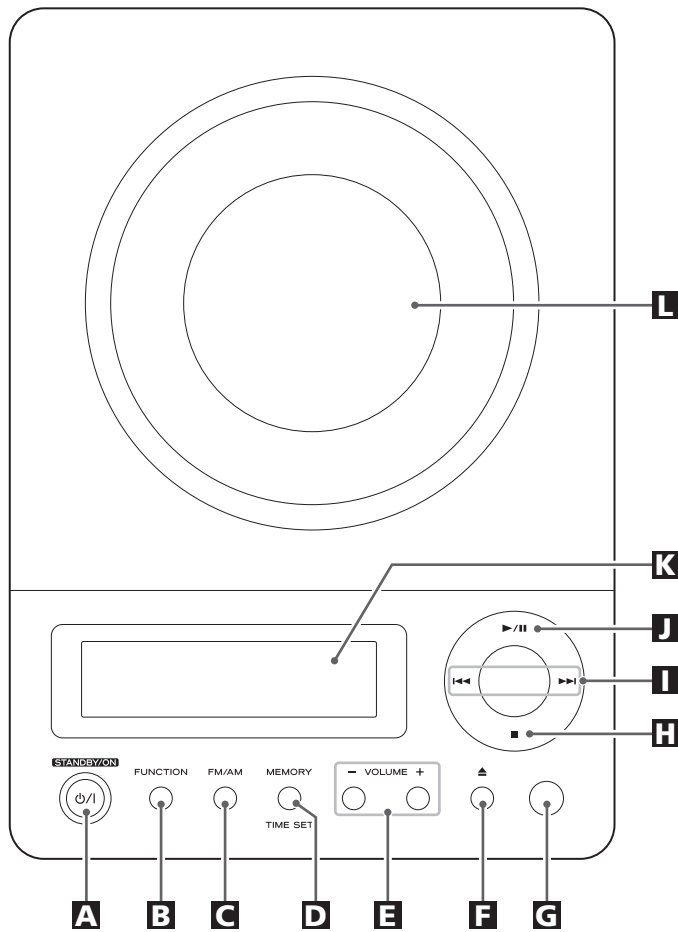

A STANDBY/ON

Use this button to turn the unit on or standby.
The main unit is powered via the subwoofer. You need to first turn on the subwoofer.

When the main unit is in the standby mode, the power indicator of the Subwoofer is orange.

When the unit is turned on, the indicator turns blue.

The equipment draws a nominal amount of power from the AC outlet even with its STANDBY/ON switch in the STANDBY position.

B FUNCTION

Use this button to select a source (iPod, CD, TUNER or AUX).

C FM/AM

Use this button to select AM or FM.

D MEMORY/TIME SET

In CD mode, use this button to program tracks.

In TUNER mode, use this button to preset stations.

This button is also used for clock adjustment.

E VOLUME

Press the up “+” or the down “-” button to adjust the volume level.

F OPEN/CLOSE

In CD mode, use this button to open and close the CD door.

G Remote Sensor

When operating the remote control unit, point it towards here.

H STOP (■)

In CD mode, use this button to stop playback.

- This button doesn't work in iPod mode.

I SKIP (◀◀ / ▶▶) / TUNING

In iPod or CD mode, momentarily press this button to skip tracks. Hold down this button to search for a part of a track.

In TUNER mode, momentarily press this button to tune in stations.

In Standby mode, these buttons are used to set or adjust the clock and the timer.

J PLAY/PAUSE (▶ / II)

In iPod or CD mode, use this button to start or pause playback.

K Display

L CD door

M FM MODE

In FM TUNER mode, use this button to select stereo or monaural.

N PRESET/SCROLL

In TUNER mode, use these buttons to select a preset station.

In iPod mode, use these buttons to scroll up and down the menu.

O MENU

This button is equivalent to the MENU button on your iPod.

In iPod mode, use this button to go back to the previous menu.

P TREBLE

Use this button and the VOLUME buttons to adjust the level of high frequency sound range.

Q BASS

Use this button and the VOLUME buttons to adjust the level of low frequency sound range.

R SLEEP

Use this button to set sleep timer.

S TIMER

Use this button together with the SKIP buttons to set the timer.

T SHUFFLE

In iPod or CD mode, use this button to turn on and off the shuffle playback.

U REPEAT

In iPod or CD mode, use this button to set the repeat function.

V SELECT

This button is equivalent to the Center button on your iPod.

In iPod mode, use this button to confirm selection in menus.

W MUTING

Use this button to mute the sound.

Note:

To simplify explanations, instructions in this manual refer to the names of the buttons and controls on the front panel only. Associated controls on the remote control will also operate similarly.

Wall Mounting

You can mount the main unit and/or the left and right speakers on a wall.

Precautions

- Pay attention to the length of cables.
iPod Dock: 39" (1m)
Speaker and Subwoofer cables: 118" (3m)
Do not attempt to mount the main unit and the speakers too far from the subwoofer and the Dock.
- Drill holes into solid wall support, such as wooden frame or concrete wall.
- TEAC supplies these brackets as a convenience to the product owner. Consult your local building codes and exercise all necessary caution when mounting these brackets. If you are unsure how to use the supplied brackets, consult with a local tradesmen or building supply expert.


To hook on the wall

- 1** Use the supplied template to determine drilling points.
- 2** Secure the brackets on the wall using the supplied screws.
 - As a convenience, a set of tapered plastic anchors is supplied. If you chose to use these anchors, drill a pilot hole using a 6mm drill bit then tap the anchor into the pilot hole. Only use these anchors if they are appropriate for the materials onto which the unit is to be mounted. Consult your local hardware store if you are uncertain.

Note:

Before going on, make connections between the main unit and the speakers by referring to page 9.

- 3** Hang the main unit and/or the speakers to the mounting tabs.

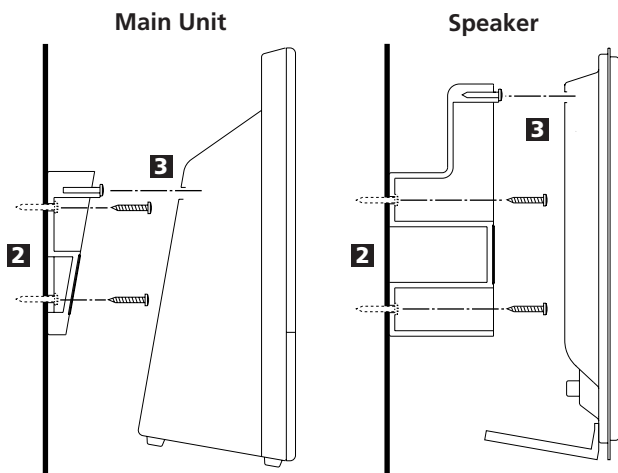


Remote Control Unit

The provided Remote Control Unit allows the unit to be operated from a distance.

When operating the remote control unit, point it towards the remote sensor on the front panel of the unit.

- Even if the remote control unit is operated within the effective range, remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the remote control unit is operated near other products which generate infrared rays, or if other remote control devices using infrared rays are used near the unit, it may operate incorrectly. Conversely, the other products may also operate incorrectly.

Battery Installation

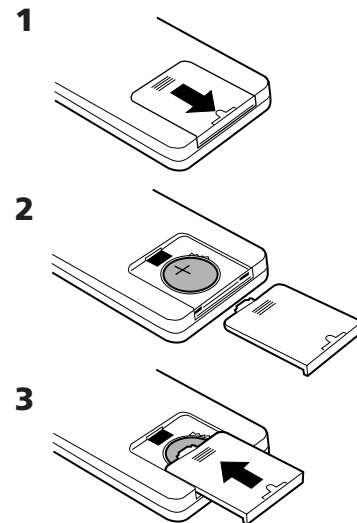

1. Remove the battery compartment cover.
2. Put in the lithium battery (CR2032, 3V).
3. Close the cover.

Battery Replacement

If the distance required between the remote control unit and main unit decreases, the battery is exhausted. In this case, replace the battery with a new one.

Precautions concerning batteries

Do not heat or disassemble batteries and never dispose of old batteries by throwing them in a fire.

Getting started

The CD-X10i comes mounted with an adapter for iPod with color display (40GB, 60GB), "60GB (color) + Photo 40GB/60GB". To play your iPod through the CD-X10i, you have first to check if the factory mounted adapter fits your model of iPod. If it does not, you have to replace it with a correct one, as explained below.

1. Remove the adapter from the Dock of the CD-X10i.

Hold the left and right sides of the adapter and gently pull it up.

2. Choose the Dock adapter that fits your iPod mobile digital device.

"Video 30GB" for iPod with video (30 GB).

"Video 60GB" for iPod with video (60 GB).

"nano" for iPod nano.

"mini" for iPod mini.

"20GB (color) + Photo 30GB" for iPod with color display (20GB, 30GB, U2 Special Edition).

"60GB (color) + Photo 40GB/60GB" for iPod with color display (40GB, 60GB).


"20GB + U2" for iPod with Click Wheel (20 GB, U2 Special Edition).

"40GB" for iPod with Click Wheel (40 GB).

- Use a commercially available adapter to play iPod with dock connector (with four buttons under the display).

3. Insert the adapter into the Dock of the CD-X10i.

Fit the front edge of the adapter into the Dock, and then press the back edge of the adapter onto the Dock until a slight "click" is heard indicating the adapter is inserted correctly.

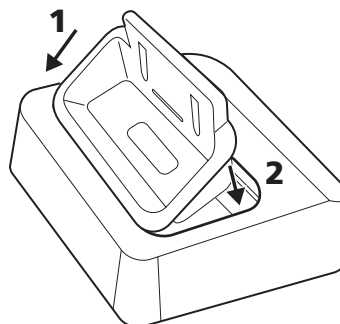

- When you need to remove the adapter, hold the left and right sides of the adapter and gently pull it up.
- When you don't use the Dock, use the supplied cover for the Dock to prevent dust from settling on the Dock.

Compatible iPod Software


In case your iPod will not work with the CD-X10i or with the remote control unit, software update may solve the problem. Visit the Apple website and download the latest iPod Software.

<http://www.apple.com/ipod/download/>


iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

Basic Operation

(Rear panel of the subwoofer)

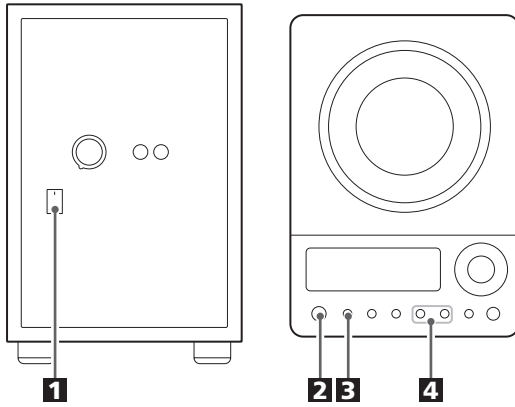

1 Turn on the subwoofer.

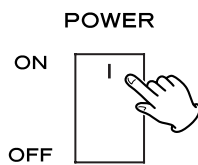


2 Press the STANDBY/ON switch on the main unit.



The ring surrounding the STANDBY/ON button lights when the unit is on.


3 Select a source by pressing the FUNCTION button.

 FUNCTION




- To listen to an external source connected to the AUX IN jack, select AUX.
- In iPod and AUX modes, the display always shows the clock and the volume level.
- If you press and hold the TIME SET button for 3 seconds in CD or TUNER mode, the clock will be displayed for a few seconds.

 4 Play the source and adjust the volume using the VOLUME buttons.



Headphones

For private listening, first reduce the volume level to minimum. Then insert the plug from your headphones into the PHONES jack, and adjust the volume using the VOLUME buttons. The sound from the speakers is cut off while the headphone jack is inserted.

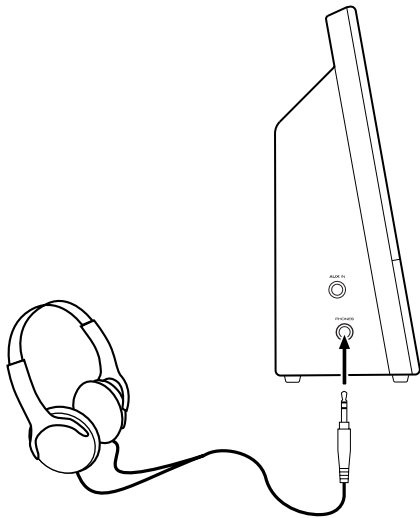


CAUTION

Always lower the volume level prior to plugging in your headphones. TO AVOID DAMAGING YOUR HEARING - Do not place your headphones on your head until after you have plugged them in.

Muting

To mute the sound temporarily, press the MUTING button. Press the MUTING button again to restore the sound.

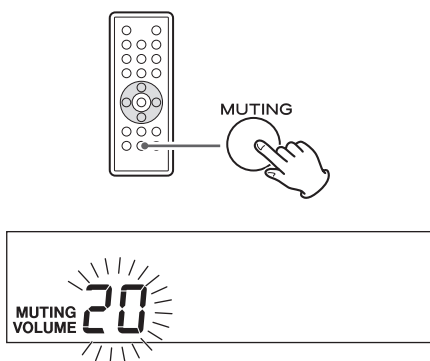


- The MUTING indicator lights and the volume level blinks on the display to indicate that the muting is engaged.
- If you change the volume or source during the muting, the muting will be canceled.

Sleep Timer

You can set a sleep timer so the unit turns itself off after a specified time.

Press the SLEEP button repeatedly until desired time appears on the display.

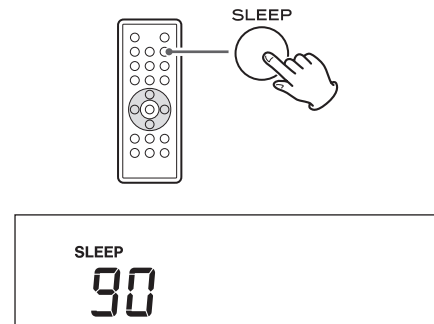

SLEEP 90, 60 or 30:


The power will be switched off 90, 60 or 30 minutes later.

SLEEP 00:

The sleep timer is off.

- If you want to check the remaining time, press the SLEEP button once. The remaining time will be displayed for a few seconds.

Tone Control

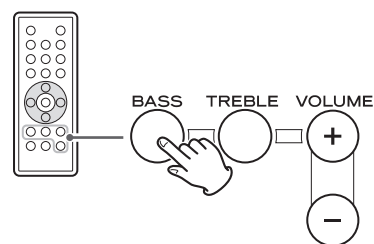

1. Press the BASS or TREBLE button.

To adjust the level of low frequency sound range, press the bass button.


To adjust the level of high frequency sound range, press the treble button.

2. Within 5 seconds, press the VOLUME buttons to change the setting.



The level can be adjusted from -5 to +5.


Insert the iPod into the Dock of the CD-X10i.

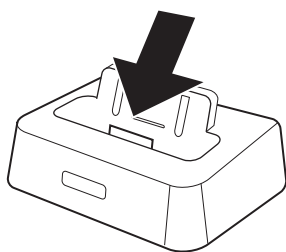

Then press the Play/Pause button (▶/||) on the iPod. The CD-X10i will automatically turn on and start playback from the iPod's music list.


- If the iPod that is in playback mode is inserted into the Dock, the CD-X10i will automatically turn on and start playback of the iPod.
- Make sure to use an appropriate Dock adapter (see "Getting started" on page 11).
- The battery of the iPod is recharged to the full whenever the iPod is docked and the CD-X10i is connected to the AC power supply.
- The TEAC logo on the Dock lights when the unit is on.
- When headphones are plugged into the iPod, sound comes from both the speakers of the CD-X10i and the headphones.
- The Stop button (■) doesn't work in iPod mode.

To select iPod mode

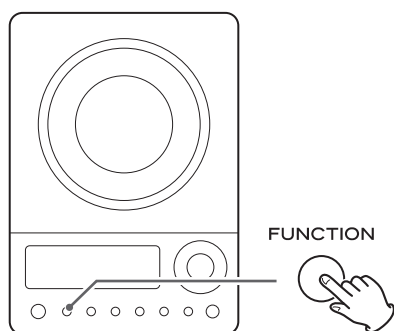

Select "iPod" using the FUNCTION button. If an iPod is already docked, playback will start.

In iPod mode, press the Play/Pause button (▶/||) to start or pause playback.

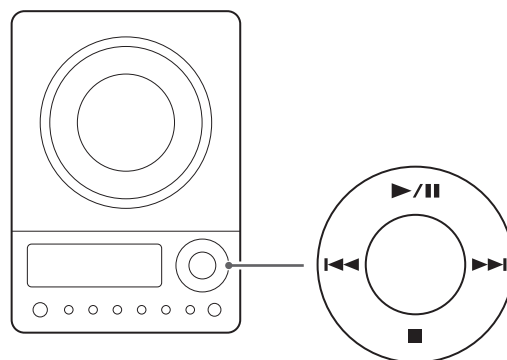

To suspend playback temporarily (pause mode)

Press the Play/Pause button (▶/||) during playback. Playback stops at the current position. To resume playback, press the Play/Pause button (▶/||) again.

To skip to the next or a previous track


During playback, press the skip button (I◀◀ or ▶▶I) repeatedly until the desired track is found. The selected track will be played from the beginning.

- When the I◀◀ button is pressed during playback, the track being played will be played from the beginning. To return to the beginning of the previous track, press the I◀◀ button twice.

Search for a part of a track


During playback, hold down the skip button (I◀◀ or ▶▶I) for more than 2 seconds and release it when the part you want to listen to is found.

To go back to the previous menu

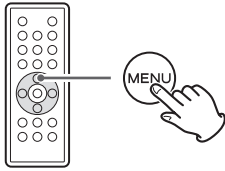


Press the MENU button to go back to the previous menu.
This button is equivalent to the MENU button on your iPod.

Select the menu item

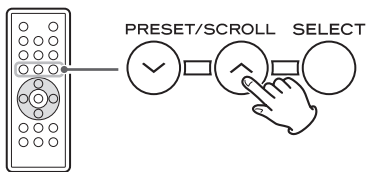


Press the PRESET/SCROLL buttons (∨/∧) to scroll to the menu item you want, and then press the SELECT button.

To activate the shuffle mode

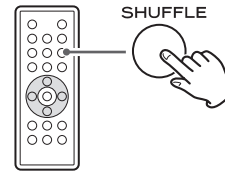


During playback, press the SHUFFLE button to change the shuffle mode.

Each time the SHUFFLE button is pressed, the SHUFFLE setting of iPod is changed as follows:

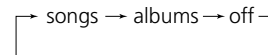


If iPod is set to shuffle songs or albums, the Shuffle icon (∞) appears in the iPod's display.

To activate the repeat mode

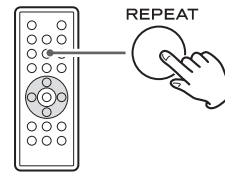


During playback, press the REPEAT button to change the repeat mode.

 Each time the REPEAT button is pressed, the REPEAT setting of iPod is changed as follows:



If the iPod is set to repeat one song, the Repeat One icon (🔁) appears in the iPod's display.

If the iPod is set to repeat all songs, the Repeat icon (🔁) appears in the iPod's display.

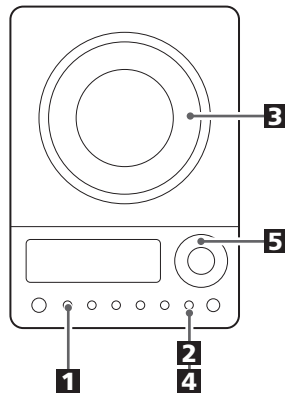

1 Press the **FUNCTION** button to select "CD".




2 Press the **OPEN/CLOSE** button.



3 Put a disc onto the center spindle of the player with the label side facing you.

Press the disc onto the spindle until a slight "click" is heard indicating the disc is mounted correctly.

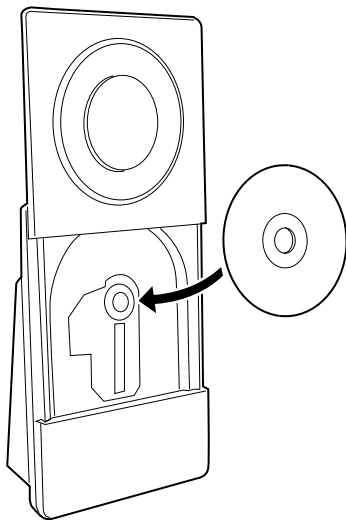


- Never put more than one disc in the mechanism at a time.
- Ensure that the disc is correctly mounted on the spindle and locked in place.



4 Press the **OPEN/CLOSE** button to close the CD door.



- It takes a few seconds for the unit to load the disc.
- When no disc is loaded in the CD player, "nocd" is displayed.

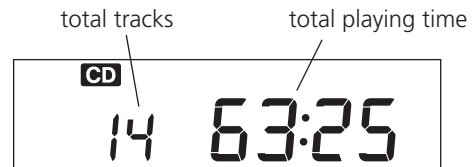


5 Press the **Play/Pause** button (▶/||) to start playback.

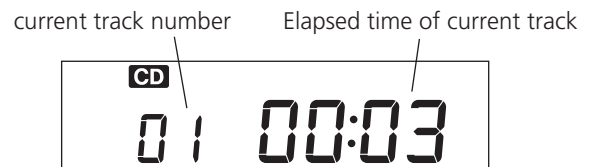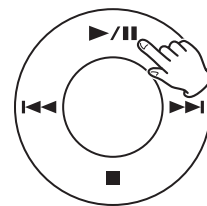

Playback starts from the first track of the disc.

- When the playback of all the tracks has finished, the unit stops automatically.

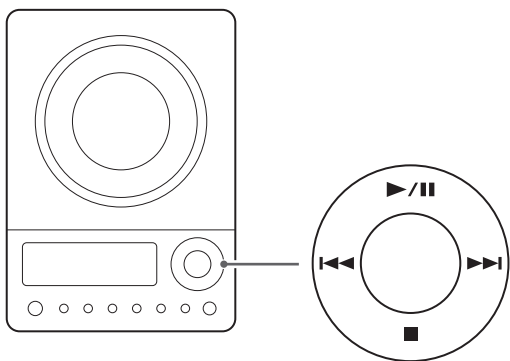

To suspend playback temporarily (pause mode)

Press the Play/Pause button (▶/||) during playback. Playback stops at the current position. To resume playback, press the Play/Pause button (▶/||) again.

To stop playback

Press the Stop button (■) to stop playback.

To skip to the next or a previous track

During playback, press the skip button (◀◀ or ▶▶) repeatedly until the desired track is found. The selected track will be played from the beginning.


In the stop mode, press the skip button (◀◀ or ▶▶) repeatedly until the track you want to listen to is found. Press the Play/Pause button (▶/||) to start playback from the selected track.

- When the ◀◀ button is pressed during playback, the track being played will be played from the beginning. To return to the beginning of the previous track, press the ◀◀ button twice.
- During programmed playback, the next or previous track in the program is played.


Search for a part of a track

During playback, hold down the skip button (◀◀ or ▶▶) for more than 2 seconds and release it when the part you want to listen to is found.

Repeat Playback (CD)

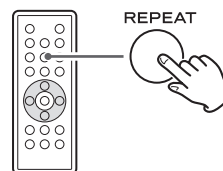

 Every time the REPEAT button is pressed, the mode is changed as follows:



- If one of the following buttons is pressed, repeat mode will be canceled:

STOP, FUNCTION, FM/AM, OPEN/CLOSE, STANDBY/ON

Repeat one track

Press the REPEAT button once during playback. "REPEAT" lights.

The track being played will be played repeatedly. If you press the Skip button (◀◀ or ▶▶) and select another track, the track you selected will be played repeatedly.

It is also possible to select a track to be repeated in the stop mode. Press the REPEAT button, select a track using the Skip button (◀◀ or ▶▶), and then press the Play/Pause button (▶/||) to start playback.


Repeat all the tracks

All the tracks will be played repeatedly.

Press the REPEAT button twice. "REPEAT ALL" lights.

During programmed playback, programmed tracks will be played repeatedly.

Shuffle Playback (CD)

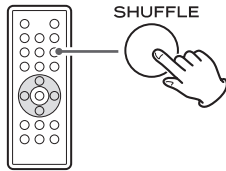


The tracks can be played randomly. Press the SHUFFLE button during playback or when in the stop mode. The SHUFFLE indicator appears on the display.

- If you press the ►► button during shuffle playback, next track will be randomly selected and played. If you press the ◀◀ button, the currently played track will be played from the beginning. A track cannot be replayed during shuffle playback.
- Shuffle playback doesn't work during programmed playback and repeat 1 playback.
- If one of the following buttons is pressed, shuffle mode will be cancelled:

SHUFFLE, STOP, FUNCTION, FM/AM, STANDBY/ON, OPEN/CLOSE

Programmed Playback (CD only)

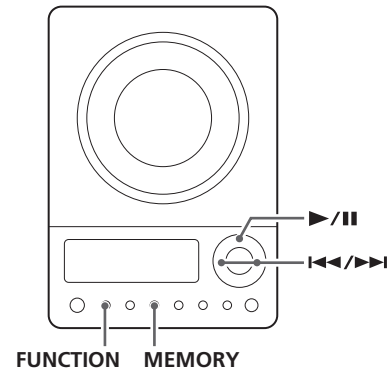

Up to 32 tracks can be programmed in the desired order.

- 1** If another source is selected, select "CD" using the FUNCTION button.

FUNCTION



- 2** Press the MEMORY button.

 

MEMORY



The MEMORY indicator blinks on the display.

- To cancel the program mode, press the Stop button (■).


- 3** Press the Skip button (◀◀ or ▶▶) repeatedly to select a track, then press the MEMORY button.

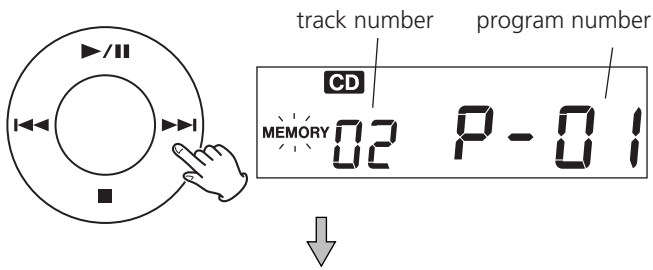

The track is programmed, and the next program number (P-02) is displayed.

- Repeat this step to program more tracks.
- You can program up to 32 tracks.

- 4** When the selection of track numbers is completed, press the Play/Pause button (▶/||) to start programmed playback.

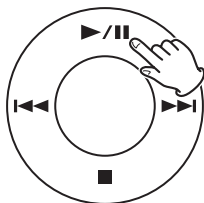

- When the playback of all the programmed tracks has finished, or if you press the Stop button (■), the MEMORY indicator will go off and the program mode will be cancelled. Still the program is retained in memory. You can return to the programmed playback by pressing the MEMORY button and the Play/Pause button (▶/||).
- Shuffle function doesn't work during programmed playback.

To check the programmed order




In the stop mode, press the MEMORY button repeatedly. The track number and program number will be shown on the display.

To add a track to the end of the program


In the stop mode, press the MEMORY button repeatedly until "--" appears on the display. Select a track number using the Skip button (◀◀ or ▶▶) and then press the MEMORY button. The track is added to the end of the program.

To overwrite the program

In the stop mode, press the MEMORY button repeatedly until the program number to be changed appears on the display. Select a new track number using the Skip button (◀◀ or ▶▶) and then press the MEMORY button.

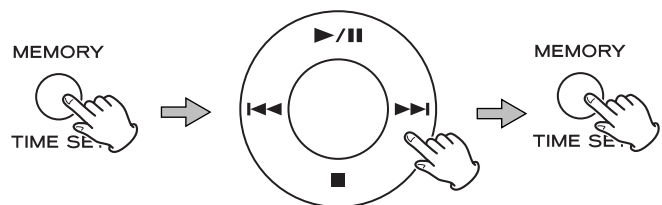


To clear program

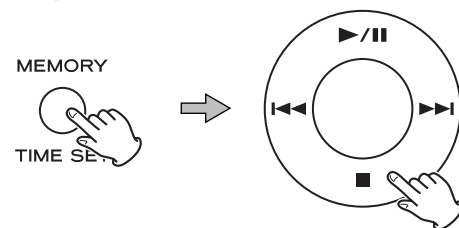


To clear the programmed contents, press the MEMORY and the STOP button (■) in the stop mode.

- If one of the following buttons is pressed, the programmed contents will also be cleared:
FUNCTION, FM/AM, STANDBY/ON
- If the unit is disconnected from the power supply, the programmed contents will be cleared.

Listening to an External Source

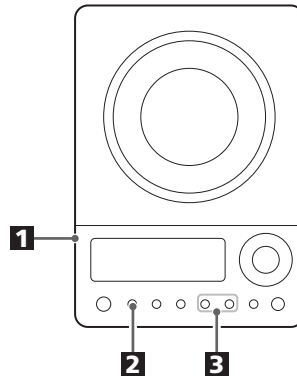


1 Connect the PHONES jack (audio output jack) of a portable audio player to the AUX IN jack of the CD-X10i using the supplied stereo mini plug cable.

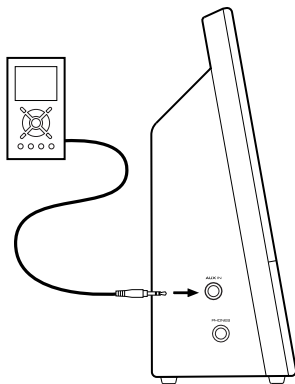


You can use this way of connection to listen to an iPod that has no Dock connector or that has, but an appropriate Dock adapter is not available.

 2 Press the FUNCTION button to select "AUX".




 3 Play the source, and adjust the volume using the VOLUME buttons of the CD-X10i and of the audio player.



When using the PHONES jack of your mini player, you must adjust the volume of the mini-player or you may hear no sound from your CD-X10i.

- Turning the volume of the mini player up too high may cause the sound from your CD-X10i to be distorted. If this is the case, reduce the volume of the mini player until the distortion stops and then adjust the volume level of the CD-X10i to a comfortable listening level

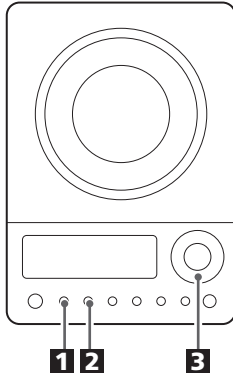

1 Press the FUNCTION button to select "TUNER".




- You can also use the FM/AM button to select "TUNER".

2 Press the FM/AM button to select a band.



3 Select the station you want to listen to (auto selection).

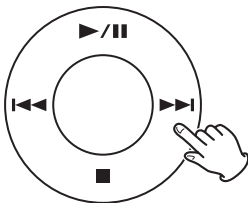

Hold down the Skip button (I◀◀ or ▶▶I) until the frequency display begins to change. When a station is tuned in, the tuning process will stop automatically.


- To stop the auto selection, press the Skip button (I◀◀ or ▶▶I).

Selecting stations which cannot be tuned automatically (manual selection)

When the Skip button (I◀◀ or ▶▶I) is pressed momentarily, the frequency changes by a fixed step. Press the Skip button (I◀◀ or ▶▶I) repeatedly until the station you want to listen to is found.

FM MODE button

Pressing this button alternates between STEREO mode and MONO mode.

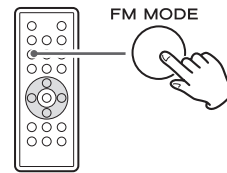

STEREO

FM stereo broadcasts are received in stereo and the "STEREO" indicator lights in the display.

- If the sound is distorted and the "STEREO" indicator flashes, the signal is not strong enough for good stereo reception. In this case, change to MONO mode.

MONO

To compensate for weak FM stereo reception, select this mode. Reception will now be forced to monaural, reducing unwanted noise.

If the reception is poor

For the best reception, rotate the FM or the AM antenna until you get stations clearly.

 

Preset Tuning

You can program 10 FM & 10 AM channel presets.



If the power switch of the subwoofer turned off, the settings kept in memory (clock, preset stations, timer setting) will be erased.

1 Tune in a station you want to listen to (see steps **1** to **3** of page 21).


2 Press the MEMORY button.

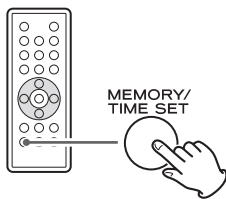

3 Within 5 seconds, select a preset channel to store the station using the PRESET buttons.

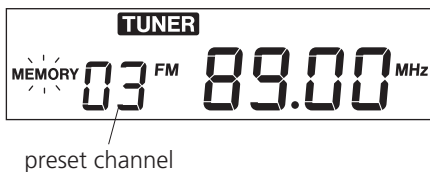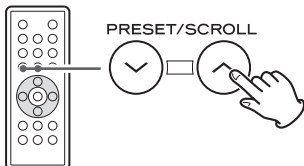


4 Within 5 seconds, press the MEMORY button.

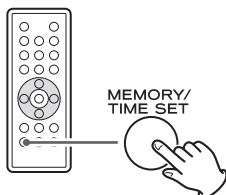


The station is stored and the MEMORY indicator goes off. To store more stations, repeat steps **1** to **4**.

How to select preset stations


1 To select FM or AM, press the FM/AM button.

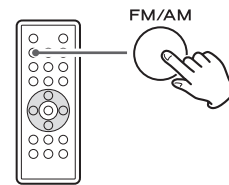

2 Press the PRESET button repeatedly until the desired preset station is found.

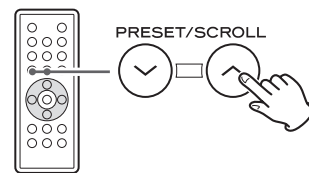

Setting the Clock

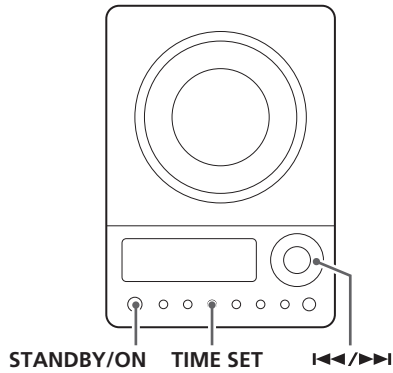

If the power switch of the subwoofer turned off, the settings kept in memory (clock, preset stations, timer setting) will be erased.

- 1** If the unit is on, press the STANDBY/ON switch to turn it standby



- 2** Press and hold the TIME SET button for more than 3 seconds and release it when "12H" or "24H" appears on the display.



"12" or "24" blinks. If you want to change the hour mode, press the I◀◀ or ▶▶I button.





- If you leave the unit idle for 7 seconds, the time setting mode will be cancelled.

- 3** Press the TIME SET button once more.

The "hour" value blinks.

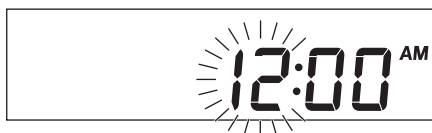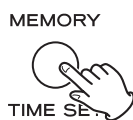


- 4** Press the SKIP button (I◀◀/▶▶I) to set the current hour.

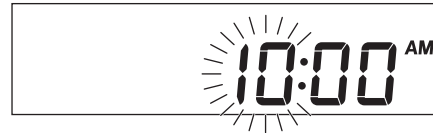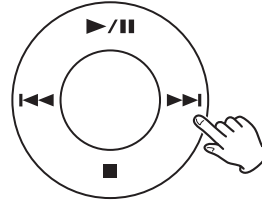


- 5** Press the TIME SET button.

 The "minute" value blinks.



- 6** Press the SKIP button (I◀◀/▶▶I) to set the current minute.

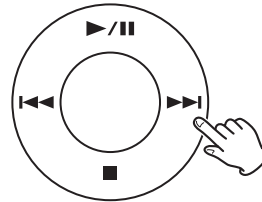


- 7** Press the TIME SET button.

The clock starts.



Setting the Timer

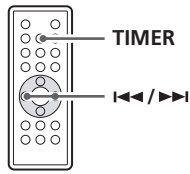

- The unit can be programmed to turn on and off at a specified time.
- Adjust the clock before setting the timer.

1 Press and hold the **TIMER** button for more than 2 seconds and release it when the "hour" value starts blinking.



"TIMER" and "ON" indicators appear on the display.

- When no button is pressed for 7 seconds, the timer setting mode will be cancelled.

2 Press the **SKIP** button (◀▶) to set the start time (hour), and then press the **TIMER** button.



The "minutes" value starts flashing.

3 Press the **SKIP** button (◀▶) to set the start time (minute), and then press the **TIMER** button.



 
"TIMER" and "OFF" indicators appear on the display and the "hour" value starts flashing.

4 Press the **SKIP** button (◀▶) to set the stop time (hour), and then press the **TIMER** button.





The "minutes" value starts flashing.

5 Press the **SKIP** button (◀▶) to set the stop time (minute), and then press the **TIMER** button.




6 Press the **SKIP** button (◀▶) to select a source (iPod, CD or TUNER), and then press the **TIMER** button.

  - You cannot select "AUX".



- 7** Press the SKIP button (I◀◀/▶▶I) to set the volume, and then press the TIMER button.

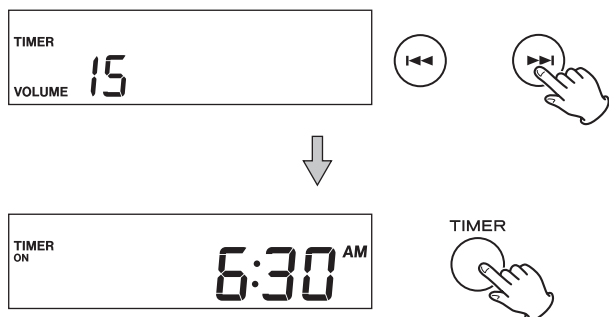

Setting the timer is now completed and the timer is turned on.

Your timer setting is displayed one by one, and the TIMER indicator lights on the display.


8 Prepare the source.

If you selected "iPod" in step **6**, insert an iPod.

If you selected "CD" in step **6**, set a disc.

If you selected "TUNER" in step **6**, tune in a station.

- 9** Press the STANDBY/ON button to turn the unit off (standby).

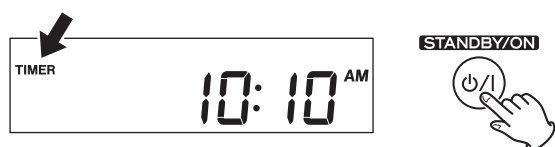


The clock and the TIMER indicator are displayed.
The unit will turn on and off at the specified time every day.

Don't forget to turn the unit off (standby), or the timer won't work.

- Playback volume will gradually increase up to your set volume when the unit is turned on by timer.
- If the source is set to "iPod" but no iPod is set, the unit will turn on into TUNER mode.
- If the source is set to "CD" but no disc is set, the unit will turn on into TUNER mode.
- When the source is set to "TUNER" and the unit turns on, it will tune in to the station you selected last time.

If the power switch of the subwoofer turned off, the settings kept in memory (clock, preset stations, timer setting) will be erased.

To turn on or off the timer

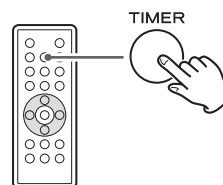

When you don't use the timer, press the TIMER button to turn it off. (The TIMER indicator disappears from the display.) Press the TIMER button again to turn it on.

- When the timer is turned on, the timer settings are displayed one by one, and the TIMER indicator lights on the display.

If you have problems with your system, look through this chart and see if you can solve the problem yourself before calling your dealer or TEAC service center.

General

No power

- Check the connection to the AC power supply. Check and make sure the AC source is not a switched outlet and that, if it is, the switch is turned on. Make sure there is power to the AC outlet by plugging another item such as a lamp or fan into the outlet.

No sound from speakers.

- Select the source by pressing the FUNCTION button.
- Check the connection to the speakers.
- Adjust the volume.
- Pull out the headphone's plug from the PHONES jack.
- If the VOLUME level indicator is blinking, press the MUTING button.

The sound is noisy.

- The unit is too close to a TV or similar appliances. Install the unit apart from them, or turn them off.

Remote control doesn't work.

- Press the STANDBY/ON switch to turn the unit on.
- When the battery has run out, put in a new one.
- Use remote control unit within the range (16 ft.) and point at the front panel.
- Clear obstacles between the remote control unit and the main unit.
- If a strong light is near the unit, turn it off.

iPod Player

Cannot insert the iPod.

- Check the dock adapter.
- Remove dust or obstacles from the Dock connector of the CD-X10i and the iPod, and insert the iPod again.

Will not play.

- Remove the iPod from the dock, wait a few seconds, and insert it again.
- Software update may solve the problem. Visit the Apple website and download the latest iPod Software.

CD Player

Will not play.

- Load a disc with the playback side facing away.

- If the disc is dirty, clean the surface of the disc.
- A blank disc has been loaded. Load a prerecorded disc.
- Depending on the disc, etc. it may not be possible to play back CD-R/RW discs. Try again with another disc.
- You cannot play back unfinalized CD-R/RW discs. Finalize such a disc in a CD recorder and try again.

Sound skips.

- Place the unit on a stable place to avoid vibration and shock.
- If the disc is dirty, clean the surface of the disc.
- Don't use scratched, damaged or warped discs.

Tuner

Cannot listen to any station, or signal is too weak.

- Tune in the station properly.
- Rotate the FM or AM antenna for the best reception position.

Though the broadcast is stereo, it sounds monaural.

- Press the FM MODE button.

If normal operation cannot be recovered, unplug the power cord from the outlet and plug it again.

If the power switch of the subwoofer turned off, the settings kept in memory (clock, preset stations, timer setting) will be erased.

Beware of condensation

When the unit (or a disc) is moved from a cold to a warm environment, or used after a sudden temperature change, there is a danger of condensation; vapor in the air could condense on the internal mechanism, making correct operation impossible. To prevent this, or if this occurs, leave the unit turned on for one or two hours. Then the unit will stabilize at the temperature of its surroundings.

Maintenance

If the surface of the unit gets dirty, wipe with a soft cloth or use diluted mild liquid soap. Never spray liquid directly on this unit. Apply your cleaner to your cleaning cloth and wipe gently. Be sure to remove any excess completely. Do not use thinner, benzene or alcohol as they may damage the surface of the unit. Allow the surface of the unit to dry completely before using.

Specifications

AMPLIFIER section

Output Power (L+R)	5 W + 5 W
Output Power (Subwoofer)	15 W
Input Sensitivity	300 mV
Frequency Response	50 to 20,000 Hz

TUNER Section (FM)

Frequency Range	87.50 to 108.00 MHz
Sensitivity (S/N30dB)	20 dB μ V/m

TUNER Section (AM)

Frequency Range	520 to 1,710 kHz
Sensitivity (S/N20dB)	54 dB μ V/m

CD PLAYER Section

Frequency Response	20 to 20,000 Hz (\pm 1 dB)
Signal-to-Noise Ratio	55 dB
Wow and Flutter	Unmeasurable

SPEAKER

Type	Full range flat type
Impedance	4 ohms

SUBWOOFER

Impedance	8 ohms
---------------------	--------

GENERAL

Power Requirements	120 V AC, 60 Hz
Power Consumption	80 W

Dimension (W x H x D)

Main Unit	6 5/16" x 8 7/8" x 3 3/8"	(160 x 226 x 86 mm)
L & R Speakers	5 9/16" x 8 7/8" x 2 3/4"	(142 x 226 x 70 mm)
Subwoofer	6 5/16" x 9 5/8" x 13 3/16"	(160 x 245 x 335 mm)
Dock (without cable)	3 1/8" x 1 1/8" x 2 5/8"	(80 x 28 x 67 mm)

Weight

Main Unit	2 3/16 lbs (1 kg)
L & R Speakers	1 5/16 lbs (0.6 kg) each
Subwoofer	11 11/16 lbs (5.3 kg)
Dock	3/8 lbs (0.2 kg)

Standard Accessories

Remote Control Unit (RC-1090) x 1
Battery for Remote Control Unit x 1
Dock x 1
Dock adapter x 8 (adapter "60GB (color) + Photo 40GB/60GB" premounted)
Cover for the Dock x 1
Subwoofer Cable x 1
Speaker Cable x 2
FM Antenna x 1
AM Antenna x 1
Wall Mount Adapter x 3
Wall Mount Screw x 10
Tapered Plastic Wall Anchor x 10
Template for Wall Mounting x 1
Stereo mini plug cable x 1
Owner's Manual x 1
Quick Guide for Connection x 1
Warranty Card x 1

- Design and specifications are subject to change without notice.
- Weight and dimensions are approximate.
- Illustrations may differ slightly from production models.

TEAC

TEAC CORPORATION	3-7-3, Nakacho, Musashino-shi, Tokyo 180-8550, Japan Phone: (0422) 52-5081
TEAC AMERICA, INC.	7733 Telegraph Road, Montebello, California 90640 Phone: (323) 726-0303
TEAC CANADA LTD.	5939 Wallace Street, Mississauga, Ontario L4Z 1Z8, Canada Phone: (905) 890-8008
TEAC MEXICO, S.A. De C.V	Campesinos N°184, Colonia Granjas Esmeralda, Delegacion Iztapalapa, CP 09810, México DF Phone: (525) 581-5500
TEAC UK LIMITED	Unit 19 & 20, The Courtyards, Hatters Lane, Watford, Hertfordshire, WD18 8TE, U.K. Phone: (0845) 130-2511
TEAC EUROPE GmbH	Bahnstrasse 12, 65205 Wiesbaden-Erbenheim, Germany Phone: 0611-71580
TEAC AUSTRALIA PTY., LTD. A.B.N. 11 113 998 048	30 Tullamarine Park Road, Tullamarine, VIC 3043, Australia Phone: (03) 8336-6500

This appliance has a serial number located on the rear panel. Please record the model number and serial number and retain them for your records.

Model number _____ Serial number _____

1006 · MA-1092 **B**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>