 
 


This page is empty.  
Please do NOT output film for  
this page.

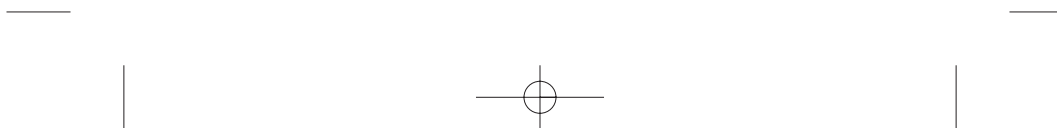

# RCA THOMSON

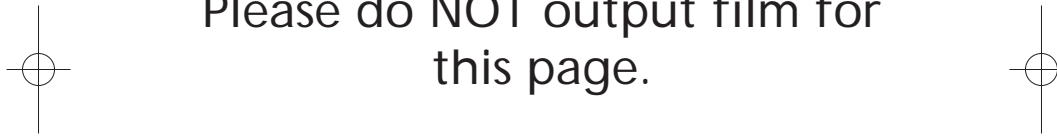

U  
S  
e  
r  
m  
a  
n  
u  
a  
l

RP2385/RP2380

LAD1070

55023440

# SAFETY INFORMATION

**EN RCA Information  
(North America)**

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

This equipment has been type tested and found to comply with the specifications in Subpart J of Part 15 of FCC Rules. These rules are designed to provide reasonable protection against radio and television interference in a residential installation. However, there is no guarantee that interference will not occur in particular installations. If this equipment does cause interference to radio or television reception (which you can determine by turning the equipment off and on), try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions.

Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

**For Your Records**

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase, and the serial number:

Model No.  
RP2385/RP2380/LAD1070

Date of Purchase

Place of Purchase

Serial No.

**Service Information**

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.

Have a Blast- Just Not in Your Eardrums  
Make sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphones are in place.



# SAFETY INFORMATION

**Thomson Information**

**CAUTION!**

Invisible laser radiation when open. Avoid exposure to beam. Class 3B laser product. This system must be opened only by qualified technicians to prevent accidents caused by the laser beam.

LASER  $\lambda = 780 \text{ nm}$ , P max = 5 mW

Rating Information: At bottom of the unit this unit comply with the existing requirements

In accordance with the rating plate of the unit, this unit complies with current standards concerning electrical safety and electromagnetic compatibility.



**ADVARSELI**  
USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHEDSÅFBRYDERE ER UDE AF FUNKTION. UNGDÅ UDSÆTTELSE FOR STRÅLING.  
**VORSICHT!**  
UNSICHTBARE LASERSTRALUNG WENN ABDECKUNG GEÖFFNET UND SICHERHEITS- VERRIEGELUNG ÜBERBRÜCKT.  
NICHT DEM LASERSTRAHL AUSSETZEN!

**CAUTION - INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS FAILED OR DEFEATED. AVOID EXPOSURE TO BEAM.**

**ATTENTION - RAYONNEMENT LASER INVISIBLE DANGEREUX EN CAS D'OUVERTURE ET LORSQUE LA SECURITE EST NEUTRALISEE. EXPOSITION DANGEREUSE AU FAISCEAU.**

**CLASS 1 LASER PRODUCT  
LASER KLASSE 1  
APPAREIL A LASER DE CLASSE 1  
LUOKAN 1 LASERLAITE  
KLASS 1 LASERAPPARAT**

**WARNING-**  
ÖSYNLIG LASERSTRÅLING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRRAN ÄR URKOPPLADE. BETRÄKTA EJ STRÅLEN.  
**VARO!**  
AVÄTTAESSA JA SOUJALUKUITUS OHITETTAESSA OLET ALTHINKA NÄKYMÄTTÖMÄLLE. LASERSÄTEILYLLE ÄLÄ KATSO SÄTEESEEN.

 


Please respect the environment Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

# THE CD PLAYER

# THE CD PLAYER

EN

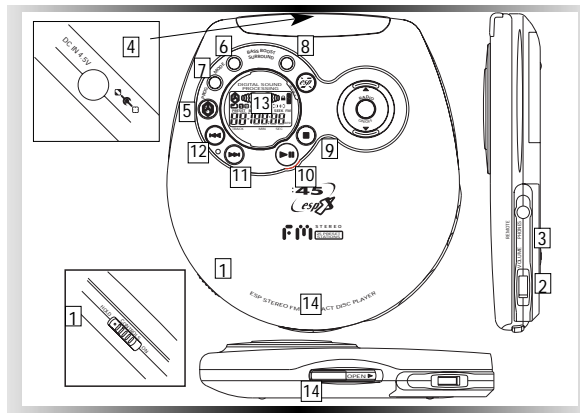

- |   |  |
|---|--|
| 1. CONTROL switch. To lock or unlock the buttons                            | & display.                                     |
| 2. VOLUME. To adjust the volume.  | 8. Press to adjust Bass Boost level.           |
| 3. PHONES jack. Insert your phones here.                                    | 9. STOP button. Press to stop CD play.         |
| 4. DC jack. You can insert the adapter instead of batteries for indoor use. | 10. PLAY/PAUSE button. Press to play CD.       |
| 5. For random playback.   | 11. Skip up one track.                         |
| 6. MODE button. For repeat or introscan function.                           | 12. Skip down one track.                       |
| 7. PROG/DISPLAY button. To program  | 13. Display Panel. More information on Page 7. |
|   | 14. OPEN switch. Slide to open CD door.        |

3

EN

Model Number	Adaptor	Batteries
RP 2380 / RP 2385	5-4079B (120V 60 Hz)	AAAx2 (Included)
LAD 1070	5-4090A (230V 50Hz)	AAAx2 (Included)

## MAINS OUTLET POWER SUPPLY

You can power your CD player with the supplied AC/DC adaptor. Refer to the table for details of the operating voltage of the adaptor supplied with your unit. AC/DC adaptor is purposed for indoor use in dry rooms only. Remove the jack from the device to use it with the batteries. *Note : Power is fed to the unit even when it is not functioning. To cut the power supply off, the AC/DC adaptor must be unplugged.*

## CAR (DC) POWER SUPPLY ADAPTOR (for RP2385 only)

Plug the car (DC) power supply adaptor into the DC in 4.5V jack at the rear/side of the CD player & then into the cigarette lighter receptacle in your car.

## BATTERIES POWER SUPPLY

Refer to the table for details of the batteries required to operate your unit. **Recharge function** (Thomson Models) — To charge Ni-Cd batteries (not included): Insert 2 rechargeable batteries in the compartment. Turn the switch to the ON position at the back of the unit. Connect the main adaptor. The batteries take about eight hours to become fully charged if the player is not operating. *Important : If you use your CD player with non rechargeable batteries, turn OFF the switch at the back of the unit in order to prevent any damage to the unit or batteries.*

4

## THE CD PLAYER

### EN Listening to a Compact Disc

- Slide the **OPEN** switch to the right to open the door. Insert a disc and press lightly on the centre to lock. Close the door. Press **PLAY/PAUSE** button. **NO DISC** will appear in the display. Then, the total number of tracks and time of the CD will be displayed. If the disc compartment is empty or the disc cannot be played, **NO DISC** will appear in the display.
- Shift **CONTROL** switch to "HOLD" position to lock the button to avoid accidental activation of unwanted functions.

 
You can also change tracks or quickly listen to part of a track by pressing down or holding



### Listening to a CD in your car (for RP2385 only)

- Select a power source (either battery power or the car DC adaptor)

- Insert the cassette adaptor into the tape deck and plug the cord into the CD player's PHONES jack of the unit.
- Insert a compact disc and press **PLAY/PAUSE** button. Adjust CD player's volume to a mid level (make sure the Bass Boost is turned off).
- Use the car stereo to adjust volume, tone ... Adjust the volume of your CD player for better sound.
- Before ejecting the cassette when you are finished, make sure the car stereo's volume is turned down.

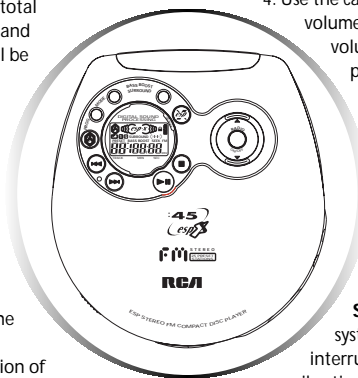

#### The ELECTRONIC SHOCK PROTECTION\*

system prevents sound interruptions when impacts or vibrations occur. Electronic anti-shock consumes less power and increases the battery life. Therefore, the

**ESPX** function is always ON. After many successive impacts, the buffer might be emptied causing a brief sound interruption for the memory to reload. The buffer is 45 seconds long.



## THE CD PLAYER

### Prog/Display SmartResume

When you stop CD play or power off the unit (without disconnecting power supply), SmartResume is automatically activated. It stores all the current settings and modes: current track, Shuffle, time display, Mode (Repeat/Repeat All/Program), and ESPX. When play mode is on again, the unit RESUMES to the settings (unchanged) and plays from the beginning of the track. If CD compartment lid is opened, then SmartResume stores only the following modes: Shuffle Mode (Repeat/Repeat All), and ESPX. Other settings such as track play, time display, program setting and memory are all reset or cancelled.

### Repeating

You can replay the entire CD or one track as many times as you wish as well as listen to the beginning of each track for 10 seconds.

Press **MODE** successively to



1. Replay the entire CD .
2. Replay the current track
3. Replay the beginning of each track for 10 seconds

(The number of the track being played will be displayed and SCAN will appear.)

4. Press again to the function de-select

### Program

This function lets you listen to the tracks you selected in the order you want. The CD player must be in Stop mode.

1. Press **PROG**. P will appear in the display.
2. Select the track to store by pressing  or  & press **PROG** again to confirm.
3. Return to step 2 to store other tracks.
4. Press play button to listen to your programming.

*Note : The unit switches off automatically after 15s if no key has been activated. To prevent excessive battery consumption. When programming, the unit can switch off if you do not press any key within 10s. If the unit switches off, the programme will be stored in memory. Resume programming as normal by turning the unit on again.*

You can program up to 24 tracks.

To play your program again, press play. To add/edit tracks to the program, go to stop mode ; press and hold **PROG** button again. Refer to step 2 of the above paragraph.

## THE CD PLAYER

EN

To check the program, press **PLAY** and



To cancel your program, press and hold the mode key when you are in the stop mode. **ERASE** will appear in the display. The program will be automatically canceled.

To exit program mode, remove P from the display by pressing **STOP** then **PROG.**

### Random tracks play (MIX for Thomson & SHUFFLE for RCA)

1. Listen press **PLAY**
2. Press key.

To cancel this function, De-select

### PAUSE

Suspend the playback **PLAY**  
The minutes and secondes flash when interrupted

### STOP

 
Stop playback **STOP**  
The player switches off automatically after 5 seconds. Press twice stop key to stop your CD player.

### REMAIN TIME

Display remaining time in the play mode, at play mode Press display information about CD playing time.


### THE DISPLAY

1. **REPEAT**  
Repeat entire disc
2. Repeat current track
3. **RANDOM TRACKS**
4. **ESPX**  
(When the buffer is being loaded, the bracket around the **ESP** symbol will increase)
5. **PROGRAM**
6. Is displayed when the control button is on **HOLD** position.
7. Is displayed when batteries are low
8. Bass Boost **ON**
9. Is displayed when Surround is **ON**
10. Is displayed when receiving stereo FM broadcast.
11. Is displayed when seeking FM radio channels.

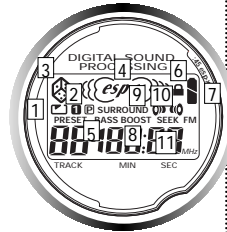

## THE RADIO

 EN

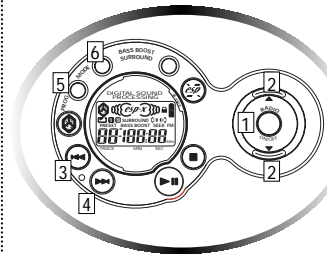

1. **RADIO ON/OFF** button. Press to turn FM radio on and off.
2. **TUNING BUTTONS**. Press to tune in your favorite radio station.
3. **PRESET DN** button. Press to access previous preset station.
4. **PRESET UP** button. Press to access next preset stations.
5. **PROG** button. Press to set preset stations.
6. **MODE** button. Press to select stereo or mono mode for receiving stereo FM broadcast.

### Listening to FM Radio

1. Press **RADIO ON/OFF** button to select FM radio.
2. Press **TUNING BUTTONS** to tune in the desired station.

### Using Presets

Your player has 25 preset stations for easy access to your favorite FM radio stations.

1. Press **RADIO ON/OFF** button to select FM radio.
2. Press **PRESET DN** or **PRESET UP** buttons to access the previous or next preset station.

The display will show the frequency and the program number.

### Setting Presets

You can change the frequency of the preset

stations whenever you like:

1. Press **RADIO ON/OFF** button to select FM radio.
2. Press **PROG** button once.
3. Tune in the desired frequency.
4. Press **PRESET DN** or **PRESET UP** buttons to assign the preset station number.
5. Press **PROG** button again to store preset station.
6. Repeat step 3 to step 5 to store other preset stations.
7. Press **STOP** button to confirm your selection.

### Suppressing Stereo

Press **MODE** button to toggle between FM mono and stereo for stereo FM stations.

## MORE INFORMATION

EN

### MORE INFORMATION

#### USEFUL ADVICE

- Do not store CDs in damp areas.
- Do not expose CDs to high temperatures or direct sunlight.
- Do not put any tape or adhesives on either side of the disc.
- You should avoid leaving the CD door open. Dust is liable to impair performance of the laser optical unit.
- Do not use your set immediately after transport from a cold place to a warm place : there may be condensation problems.
- Do not touch the playing surface. Make sure that you keep your set away from water and high temperatures.
- If you do not use your set on battery power for more than one month, we advise you to take out all the batteries.
- To prevent personal injury, do not reverse any battery and do not mix battery types.
- Discard leaking batteries immediately. Leaking batteries can cause skin burns or other personal injury.
- Thomson recommends Duracell Ultra Batteries.

**Caution :** Charge batteries if the switch at the back of the unit is ON (for Thomson Model only). Do not attempt to charge when switch

is OFF, you may damage the unit and batteries.

- Prolonged use of the CD player at full volume can damage the user's ear.
- **SPC** : Soud Pressure Control at 100dB maximum (only for Thomson models)

### PLEASE RESPECT THE ENVIRONMENT !

Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

#### MAINTENANCE

Clean the player with a soft cloth, or a damp chamois leather. Never use solvents.

### TECHNICAL SPECIFICATIONS

\* **Frequency response: 20Hz to 20kHz**

#### Power Supply

- 4.5V DC (through AD/DC adaptor (refer to table page 3 for details))
- 2 batteries ( Duracell Ultra recommended)
- 2 rechargeable Ni-cd batteries (recharge function on Thomson models)
- 4.5VDC (through car DC adaptor RP2385)

9

## US Warranty

EN

### What your warranty covers:

- Any defect in materials or workmanship.

### For how long after your purchase:

- One year (The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

### What we will do:

- Provide you with a new, or at our option, a refurbished unit.
- The exchange unit is under warranty for the remainder of the original product's warranty period.

### How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include in the package evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send standard UPS or its equivalent to:

**Thomson Consumer Electronics, Inc.**  
**Product Exchange Center**  
**11721 B Alameda Ave.**  
**Socorro, TX 79927**

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- Insure your shipment in case of loss of damage. Thomson accepts no liability in case of damage or loss.
- A new or refurbished unit will be shipped to you prepaid freight.

### What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

### Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

### How state law relates to this warranty:

- This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

### If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

10

## Canadian Warranty

EN

Thomson Consumer Electronics Canada, Inc. warrants to the purchaser or gift recipient that if any manufacturing defect becomes apparent in this product within 1 year from the original date of purchase, it will be replaced free of charge, including return transportation.

This warranty does not include damage to the product resulting from accidents, misuse or leaking batteries.

Should your product not perform properly during the warranty period, either:

1. Return it to the selling dealer with proof of purchase for replacement,

OR

2. Remove the batteries (where applicable), and pack product complete with accessories in the original carton (or equivalent).

— Mail prepaid (with proof of purchase) and insured to:

**Thomson Consumer Electronics Canada, Inc.**

**Distribution Centre**

**7400 A Bramalea Road**

**Mississauga, Ontario L5S 1X1**

The provisions of this written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation, and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties and other rights and remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.

If you are unable to find a qualified servicer for out of warranty service, you may write to:

Thomson Consumer Electronics Canada, Inc.

P.O. Box 0944

Indianapolis, Indiana, U.S.A., 46206-0944

Attach your sales receipt to this booklet for future reference. This information is required if service is needed during the warranty period.

PURCHASE DATE

NAME OF STORE

Model Number:  
RP2385/RP2380/LAD1070

©1999 Thomson Consumer Electronics, Inc.  
10330 North Meridian Street  
Indianapolis, IN 46290-1024  
Trademark(s)® Registered  
Marca(s) Registrada(s)  
Marque(s) ® déposée(s)

Printed in Hong Kong

This page is empty.  
Please do NOT output film for  
this page.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>