 
## **THOMSON**

## DPL914VD



## Pack Home Cinema with DVD



## Instruction Manual



## SAFETY



The lightning flash with arrowhead symbol, within an equilatera triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to

CAUTION



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompan

### WARNINGS:

To reduce the risk of fire or electric shock, do not expose this appliant

DO NOT REMOVE COVER or OPEN THE CABINET. Dangerous high voltages are present inside the enclose serviceable parts inside. Refer servicing to qualified pe

Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure





INVISIBLE LASER RADIATION WHEN OPEN OR INTERLOCK FAILED OR DEFEATED.

## WARNINGS

DO NOT STARE INTO BEAM. Avoid direct exposure to laser beam

To prevent direct exposure to laser beam, do not try to open the

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Manufactured under license from Dolby Laboratories. "Dolby" ,"Pro Logic"and the double-D symbol are trademarks of Dolby Laboratories.

Dolby and the double-D symbol are trademarks of Dolby Laboratories. ifactured under license from Dolby Laboratories.

DTS is a digital sound compression technique developed by Digital Theater Sound Systems for digital multichannel audio signals. "DTS" and "DTS Digital Out" are trademarks registered by Digital Theater Systems Inc.

U.S. Patent Nos. 4,631,603; 4,819,098; 4,907,093; 5,315,448; and 6,516,132.

To ensure proper use of this product, please read this instruction manual carefully and retain for future reference. Should the unit requires any maintenance, please contact an authorized service center.

## IMPORTANT SAFETY INSTRUCTIONS

## CAUTION: RETAIN THIS MANUAL FOR FUTURE REFERENCE This unit has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit does not contain any parts that can be repaired by the user. Read these instructions.

- Keep these instructions. Heed all warnings.
- Follow all instructions.

  Do not use this apparatus near water.
- Clean only with dry cloth.

  Do not block any ventilation openings. Install in accordance with the manufacturer
- Do not install near any heat sources such as radiators, heat registers, stoves
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades, one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

- Only use attachments / accessories specified by the manufacturer Unplug this apparatus during lightning storms or when unused for long periods of time.

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus.

Use only with a cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.



- Refer all servicing to qualified service personnel. Servicing is required when
  the apparatus has been damaged in any way, such as when the power supply
  cord or plug is damaged, liquid has been spilled or objects have fallen into the
  apparatus, the apparatus has been exposed to rain or moisture, does not operate
  normally, or has been dropped.
   Apparatus shall not be exposed to dripping or splashing and that no objects
  filled with liquids, such as vases, shall be placed on the apparatus.
- Burden
   Do not place a heavy object on, or step on the product. The object may fall, causing serious personal injury and serious damage to the product.
   Damage Requiring Service
   Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- A) When the power supply cord or plug is damaged.
- A) when the power supply cord or piug is damaged.
   B) If liquid has been spilled or objects have fallen into the product.
   C) If the product has been exposed to rain or water.
   D) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way.
   When the product exhibits a distinct change in performance. It indicates a need for service.
- Do not attempt to service this product yourself as opening or removing cover may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards. Replacement Parts

## Safety Check

- Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- The main plug is used as the disconnect device, the disconnect device
- shall remain readily operable condition. Stand-by light will be on when the main plug is connected.
- Stand-by light will be off when the main plug is disconnected to the socket.

   European versions comply with CE requirements.

## IMPORTANT BATTERY INFORMATION

- When storing the unit, be sure to remove the battery because they may leak and damage the unit.
- Battery may leak electrolyte if inserted incorrectly, if disposed of in fire, or if an attempt is made to charge a battery not intended to be recharged.

  Discard leaky battery immediately. Leaking battery may cause skin burns or other personal injury.
- Dispose of battery, according to federal, state and local regulations in place.
- Before throwing any battery away, consult your distributor who may be able to take them back for specific recycling.



## NSTALLATION

CAUTION!

- Install your unit on a stable flat surface. There must be sufficient room in of the unit for the drawer to be opened and the unit should be positioned so it can see the remote control.
- it can see the remote control.

  Do not expose your unit to extremes of temperature or humidity.
- Avoid standing it on a hot surface such as on top of other hot running equipment and ensure that there is adequate ventilation to the unit.
- CAUTION!

 
## Do not install this unit in confined space such as a book case or similar



nen a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from

- Do not wipe in a circular motion. Circular scratches can cause picture distortion. nder the disc unplayable.
- Do not use solvents, commercially available cleaners, or antistatic spray intended for analog disc.

Your THOMSON product is designed and manufactured with high quality materials and components which can be recycled and reused.



## PLAYER ZONES

DVD disc are programmed with region numbers indicating countries DVD disc are programmed with region numbers indicating countries in which they can played. The region number of this unit is 2. If the DVD disc is marked with a different region number, it cannot be played on this unit.

## PLAYABLE DISCS

- DVD-R/RW. DVD+R/RW
- DVD-R and DVD-RW discs must be made in Video DVD mode. DVD+RW disc must be made in accordance with the specifications for DVD+RW disc with a 4.7 GB capacity
- Video CD (VCD), Super Video CD (SVCD)

CD-R/RW This player can play most CD-R/RW discs. However depending on the recording conditions, you may find that not all discs will play successfully.


- MP3 Files on CD-R/RW mr3 riles on U-r/RW
  MP3 files should be ISO 9660 or JOLIET format. If the sampling frequency is
  44.1 or 48.1KHz, and the fixed bit rate is 128Kbps or higher, MP3 files can be
  played. However, some of them may not be played depending on their conditions
  or formats.
- WMA Files on CD-R
- If the sampling frequency is 32KHz, and the fixed bit rate is 128Kbps or higher, WMA files can be played. However, some of them may not be played depending on their conditions or formats. JPEG Files on CD-R/RW
- This player can play JPEG files with a resolution for up to five million pixels. Certain JPEG files cannot be read by this player.
- MPEG4 Files on CD-R/RW
- Your MPEG4 files should be ISO format without QPEL.

   DivX Files on CD-R/RW

## PACKING

- Examine the contents of the box of the DVD Home Cinema System DVD Home Cinema System with attached power cord
- Remote Control with 2 batteries Instruction Manual
  - 2 Rear Speaker with wire
- FM Antenna PM Antenna2 Front Speakers with wireCenter Speaker with wire
  - Z Rear Speaker with vire
    Subwoofer with wire
    Warranty Card

## REMOTE CONTROL

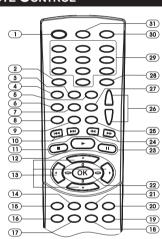


- () **ON / STANDBY** Turn unit between Operating or Standby mode. GOTO Display INFO Menu. Direct key in the specific location on a DVD / CD / VCD / SVCD disc to play.
- BOOKMARK Open Bookmark Menu
- V-SELECT Switch TV RGB on and off.
- SUBTITLE Toggle between different subtitle.

  A-B Set the repeat A-B playback. Or clear the programmed repeat playback.

  PLAYMODE Display Playmode Menu for different play modes operation.
- ZOOM / CLEAR 1) Select different zooming size while playing video disc by pressing it repeatedly. 2) Clear the information you input in other setup menu.
- ANGLE / PBC 1) Toggle different Angles to diplay if present on disc. 2) Turn PBC ON/OFF for VCD disc.
- 10. I≪√ ▶► Skip backward / forward to the previous or next chapter / track.
- 11. Stop playing.
  12. Start playing.
  13. 1) Active Navigation Keys
- Navigate in indicated directions for making selections in menus, Active Navigation mode or tuner setting.
- 2) Tuning Keys (In Tuner Mode)
  UP / DOWM to change the frequency of the Radio Channel.
  LEFT / RIGHT to change the Radio Channel. 14. DVD 1) Select DVD mode. 2) If you connect your USB device to the USB jack on the front panel, press this button and use Active Navigation keys to select
- 15. AUX/TV/FM Toggle between AUX 1, AUX 2, TV IN and Tuner mode by pressing
- repeatedly.

  16. SURROUND Select different surround sound effects among STEREO, PROLOGIC II MOVIE, PROLOGIC II MUSIC, CONCERT, CHURCH, PASSIVE, WIDE and LIVE. tote: Surround Sound Effect (DSP) is available only for STEREO content namels). DSP cannot be selected while playing they for STEREO content
- 7. SLEEP Activate a sleep timer for the unit to the standby mode automati
- 18. TONE Select different EQ modes among FLAT, ROCK, POP, CLASSIS and 19. **SETUP / EXIT** Press to enter or exit the SYSTEM SETUP Menu.
- 20. **MENU** Enter the Disc Contents Menu in DVD mode or Return disc menu for VCD disc with PCB ON mode.
- 21. EX BASS Turn EX BASS to Soft Bass, Balance Bass or Powerful Bass. 22. OK Enter or select in menu and setup navigation
- 23. II Freezes picture and sound during playback. 24 44 / Start backward / forward search 25. **TITLE / ROTATE** 1) Display the Title Menu if present on disc (DVD mode only).
- 2) Rotate picture when playing picture CDs. 26. - VOL + Increase or decrease the volume. 27. AUDIO / FM ST 1) Change different audio stream of disc. 2) Select Mono / Stereo
- 28. INFO Display current setting information of the playing disc 0 - 9 (Numeric Keys) 1) In DVD mode, they are used for direct key in selections
  of title, chapter, track, channel and time search input. 2) In tuner mode, they are used to direct key in a preset station 30. △ OPEN/CLOSE Open or close the disc tray.

## FRONT PANEL

 

- 1 On / Standby
- 2. Standby Indicator
- 4 △ / 1) Open or close the disc tray in stop or no disc mode 2) Stop playing 5. ▲ / ▼ VOL 1) Increase volume. 2) Decrease volume.
- 6. LED Display Area
- Infra-Red Receiver Window
- I44 FREQUENCY 1) Skip to the previous chapter / track in DVD / VCD / CD mode.
   Tune the channel number down in tuner mode.
- P>I FREQUENCY 1) Skip to the next chapter / track in DVD / VCD / CD mode.
   Tune the channel number up in tuner mode.
- 10. Play button.
- 11. SOURCE Switch different input sources between AUX 1, AUX 2, TV IN, Tuner
- 12. USB Jack for external USB device connection.

## REAR PANEL 2 1 4 5 6 7

## IMPORTANT!

Connect the AC cord only after the speakers, antenna and all optional equipment have been connected. Never make or change any connections with the power switched on.
The rating plate is located at the rear panel of the system.

 FM Antenna Input Connection
 For FM reception, connect the FM antenna to the FM jack. Move the antenna in various directions until the clearest signal is received.
 Note: Position the antenna as far away as possible from a TV, VCR or other For connecting audio (Left / Right) input signals from auxiliary source such as VCR, TV or Satellite Receiver and playing them through this unit. These connections are selected by the [SOURCE] button on the front panel or [AUX/TV/FM] key on the remote control. 2. AUX IN (AUDIO)

3. TV SCART OUT / TV IN (AUDIO)
Use the scart cable to connect the unit TV SCART OUT jack to the corresponding Scart input jacks on the TV.
In DVD Mode:
DVD signal will be output through this jack to the TV.
In TV IN Mode:

Audio signal will be input through this jack from the TV to the DVD Home Cinema System. This audio sound will be amplified to the speakers.

4. Subwoofer Speaker For connecting the subwoofer to SUB terminal. Connect the purple colour terminal clip to the subwoofer purple colour wire and black terminal clip to the subwoofer black wire. 5. Center Speaker For connecting the center speaker to C terminal. Connect the green colour terminal clip to the speaker green colour wire and black terminal clip to the speaker black wire.

## 6. Surround Speaker (Rear Speakers)

For connecting the surround left speaker to SL terminal. Connect the blue colour terminal clip to the speaker blue colour wire and black terminal clip to the speaker blue colour wire and black terminal clip to the speaker black wire. speaker black wife.

For connecting the surround right speaker to SR terminal. Connect the grey colour terminal clip to the speaker grey colour wire and black terminal clip to the

## 7. Front Speaker

For connecting the front left speaker to FL terminal. Connect the white colour terminal clip to the speaker white colour wire and black terminal clip to the speaker black wire.

For connecting the front right speaker to FR terminal. Connect the red colour terminal clip to the speaker red colour wire and black terminal clip to the speaker.


## CONNECTIONS

The following connections show the different video and audio connections to TV. VCR or CD Recorder

Important: Make sure that the AC Voltage matches your local voltage.

Connect the AC cord only after the speakers, antenna, and all optional equipment have been connected.


## (1) Connecting TV

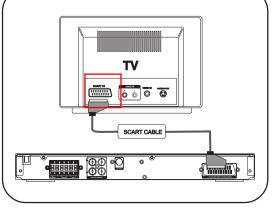

To view the video from DVD disc on your TV set, connect the TV SCART OUT jack 31. MUTE Mute and unmute the sound output.

Download from Www.Somanuals.com. All Manuals Search And Download.

### (2) Connecting VCR or Satellite Receiver (Optional)

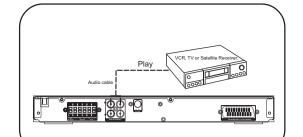

To listen the sound from your VCR, TV or Satellite Receiver through the speakers of this unit, only connect the Left / Right audio output of these equipments to the

### (3) Speaker Connection


(a) speaker connection

Before Connecting


This DVD Home Cinema System is designed to reproduce optimum sound quality when the supplied speakers are used. If you wish to connect other speakers to the system instead of the supplied speakers, they should be 4 ohms impedance for the speakers and 3 ohms impedance for subwoofer

Ensure correct polarity when connecting speakers (colored wire for matched colour

To prevent damage to circuits, never short-circuit the speaker output terminals.

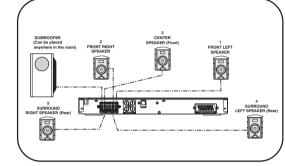

 Press the speaker terminal clip down & insert the wire, then release the clip.



- oue .

  Do not remove excessive amount of insulation on the wire cords to avoid the stripped portion from touching each other. The optimal length for the stripped part should be around 1/3 linch (or 1 cm).
- Do not connect speakers with an impedance lower than the speaker connectors.


  Do not connect more than one speaker to any one pair of speaker terminals.


  Do not connect speakers with an impedance lower than the speakers supplied.

Connection of all speakers are the same.

SPEAKER PLACEMENT

Placement of speakers play an important role in the reproduction of surround ular attention should be taken when designing the speaker layout. For

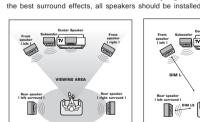

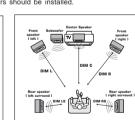

- 1) Please place the front left and right speakers to the left hand side and right hand side of your TV. 2) Place the center speaker above the TV so that the centre channel sound is
- localised.

  Place the suround left and surround right speakers in line with your listening position or behind your listening position. Ideally they should be placed slightly above your ear level while you seat in your normal listening location.

  The subwoofer can be installed for powerful bass sounds when it is placed on the floor. Place the subwoofer on the floor near the TV.

  All speakers should approximately be at the same distance from your listening position and must be visible.

## GETTING START

## Before Beginning

- Finish the connection for the DVD Home Cinema System as shown in the Connect Power to the DVD Home Cinema System.
- Turn on the TV and set to the correct video-in channel. Insert the batteries in the remote control.
- Press the  $\stackrel{(1)}{}$  key (either on the unit front panel or the remote control). The unit display should light. Press DVD on the remote control, the unit will switch to the DVD mode.
   After a few seconds the panel will show [NO DISC].
- Press ≜ / on the front panel or ≜ on the remote control. The disc tray will open. Place a DVD in dic tray and press ♣ / on the front panel or ≜ on the remote control (same as disc tray open operation). The disc tray will be closed. The unit will start reading the disc and start playing it. Before the movie starts to play, a menu will be displayed. You need to select the item [PLAY MOVIE] and press OK to start the movie playback.
- Although you can watch a movie immediately, to get the best result from this unit, you are suggested to proceed for the Basic setup options first. Detail description is on the following pages. This will set up all the functions on your unit. You only need to do it once while you first install your Home Cinema Unit.

## BASIC SETUP

## **Basic Operation**

Press remote control SETUP / EXIT button to enter the System Setup Menu in stop mode. To exit the System Setup Menu, press SETUP / EXIT again.



- Press ◀ or ▶ to navigate for different Setup Menu : System Setup, Language Setup. Audio Setup. Video Setup or Speaker Setup.
- Use the ▶ or OK to enter into the right column. Then use ▲ or ▼ to change a new setting. Press OK to confirm the changed setting.
- 5. Repeat step 3 to 4 to change the other settings.

## **Setting Details**

### 1. SYSTEM SETUP

1.1 SCREEN SAVER



## 1.2 DIVX [R] VOD



Shows the DivX code in the DVD Home Cinema System.



Many DVD movie discs contain Motion Picture Assotion rating codes. This Home Cinema System will recognize the codes on these disc. The unit provides a method for you to prevent children from viewing films which are not suitable or

objectionable.

1 KID SAFE: Only DVD software intended for child can be played back.

3 G : General Audience, recommended as an acceptable for views of all agees.
3 PG : Parental Guidance suggested.
4 PG13 : Material is not suitable for children under age 13.

to view unity in superivised by a parent or adult guardian.

7 NC-17: Not recommended viewing for children under age 17.

8: Should be viewed only by adults due to graphic sexual material, violence or language.

Only when the parental lock is active the rating level will function. 2. Only when the parental lock is not active the rating level can be changed.

Select the source files that you want to play bewteen Disc and USB. To access files in a USB device, make sure your USB devices is connected to the USB jack

## 2. LANGUAGE SETUP

You can select different languages for OSD shown on TV screen Setup Menu operation. You can also select different lanuages for Audio, Subtitle and Menu which are recorded on the DVD disc.



OSD LANG: Select the unit All Setup Menu language.
AUDIO LANG: Select the audible language to play.
SUBTITLE LANG: Select the subtitle displayed on the TV screen.
DISC MENU: Select the disc menu language.
Note: If the selected language is not recorded on the disc, the disc own fault language is selected automatically.



- When any Setup Menu is high-lighted, use ▲ or ▼ to select different items under the setup menu. Then different options for each item will appear on the right



Turn the screen saver option ON or OFF. If you turn the screen saver ON, the screen saver image appears when you leave the system in pause or stop mode more than 3 minutes. This saver can protect the TV screen from being damaged.



1.3 PASSWORD and RATING

5 -- 6 R: Recomend that parents restrict children under 17 from viewing or allow to view only when superivised by a parent or adult quardian.

 In SYSTEM SETUP menu, press ▲ or ▼ to highlight Rating, then press ▶. Press ▲ or ▼ to highlight a rating level for the disc inserted and press OK. Press ▲ or ▼ to highlight Password and press OK. Use the numeric key (0-9) to enter the four-digit password.

Hyou make a mistake before pressing OK, press the CLEAR button and enter your 4-digit security code again. DVD discs that are rated above the level you selected will not play unless you enter Indicates Parental lock is NOT active

The Parental lock is active.

1.4 SOURCE

on the front panel





- Once you select the Volume Setup and press OK, you will hear the calibrating sound from the front left speaker for a few seconds. Then this sound will move from speaker to speaker as follows: Front Left > Center -> Front Right >> Subwoofer -> Rear Right -> Rear Left. If the calibrating sound is either too small or too loud, exit the Volume Setup and then adjust the volume control until the calibrating sound is more clear. Let the calibrating sound cycle through all the speakers at least now.
- If the calibrating sound level from all speakers is approximately the same, no
- If the calibrating sound level from all speakers is approximately the same, no further adjustment is necessary.
   If any speaker sound level appears unbalance to the rest, you can increase or decrease the level of the speaker by pressing ▲ or ▼ to increase or decrease the speaker level when that speaker is highlighted.
   When you have copmpleted the level adjustments, press OK to exit the Volume Setup and return to the previous menu.
   Note: We recommend to set Volume = 30 before entering this Volume Setup to further calibrating any unbalance speaker level output.

## 3.2 DYNAMIC RANGE



Dynamic Range Control enables you to control the dynamic range so as to achieve a suitable sound for your equipment.

ON: Loud sound such as explosion is toned down slightly when playback.

OFF: It plays back at the recording level on the disc.

### 3.3 PROLOGIC II



format which will reproduce 5 channels output when a Dolby Pro Logic II Decode MOVIE MODE : The Movie mode is for use with stereo television shows and all

programs encoded in Dolby Surround. The result is enhanced soundfield directionality that approaches the quality of discrete.

orrectionality that approaches the quality or discrete.

MUSIC MODE: The Music mode is for use with any stereo music recordings, and provides a wide and deep sound space. The Music mode includes different controls that allow the sound to be tailored to individual listening perference.

## 3.4 PANORAMA/CENTER WIDTH / DIMENSION









The above options are available only when the player is in Music Mode. These options let you to customize the ProLogic II Music Mode Sound Effect. PANORAMA: Extends the front stereo image to include the surround speakers for

PANDRAMA: Extends the front stereo image to include the surround speakers for an exciting "wraparound" effect with side-wall imaging.

CENTER WIDTH: With Pro Logic decoding, dominant center signals can come only from center speaker. If no center speaker is present, the decoder splits the center signals equally to the left and right speakers to create a "phantom" center image. The Center Width allows variable adjustment of the center image so it may be heard only from the center speaker; only from the left/right speakers as a phantom image; or from all three front speakers to varying degrees

input signals. It allows the user to gradually adjust the sound field either towards the front or towards the rear. If a recording is too spacious or strong from the surrounds, it can be adjusted "forward" to get a better balance. Likewise, if a stereo recording is somewhat too "mono" or "narrow" sounding, it can be adjusted toward the rear to get a more enveloping, immersing result.

**DIMENSION:** A simple control that alters the ratio of L+R to L-R for the two-chanel

## 4. VIDEO SETUP

## 4.1 TV SYSTEM



This player supports different TV output, including NTSC and PAL system. You may change the setting of the unit to match your TV.

NTSC: Select this if your TV supports NTSC colour system.

PAL: Select this if your TV supports PAL colour system.

PAL 60: Select this if your TV supports PAL 60 colour system.

AUTO: Select this if your TV supports PAL bu colour system.

AUTO: Select this if your TV supports Multi-colour system.

Note: If you TV supports only NTSC or PAL and had you inadvertently selected the wrong TV type, the TV screen will become flickering and/or black-and-white.

## 4.2 VIDEO



and TV.

TV-RGB : The RGB signal is enabled from TV Scart Output to TV.

RGB OFF : The RGB signal is disabled from TV Scart Output to TV.

4.3 TV TYPE



- 4:3 PS This is selected when the unit is connected with a normal TV. Widescreen images are shown on the screen, but with some parts cut automatically.
  4:3 LB This is selected when the unit is connected with a normal TV. Widescreen images are shown on screen, with black belts on the top and bottom
  16:9 This is selected when the unit is connected with a wide-screen TV.
- Notes:

  1. The factual effect of playing rely on the picture recorded in disc. Some disc could not be played according to your selection.


  2. As for the disc recorded in 4:3 mode, the disc will only be played in 4:3.

  3. The TV TYPE should be set correspondingly with the TV screen.
- 5. SPEAKER SETUP

### 5.1 CENTER/REAR DISTANCE



## PLAYING DVD / VCD / CD DISC

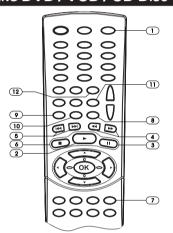

- (Open / Close)
- Press to open the disc tray.
- Note: Load the disc on the disc tray with disc label facing upward. Press again to close the disc tray. It will start playback au
- Press to start playback
- 3. II (Pause / Frame-by-Frame Advance)
- can freeze the image and advance frame by frame.
- For CD, press to pause the playback. Press again or directly press will
- For DVD / VCD, press II to pause the playback. Press II again will go to STEP I mode. Each press button will advance the frame in STEP mode.
- 4. ◀◀/▶▶ (Backward / Forward Serach, Slow Motion)
- Press ◀ / ▶ to search backward or forward. Press ▶ will resume the normal Each time when **>>** or **4** button is pressed, the speed of backward / forward search changes accordingly
- search changes accordingly.

  In "pause" mode, press ◄/►► to start forward or backward slow motion play.

  Press ► to resume normal playback.

  Each time when ►► or ◄ button is pressed, the speed of slow-motion playback changes accordingly.

  Note: Slow motion step by step is not applicable to CD Playback. Backward slow motion is not applicable to VCD playback.
- 5. I◀◀ / ▶▶I (Skip to the Beginning of a Chapter / Track)
- When a disc is playing, you can skip backward / forward a chapter / track.
- Press the | d button to skip to the beginning of the previous chapter or track.
- Press the | Dutton to skip to the beginning of the next chapter or track.

  For audio CD disc, use the numeric buttons (0 9 on the remote control only) to directly jump to a track number.

- Press > again to resume playback from the point at which you last stopped the

- Press twice to stop playback completely. No resume playback
- Press again to start playback from the beginning of the disc.

Press to display the Disc Menu.

Note: Playback will be stopped to display the menu. For CD, no function. For VCD, it is only available when PBC is set to ON.

Press to display the Title Menu if present on disc (DVD only)

- ZOOM (To Zoom In the Image)
   You can magnify pictures during playback.
- When a disc is playing, press the ZOOM / CLEAR button. Each time ZOOM / CLEAR button is pressed, the ZOOM settings will be changed as follows: ZOOM 2 --> ZOOM 3 --> ZOOM 4 --> ZOOM 1/2 --> ZOOM 1/3 --> ZOOM 1/4 --> While an image is magnified, you can use ▲ , ▼, ◀ and ▶ keys to shift image
- for viewing.

  To return to the original normal view, press the **ZOOM** key until the ZOOM: OFF symbol shows. The screen will return to normal.

  When you reach the edge of the image, the display will not shift anymore in that direction.

- Press ANGLE repeatedly to select different angles of viewing if available on the
- scenes recorded from multiple angles.
- 10. ANGLE (To change the Viewing Angle in DVD)
  You can select different angles of viewing when play a DVD video disc that contains
- have been recorded on the DVD disc. If multi-angle viewing is not available During playback, you can change different audio Language Available on the Disc)

  During playback, you can change different audio language or audio output.

  When a disc is playing, press AUDIO / FM ST to show the current playback audio track number. 11. AUDIO / FM ST (To Change Different Audio Language Available on the Disc)

Note: If there is only one audio track available on the disc, the number does not

12. SUBTITLE (To Change Different Subtitle Language Available on the Disc)

During playback, you can change different subtitle language or disable subtitle When a disc is playing, press SUBTITLE to show the current playback language subtitle.

This function can only be used for disc on which different subtitle languages

The number of languages recorded may be different depending on the disc.

While the disc is playing, press **INFO** to display playback information present on

For DVD:
Press INFO once to display the playback information and playing time of current

-Total chapter

Press INFO five times to further display more playback information as following:

× 🗇 00:03:12

P1 OFF is displayed

O): [1 | 2CH]

: [3 ENGLISH]

Audio

<u>CD</u> TRK 2/2 ■€

For CD

For VCD

1.2 CH (Chapter Info)

1.3 Elaspsed time

1.5 Language (Subtitle)

1.7 TRK (Track Info)

1.9 Repeat Mode

2. GOTO function

It displays any repeat mode set.

2.1 Select a Specific Title / Chapter / Track

1.4 Audio

1.6 Angle

1. INFO Function

Press repeatedly to select the desired audio track.

Press repeatedly to select the desired subtitle language

ADVANCED PLAYBACK FUNCTION

DVD TT 7/36 CH 1/41 ① 00:03:12

Chapter

Press INFO thrice to check the playing time of current title

<u>VCD</u> TRK 2/2 ■ PBC **△** 00:03:12

Press INFO twice to check the remaining time of current track Press INFO thrice to check the playing time of current disc.

Press INFO four times to check the remaining time of current disc.

The audio track currently selected is displayed

1.8 Unmute Icon
 When the sound is unmuted, the icon will be displayed.

The language (subtitle) number currently selected is displayed.

Press INFO once to display the playback information and playing time of current

It displays the current playing Title Number and the Total Number of Title recorded on the disc.

It displays the current playing Chapter Number and the Total Number of Chapter recorded on the disc.

It displays the elasped time from the beginning of the title/chapter/disc/track playback.

prayuetx. Note: If there is a "-" displaying on the front of time, now the time will be the remaining time of current title/chapter/disc/track.

The angle viewing currently selected is displayed. When a disc without multiangle is played back, ੴ OFF is displayed.

It displays the current playing Trace Number and the Total Number of Track recorded on the disc.

Note: After checking the settings, press INFO again to return to the exit the display.

This function allows you to directly select any instant of the disc to start playback.

ou can select any specific Title / Chapter / Track to start playback by directly secting the Title / Chapter / Track number.

Press **OK** to confirm. Then the unit will start playback from the position you

2.2 Locating a Specific Time
You can select any specific location by directly entering the time (hours, minutes,

Press **◀** or **▶** to highlight time.

Directly key in the numberic key **0 - 9** for the time to start playback.

- The first two digits for the hours setting.

- The next two digits for the seconds.

After entering the time, press **OK** to confirm. Then the unit will start playback at time you select.

ite:

select.
Note: Press CLEAR to reset the Title / Chapter / Track it is highlighted.

Press GOTO .
Press ◀ or ▶ to highlight a Title / Chapter / Track and press the corresponding

Press INFO twice to check the remaining time of current chapter

Press INFO four times to check the remaining time of current title

- Note: This function can only available when the scenes shot from multiple angles

3. Programming Playback
You can play the contents of the disc in the order you want by arranging the order of Chapter / Tritle/ Track

Press the PI AYMODE button

into PROG mode. Then press **OK** to confirm.

Note: During VCD / SVCD playback, the function is only available when PBC is OFF.

3.1 DVD Programming



- Enter the title numbers in ■. Use ◀ or ▶ to move the highlight to chapter and enter the chapter numbers in ■. Use ◀, ▶, ♠ or ▼ to move to another field.

- Press or highlight PLAY on the screen and press OK to start the programmed Highlight the current input on the screen and press CLEAR to delete the title /
- chapter numbers you input.
  3.2 CD / VCD / SVCD Programming

PROG			
1 []			
2 []			
3 []			
4 []			
	PLAY	CLEAR	

- Enter the track numbers in ...
- Use ◀ ▶ ▲ or ▼ button to move to another field
- Repeat the above steps.

  Press rhighlight PLAY on the screen and press **OK** to start the programmed
- Highlight the current input on the screen and press CLEAR to delete the track
- Highlight CLEAR on the PROG screen and press **OK** to delete all inputs.
- The function is only available when PBC is OFF.

## **4. Random Playback**The chapter in DVD and track in CD can be played in random order

Press the PI AYMODE button



When MODE is highlighted, use ◀ or ▶ to select option into RANDOM mode. Then press **OK** to confirm.

### 5. Repeat Playback

You can play a specific title, chapter or track repeatedly. Press the PLAYMODE

Note: During VCD / SVCD playback, the function is only available when PBC is OFF 5.1 Repeating a Title / Chapter / Track / Whole disc



- Press the **PLAYMODE** button, use ▲ or ▼ to select the REPEAT option.
- Use  $\P$  or  $\blacktriangleright$  button to select differen repeat mode and press **OK** to confirm. Selected mode will be highlighted on the screen.

For DVD Disc: Off > REP All > Chapter > Title
For CD / VCD / SVCD Disc: Off > REP 1 > REP All

For MP3 / JPEG / WMA Disc : Off > REP DIR > REP 1 > REP ALL

 S.2 Repeating a Specific Section
 While the disc is playing, press A-B to set the beginning of the section you want to play repeatedly. REPEAT A-

- Press A-B again to set the end of the section you want to play repeatedly REPEAT A-B
- Then the unit will immediately begin replaying your section repeatedly.

  Press A-B again to clear the programmed repeat playback and return to the

## A-B CANCEL

- The A-B repeat function can only be used within the same title. If the start and end of the section to be repeated are in at different titles, it will be reset.

  The A-B repeat function does not operate in scenes where different camera contacts are recorded.

## 6. PBC (VCD / SVCD Playback Control)

When a VCD / SVCD is playing, press PBC repeatedly to switch between PBC (Playback Control) ON and OFF. PBC: [ON]

## If you select PBC ON, the disc menu (if available) will appear on the TV. Use I◄◄/▶▶ or Numberic keys (0-9) to select a play operation.

PBC: [OFF] If you select PBC OFF, the unit will skip the disc menu and playback directly. **PLAYMODE** button will be available when playing VCD.

## 7 BOOKMARK Function MARK ----- TT 1 CH 1 00:03:21

CLASSIC

- watch again. 7.1 Creat a Bookmark During DVD / CD playback, press BOOKMARK to access the bookmark
- Use ◀ or ▶ button to navigate and press OK to bookmark your desired point
- 7.2 Recalling a Bookmark Screne

  During playback, press BOOKMARK to access the bookmark menu.
- Use ◀or ▶ button to highlight the bookmark you want and press ▶ to play from the Bookmark point. Press CLEAR to reset the highlighted bookmark.


## 8. TONE (Selecting Different EQ Modes) and TREBLE / BASS Control 8.1 EQ/Modes There are totally 5 EQ modes available. Press **TONE** repeatedly on the remote control for different EQ modes: FLAT, ROCK, POP, CLASSIS and JAZZ.

8.2 Treble / Bass Control o.≥ Trebier bass Control

Press TONE once and follows by pressing OK, then the Treble Control is enabled. Then press ◀ or ▶ to switch to enable Bass Control.

## Some discs may not allow you to use this function. Some scenes may not be located as precise as you specified. This method for accessing specific location is available only within the current title of the DVD disc. Press CLEAR to reset the time when the time is highlighted. Download from Www.Somanuals.com. All Manuals Search And Download While Treble Control or Bass Control is enabled, press ▲ or ▼ to adjust the

## PLAYING MP3 / WMA / JPEG / MPEG

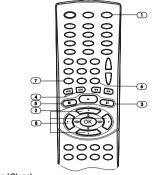

- △ (Open / Close)
- Press to open the disc tray.

  Note: Load the disc on the disc tray with disc label facing upward.

  Press again to close the disc tray. It will start playback automaticall
- 2. (Play)Press to start playback.
- 3. II (Pause)Press to pause playback.
- Press again or ➤ will resume normal playback

- . TO THE STATE OF THE SELECTION MENU during playback (for JPEG file c Press ► will resume normal playback. ROTATE (for JPEG file only)
  During the playback of JPEG file, press ROTATE to rotate the picture. ZOOM / CLEAR ZOOM
- s to zoom in picture during JPEG file slideshow or MPEG playback. Press to CLEAR ss to delete the information you input.
- Active Navigation
   Press to select the file and press OK to start playback.

Selection Menu

The Selection Menu will appear when starting MP3 / WMA / JPEG / MPEG playback. There are all folders in the left side Menu, from the top to the bottom the folder will be numbered as Folder No.1/No.2/No.3.... When you highlight one of the folders, all the contents of this folder will be displayed in the right side. All the tracks/pictures/movies will be numbered from top to bottom as No.1/No.2/No.3....just like the folder. Use active navigation keys to select the files. Press OK or top to start playback. Active navigation keys can also be used to select the folder contains MP3 / WMA / JPEG / MPEG files. When the folder is selected, it will play the first file automatically.



[MUSIC] --- MP3 / WMA Files
The unit begins playing all the MP3 / WMA file currently selected. Then it plays all the files in the subfolders contained within its parent folder. After that, the unit

- on the screen.
  When MODE is highlighted, use ◀or ▶ to select option into PROG mode. Then
  press OK to enter MP3 program menu. In this menu, the letter F means Folder,
  T means Track.
  Input the Folder number below F and track number below T with two digital
- 4. Use the Navigation keys to move to another field and repeat step 3 for the next

## Song. Press ▶ or highlight PLAY on the screen and press OK to start program playback.Highlight CLEAR on the PROG screen and press OK to delete all inputs. You can progam up to 16 songs total.

[PICTURE] --- JPEG Files [PICTURE] -- JPEG Files
The unit starts the slideshow for the JPEG file currently selected. Then it proceeds to display all other remaining JPEG files in the same folder. After that, the unit plays the JPEG files in the subfolders contained in the same folder.

[MOVIE] -- MPEG Files
The unit starts to play the whole file currently selected.
Note: You cannot play WMA and JPEG files simultaneously.

## PLAYING DIVX DISC

Your player is an Official DivX Certified product that Plays DivX 5, DivX 4, DivX 3, Your player is an Official DivX Certified product that Plays DivX 5, DivX 4, DivX 3, and DivX VOD video content, in compliance with DivX Certified technical requirements. The correct playing of DivX in your player, depends on the preparation and production of the audio and video files, the codecs used, the type of recording equipment employed and the parameters of your computer. It is therefore possible that you cannot play a DivX file or that part or all of it is defective. It also sometimes happens that you can play the image (video) but not the sound (audio). Note: To guarantee playback of DivX files the audio must be mp3 format. DivX Certified devices can play back any interleaved mp3 audio at any bitrate, both CBR and VBR. The audio must be sampled at standard frequencies, such as 32 kHz, 44.1 kHz, and 48kHz, and must conform to the AVI file specification. Apart from mp3, the audio formats recognised by your player are MPEG layer 1/2, AC3, DTS, PCM. Formats such as AAC and Ogg Vorbis are not supported by this player.

1. Open the tray by pressing the  $\triangle$  button, insert the disc and then press again the

A button to close the tray.
 The disc's contents are displayed. Select the DisV file that you wish to play with and buttons and press OK to select it.

Noted: To delete your selection, press the CLEAR button.

Noted: To delete your selection, press the CLEAR button.

3. Press ▶ to start playback.

A note on copying: Before making use of DivX or mpeg4 files, please be sure of their origin and that you have legally purchased or rented the contents. Pirate copying is illegal and may result in sanctions. Private copies of your own material for your own use may be legal in some countries. Make sure you are aware of applicable laws. To rent (purchase) DivX VOD files
DivX VOD files are similar to DVD video rental discs. The difference lies in the access to the media. DivX VOD files are downloaded after paying a rental from certain commercial web sites. Prior to downloading a VOD you need to input the registration number of your DVD player on the purchase form of the site.
Follow the instructions below to find the registration number of your player:

1. Insert a disc.
2. Press SETUP/EXIT button to enter the System Setup Menu, press ▼ to select DIVX [R] VOD, then press OK. The registration number is displayed on the screen of the television set.

3. Write down this VOD 8-character registration number in order to fill in the form.

- of the television set.

  3. Write down this VOD 8-character registration number in order to fill in the form on the web site you purchase your DivX VOD files from.

  Note: If you cannot play a DivX VOD file recorded on a CD-R disc after downloading it, the rental period allocated during purchasing from the web site may have expired. It may also be that the recorded file is not compatible with your player because of different versions or incorrect download parameters. The parameters used during the copying to CD-R may also be a cause. Since it is not possible here to supply all the information, parameters and advice relating to the use of DivX VOD files, we recommend that you visit specialised web sites such as www.divx.com/vod.

## LISTENING TO THE RADIO CHANNEL

Important : Make sure the antenna is connected correctly.

## You can program up to 20 radio channels maximum for easy recal

Search a Radio Channel

### Saving a Radio Channel



EH ! B



A. Repeat the above steps to save up to 20 radio channels.

Note: When you tune at a weak FM station manually, press AUDIO / FM ST on the remote control to switch from Stereo mode to Mono mode. This will reduce the



## PROBLEMS

In it appears that the DVD Home Cinema System is raulty, please inst consult this checklist. It may be something simple that has been overlooked.

Note: Under no circumstances should you try to repair the unit yourself as this will invalidate the warranty. Only qualified service personnel can remove the cover or service this unit.

NO POWER

## Check if the unit power cord is properly connected to the power AC outlet Check if there is power at the AC outlet by plugging in another appliance.

- NO PICTURE

   Check if the TV is switched on
- · Check the video cable connection · Check if channel selector is set to AV on the TV. (Refer your TV manual for
- DISTORTED PICTURE

## The disc format does not match the TV-set (PAL / NTSC)

. Ensure the unit is not connected through VCR

## PICTURE SWING

## Check to see if the program requires another disc to be loaded. Reset by unplugging the unit from the power, then re-connect the power again.

### THE PLAYER DOES NOT RESPOND TO THE REMOTE CONTROL Aim the remote control directly at the sensor on the front panel of the unit

Avoid any obstacle which may block the remote control signal path

· Check speaker cable connections

## NO SOUND ON THE SPEAKERS

## . Check if the volume control is NOT at minimum setting

### DISC CANNOT BE PLAYED . Ensure the disc is placed properly onto the disc tray.

Check that the antenna is connected correctly.
Adjust the antenna location and position to obtain the best signal reception Tune to the correct radio channel frequency.

## FORGOTTEN THE PASSWORD

FUNCTION DISTURBED The normal function of the unit may be disturbed by external interference. Just reset the unit (disconnecting and reconnecting the power cord might be required to resume normal operation).

Place the antenna further away from any equipment that may be causing the noise or interference.

 
## TECHNICAL SPECIFICATION

Main Voltage:	AC 230V~ ,50Hz
Power Consumption:	Operating, 48W
	Standby, 1W
Ambient Temperature:	0°C to +45°C
Dimensions (W x H x D):	360 x 35 x 245 mn
Net Weight:	5.5Kg

- Front Speakers - Center Speaker - Rear Speakers 15W. 4 Ω 15W, 4 Ω 15W, 4 Ω 25W, 3Ω

## Press the ON / STANDRY button on the remote control to turn on the unit

Press repeatedly either the **AUX/TV/FM** on the remote control or **SOURCE** on the front panel until the Tuner Mode is selected.



ne word SAVE is displayed

## SAVE

background noise.
Recall Memorized Radio Channel

Press the ON / STANDBY button on the remote control to turn on the unit.
Press repeatedly either the AUXTV/FM on the remote control or SOURCE on the front panel until the Tuner Mode is selected.
Press ◀/▶ on the remote control or I◄◀ / ▶►I on the front panel to change to different memorized, radio, channels.

## If it appears that the DVD Home Cinema System is faulty, please first consult this

Check if the ON / STANDBY button on the front panel of the unit is set to on.

. Set the correct AV input on the TV.

## Press the V-SELECT button until stable and correct video output is on the TV

Check the disc for fingerprints and clean with soft cloth, wiping from center to edge.
 Sometimes a small amount of picture distortion may appear. This is not a malfunction.

### NO COLOR IN PICTURE The disc format does not match the TV-set (PAL / NTSC).

• Relocate the unit further away from possible interference or emission source (e.g. Radio, Power Amplifier, Radiator, etc...).

## NO RETURN TO START-UP SCREEN WHEN DISC IS REMOVED

## Check if the volume control is NOT at minimum set Check if it is NOT muted by the remote control. Check if the disc is defective by trying another disc

RADIO CHANNEL RECEPTION IS POOR

## Power Output

- Subwoofer THD 10% Max

87.5 - 108MHz

Tocom: 56267130

# Tune to the radio station by either the Manual or Automatic tune as follows: Manual Tuning --- Press ▲ / ▼ repeatedly on the remote control until the desired frequency appears on the display. Automatic Tuning--- Press and hold ▲ / ▼ on the remote control for more than one second to active the AUTO SCAN function. Then release the button. The AUTO SCAN function will stop on any radio station found. Repeat this process until it stops on the desired station.

## When the desired radio station is tuned. Press and hold **OK** until the frequency is flashing on the front panel LED display.

## Press ◀/▶ or directly use the remote control numeric keys 0 - 9 to select the channel number that you want the unit to memorize.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com