

CD / MP3 Player

MP3 Recommendations

 
- Use *.mp3* as the extension when converting audio files into MP3 for saving onto CD-R(W) or CD-ROM, e.g. *Rocky08.mp3*. Do not use any other extension e.g. *.doc*, *.pdf*.
- Do not use the *.mp3* extension for other text or non-audio data files as this may result in serious malfunction and harmful noise interference.
- Many common CD creator softwares can make files compatible for the system but do not forget to finalize your disc after creation. This set cannot read DirectCD recordings.
- In order to get audio CD quality, you need to record your MP3 CD at 128 kbps. You can record up to 256 kbps. Beyond 256 kbps, the unit might not read the CD.
- Do not combine CD Audio and MP3 tracks onto a CD-R(W) or CD-ROM. The player will only playback CD audio tracks from mixed CD formats.

NOTE

- ID3 tag (Album, song, artist name) is not supported.
- If over 400 items (songs/folders) are on the disc, only the first 400 songs can be played.
- Resume function does not operate in MP3 mode.

The CD/MP3 playback function works in a similar way as the features available for DVD .

Press **SOURCE** on the main unit or **DVD** source key on the remote to select DVD/CD input source.

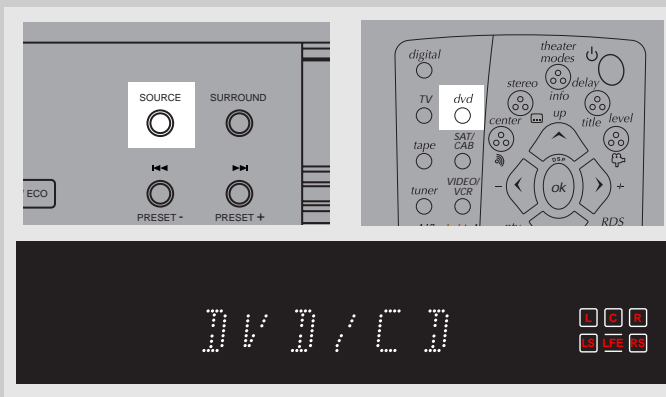


NOTE

The remote control selector must be set on dvd/cd.



Loading and playing an audio CD

 1. Press **STOP/EJECT** button on the front panel to open the disc tray. Place disc on the disc tray with the label side facing up. Press **STOP/EJECT** again to close disc tray.

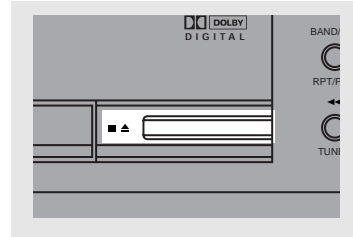

The disc will be read to detect whether an audio CD or MP3 CD has been inserted.

 
NOTE

If the CD is a MP3 audio CD, reading may take up to 2 minutes.


2. Playback begins automatically after the disc has been read.

An audio CD **CD** or MP3 icon **MP3** will show on the left of the display.


3. Press **PLAY/PAUSE** on the main unit or **PAUSE** on the remote control to pause playback. Press **PLAY/PAUSE** again on the main unit or **PLAY** on the remote to resume normal playback.

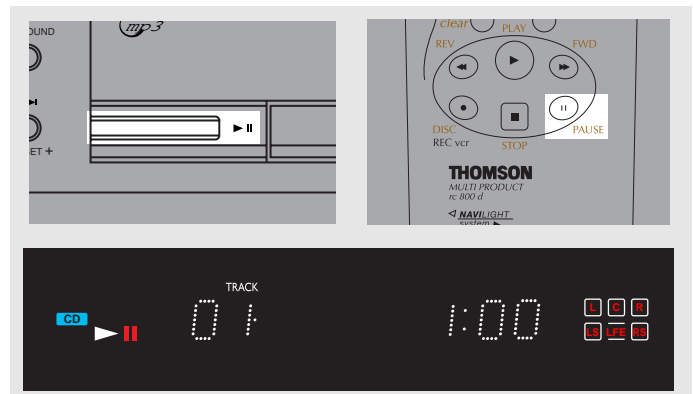

 4. Press **SKIP REVERSE** on the main unit or **pr -** on the remote to return to the previous track. Press **SKIP FORWARD** on the main unit or **pr +** on the remote to go to the next track.

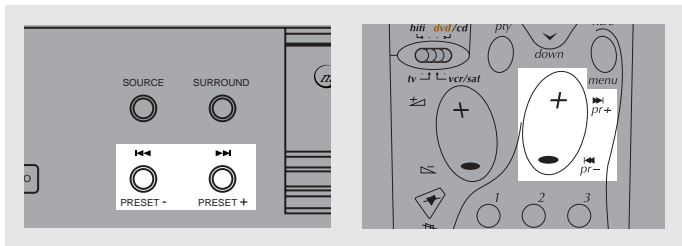

 5. Press **STOP/EJECT** on the main unit or **STOP** on the remote control to end playback.

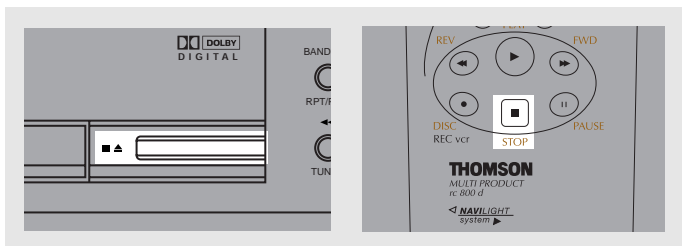


NOTE


When playback is interrupted, the location at which it stopped will be memorized. Playback will resume at the position it was last stopped. Resume playback does not work on MP3 music.

Quick scan

 1. Press and hold **FAST FORWARD** or **FAST REVERSE** on the main unit or **FORWARD** or **REVERSE** on the remote to scan through a track quickly during playback. To change speed to 1, 2 or 3 times, press repeatedly during scan. Quick scan does not work on MP3 music.

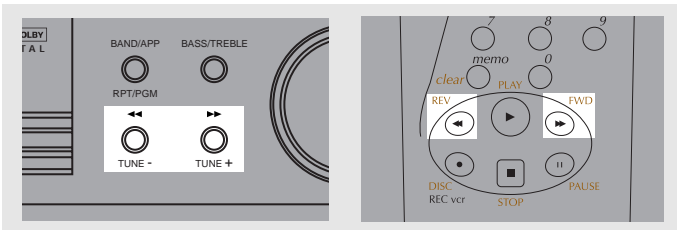


 2. Press **PLAY** on the main unit or the remote to resume normal playback.

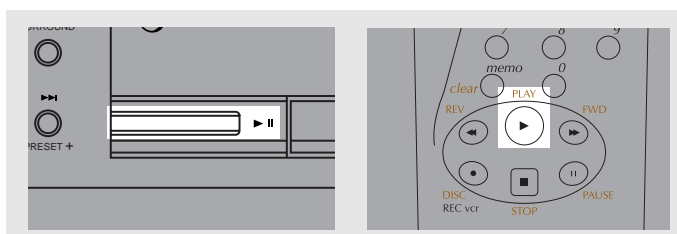


Repeat

 There are 3 repeat options for CD playback.

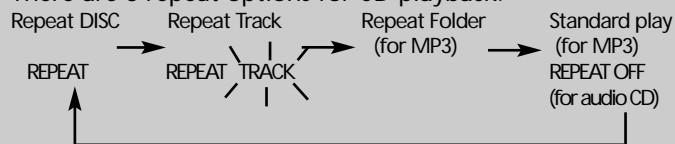


The corresponding icon will be shown on the top of the display.

 1. Press **RPT/PGM** on the main unit repeatedly to toggle among repeat options. When playing an audio CD Repeat can only be activated while playing.

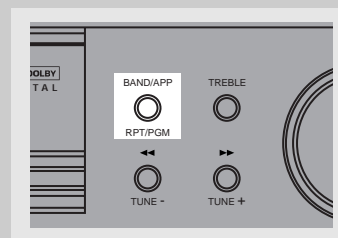


Random

 1. Press and hold **TREBLE** on the main unit for random playback.

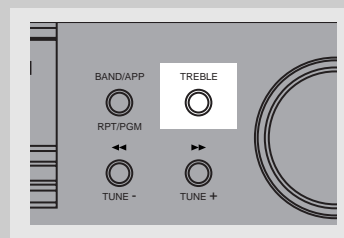

CD / MP3 Player

 On- screen banner display for CD playback

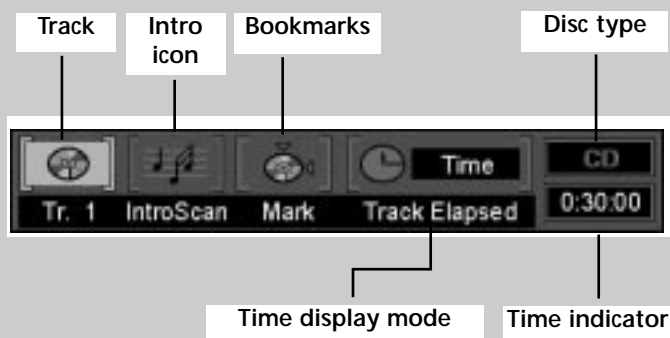


NOTE

The remote control selector must be set on dvd/cd.




General use

 
1. Press **INFO** on the remote control to hide and show on- screen banner. (Only audio CD banner)

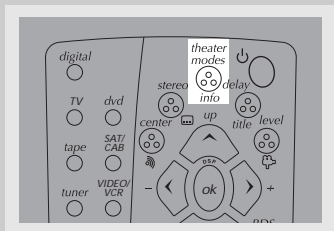

 
2. Use the **LEFT / RIGHT** arrow keys to move cursor on the banner. Selected feature icon will be highlighted.

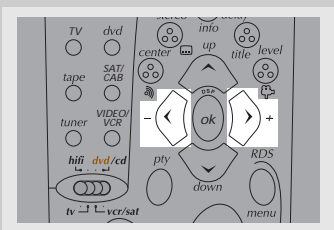


 3. Press **OK** to open menu under selected feature.

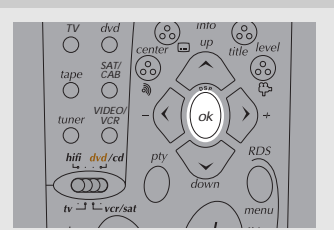

Selecting a track

 1. Refer to "General use" to open the track menu. 
2. Enter track number. Add 0 in front of single-digit track number (e.g. 9 = 09).

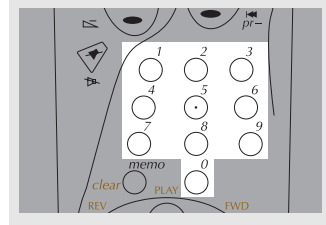


NOTE

 
You must be in playback mode for track selection.

Shortcut: enter track number directly using number buttons to select a track during playback.

IntroScan (Only for audio CDs)

IntroScan plays the first few seconds of each track.


1. Refer to "General use" to open the IntroScan menu. IntroScan will start automatically after you have pressed **OK**. 
2. Press **OK** again, **PLAY** or **PLAY/PAUSE** on the main unit to end IntroScan. The track that you stopped at will be played normally.

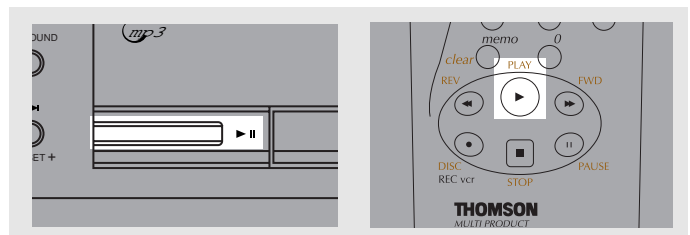

NOTE

IntroScan ends when all the tracks have been played.

 Bookmarks (Audio CDs Only)

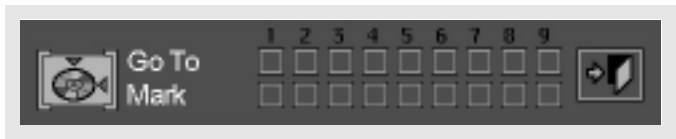


The bookmark feature allows you to select certain points on the disc where you want to jump to quickly. 9 bookmarks can be selected.

Adding Bookmarks (Audio CDs Only)

1. Refer to "General use" on page 32 to open the bookmark menu.



 2. Use the arrow keys to move the cursor (green frame) to the "Mark" check line, then press **OK** to add bookmark when you reach the point you want to do so.

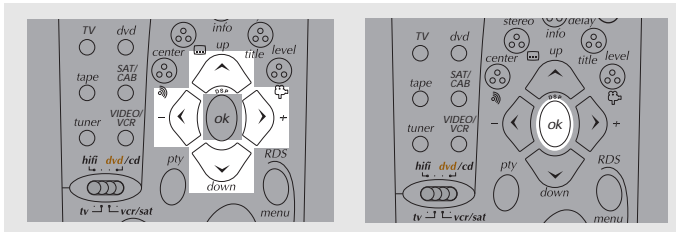

3. To add another bookmark, move the cursor to the right and then press **OK** when you reach another point you want to do so.

4. Move cursor to the door icon and then press **OK** to exit menu.

 


Recalling bookmarks

1. Refer to "General use" on page 32 to open the bookmark menu.

2. Use the **UP** arrow to move the cursor (green frame) to the "Go To" check line and use the **LEFT** or **RIGHT** arrow to the bookmarked point you want to recall.

3. Press **OK** to recall bookmarked point.

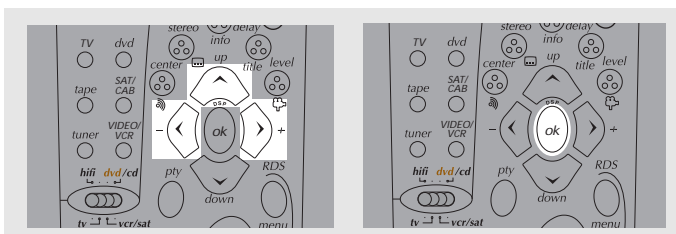

4. Use the arrow buttons to move cursor to the door icon and then press **OK** to exit menu.



Clearing bookmarks

 
The bookmarks are cleared each time a disc is removed from the player or when the power is turned off completely.

If all 9 bookmarks are in use, you can still mark new points but the previous bookmarks will be erased.

Time display (Audio CDs Only)

1. Refer to "General use" on page 32 to open the time display menu.

2. Press **OK** repeatedly to switch among "Track Elapsed", "Track Remain", "Disc Elapsed" and "Disc Remain" time during playback. Selected mode shows on banner.

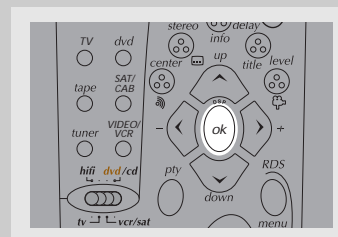


Repeat and random features

There are 5 options for this feature.

1. **Repeat Track** – plays one track over repeatedly.
2. **Repeat Disc** – plays the disc you have selected or being played at the moment over repeatedly.
3. **Random** - plays tracks randomly on one disc. (Audio CD only)
4. **Random Repeat Disc** - plays tracks randomly and over repeatedly on disc. (Audio CD only)
5. **Repeat Off** – Ends the repeat function.

 Press **RPT/PGM** on the main unit to toggle among repeat and press and hold **TREBLE** key for random.

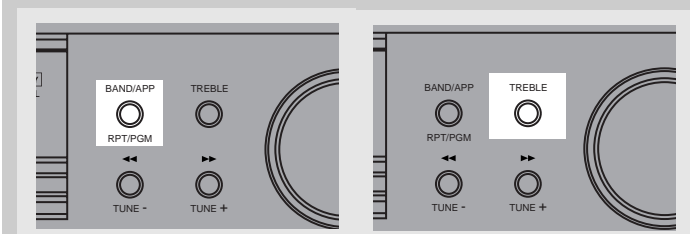

NOTE

 
Select among the 5 options until the desired one shows on banner.

CD / MP3 Player


Program playback

Edit program

1. In stop mode, press and hold **RPT / PGM** on the main unit to display program edit playlist.

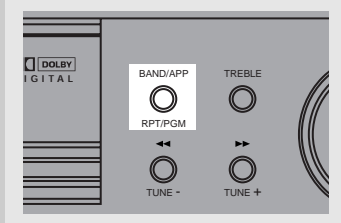

 2. The box under "TRACK" will be highlighted. Press **UP** or **DOWN** arrow buttons or number buttons to select track. Press **OK**.

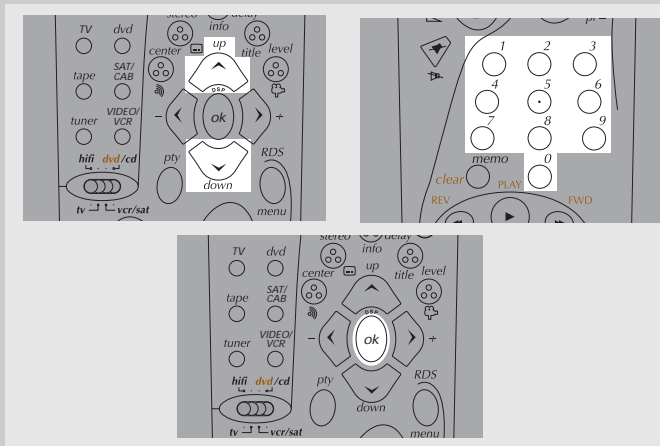

3. "Add" will be highlighted automatically after track is selected. Press **OK** to add selected track onto playlist.

4. Repeat steps 2 and 3 to add additional tracks to the program.

5. Move to highlight "Play" (start program playback) or "Done" (return to normal playback with program saved) and then press **OK** to confirm program playback.

NOTE

You can select at maximum 32 items by repeating steps 2 - 3.

Delete Program

1. In stop mode, press and hold **RPT / PGM** on the main unit to display program edit playlist.

2. Use the **LEFT** or **RIGHT** arrow to select Playlist, then use the **UP** or **DOWN** arrows to select and highlight the programmed track you want to delete on the playlist.

3. Use the arrow buttons to highlight "Delete" and then press **OK** to delete track.

4. Highlight "Play" (to start program playback) or "Done" (to return to normal playback with program saved) and then press **OK**.

Insert track

1. In stop mode, press and hold **RPT / PGM** on the main unit to display program edit playlist.

2. Use the arrows to highlight item on the playlist where you want to insert a track before it.

3. Refer to "Edit program" to select a track to be inserted.

4. Highlight "Insert" and then press **OK**

5. Highlight "Play" (start program playback) or "Done" (return to normal playback with program saved) and then press **OK**.

Cancel program

Program will be cancelled when;

1. disc tray is opened;
2. power is turned off;
3. **STOP** is pressed twice. The red PGM indicator will disappear on display and player will resume normal playback mode. Nevertheless, the program will remain in memory and can be recalled by pressing PROGRAM again.

NOTE

The remote control selector must be set on dvd/cd.



On- screen display for MP3 playback

Refer to "General Use" on page 32 for basic operations.

NOTE

 
The remote control selector must be set on dvd/cd.




Normal Play

File mode

1. Use the **UP** or **DOWN** arrow buttons on the remote to select the file you wish to begin playing.

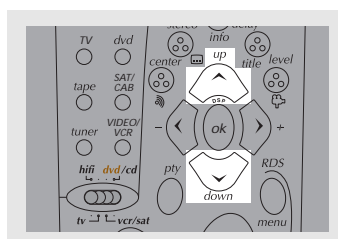


 
2. Press **PLAY** on the main unit or on the remote control to start playback. If you are currently playing, then press OK button to select a different MP3 to play. All the files or folders will be played starting with the one you have selected.

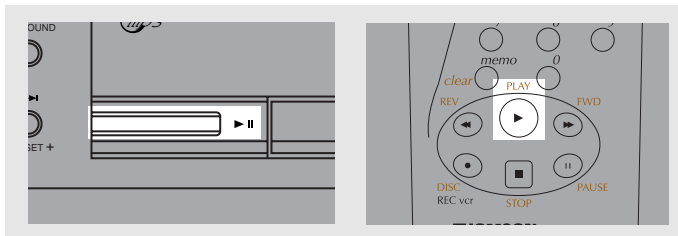


Playback stops when all files have been played.

Folder mode

  1. Use the arrow buttons on the remote to select the folder you wish to play.

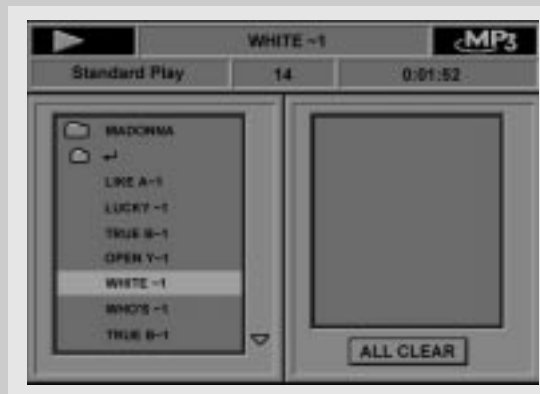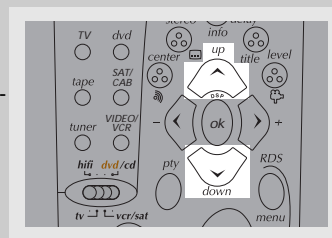

 2. Press **OK** to enter the folder and **PLAY** when in stop mode or **OK** when currently playing to begin playback of all the files in the folder.

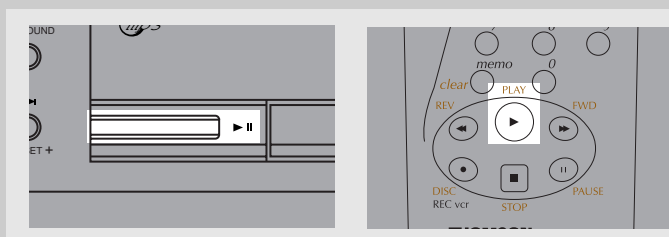


Playback stops when all files have been played.

3. To exit a folder, use the arrow buttons to select the **RETURN** arrow then press **OK**.

CD / MP3 Player


Program Play

 1. In stop mode, press and hold **RPT / PGM** on the main unit to access the program display. The "PROG." icon will show on the display.

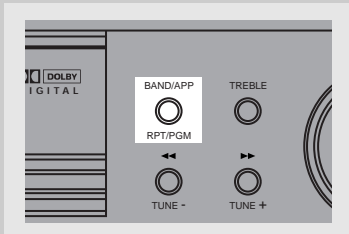


2. Use the **UP** and **DOWN** arrows on the remote to select the folder on the left that you wish to add to the program list.

 
3. Press **OK** to move the file or folder to the right programming list.

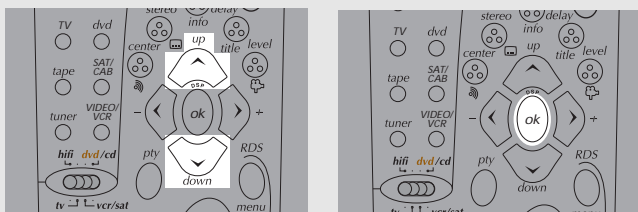

 4. Once all the files or folders have been selected, Press **PLAY** to begin program playback.

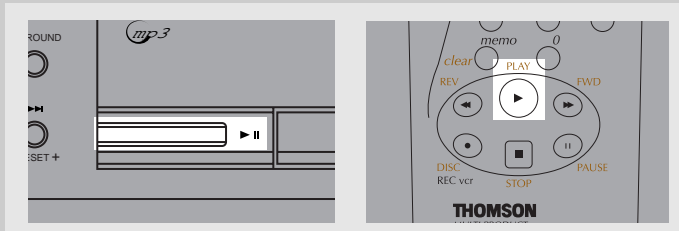

 
5. Press **STOP** on the main unit or **STOP** on the remote to end program playback.

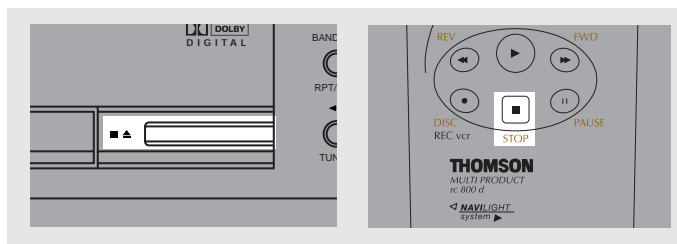

6. To play program again, press and hold **RPT / PGM** on the main unit while in stop mode to reactivate program playback. Press **PLAY** to begin.


Delete a specific File or Folder from Program List

 1. In stop mode, use the **LEFT** or **RIGHT** arrows to select program list, then use the **UP** or **DOWN** arrows to select file to be deleted and press **CLEAR** to delete.

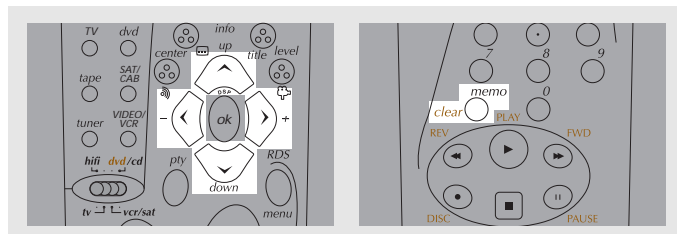

Delete All

 1. In stop mode, use the **LEFT** or **RIGHT** arrows to select "ALL CLEAR" icon and press **OK** to clear all.

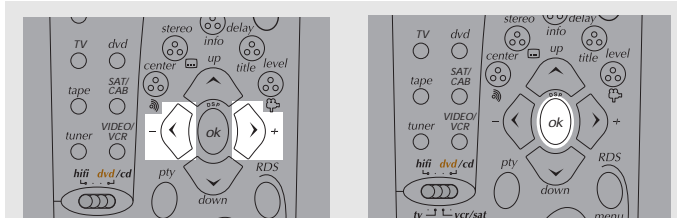

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>