 
 
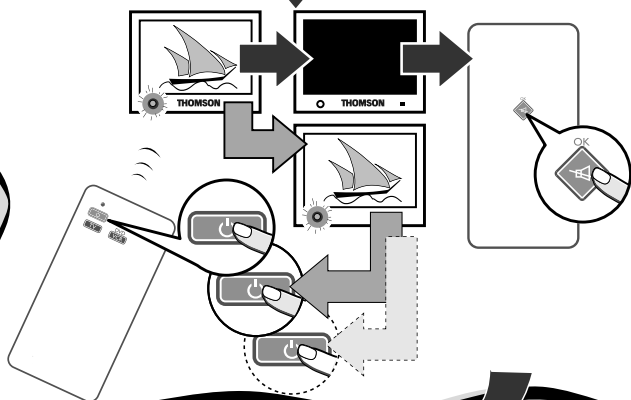 
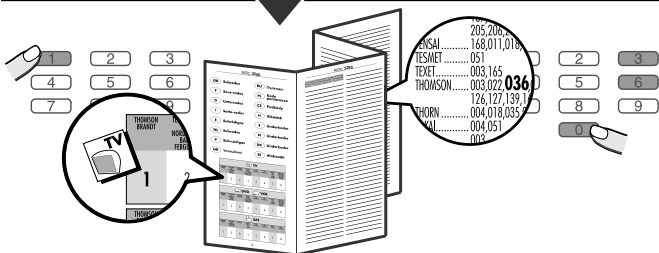 
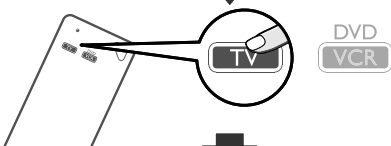 
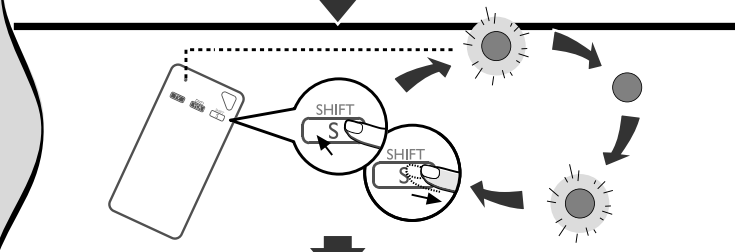 
 







THOMSON

ROC2206

   User manual



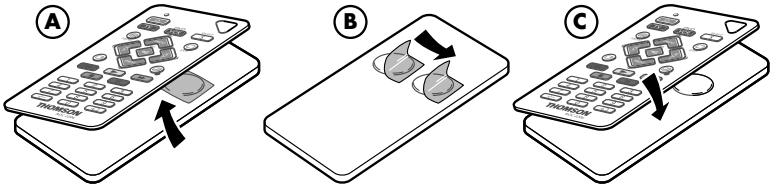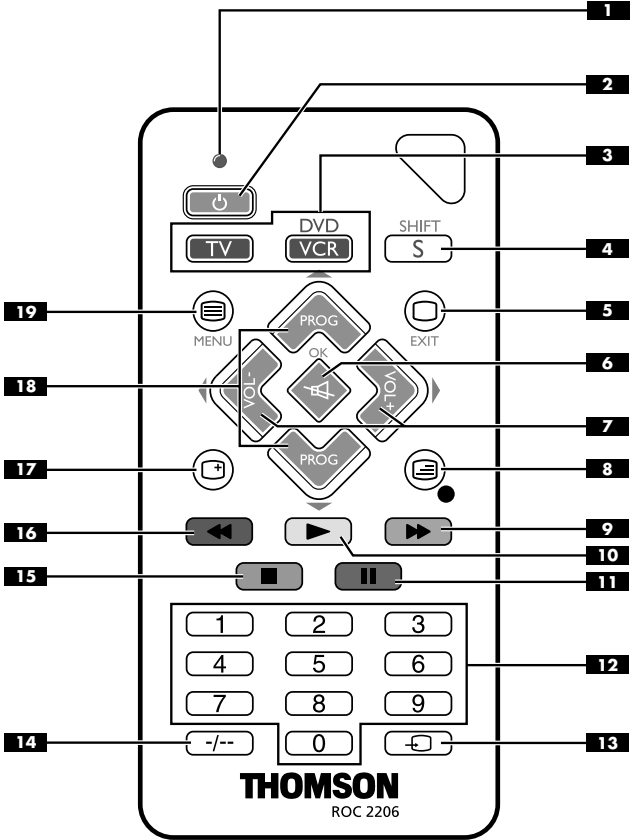

Respect the environment and the law!
 Respectez l'environnement et la loi!
 Schützen Sie die Umwelt und halten Sie die geltenden Entsorgungsbestimmungen ein!
 Rispettate l'ambiente e la legge!
 ¡Respete el medio ambiente y la ley!

The ROC 2206 is a universal remote control (2 in 1). It can replace 2 remote controls thanks to its 2 mode keys TV, VCR/DVD... It is compatible with the majority of television sets, video cassette recorders, DVD players, satellite and cable receivers as well as terrestrial digital television (DVB-T), amplifiers and other audio equipment provided they are controlled by infra red signals. This remote control has been factory programmed to allow you to use it immediately with the majority of Thomson Group devices. We therefore advise you to try it before beginning to program it. If programming is necessary, follow one of the methods A, B, C, D or E that are given in this manual. But before anything else, fit the two batteries into the remote control handset and peel off the tab as shown on the diagram on the inside of the cover. Keep these instructions and the separate list of codes in a safe place so that you can later reprogram your remote control.

1 - Description of keys

- 1 Indicator lamp: the indicator lamp lights up when any key is pressed.
- 2 \odot : On / Standby.
- 3 Remote control mode
Selects device to control TV, DVD, VCR,...
- 4 **S**: programmes the remote control.
SHIFT: activates the secondary key features (indications in blue).
- 5 \square (**EXIT**): teletext Off in TV mode.
SHIFT and **EXIT**: turns off the menu of the selected product.
- 6 \times : switches the TV sound off.
SHIFT and **OK**: confirms a selection.
- 7 **VOL-/VOL+** increases (+) or decreases (-) the volume of the TV set.
SHIFT and **VOL-/VOL+** also allows you to navigate the menus horizontally.
- 8 \bullet (**RECORD**): to record (VCR/DVD).
- 9 \blacktriangleright (**FF**): fast forward*.
- 10 \blacktriangleright (**Play**): play*.
- 11 **II** (**Pause**): stops on an image*.
- 12 **Number keys 0 to 9**: these keys have the same functions as those of your original remote and are also used to enter the codes for different products.
- 13 **AV**: for selecting an external source (SCART).
- 14 Press this key first before you type in the 2-digit channel number (except for Thomson group products).
- 15 \blacksquare (**STOP**): stop playback*.
- 16 \blacktriangleleft (**REW**): goes backward or advances forward*.
- 17 "Info" key.
Videotext inlay on TV picture.
- 18 **PROG+, PROG-**: programmes zapping button (received by the television set or the satellite receiver); use to scroll vertically through menus
SHIFT and **PROG+/PROG-** also allow you to navigate the menus vertically.
- 19 \equiv (**MENU**): teletext On/Off in TV mode.
SHIFT and **MENU**: turns on the menu of the selected products.

*The coloured buttons can be used to select categories when teletext is activated, and specific functions depending on the make.

2 - Testing the remote control before programming

1. Turn on the device that you wish to control.
2. Press the key corresponding (3) to the type of device to control:
TV: television set,
VCR/DVD: video cassette recorder, DVD player.
3. Point the remote control at the device you wish to control and try to turn it off using the \odot (2) key.
If the device does not turn off, you must program the remote control using one of the methods **A, B, C** or **D** as described below.

3 - Programming the remote control

Method A - Fast programming with 1-digit subcode

Before you start programming, you must find the **subcode** of the set to be controlled.

Refer to the list provided with these instructions, page 1 of the **codes**.

- 1 Switch on the set you want to control.
2. Hold down the **S** (4) key until the **indicator lamp** (1) remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Press the key (3) that corresponds to the type of equipment you want to control:
TV: television set,
VCR/DVD: video cassette recorder, DVD player.
4. While the indicator is lit, type in the subcode (example: 1 for Thomson).
5. Direct the remote control towards the set and try to switch it off by pressing the \odot (2) key.
6. If the set you want to control switches off, press \times (6) to memorise the subcode.
7. If the product doesn't turn off, press the \odot (2) key repeatedly until the set switches off. Wait approximately one second between key presses to give the **indicator lamp** (1) enough time to go off and light up again. This will allow you to see whether the product responds or not.
8. Immediately upon the switching-off of the set to be controlled, press \times (6) to store the subcode.

Note:

If you want to assign another type of product than those mentioned on the remote control (with the exception of the **TV** button which can only be used to control a television set), begin by entering the code that corresponds to the product you want to programme (a 3-digit code that you will find in the code booklet - see method B).

Example: if you want to control a satellite receiver with the **VCR/DVD** key, begin by entering a satellite code (any satellite, for example: 603 for a Thomson satellite receiver) then begin the procedure.

Check of the programming:

In principle, your set is ready for receiving the remote control commands. Check your remote control for proper functioning by performing the test described on page 3.

Method B – 3-digit codes Programming

Before you start programming, you must find the code of the set to be controlled.

Refer to the list provided with these instructions, page II of the codes.

1. Switch on the set you want to control.
2. Hold down the **S (4)** until the **indicator lamp (1)** remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Press the key **(3)** that corresponds to the type of equipment you want to control:

TV: television set,

VCR/DVD: video cassette recorder, DVD player.

4. While the indicator is lit, enter the first digit of the 3-digit code proposed for the set to be controlled (example: **036** for Thomson). The red indicator then goes off if the code is correct or flashes, if the code is not on the list.
5. Direct the remote control towards the set and try to switch it off by pressing the **⏻ (2)** key.
6. Should the set not switch off, repeat step 2. Then type in the next 3-digit code. Try to switch off the set by pressing **⏻ (2)** key once. Repeat this procedure by trying out each of the 3-digit codes.

Check of the programming:

In principle, your set is ready for receiving the remote control commands. Check your remote control for proper functioning by performing the test described on page 3.

Method C – Programming by means of code retriever

Should none of the codes work, you still have the possibility of retrieving the appropriate code without having to perform any input.

1. Switch on the set you want to control.
2. Hold down the **S (4)** until the **indicator lamp (1)** remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Press the key **(3)** that corresponds to the type of equipment you want to control:

TV: television set,

VCR/DVD: video cassette recorder, DVD player.

4. Direct the remote control towards the set and try to switch it off by pressing the **⏻ (2)** key.
5. If the set you want to control switches off, press **⏏ (6)** to memorise the subcode.
6. Should the set not switch off, press **⏻ (2)** key, as many times as required (up to 200 times), until the set switches off. Wait approximately one second between key presses to give the **indicator lamp (1)** enough time to go off and light up again. Proceeding this way will enable you to see whether the set responds or not.
7. Immediately upon the switching-off of the set to be controlled, press **⏏ (6)** to store the subcode.

Note:

If you want to assign another type of product than those mentioned on the remote control, begin by entering a code that corresponds to the product you want to programme (a 3-digit code that you will find in the code booklet – see method B).

*Example: if you want to control a satellite receiver with the **VCR/DVD** key, begin by entering a satellite code (any satellite, for example: 603 for a Thomson satellite receiver) then begin the procedure.*

Check of the programming:

In principle, your set is ready for receiving the remote control commands. Check your remote control for proper functioning by performing the test described on page 3.

Method D - Automatic code search

With this method, the remote control scrolls through the full code list by sending an IR signal to the set to be controlled remotely. Proceed as follows:

1. Check that your equipment is on. If not, switch it on manually.
2. Hold down the **S (4)** until the **indicator lamp (1)** remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Release the **S (4)** key.
4. Press the key corresponding to the type of equipment (for example TV).
5. Press the **PROG+ (18)** key once. After a few seconds the remote control begins to list all the codes included in the library (around 1 code per second). Press **PROG+ (18)** a second time to reduce the speed of the test (1 code every 3 seconds). As soon as the device changes channel you must immediately press **⏏ (6)** to record the code and stop the listing. If you have gone past the code, you can go back to the previous code by pressing **PROG- (18)** as many times as necessary (you can go forward by pressing **⏻ (2)** or **PROG+ (18)**). As soon as the device reacts again, press **⏏ (6)** to record the code.

Note:

If you want to assign another type of product than those mentioned on the remote control, begin by entering a code that corresponds to the product you want to programme (a 3-digit code that you will find in the code booklet – see method B).

*Example: if you want to control a satellite receiver with the **VCR/DVD** key, begin by entering a satellite code (any satellite, for example: 603 for a Thomson satellite receiver) then begin the procedure.*

Method E – Programming for control of a COMBO (combined TV-VCR, TV/DVD, VCR/DVD, ... set)

*Depending on the COMBO group (TV/VCR, VCR/DVD, etc.) and the make, you will be required to enter a single code for both devices in the COMBO, or to enter two codes, one code per device. Consult the separate list to discover this. Before you start programming, you must find the **subcode** or **code** of the subset to be controlled (television or video recorder).*

*Refer to the list supplied with this user manual (see page **subcodes** or **codes**).*

1. Switch on the COMBO you want to control.
2. Hold down the **S (4)** until the **indicator lamp (1)** remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Press the **TV (3)** key, then follow one of the programming methods (A, B, C or D) described earlier.
4. If a second code programming is required, then repeat steps 2 and 3 above.

4 - How to retrieve a programmed code

It may be useful to retrieve the code programmed in the remote control.

1. Hold down the **S (4)** key until the **indicator lamp (1)** remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
2. Press the key **(3)** that corresponds to the type of equipment you want to control:
TV: television set,
VCR/DVD: video cassette recorder, DVD player.
3. Press **S (4)** again briefly. The **indicator lamp (1)** flashes once.
4. Press the number keys **(0 to 9)** in ascending order until the **indicator lamp (1)** flashes once.
5. The digit which made the **indicator lamp (1)** flash, is the first number of the 3-digit code. Please make note of it.
6. Repeat step 4 to find out the two other numbers of the code.
7. When the third number is found, the red indicator lamp **(1)** goes off.

5 - Check of the programming

 
- For a television or a satellite receiver: switch on and, for example, press **(18)** to change channels.

- DVD player: load a DVD and then press **PLAY (10)**.

Try other remote control keys to find out the range of functions you can control. If you think that not all of the keys are active, try the programming **Method B** or **C**.

When you have retrieved the code of your set, jot it down so that you can use it whenever needed.

After battery replacement, you may have to programme the remote control again.



6 - Other functions

Adjustment of ALL volume controls under a specific mode.

You can allocate the volume control to one of the modes of the remote control on condition that the volume control exists on the corresponding device (e.g. control of TV sound in VCR/TV mode).

1. Hold down the **S (4)** key until the **indicator lamp (1)** remains lit.
2. Release the **S (4)** key.
3. Press the **⏏ (6)** key. The **indicator lamp (1)** flashes once.
4. Press once on the mode key (**TV, VCR/DVD...**) corresponding to the device whose volume will always be controlled by the **VOL (7)** and **⏏ (6)** keys.
5. Press the **⏏ (6)** key once.

Adjustment of the volume controls for EACH mode.

You can decide that the volume control is functional for each mode selected on condition that the volume control exists on the corresponding device (e.g. control of the television set sound in TV mode, the control of the sound of the SAT receiver in SAT mode, ...).

1. Hold down the **S (4)** key until the **indicator lamp (1)** remains lit.
2. Release the **S (4)** key.
3. Press the **⏏ (6)** key. The **indicator lamp (1)** flashes once.
4. Press once on the mode key (**TV, VCR/DVD...**) corresponding to the device whose volume will always be controlled by the **VOL (7)** and **⏏ (6)** keys.
5. Press the **VOL - (7)** key once.
6. Press the **⏏ (6)** key once.

7 - The NAVILIGHT system

The THOMSON NAVILIGHT navigation system allows you easy access to the settings of your television set (TV) or your video recorder (VCR) fitted with the THOMSON NAVILIGHT system provided that you have allocated the **VCR/DVD** key to the video recorder.

1. Switch on the set you want to control.
2. Press the key corresponding to the type of set you want to use (**TV** or **VCR/DVD**). In the **VCR/DVD** position, make sure that the AV mode is activated for the TV set (the SCART socket must be selected).
3. Press the **S (4)** key once and then press the **⏏ (19)** key.
4. Navigate through the setting menus with the play keys **▲, ▼, ◀** and **▶ (18 and 7)**.
5. Validate with **OK (6)**.
6. To leave the menus, press key **EXIT (5)** once.

Note: The **S (4)** key remains on as long as light **1** is lit. If this light goes out, you have to press the **S (4)** key again before using the navigation keys. To exit this mode, press **S (4)** a second time.

THOMSON HELPLINE

You can contact THOMSON by dialling:
0871 712 1312
(For Great-Britain, all calls will be charged £0.10/min)
www.thomson-europe.com



ENGLISH - Do not mix different types of batteries or new and old batteries. Do not use rechargeable batteries. In order to avoid any risk of explosion, observe polarities indicated inside the battery compartment. Replace only with the type of batteries specified above. Do not throw them into fire, do not recharge them. If you are not using the remote control for a long period of time, remove the batteries. Please respect the environment and prevailing regulations. Before you dispose of batteries or accumulators, ask your dealer whether they are subject to special recycling and if they will accept them for disposal.

Français - Ne mélangez pas différents types de piles ou des piles neuves et usagées. N'utilisez pas de piles rechargeables. Afin d'éviter tout risque d'explosion, respectez les polarités indiquées au fond du compartiment à piles. Utilisez uniquement des piles du type spécifié. Ne les jetez pas au feu, ne les rechargez pas. Si vous n'utilisez pas la télécommande pendant une période prolongée, retirez les piles. Respectez l'environnement et la loi ! Avant de jeter des piles (ou des accumulateurs), informez-vous auprès de votre distributeur pour savoir si elles (ou ils) font l'objet d'un recyclage spécial, et s'il peut se charger de les récupérer.

DEUTSCH - Verwenden Sie nie Batterien unterschiedlicher Marken bzw. verbrauchte und neue Batterien. Keine wiederaufladbaren Batterien einsetzen. Achten Sie stets beim Einlegen der Batterien auf die Angabe der Polarisierungsrichtung. Batterien dürfen nicht in offenes Feuer geworfen werden. Wenn Sie Ihre Fernbedienung über längere Zeit nicht benutzen, nehmen Sie bitte die Batterien heraus. Batterien gehören nicht in den Hausmüll. Als Verbraucher sind Sie gesetzlich verpflichtet, gebrauchte Batterien zurückzugeben. Sie können Ihre alten Batterien bei den öffentlichen Sammelstellen in Ihrer Gemeinde oder überall dort abgeben, wo Batterien der betreffenden Art verkauft werden.

ITALIANO - Non mescolate diversi tipi di batterie e non utilizzate batterie vecchie e nuove allo stesso tempo. Non utilizzate batterie ricaricabili. Al fine di evitare qualsiasi rischio di esplosione, rispettate le polarità indicate all'interno del vano batterie. Sostituite solo con il tipo di batteria sopra specificato. Non gettatele nel fuoco, non ricaricatele. Se non utilizzate il telecomando per un lungo periodo, togliete le batterie. Rispettate l'ambiente e la legge! Prima di gettar via le pile (o gli accumulatori) informatvi presso il vostro distributore per sapere se sono o no oggetto di riciclaggio speciale e se può incaricarsi di recuperarli.

ESPAÑOL - No mezcle diferentes tipos de pilas, nuevas y antiguas. No utilice pilas recargables. Para evitar riesgos de explosión, respete las polaridades indicadas en el compartimento de las pilas. Sustituya las pilas por otras iguales a las especificadas anteriormente. No las quemé y no las recargue. Si no tiene que utilizar el mando a distancia durante un periodo prolongado de tiempo, retire las pilas. ¡Respete el medio ambiente y la ley! Antes de tirar las pilas o acumuladores, pregunte a su distribuidor si éstas son objeto de algún reciclaje especial y si él puede encargarse de su recuperación.

NEDERLANDS - Mix geen verschillende batterijen of oude en nieuwe batterijen. Gebruik geen oplaadbare batterijen. Respecteer de polariteit zoals aangegeven in het batterij compartiment om de kans op een eventuele explosie te voorkomen. Alleen vervangen met het batterijtype zoals hierboven aangegeven. Gooi batterijen nooit in het vuur, niet herladen. Indien u de afstandsbediening langere tijd niet gebruikt, verwijder dan de batterijen. Eerbidlyc de natuur en de wetgeving! Alvorens de batterijen (of de accumulator) weg te werpen, vraag aan uw dealer of deze het voorwerp uitmaken van een bijzondere recycling en of hij belast is met de ophaling ervan.

PORTUGUÊS - Não misture diferentes tipos de pilhas ou pilhas novas e antigas. Não utilize pilhas recarregáveis. Para evitar qualquer risco de explosão, respeite as polaridades indicadas no compartimento das pilhas. Substitua as pilhas por outras iguais às especificadas anteriormente. Não as queime nem as recarregue. Se não utilizar o telecomando durante um longo período de tempo, retire as pilhas. Respeite o ambiente e a lei! Antes de deitar fora as pilhas (ou os acumuladores) informe-se junto do seu distribuidor para saber se elas (ou eles) estão sujeitas (o)s a uma reciclagem especial e se ele pode encarregar-se de as/os recuperar.

ΕΛΛΗΝΙΚΑ - Μην χρησιμοποιείτε μαζί καινούργιες και παλιές μπαταρίες. Μην χρησιμοποιείτε επαναφορτιζόμενες μπαταρίες ή γα να αποφεύγετε τον κίνδυνο έκρηξης. Σεβαστείτε την πολιτικότητα στην τοποθέτηση των μπαταριών. Επαναποθετήστε μόνο με τον ίδιο τύπο μπαταριών που αναγράφονται παραπάνω. Μην πετάτε τις μπαταρίες στην φωτιά. Μην τις επαναφορτίσετε. Αν δεν χρησιμοποιείτε το τηλεχειριστήριο για πολύ καιρό βγάλτε τις μπαταρίες. Προστατέψτε το περιβάλλον και τηρείτε το νόμο ! Πριν πετάσετε μπαταρίες μιας χρήσης (ή επαναφορτιζόμενες), επικοινωνήστε με το διακομιστή σας και ρωτήστε τον αν οι μπαταρίες υφίστανται ειδική ανακύκλωση και αν ο ίδιος αναλαμβάνει να τις πάρει πίσω.

РУССКИЙ - Не устанавливайте вместе новые и старые батарейки, не используйте батарейки различных типов и подзаряжаемые батарейки. Во избежание взрыва соблюдайте полярность, указанную внутри отсека для батарей. Заменяйте батарейки только батарейками указанного выше типа. Не выбрасывайте их в огонь, не заряжайте их. Если вы не намерены пользоваться пультом дистанционного управления в течение длительного времени, выньте батарейки из отсека для батарей. Бережно относитесь к окружающей среде и соблюдайте законы! Перед тем, как избавиться от старых батареек (или аккумуляторов) свяжитесь с торговой организацией, чтобы узнать, не принимает ли она их для переработки и утилизации.

POLSKI - Nie mieszaj różnych typów baterii ani nie używaj nowych baterii razem ze starymi. Nie używaj akumulatorów. Aby uniknąć ryzyka wybuchu, wkładaj baterie zgodnie ze znakami biegunów wewnątrz kieszeni na baterie. Wymieniaj jedynie na baterie podanego wyżej typu. Nie wyrzucaj baterii do ognia, ani nie ładuj ich ponownie. Jeżeli przez długi okres nie używasz pilota, wyjmij baterie. Szanuj środowisko naturalne i przestrzegaj praw! Zanim wyrzucisz zużyte ogniwia (lub akumulatory), dowiedz się u dystrybutora, czy podlegają one recyklingowi i czy może on je do Ciebie w tym celu odebrać.

ČEŠTINA - Nepoužívejte baterie různých typů, neměchejte staré baterie s novými. Nepoužívejte dobíjecí baterie. Při vkládání baterií dbejte na správnou polaritu, vyznačenou uvnitř bateriového pouzdra, při nedodržení polarity hrozí nebezpečí exploze. Baterie nahraďte pouze výše specifikovaným typem. Baterie nevrhujte do ohně a nedobíjejte je. Pokud nebudete dárkový ovladač delší dobu používat, baterie vyjměte. Chraňte životní prostředí a dodržujte zákon! Než vyhodíte článkové (nebo akumulátory) baterie do odpadu, informujte se u prodejce přístroje, zda není organizován sběr použitých baterií a jejich speciální recyklace v souladu s právní úpravou na ochranu životního prostředí.

MAGYAR - Ne keverje a különböző típusú illetve a régi és az új elemeket. Ne használjon újratölthető elemeket sem. A tartóban jelölt polaritás szerint helyezze be a megfelelő elemeket. A kimerült elemeket tilos tűzbe dobni és újratölteni. Ha hosszabb ideig nem használja a távirányítót vegye ki belőle az elemeket. Tartsa tiszteltben a környezetet és a törvényt! Az elemek (vagy az akkumulátorok) szemétté történő kibocsátása előtt kérje meg eladójától, hogy azok részt vesznek-e egy speciális újrafeldolgozási programban, illetve foglalkozik-e a kimerült elemek (akkumulátorok) összegyűjtésével.

SVENSKA - Blanda inte olika sorters batterier eller nya med gamla batterier. Använd inte uppladdningsbara batterier. Det är viktigt att batterierna sätts i på rätt sätt och att den rekommenderade typen av batterier används. Utsätt aldrig batterierna för eld. Om fjärrkontrollen inte används under lång tid rekommenderar vi att batterierna tas ut. Tänk på miljön! Förbrukade batterier (eller uppladdningsbara batterier) läggs i de speciella uppsamlingslådor som finns uppstapla i din kommun, eller återlämnas till en återförsäljare av batterier för återvinning.

NORSK - Bland ikke ulike typer batterier eller nye og gamle batterier. Bruk ikke oppladbare batterier. Det er viktig at batteriene settes i på riktig måte og at den anbefalte typen batterier benyttes. Utsett aldri batteriene for ild. Om fjernkontrollen ikke benyttes over lang tid anbefaler vi at batteriene tas ut. Tenk på miljøet. Oppbrukte batterier (eller oppladbare batterier) legges i spesielle oppsamlingsplasser som du blant annet finner hos de fleste forhandlere av forbrukerelektronikk.

DANSK - Forskellige typer af batterier bør ikke blandes så som gamle og nye batterier. Benyt ikke genopladelige batterier. For at undgå en eksplosion bør de respektive pol indikationer som er markeret på indersiden af produktet, hvor batterierne skal sættes i. Erstat kun batterierne med de ovennævnte typer. Batterier må ikke kastes ind i ild, og må ikke genoplades. Hvis De over en længere periode ikke benytter fjernbetjeningen, skal batterierne tages ud. Respekter miljøet og lovgivningen! Indes De smider batterier (eller akkumulatører) ud, bør De henvende Dem til Derss forhandler for at få at vide, om disse indgår i en special genbrugsordning, og om de således kan afleveres hos forhandleren.

SUOMI - Älä käytä sekaisin erilaisia paristoja, esim. uusia ja vanhoja. Rajähälyvooron vältämiseksi laita paristat oikein pain paristokoteloon. Ohjeet löydät paristokotelon pohjasta. Käytä vain yllä mainitun tyypin paristoja. Älä heitä vanhoja paristoja tulen alkoi laato niitä uudelleen. Mikäli et käytä kauko-ohjainta pitkään aikaan, poista paristat kauko-ohjaimesta. Noudata lakia ja kunnioita luontoa! Ennen kuin heität kuluneet paristot (tai akut) jätteisiin, niin kysy jälleenympästä kuuluvako ne mahdollisesti erikoiskierätykseen ja kerääkö hän ne talteen.

ROC2206


Model and serial number



THOMSON Sales Europe
46, quai A. Le Gallo
92648 Boulogne Cedex
FRANCE
322 019 464 RCS NANTERRE
<http://www.thomson-europe.com>


  36114510 © Copyright THOMSON 2006

Dealer's address

- | | |
|-----------------------|---------------------------|
| GB Subcodes | RU Подкоды |
| F Sous-codes | PL Kody pomocnicze |
| D Unter-codes | CZ Podkódy |
| I Sotto-codici | H Alkódok |
| E Subcódigos | S Underkoder |
| NL Subcodes | N Underkoder |
| P Sub-códigos | DK Underkoder |
| GR Υποκωδικοί | SF Alakoodit |

 TV							
THOMSON BRANDT	TELEFUNKEN SABA NORDMENDE BAIRD FERGUSON	GRUNDIG BLAUPUNKT	NOKIA FINLUX ITT, LUXOR DANTAX, BEKO PROSONIC	FOR FUTURE USE	FOR FUTURE USE	PHILIPS ERRES PYE PHILCO RADIOLA	SONY, AKAI PANASONIC JVC, SHARP TOSHIBA DAEWU
1	2	3	4	5	6	7	8

 DVD  VCR							
THOMSON BRANDT	TELEFUNKEN SABA NORDMENDE BAIRD FERGUSON	GRUNDIG BLAUPUNKT	NOKIA FINLUX ITT, LUXOR DANTAX, BEKO PROSONIC	FOR FUTURE USE	FOR FUTURE USE	PHILIPS ERRES PYE PHILCO RADIOLA	SONY, AKAI PANASONIC JVC, SHARP TOSHIBA DAEWU
1	2	3	4	5	6	7	8

 SAT							
THOMSON BRANDT	TELEFUNKEN SABA NORDMENDE FERGUSON	GRUNDIG	NOKIA FINLUX ITT LUXOR	FOR FUTURE USE	FOR FUTURE USE	PHILIPS PHILCO	PACE ECHOSTAR
1	2	3	4	5	6	7	8



TV codes

ACME 005
 ADA 002
 ADC 012, 005
 ADMIRAL 019, 108, 002, 001, 047, 000
 ADPSON 003
 ADZ 002
 AER 123
 AERO 003, 009, 004
 AINA 184, 248, 291
 AIAN 011, 086, 009, 068, 004, 006, 008, 051, 061, 088, 169, 200, 133, 141, 069
 AIRBA 011
 AIRBA 169, 074, 002, 009, 011, 071
 ALBA 028, 027, 009, 011, 003, 068, 083, 169, 047, 245, 248, 162, 062
 ALBAIRAL 037
 ALIOS 164
 ALLEGRA 157, 026
 ALLSTAR 051
 AMPLEYSON 003
 ANASTRAD 011, 009, 068, 074, 002, 108, 071, 049, 030, 123, 013
 ANAM 009, 045, 109
 ANGO 009
 ANITECH 009, 002, 043, 109
 ANSONIC 009, 014
 ANSAR 003
 ARI EN CIEL 126, 045, 139
 ARISTONAL 169, 051
 ARTHUR MARTIN 158
 ASA 017, 110, 016, 018, 000, 021
 ASBERG 051, 043
 ASTRA 009
 ASCUA 011, 002, 003
 ATLANTIC 169, 003, 051, 157
 ATOR 009
 AUDISONIC 009, 003, 169, 011, 051, 139, 157, 090
 AUDISON 003
 AUSNO 043
 AUTOVOK 003, 002, 101, 157, 000, 125, 043
 BAIRD 111, 139, 245
 BANG & OLUFSON 199, 000
 BARCO 112
 BASIC LINE 009, 011, 051, 245
 BASTRE 003
 BAUR 169, 118, 074, 141, 132
 BEKO 042, 083, 084, 007
 BEON 169, 051
 BEST 113
 BESTAR 051, 245
 BINATONE 003
 BLACK DIAMOND 171
 BLACK PANTHER LINE 245
 BLACK STAR 129
 BLUEPRINT 117, 202, 135, 008, 022, 100
 BLUE SKY 011
 BLUE STAR 120
 BONDTEC 129
 BOOTS 003
 BPL 120
 BRAND 127, 045, 022, 036, 126, 139, 046
 BRON VEGA 051, 169, 000
 BRETANIA 003
 BROWSONIC 920
 BRUNS 000, 007
 BSR 131, 026
 BTC 011
 BUSH 008, 027, 032, 009, 011, 019, 205, 009, 051, 068, 169, 107, 115, 131, 139, 167, 245, 248, 024, 132, 120, 042
 CAPSICOM 002
 CARREFOUR 027
 CASCADE 009
 CATHAY 051, 169
 CENTRUM 168, 205
 CENTURION 051, 169
 CENTURY 000
 CSE 129, 047, 131, 043
 COMLINE 009, 028
 CITY 009
 CLARVOK 169, 037
 CLATRONIC 009, 011, 051, 002, 083, 003, 129, 030, 043
 COMBITECH 248
 CONCORD 009
 CONCOR 198, 051, 083, 003, 245
 CONTEC 002, 009, 027, 030, 029
 CONTINENTAL EDISON 002, 111, 036, 045, 126, 139, 046
 COSMEL 009
 CROSLY 129, 131, 000, 043
 CROWN 009, 169, 083, 047, 051, 245, 121, 043
 CS ELECTRONICS 011, 129, 003
 CTC 129
 CTC CLATRONIC 014
 CYBERON 177, 038, 171, 002, 009, 206, 205, 207, 208, 210, 169, 042, 044, 127, 047, 061, 063, 067, 068, 103, 107, 115, 154, 168, 185, 229, 209, 894, 924, 933, 248, 291
 CYBERMAX 177, 038, 171, 002, 009, 206, 205, 207, 208, 210, 211, 169, 015, 042, 044, 047, 048, 049, 061, 063, 067, 068, 087, 103, 107, 115, 127, 154, 155, 168, 170, 185, 229, 209, 894, 924, 933, 248, 291
 CYBIDON 177, 038, 171, 002, 009, 206, 205, 207, 208, 210, 211, 169, 015, 042, 044, 047, 048, 049, 061, 063, 067, 068, 087, 103, 107, 115, 127, 154, 155, 168, 170, 185, 229, 209, 894, 924, 933, 248, 291
 CYBERTRON 011
 DAEWOOD 094, 009, 191, 003, 051, 115, 245
 DANISH 011
 DANISA 002, 169, 051
 DANTEK 171, 161, 169, 088, 034, 113
 DANTELA 009
 DANTON 009
 DANTRON 245
 DE GRAAF 019, 006, 003
 DECCA 003, 169, 004, 051, 123, 030
 DELL 025
 DESNET 051, 169
 DIGITON 227, 228
 DISNEY 148
 DITL 009, 169, 051
 DIS 009
 DUAL 177, 038, 171, 002, 009, 206, 207, 208, 169, 042, 044, 127, 047, 061, 063, 067, 068, 083, 103, 107, 115, 126, 131, 139, 154, 160, 168, 228, 343, 924, 933, 248, 291, 125, 089
 DUAL-TEC 009, 131, 003
 DUNNONT 003, 014, 017, 018, 000
 DUX 169
 DYNARON 051, 169
 ELBE 108, 157, 037
 ELCO 000
 ELECTRO TECH 000
 ELEKTA 120

ELIN 051, 003, 169, 016, 018
 ELITE 011, 051
 ELMAN 014, 131
 ELTA 009
 ENERSON 141, 127, 000
 ERRES 169, 051
 ESC 245
 ETRON 009
 EUROFEEL 002
 EUROLINE 149, 169, 088
 EUROMAN 002, 051, 003
 EUROPHON 003, 014, 051, 131, 123
 EXPERT 157
 FENNER 009, 115
FERGUSON 127, 166, 035, 169, 036, 050, 052, 111, 163, 037
 FIDELITY 003, 019, 068, 074, 096
 FINLANDIA 019, 006, 110, 128
 FINLEY 061, 087, 063, 003, 004, 016, 167, 110, 131, 157, 169, 051, 017, 018, 014, 000, 123, 043
 FINESTONE 003, 129, 051, 061, 042, 024
 FISHER 004, 003, 018, 083, 131, 000, 027, 029, 040
 FLINT 051, 113
 FORNENTI 001, 169, 003, 131, 133, 000, 043, 125
 FORTRESS 001, 000
 FRONTech 019, 002, 009, 068, 118, 129, 120, 021
 FUJITSU 116, 004, 157
 FUNAI 002, 026
 GALXY 047, 083
 GEC 009, 027, 131
 GEC 169, 003, 004, 041, 051, 141, 123, 132
 GEOSCO 019, 009, 131
 GENERAL TECHNIC 009, 248
 GENEXIA 011, 051, 021
 GOLDSTAR 084, 129, 003, 009, 019, 051, 131, 169, 171, 261, 012, 093
 GOODMAN 009, 111, 002, 004, 027, 169, 028, 051, 068, 115, 127, 171, 245, 283, 093
 GORENIE 083
 GPR 011
 GRAMA 141, 142, 021
 GRANADA 177, 019, 003, 004, 149, 027, 031, 051, 054, 004, 064, 133, 138, 128, 040, 043, 123
 GRUNDON 009, 169, 011, 245, 120
 GRUNDIG 117, 091, 114, 101, 135, 008, 017, 136, 043
 H & B 343, 228
 HAAT 228
 HALIFAX 002, 003
 HAMPTON 003
 HANSEATIC 009, 003, 027, 169, 051, 083, 118, 131, 141, 007, 026
 HANWOOD 009, 123
 HANWOOD 177
 HCOL 002, 003, 009, 074, 120
 HEFVOK 139
 HINARI 171, 009, 011, 027, 051, 064, 169, 248, 043, 137
 HSAMA 011, 113, 120
 HENSEN 156
 HITACHI 027, 019, 085, 134, 153, 213, 140, 144, 003, 118, 004, 016, 023, 041, 045, 047, 131, 133, 138, 139, 141, 021, 044, 033, 123, 142
 HOSHINA 011
 HOSHYPPON 051
 HUANYU 003, 115
 HYGASHI 003
 HYPER 003, 009, 129, 131
 HYPSON 002, 003, 051, 169, 120
 ICE 009, 002, 003, 011, 051, 068
 IMPERIAL 047, 051, 083, 129, 131, 021, 043
 INDESIT 024, 101
 INDIANA 051, 169
 INGENEL 022
 INGENSO 009
 INNO HIT 009, 011, 003, 004, 051, 169, 245, 093, 123
 INNOVATION 171, 111, 002, 009, 169, 061, 067, 068, 103, 107, 115, 154, 168, 177, 248, 291
 INTERBUY 009, 129, 109
 INTERFUNK 051, 129, 169, 139, 141, 000, 021
 INTERTRONIC 894
 INTERVISION 002, 003, 014, 109
 IRIDIUM 009, 011, 051, 169, 068
 ISHOW 011
 ITEC 003, 131
 ITS 011, 051, 068, 120
 ITT 061, 009, 143, 031, 133, 141, 021, 142, 132
 ITT/INDIA 133, 142, 021
 ITV 169, 171, 009, 088, 245
 JEC 164
 JVC 051, 053, 027, 068
 JANSO 009, 011, 003, 120
 JANSONIC 003
 JAMP 003
 JAPSKIC 157, 021
 JARDNER 169, 003, 009, 016, 037
 KENDO 019, 014, 028, 108, 245
 KENNEDY 131, 157
 KINESLEY 003
 KINESSEL 174
 KLOSTER 051
 KOMA 047, 068, 229, 011
 KORBEL 051, 169
 KORTING 009
 KYDON 009
 KYTA 003
 KURO 121
 KYOD 037
 LENO 009, 245
 LENOIR 003, 009
 LESA 129
 LETICO 169, 002, 004, 051, 026
 LG 084, 119, 129, 149, 019, 003, 051, 088, 131, 169, 171, 009, 261, 093
 LENSEN 169
 LIFE 002, 009, 061, 067, 068, 103, 107, 115, 154, 168, 169, 171, 177, 291
 LIFE-TEC 177, 038, 171, 002, 009, 206, 205, 207, 208, 210, 211, 169, 015, 042, 044, 047, 048, 049, 061, 063, 067, 068, 087, 103, 107, 115, 127, 154, 155, 168, 170, 185, 229, 209, 894, 924, 933, 248, 291
 LOEWE 097, 008, 051, 169, 000
 LOGIK 030
 LUMA 019, 169, 141, 157
 LUMATRON 002, 171, 019, 088, 051, 074, 169, 107, 141, 157, 245
 LUX HAV 051
 LUXOR 141, 019, 047, 003, 077, 138, 093, 132
 MELETRONIC 009, 014, 169, 018, 003, 036, 051, 068, 110, 115, 139, 021, 109
 M-P 133
 MAGNADYNE 014, 129, 131, 169, 000, 123
 MAGNATON 003, 014, 043, 123
 MAGNUM 002, 111, 009, 169, 171, 061, 067, 068, 103, 107, 115, 154, 168, 177, 200, 291
 MAOSCO 002
 MANSPI 002, 169, 003, 028, 051
 MARATE 051, 169
 MARTELL 000
 MARK 051, 169

ANISUI173, 099, 091, 027, 180, 028, 147, 003, 004, 009, 019, 051, 068, 101, 164, 169, 248, 113, 123, 013, 042, 026, 030
 ANTSUSHITA065
 ANTONIO041
 ANTONOR051, 169
 ANTONOR177, 038, 171, 002, 009, 206, 200, 205, 207, 208, 210, 211, 169, 015, 042, 044, 047, 048, 049, 061, 063, 067, 068, 087, 103, 107, 115, 127, 148, 154, 155, 168, 170, 185, 228, 229, 209, 894, 943, 924, 933, 248, 291
 ANTONOR009, 720
 ANTONOR004, 009
 ANTE001, 135, 151, 152, 000, 075
 ANTONOR177, 038, 171, 002, 009, 206, 200, 205, 207, 208, 210, 211, 169, 015, 042, 044, 047, 048, 049, 061, 063, 067, 068, 087, 103, 107, 115, 127, 148, 154, 155, 168, 170, 185, 228, 229, 209, 894, 943, 924, 933, 248, 291
 ANTONOR177, 038, 171, 002, 009, 206, 200, 205, 207, 208, 210, 211, 169, 015, 042, 044, 047, 048, 049, 061, 063, 067, 068, 087, 103, 107, 115, 127, 148, 154, 155, 168, 170, 185, 228, 229, 209, 894, 943, 924, 933, 248, 291
 ANTONOR017, 101, 135
 ANTONOR051
 ANTONOR000, 027, 030, 051, 054, 057, 060, 090, 101, 113, 135, 205
 ANTONOR055, 063, 063, 093, 123, 043
 ANTONOR043
 ANTONOR132
 ANTONOR090
 ANTONOR169
 ANTONOR003, 009, 014, 019, 169, 027, 045, 129, 131, 043
 ANTONOR003, 133, 018
 ANTONOR141
 ANTONOR099
 ANTONOR019, 108
 ANTONOR084, 101
 ANTONOR195, 027, 054
 ANTONOR003, 169, 008, 019, 022, 051, 083, 118, 132, 000
 ANTONOR051, 068, 169, 113
 ANTONOR129
 ANTONOR009, 051
 ANTONOR011
 ANTONOR003
 ANTONOR002, 003, 164, 004, 011, 051, 169
 ANTONOR003, 014, 043
 ANTONOR139
 ANTONOR061, 143, 063, 141, 077, 133, 021, 132, 142
NORMANDE
 ANTONOR111, 127, 036, 045, 051, 126, 139, 044, 000, 021, 024
 ANTONOR169
 ANTONOR141, 142, 021
 ANTONOR083
 ANTONOR083
 ANTONOR069
 ANTONOR051
 ANTONOR167, 159, 009, 212, 028, 051, 154, 169, 171, 920, 248, 283, 123, 142, 030, 013, 062, 075, 026
 ANTONOR205
 ANTONOR011, 002, 003, 004, 074
 ANTONOR011
 ANTONOR004, 029
 ANTONOR003, 169, 008, 001, 027, 051, 076, 111, 118, 131, 139, 141, 120, 121, 132
 ANTONOR204, 203
 ANTONOR003
 ANTONOR003, 083, 012
 ANTONOR002, 003, 009
 ANTONOR065, 064, 197, 072, 186, 101, 141, 021, 151, 142, 124, 152, PÔLE CINEMA, 003, 083, 131, 037
 ANTONOR022, 045, 126, 139, 037, 046
 ANTONOR009
 ANTONOR004
 ANTONOR047, 129, 131, 000, 043
 ANTONOR003
 ANTONOR200, 088, 217, 202, 020, 169, 003, 041, 181, 339, 051, 083, 111, 115, 131, 141, 154, 000, 043, 089
 ANTONOR042, 095
 ANTONOR051, 169, 000
 ANTONOR051, 169, 000
 ANTONOR010, 145, 036, 051, 139, 169, 021
 ANTONOR002, 051
 ANTONOR009
 ANTONOR245
 ANTONOR019, 141, 123
 ANTONOR003
 ANTONOR009, 021
 ANTONOR047
 ANTONOR177, 038, 171, 002, 009, 206, 200, 205, 207, 208, 210, 211, 169, 015, 042, 044, 047, 048, 049, 061, 063, 067, 068, 087, 103, 107, 115, 127, 148, 154, 155, 168, 170, 185, 228, 229, 209, 894, 943, 924, 933, 248, 291
 ANTONOR009, 141, 043
 ANTONOR171
 ANTONOR051
 ANTONOR004, 051, 067
 ANTONOR161, 169, 003, 015, 042, 088, 107, 200, 068, 245
 ANTONOR002, 003, 009, 169, 014, 051, 129, 131, 132, 113
 ANTONOR169, 171
 ANTONOR169, 051, 068
 ANTONOR009
 ANTONOR129
 ANTONOR169, 205, 002, 003, 014, 022, 051, 129, 131, 135, 141, 017, 018, 026, 030
 ANTONOR027
 ANTONOR051, 169
 ANTONOR051, 007
 ANTONOR129, 000, 123
 ANTONOR016, 018
 ANTONOR017, 027
 ANTONOR081
 ANTONOR031
 ANTONOR141
 ANTONOR051, 169
 ANTONOR019, 002, 108, 157, 021
 ANTONOR000, 007
 ANTONOR051, 169
 ANTONOR002, 009, 011, 245
 ANTONOR000
 ANTONOR112, 111, 126, 036, 045, 139, 141, 245, 142, 046, 000, 123, 021
 ANTONOR037
 ANTONOR028, 002, 003, 009, 248, 030, 123, 013
 ANTONOR019, 037, 047, 061, 107, 108, 118, 131, 138, 141, 093, 121, 128, 132, 021
 ANTONOR014, 169, 043, 123
 ANTONOR090, 104, 009, 051, 172, 083, 002, 160, 003, 004, 012, 030, 105, 093
 ANTONOR003, 009
 ANTONOR051, 720
 ANTONOR004, 006, 001, 003, 027, 016, 018, 083, 127, 140, 131, 029, 030, 040, 043
 ANTONOR248
 ANTONOR041, 169
 ANTONOR141, 021, 142
 ANTONOR177, 003, 169, 011, 051, 068, 131, 139, 140, 245, 264, 071, 125
 ANTONOR171, 002, 205, 003, 169, 009, 014, 027, 088, 129, 131, 043
 ANTONOR014, 013, 021, 026, 075, 123, 000
 ANTONOR019, 027, 131, 108, 157, 021
 ANTONOR009
 ANTONOR164
 ANTONOR001, 059, 005, 027, 187, 188, 029
 ANTONOR026

SIEMEN014, 131, 000, 123
 SIEMEN037
 SIEMEN008, 022, 200, 135, 029
 SIEMEN051
 SIEMEN160
 SIEMEN027
 SIEMEN014, 131, 129, 228, 000
 SIEMEN014, 131, 169, 028, 000, 075, 013, 026
 SIEMEN138, 021
 SIEMEN218
 SIEMEN028
 SIEMEN092, 021
 SIEMEN006, 031
 SIEMEN009, 002, 169, 003, 051, 245
 SIEMEN006, 021
 SIEMEN051, 169, 160
 SIEMEN165, 130, 183, 106, 076, 027, 127, 009, 004, 182, 029, 030
 SIEMEN011, 014
 SIEMEN051, 149
 SIEMEN003, 009, 011, 051, 245
 SIEMEN169
 SIEMEN120
 SIEMEN019, 157, 021
 SIEMEN009, 026, 062
 SIEMEN009, 051
 SIEMEN003
 SIEMEN118
 SIEMEN009
 SIEMEN011
 SIEMEN009
 SIEMEN003
 SIEMEN169
 SIEMEN157, 026
 SIEMEN001, 003, 004, 011, 133, 021
 SIEMEN003, 019, 027, 041, 056, 128
 SIEMEN051, 003, 094, 169, 123
 SIEMEN177, 038, 171, 002, 009, 206, 200, 205, 207, 208, 210, 169, 042, 044, 047, 061, 063, 067, 068, 103, 107, 115, 127, 148, 154, 155, 168, 170, 185, 228, 229, 209, 894, 943, 924, 933, 248, 291
 SIEMEN003, 009, 129, 131, 133
 SIEMEN045
 SIEMEN154
 SIEMEN022, 036, 045, 111, 126, 139
TELEFUNKEN
 SIEMEN166, 111, 127, 190, 022, 035, 163, 101, 102, 036, 050, 051, 052, 078, 108, 126, 139, 079
 SIEMEN169, 009, 088, 129, 113
 SIEMEN003, 157, 118, 132
 SIEMEN177, 038, 171, 002, 009, 206, 200, 205, 207, 208, 210, 211, 169, 015, 042, 044, 047, 048, 049, 061, 063, 067, 068, 087, 103, 107, 115, 127, 148, 154, 155, 168, 170, 185, 228, 229, 209, 894, 943, 924, 933, 248, 291
 SIEMEN011, 168, 015, 026
 SIEMEN051
 SIEMEN003
THOMSON
 SIEMEN166, 127, 111, 003, 022, 036, 045, 176, 101, 102, 050, 051, 052, 126, 139, 163, 185, 245, 046
 THOMSON004, 018, 169, 035, 054, 111, 127, 141, 164, 037
 THOMSON004, 051
 THOMSON003
 THOMSON117, 144, 189, 027, 146, 017, 920, 082
 THOMSON131, 021
 THOMSON013, 123, 082
 THOMSON051, 157, 021, 043
 THOMSON003, 014, 129, 131, 133, 000
 THOMSON088, 169
 THOMSONUNITE QUICK STAR, 245
 THOMSON102, 002, 016, 018, 051, 061, 169, 083, 110, 122, 129, 131, 143
 THOMSON037
 THOMSON019, 051, 169, 171, 083, 092, 103, 107, 118, 129, 131, 138, 168, 195, 205, 021
 THOMSON169, 009
 THOMSON027, 051, 045
 THOMSON011, 003
 THOMSON248
 THOMSON129
 THOMSON051
 THOMSON003
 THOMSON051
 THOMSON096
 THOMSON133
 THOMSON051, 169
 THOMSON019, 051, 108, 021, 043, 000
 THOMSON003, 133, 138, 037
 THOMSON051, 169
 THOMSON003, 014, 131, 037
 THOMSON000, 007
 THOMSON051, 169
 THOMSON131
 THOMSON099
 THOMSON169, 003, 014, 043
 THOMSON009, 011, 051, 169, 002, 003
 THOMSON011
 THOMSON019, 157, 108



DVB-T/TNT/DTT/TDT codes

DVB-T : Digital Video Broadcast Terrestrial (GB)
 TNT : Télévision Numérique Terrestre (F)
 DTT : Télévision Digitale Terrestre (I)
 TDT : TV Digital Terrestre (E)

ALBA451, 646
 BUSH451, 032
 CYBERMAXX645, 650
 CYTRON645, 650
 DIGENIUS645
 DIGIFUSION647
 ECHOSAR657
 FRESHVIEW447, 451, 453, 457, 482, 512, 513, 519, 526, 532, 600, 646, 647, 648, 649, 651
 GEMCON443
 GOODMANS451, 526
 GRUNDIG512
 HAUPFRUHE482
 HITACHI526
 HUMANIX651
 JVC526
 LABGEAR513
 LIDCOM451
 LIFEET645, 650
 MARQUEE OCTOPUS657
 MATSUI649, 524, 651
 MEDION645, 650
 MICROMAXX645, 650
 MICROSTAR645, 650
 NOKIA519, 531
 OPTEX656
 ORIONDIGITAL527, 531, 620
 PACE453, 527
 PANASONIC072
 PHILIPS600
 PIONEER457, 620

PREMIERE 400, 519
 PROZ 445, 450
 REBOX 476
 SAGEM 648
 SCHNABER 630
 SHARP 059
 SONY 447
 TOSHIBA 445, 450
THOMSON 332
 TOP-UP TV 527, 531, 657



DVD codes

ACOUSTIC SOLUTIONS 383
 AEG 894, 333
 AIREFY 384
 AUNA 377, 383
 AKAI 349, 333, 382
 AKASHI 346
 ALBA 384, 350, 381, 357
 ALL-TEL 333
 AMES 383
 ANSTRAD 350
 ANIBA 961
 ANSONIC 356
 APEX 921, 384, 357, 911, 390, 913, 949
 ARENA 923
 ASPRE 952
 A-TREND 347
 AXON 942
 AUDIOSONIC 382
 AUDIOVOX 942
 BAER 349
 B & K 978
 BLACK DIAMOND 350
 BLAUPUNKT 384
 BLUE SKY 373, 357, 350
 BUSH 384, 382, 350, 381, 356
BRANDT 373, 340
 BROOKSONIC 920, 947
 CAMBRIDGE 376
 CENTREX 357
 CENTROS 952, 951, 954, 955
 CENTRON 932
 CENTRUM 346, 926, 928, 927, 350
 CINETIC 350
 CINEVISION 375
 CLATRONIC 357, 894
 CLASSIC 383
 CMI 923
 COBY 332, 916, 946, 947, 948, 357, 221
 COTERON 344
 CROWN 373, 382
 C-TECH 341
 CURTIS 920, 948
 CYBERCOM 354, 930, 932, 930, 335, 339, 340, 341, 342, 345, 352, 358, 371, 923, 343, 924, 933, 338, 334, 344, 464, 464, 464
 CYBERHOME 347, 912, 985
 CYBERLINK 220
 CYBERMAXX 354, 930, 373, 932, 330, 335, 339, 340, 341, 342, 345, 352, 358, 371, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 923, 905, 343, 924, 933, 375, 906, 338, 372, 334, 344, 464, 464, 464
 CYTRON 356, 930, 373, 932, 330, 335, 339, 340, 341, 342, 345, 352, 358, 371, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 923, 905, 343, 924, 933, 375, 906, 338, 372, 334, 344, 464, 464, 464
 DAEWOO 353, 354, 965, 355, 971, 947, 925
 DANSA 351
 DAYTRON 925
 DCE 356
 DENZEL 392
 DENON 364, 389
 DENVER 381
 DESAF 958
 DIAMOND 373, 341
 DIGITALME 920
 DISK 942
 DIGITREX 357
 DIGITRON 386
 DISNEY 339, 902
 DK DIGITAL 356
 DIK 356
 DIVY 375, 932
 DIVISION 357, 333
 DORCO SYSTEMS 356
 DUNL 334, 344, 464
 DURABRAND 333, 375
 DVD 1024 929
 ELTA 365, 382, 894, 333
 EMERSON 339, 375
 ENCORE 386
 ENCLER 392
 EUROLINE 894
 EUROSTAT 350
 ESA 954
 FARENHEIT 940
FERGUSON 373
 FINLUX 375, 357
 FIRSTLINE 373
 FISHER 378
 FOM 339
 GE 384
 GOLDEN SPHERE 341
 GOODMAN'S 373, 382, 350, 333
 GOLDSTAR 375, 907, 972
 GO-HVIDEO 383, 338, 367, 971
 GPX 910
 GRADIENTE 373
 GRAETZ 392
 GRUNDIG 385, 370, 380
 H & B 343, 350
 HANSON/MARDON 375
 HAZ 341, 342
 HANSAATIC 375, 351
 HCLM 894
 HE 383
 HENSEN 156
 HITACHI 367, 368, 387, 392
 HITAKER 357
 HOHER 356
 HOHE ELECTRONICS 383
 HONDA 934, 935, 936, 937, 938
 HOYO 392

HYUNDAI 351
 ILO 959
 INTERTRONIC 893, 933, 894
 INTAL 384
 INTEGRAL 374
 JATON 392
 JBL 395
 JDB 383
 JVC 341, 400, 944, 662
 KARCHER 357
 KAMASHI 333
 KENDO 354, 923, 350
 KENWOOD 393, 364
 KISS 392
 KLF 384
 KONKA 908, 909
 KOSIS 358, 373
 LAWSON 341
 LASONIC 341
 LASCOR 376
 LENO 373, 350, 356
 LENOX 931, 346, 382
 LG 375, 907, 972
 LIFE 372, 373
 LIFEATEC 354, 930, 373, 932, 330, 335, 339, 340, 341, 342, 345, 352, 358, 371, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 923, 905, 343, 924, 933, 375, 906, 338, 372, 334, 344, 464, 464, 464
 LIMIT 341
 LIME 356
 LITEON 920
 LOEWI 370, 375
 LOGIX 351
 LUMATRON 332, 342
 MAGNVOX 342, 379, 979, 980, 981, 370, 974
 MAHATRON 350
 MAHANTZ 370, 379, 981, 375, 362
 MARK 350
 MASTEC 335
 MATSUI 373, 357, 350
 MBO 394, 383, 382
 MAXON 331, 350
 MEDION 354, 930, 373, 932, 330, 335, 339, 340, 341, 342, 345, 352, 358, 371, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 923, 905, 343, 924, 933, 375, 906, 338, 372, 334, 344, 464, 464, 464
 MEMOREY 356, 339, 920
 METZ 346, 350
 MICROMAXX 354, 893, 930, 373, 932, 330, 335, 339, 340, 341, 342, 345, 352, 358, 371, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 923, 905, 343, 924, 933, 375, 906, 338, 372, 334, 344, 464, 464, 464
 MICROSOFT 399
 MICROSTAR 354, 930, 373, 932, 330, 335, 339, 340, 341, 342, 345, 352, 358, 371, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 923, 905, 343, 924, 933, 375, 906, 338, 372, 334, 344, 464, 464, 464
 MINATO 349
 MINITEK 384
 MINOR 349
 MITSUBISHI 350, 366
 MONYKA 392
 MUXTEK 383
 MURON 373
 NAO 375, 394
 NAKANISHI 398
 NEOTEK 386
 NEUFUNK 392
 NEWER 356
 NEWTECH 932, 954, 955, 956
 NORWENT 332, 982, 944, 945, 948
NORWENT 356
 NORNO 349
 OKAMI 349
 OMNI 382, 386
 ONIX 346
 ONYX 374, 975
 OPTIMUS 368
 ORION 920, 335
 ORTRON 373
 PACIFIC 356, 350, 333
 PACIFIC BELL 939, 940, 276, 220
 PALSONIC 357
 PANASONIC 401, 344, 403, 970, 974
 PHILIPS 370, 379, 979, 980, 981, 949, 339, 362
 PHOTOTREND 916
 PIONEER 368, 977, 922, 968, 976
 POLAROID 957, 949
 PORTLAND 382
 PRINT 356
 PRISON 335
 PROZ 954, 930, 373, 932, 330, 335, 339, 340, 341, 342, 345, 352, 358, 371, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 923, 905, 343, 924, 933, 375, 906, 338, 372, 334, 344, 464, 464, 464
 PROCASTER 905
 PROLINE 373, 357, 333
 PROSCAN 399
 PROSONIC 332, 341, 349
 PROVISION 381
 RADIONETTE 375
 RAITE 392
 RCA 399, 384
 REGSTAR 894
 RELISYS 923, 895
 REOC 341
 REK 346
 ROADSTAR 350, 383, 382
 ROTEL 361
 ROMA 384
 RTL 923
 SABA 373, 915, 340
 SANO 357
 SALORA 375
 SAMPO 341, 386, 923, 895
 SAMSUNG 367, 338, 963, 919
 SANSUI 920, 341
 SANVO 378
 SCHAUB LORENZ 894
 SCIENTIFIC LABS 341
 SCHNEIDER 350, 352, 356, 373, 351, 894, 333
 SCHNEIDER 348
 SCOTT 373, 357
 SEC 350, 341, 392
 SHARP 371, 394
 SHERWOOD 391
 SHINCO 384
 SHINSON 384
 SHU SCHNEIDER 356
 SINGER 341, 382
 SONY 382, 383
 SMIAT 357
 SMIAT 357
 SMI ELECTRONIC 382, 383

SONY 363, 987, 402, 988, 984, 989
SOUNDMASTER 341
SOUNDMAX 341
SOUNDSTORM 330
STANDARD 373
SONGAL 953
SUPERVISION 382, 383
SYNCH 341
STORMIA 339
TANBERG 350
TAN 354, 930, 932, 330, 335, 339, 340, 333, 341, 342, 345, 352, 358, 371, 923, 943, 924, 933, 338, 372, 334, 344, 664
TEAC 368, 333, 341, 384
TECHNICS 364, 399
TECHNICA 356
TECHWOOD 394, 350
TELO 973, 895
TELELEX 382
TELEFUNKEN 894, 333
TELETECH 350
TENSA 373, 382
TERAPIN 943
TEYON 256, 930, 932, 330, 335, 337, 339, 340, 341, 342, 345, 352, 358, 371, 892, 895, 894, 897, 898, 899, 900, 901, 902, 903, 904, 923, 966, 890, 905, 343, 924, 933, 906, 338, 917, 918, 372, 334, 344, 664, 894
THETA DIGITAL 368
THOMSON 360, 359, 399
TIAM 894, 372, 386
TOSHIBA 362, 973, 983, 920
TRANS-CONTINENTS 356
TREDEX 941
UNITED 333, 348
UNIVERSUM 350
UNIMAX 382
VENTURER 333
VESTI 350
VICKSON 383, 356, 382
WILLYSON 384
WELON 356
WHPREDALE 376, 349, 341, 384
WILSON 356
X-BOX 399
XLOGIC 341
XENUS 373, 358
XIS 894
YAMAHA 364, 388, 979, 980
YAMAHA 297, 392
YUKAI 383
ZENITH 375, 907

DVD-R

DVD Recordes (DVD-R, DVD-RW, etc)

APEX 911
ARENA 923
ASPIRE 952
CENTROS 951
CIV 923
CORY 221
CYBERCOM 923
CYBERHOME 912
CYBERMAXX 895, 905, 906, 923
CYTRON 895, 905, 906, 923
DUAL 923
GO-VIDEO 383
HYPSON 387
ID 959
KENKO 923
LIFETEC 895, 905, 906, 923
LG 907
MAGNAVOX 979, 980
MEDION 895, 905, 906, 923
MICROMAXX 895, 905, 906, 923
MICROSTAR 895, 905, 906, 923
MYSTIC 383
PACKARD BELL 940, 276
PANASONIC 403
PHILIPS 979, 980
PIONEER 977
PROZ 895, 905, 906, 923
RTL 923
SONY 987, 988, 989
TEC 923
TECHON 890, 891, 895, 905, 906, 923
THOMSON 360, 359
TOSHIBA 373, 983
YAMAHA 979, 980
ZENITH 907



VCR codes

AKAI 230, 233, 256, 293, 231, 248, 291
AKAI 300, 329, 307, 237, 236, 238, 239, 293
AKIBA 248
AURORA 275, 244, 293
ALBA 275, 233, 250, 245, 248, 244, 247
ALLOEGAN 311
AMBASSADOR 250
ANSTRAD 253, 231, 254
ANTECH 275
APEX 949
ASA 257, 254
ASUKA 275, 237, 231, 256
BAIRD 259, 231, 258, 245, 237, 293
BASIC LINE 275, 233, 250, 245
BAUR 263, 257
BESTAR 250, 245
BLACK PANTHER LINE 245
BLAUPUNKT 263, 257, 262, 260, 309, 325, 271
BLUSTEEL 250
BRANDT 303, 305
BROOKSONIC 277, 947
BUSH 275, 233, 245, 248, 244, 247, 288
CAYTON 250
CGE 231, 293
CUMLINE 275, 233
CLATRONIC 250
COMBITECH 248
CONCOR 250, 245
CELESTON 275, 250, 245
CYBERCOM 233, 311, 262, 269, 319, 248, 291, 338, 905, 906
CYBERMAXX 233, 311, 262, 269, 319, 254, 248, 291, 338, 905, 906

CYTRON 233, 311, 262, 269, 319, 254, 248, 291, 338, 905, 906
DAEWOO 274, 250, 265, 319, 245, 971
DANSAL 275
DANITAX 233
DAYTRON 245
DE GRAMF 266, 257
DECCA 257, 231, 293
DECCA 230, 257, 311, 262, 319, 293, 248, 291, 338, 905, 906
DUNONT 266, 257, 231, 258
ETA 275
EMERSON 301, 339
ESC 245
ETELUD 275
FERGUSON 294, 259, 271, 278, 293, 281, 305
FIDELITY 311, 231
FINLAND 266, 257, 258
FINNIT 266, 298, 257, 231, 258, 293, 237
FISHTONE 266, 275, 233, 265, 296, 256
FISHER 258, 279
FLINT 231
FORNENT-PHEONIX 257
FRONTECH 250
FUJITSU 231
FUNAJ 231, 339
GALAXY 231
GBC 275, 250
GEC 257
GOLDSON 275
GENERAL 258
GENERAL TECHN 262, 233, 311, 248
GOLDHAND 275
GOODSTAR 231, 256
GOODMANS 275, 250, 259, 256, 231, 245, 283, 282
GO-VIDEO 338, 367, 971
GRATZ 258, 293
GRANDIA 257, 264, 240, 258, 271
GRANDON 275, 250, 256, 231, 245
GRANDIC 275, 270, 263, 235, 243, 257, 260, 272, 275, 286, 287, 290, 315, 271, 288
HAIZ 233
HANSERAT 257, 256
HCAL 275, 288
HINARI 275, 233, 248, 288, 301
HISMAN 233
HITACHI 266, 257, 268, 231, 293, 387
HYPPSON 233, 275
IMPED 250
INFERRAL 231
INNOVATION 233, 311, 262, 248, 291
INNO HIT 250, 257, 275, 245
INTERBUY 256
INTERFUNK 257, 258
INTERVISION 231
IRRADIO 275, 256
ITT 237, 293, 258, 292
ITV 256, 245
JVC 294, 295, 293, 400
KACSHI 275
KARCHER 257
KENDO 233, 250, 265, 300, 245, 236, 237
KENWOOD 293
KORPEL 275
LENCO 245
LEVEDO 275
LIFE 291
LIFETEC 233, 311, 262, 269, 319, 256, 248, 291, 338, 905, 906
LG 231, 254, 261, 907
LOEWE 262, 325, 262, 257, 256, 271
LOGIX 275
LUMATRON 274, 245
LUXOR 298, 258, 237, 281
MAGNASONIC 258
MAGNAVOX 914
MAGNOR 291
MANESTR 275, 265
MARAZITI 257, 271, 281, 299
MATSU 233, 254, 248, 301
MELECTRONIC 231
MEDATOR 257
MEDION 233, 311, 262, 269, 319, 256, 248, 291, 338, 905, 906
MEMOREX 240, 256, 231, 258, 279
MEMPHIS 275
METZ 262, 263, 267, 273, 325, 271
MICROMAXX 230, 311, 262, 269, 319, 256, 248, 291, 338, 905, 906
MICROSTAR 230, 311, 262, 269, 319, 256, 248, 291, 338, 905, 906
MIGROS 233
MINERVA 263, 271
MITSUBISHI 298, 257, 289, 294, 231
MULTITECH 275, 250, 257, 231
MURPHY 231
NATIONAL 262, 260
NEC 294, 293, 299
NECHERMANN 257, 293, 301
NEL 257
NESCO 275
NIRXAL 250, 302
NOKIA 240, 300, 307, 258, 237, 292, 293
NORMENDE 294, 293, 303, 305
OCEANIC 240, 231, 293
OKANO 233, 300
ORION 234, 233, 304, 248, 283, 301, 246
ORSON 231
OSAI 275, 231, 256
OTTO VERSAND 257
PALMADINI 275, 300, 256, 271, 293
PANASONIC 262, 267, 300, 314, 321, 325, 970
PATHE CINEMA 301
PATHE MARCONI 293
PENTAX 266
PERIOD 231
PHILCO 299
PHILIPS 235, 257, 290, 315, 327, 286, 285, 242, 271, 293, 949
PHOENIX 257
PIONEER 294, 257
POLAROID 949
PORTLAND 250, 245
PRINZ 231
PROZ 233, 311, 262, 269, 319, 256, 248, 291, 338, 905, 906
PROFEX 275
PROLINE 231, 288
PROSONIC 233, 245
PTE 257
QUARTZ 258
QUELLE 257, 263, 258, 231, 271, 301

RADIAL 257
 REX 293
 RFT 250, 257
 ROADSTAR 275, 256, 245
SABA 204, 245, 281, 293, 303, 305
 SASHO 275, 233, 248, 301
 SALORA 296, 256, 237, 292
 SAMSUNG 311, 312, 336, 963
 SAMSUNG 250
 SANSUI 294, 244, 293, 920
 SANYO 284, 258, 279
 SAVILLE 248
 SBR 257
 SCHAUB LORENZ 258, 237, 231, 293
 SCHNEIDER 275, 233, 265, 250, 257, 256, 231, 244, 245
 SEG 275
 SEPSONDYNE 257
 SELECT 293
 SENTRA 250
 SENTRON 275
 SHARP 240, 241, 328, 281
 SHANTON 275, 258
 SHINAI 256
 SIEMENS 263, 256, 258, 271
 SILVA 256
 SINDYNE 257
 SLOVAKIA 250
 SONY 292, 308, 309, 310, 313, 249, 251, 255, 402
 STANDARD 245
 STRONG 244
 SUNAR 233
 SUNSTAR 231
 SONTAC 231
 SUNWOOD 275
 SYLVANIA 339
 TAIYO 233
 TANDBERG 263
 TASHIRO 240, 231
 TATUNG 257, 231, 293
 TCM 233, 311, 262, 269, 319, 248, 291, 338, 905, 906
 TEC 250
 TECHNICS 262, 260
 TELEFUNKEN 293
 TELEFUNKEN 204, 294, 324, 295, 323, 280, 293, 303, 305
 TENOSAL 275
 TENSAT 275, 231, 256
 TEVION 233, 311, 262, 269, 319, 256, 248, 291, 338, 905, 906
THOMSON 294, 324, 295, 323, 326, 245, 242, 293, 305
 THORN 258, 293, 301
 TIVO 242
 TOKAI 275, 256
 TOMSA 275
 TOSHIBA 230, 257, 265, 298, 319, 293
 TOSHIBA 275
 TOWNA 275
 TRIUMPH 301
 TUA 250
 UHER 256
 UNITED QUICK STAR 245
 UNIVERSUM 290, 235, 263, 257, 315, 256, 231, 237, 239, 253, 271
 VICTOR 294, 295
 VIERSON 233, 262, 311, 248
 VIELTRUCK 256
 VISMAR 275
 YOKAN 275
 YOKO 275, 250, 256



SAT codes

AAI 552
 ALBA 508, 562, 405, 407
 ALDES 408, 409
 ALLSAT 462, 410, 552
 ALLSONIC 408, 428
 AMPERE 422
 ANSTRAD 584, 555, 541, 415, 416, 417, 419
 ANVARO 408, 428, 424
 ANTHON 405, 407
 APOLLO 405
 ARCON 415, 422, 424, 463
 ARMSSTRONG 419
 ASAT 552
 AST 435
 ASTON 594, 406
 ASTRA 429, 419, 431, 432, 502
 ASTRO 428, 439, 569, 407, 409
 AUDIOTON 462, 407
 AURORA 602
 AUSTAR 602, 643, 642
 AXIS 428, 415, 432, 456
 BARCOM 424
 BEST 428, 424
 BLAUPUNKT 439
 BOCA 419, 502
BRANDT 565, 566, 567, 574
 BRAUN WAVE 444, 223
 BRUSH 584, 555
 BT SATELLITE 574
 BUSH 508, 562, 410
 CANAL+ 569, 599
 CANAL SATELLITE 569, 599
 CHAPARRAL 507
 CHESS 547, 586
 CITYCOM 508, 640, 459
 CLARION 444
 CLARKENS KAMPHUIS 491
 CIT 409
 COLUMBUS 477
 COMAG 471
 COMALINK 408
 COMTECH 456
 CONDOR 428, 640
 CONNECTIONS 438, 454
 CONRAD 640
 CONTEC 456, 459
 COSAT 462
 COSMOS 419
 CYBERCOM 412, 413, 423, 428, 442, 466, 478, 484, 493, 504, 511, 514, 535, 544, 566, 583, 586, 587, 618, 619, 644

CYBERMAXX 412, 413, 423, 428, 442, 466, 478, 484, 493, 504, 511, 514, 535, 544, 566, 583, 586, 587, 618, 619, 644, 650, 652, 653, 222
 CYTRON 412, 413, 423, 428, 442, 466, 478, 484, 493, 504, 511, 514, 535, 544, 566, 583, 586, 587, 618, 619, 644, 650, 652, 653, 222
 DAERYONG 438
 DAWSAT 410
 DBOX 564, 604
 DECCA 456
 DEEN 456
 DIAMOND 461
 DIGITALITY 640
 DISKOPRESS 424, 454
 DISTRIRAD 462
 DNT 438, 552
 DONG WOO 501
 DWAKE 557, 463
 DREAMBOX 658
 DWAN 412, 413, 423, 428, 493, 504, 511, 566, 583, 586, 587, 618
 DYN 602
 ECHOSTAR 640, 581, 586, 425, 481, 578, 579, 580, 657, 659, 464, 465, 467
 ENHELL 408, 417, 405, 419
 ELEKTA 409
 EETA 428, 462, 405, 552
 ENAVION 405
 EMME ESSE 428, 508, 491
 EP SAT 508, 491
 EUROPHON 640
 EUROSAT 419
 EUROSPY 428, 640, 419
 EUROSPACE 468
 EUROSTAR 438, 419
 EXATOR 405, 407
FERGUSON 508, 472, 603, 410, 473
 FIDELITY 415, 417
 FINLANDIA 508
 FINTECH 508, 429, 608, 475, 480, 487
 FINSEAT 602, 456
 FORCE 577, 553, 535
 FORTEC STAR 470
 FOXTEL 602, 643, 584
 FRACARRO 562
 FRANCE SATELLITE TV 477
 FREEDOM 405, 489
 FTE 422, 496
 FUBA 548, 439, 428, 438, 405, 424, 431, 477, 480, 552
 GADU 428, 488, 462, 478, 484, 535, 582, 583, 602, 619, 432, 456
 GALLERY 423
 GMI 419
 GOLDSTAR 489
 GOODING 483
 GOODMAN'S 508
 GRANADA 429
 GROTHJENSEN 405, 489
 GRUNDIG 439, 436, 483, 495, 508, 544, 469, 402, 584, 407, 550
 HANSEATIC 504
 HANSTAR 444, 405, 501
 HANVIL 409
 HELIODOL 422
 HIRSCHMANN 439, 522, 547, 548, 487, 488, 491, 558
 HISAWA 444
 HITACHI 508, 537
 HOUSTON 462
 HUIJI 408, 411, 444, 462, 419, 491
 HUNMAI 485, 517, 582
 HYDRON 489
 IMPERIAL 562
 INNOVATION 428, 493, 504, 511, 583, 586, 587, 618
 INTERTRONIC 419
 INTERVISION 462
 IRETEO 602
 ITT/INDIA 429, 508, 548, 454, 487, 537
 JOHANSSON 444
 JSR 463
 JVC 483
 KATHREN 549, 617, 431, 607, 635, 439, 459, 494, 498, 499, 507, 552
 KOSMOS 489, 491, 496
 KR 407
 KREISELMEYER 439
 KYOSAR 405
 LASAT 428, 565, 566, 567, 409, 500, 501, 502
 LENO 405, 489, 503
 LENG 444
 LENOX 462
 LENSON 479
 LIFE 583
 LIFE SAT 412, 413, 423, 428, 442, 466, 478, 484, 493, 504, 511, 514, 535, 544, 566, 583, 586, 587, 618, 619, 644, 650, 652, 653, 222
 LIFE SAT 412, 413, 423, 428, 442, 466, 478, 484, 493, 504, 511, 514, 535, 544, 566, 583, 586, 587, 618, 619, 644, 650, 652, 653, 222
 LION 468
 LG 489
 LORRAINE 489
 LUPUS 428
 LUXOR 417, 429, 548, 537
 MACAR 602
 MAHATMAN 462, 508, 557, 633, 421, 409
 MARANTZ 552
 MARINTEK OCTOPUS 655
 MASCOM 409
 MASPRO 483, 508, 507, 558
 MATSUI 483, 574
 MB 504
 MBX 442
 MEDBY 569
 MEDIAWART 419
 MEDIASAT 569, 432
 MEDION 412, 413, 423, 428, 442, 466, 478, 484, 493, 504, 511, 514, 535, 544, 566, 583, 586, 587, 618, 619, 644, 650, 652, 653, 222
 MEGA 552
 METRONIC 408, 575, 612, 613, 614, 615, 632, 409, 424, 405, 407
 NETZ 439
 NETMAXX 412, 413, 423, 428, 442, 466, 478, 484, 493, 504, 511, 514, 535, 544, 566, 583, 586, 587, 618, 619, 644, 650, 652, 653, 222
 MICROSTAR 412, 413, 423, 428, 442, 466, 478, 484, 493, 504, 511, 514, 535, 544, 566, 583, 586, 587, 618, 619, 644, 650, 652, 653, 222
 MICRO TECHNOLOGY 468
 MINEXIA 483, 439
 NITSUBISHI 508, 439, 574
 NITSUMI 502
 MORETV 644, 222, 423
 MORGANS 611, 419, 502, 552
 MORGAN STONEY 611
 MULTICHECK 602
 MULTISTAR 494, 501

MULTITEC 586, 587
 MURRATO 437, 489
 NAVEX 444
 NEC 509, 510
 NEUKAUS 462, 479, 482
 NEXTWAVE 414, 585
 NIKKO 419
 NIKON 530, 564, 405, 429, 508, 548, 563, 531, 454, 487
 NIMEX 422
NORMENDE 549, 472, 508, 603, 405, 409
 NOVUS 444
 OAK 424
 OCEANIC 461, 468
 OCTAGON 405, 407, 456
 OKANO 419, 491, 496
 OPTEX 462, 459, 656
 OPTUS 402
 ORBIT 405
 ORBITECH 405
 ORIGO 468
 OSAT 407
 OTTO VERSAND 439
 PACE 584, 555, 439, 559, 527, 508, 410, 617
 PACIFIC 461
 PALCOM 479, 431, 477
 PALLADIUM 483, 419
 PALTEC 431
 PANASONIC 584, 508, 542
 PANDA 508, 410
 PANSAT 490
 PHILIPS 552, 436, 483, 493, 495, 508, 543, 434, 569, 574, 605, 618, 455, 561, 550, 454, 515
 PHOENIX 456
 PHONOTREND 408, 462, 491
 PINNACLE 654
 PIONEER 569
 POKSAT 603
 POLYTRON 439
 PREKO 444
 PREMIERE 544, 462, 569, 542, 442, 404
 PREMIER 569
 PREMIUM X 224
 PRESNER 445, 419
 PROZ 412, 413, 423, 428, 442, 446, 478, 484, 493, 504, 511, 514, 535, 546, 566, 583, 586, 587, 618, 619, 644,
 650, 652, 653, 222
 PROFIT 503
 PROFIKAM 508
 PROSAT 408, 562
 PROTEK 461
 PROVISION 409
 QUADRAL 408, 428
 QUELLE 439, 417
 QUERO 603
 RADIOA 552
 RADIX 630, 438, 632
 RADROW 407
 REEFVISION 510
 REPOINT 432
 REOSTAR 428
 RFT 408, 552
 RUEFACH 503
SABA 472, 508, 543, 556, 562, 565, 571, 572, 573, 574, 575, 409, 468
 SABRE 508
 SAGEAR 570, 604, 599, 603
 SAGURA 456
 SAILON 479, 527, 509, 520
 SAMSUNG 424, 405
 SAT 415, 435, 437
 SATCOM 640, 504, 523
 SATEC 508
 SATREINER 444, 405, 407, 409, 489, 491
 SCHNEIDER 428, 455, 511, 583, 586, 587, 618
 SCHNIGER 411, 412, 413, 427, 430, 433, 440, 504, 508, 516, 566, 573, 576, 577, 582, 514, 583, 585, 587, 598,
 616, 630, 631, 633, 635, 459, 498
 SEEMANN 438, 419, 432
 SES 428, 444, 504, 541, 631, 634, 405
 SELECO 462
 SELENS 439
 SILVA 489
 SKARDIN 432
 SKY 584
 SKY+ 555
 SKY DIGITAL 584, 555
 SKYMASTER 408, 504, 546, 547, 586, 587, 588, 589, 590, 591, 592, 621
 SKYWAY 552
 SKYVISION 462
 SM ELECTRONIC 408, 504, 546, 547, 586, 588, 591, 621
 SONY 584, 569, 418
 SR 472, 419, 502
 STARLAND 586
 STARRING 444
 STAR TRAK 405
 STORING 562, 428, 402, 545, 454, 489, 405, 407
 SUIWA 419
 SUNSTAR 527, 419, 502
 TANDREBERG 603
 TANDY 407
 TANTEC 508, 479, 477
 TANGING 460
 TCO 412, 413, 423, 428, 442, 493, 504, 511, 514, 546, 566, 583, 586, 587, 618, 619
 TECO 419, 502
 TECHNHALL 416
 TECHNIMATE 441
 TECHNISAT 438, 479, 569, 623, 528, 529
 TELASAT 440
TELEFUNKEN 560, 508, 545, 566, 567, 574, 405
 TELEKA 438, 640, 407, 419
 TELEMASTER 409
 TELEMAX 500
 TELESAT 504
 TELESTAR 479, 569
 TELEVES 508, 610, 611
 TELEWINE 462
 TENDON 412, 413, 423, 428, 442, 446, 478, 484, 493, 504, 511, 514, 535, 546, 566, 583, 586, 587, 618, 619, 644,
 650, 652, 653, 222
THOMSON 472, 601, 570, 574, 492, 508, 560, 568, 569, 603
 THORENS 461
 THORN 508, 410, 473
 THORO 459
 TORNA 508, 462
 TOPFIELD 497, 505, 506
 TPS 570
 TRAD 435, 437, 533, 489
 TRUSAT 480

TRUX 439, 479, 565, 609, 619
 TWINNER 610, 611
 UNIDEN 534
 UNISAT 419, 456
 UNIVTOR 444, 424
 UNIVERSUM 439, 483, 475, 487
 VARIOSTAR 439
 VECTOR 468
 VENTURA 552
 VIA DIGITAL 568
 VIA SAT 568
 VISIOSAT 594, 444, 462, 586, 593, 595, 596, 597
 VIVANCO 536, 624
 VORTEC 405
 V-TECH 437, 435, 515, 537
 WENIA 508
 WINGSAT 508
 WINGSAT 444
 WISI 435, 437, 438, 439, 508, 533, 538, 539, 540, 597, 625, 626, 627, 628, 629
 WITTENBERG 415
 WOODSAT 409
 ZEHDOR 428, 437, 635, 541, 631, 632, 409, 424, 496, 498
 ZOOMAC 407



CBL codes

AUSTAR 494
 BMB 636
 BT 554
 CABLECRYPT 474
 CABLETIME 448, 449, 450
 CABLE AND WIRELESS 606
 CANAL PLUS 474
 COMCRYPT 474
 CYBE CABLEVISION 452
 CRYPTOVISION 458
 EURODEC 603
 FLANNET 474
 FLANNET CABLECRYPT 474
 FLANNET COMCRYPT 474
 FOXTEL 602
 GEC 422
 GI 494, 554
 IMPULSE 554
 JERRARD 554, 494
 KARELVISION 554
 LYONNAGE 603
 MARINTEK 636
 NEUTRA 554
 ANNET 602, 474
 MOTOROLA 494
 MOVIE TIME 551
 MULTITECH 474, 602
 NTL 606
 OPTUS 494
 PACE 606
 PHILIPS 487
 PIONEER 518, 521
 PVP 554
 SCIENTIFIC ATLANTA 524, 525
 SIS 551
 TBS-1 474
 TELEPIU 474
 TELEWEST 606, 554
 UNITED 554
 VISIOSAT 487

COMBO codes

TV/DVD Combo DVD & TV

BRESKONIC 920
 CYBERCOM 343 & 228, 924 & 210, 933 & 228
 CYBERMAXX 894, 343 & 228, 924 & 210, 933 & 228
 CYTRON 894, 343 & 228, 924 & 210, 933 & 228
 DUAL 343 & 228, 924 & 210, 933 & 228
 H & B 343 & 228
 INTERTRONIC 894
 LIFEPEC 894, 343 & 228, 924 & 210, 933 & 228
 MEDION 894, 343 & 228, 924 & 210, 933 & 228
 MEGAROCK 920
 MEGAROCK 894, 343 & 228, 924 & 210, 933 & 228
 MEGASTAR 894, 343 & 228, 924 & 210, 933 & 228
 ORION 920
 PHILIPS 339 & 181
 PROZ 894, 343 & 228, 924 & 210, 933 & 228
 SANSUI 920
 TCM 343 & 228, 924 & 210, 933 & 228
 TEWON 894, 343 & 228, 924 & 210, 933 & 228
 TOSHIBA 920

TV/VCR Combo

ALBA 245, 248
 ANWA 248, 291
 BARD 245
 BASIC LINE 245
 BESTAR 245
 BLACK PANTHER LINE 245
 BUSH 245, 248
 COMBITECH 248
 COMBITECH 245
 CROWN 245
 CYBERCOM 248, 291
 CYBERMAXX 248, 291
 CYTRON 248, 291
 DAEWOO 245
 DANTRON 245
 DUAL 248, 291
 ESC 245
 GENERAL TECHNIC 248
 GOLDSTAR 261
 GOODMAN'S 245, 283
 GRANDIN 245
 HINARI 248
 INNO HIT 245
 INNOVATION 248, 291
 ITV 245
 KENDO 245
 LENO 245
 LG 261
 LIFE 291

LIFTEC	248, 291
LUMATRON	245
MAGNUM	291
MATSUI	248
MEDION	248, 291
MICROMAXX	248, 291
MICROSTAR	248, 291
ORION	248, 283
PORTLAND	245
PROZ	248, 291
PROSONIC	245
ROADSTAR	245
SABA	245
SAMSUNG	248
SAWILLE	248
SCHNEIDER	245, 264
SONOW	245
STANDARD	245
TCM	248, 291
TEVON	248, 291
THOMSON	245
UNITED QUICK STAR	245
VIDEO	248

DVD/VCR Combos DVD & VCR

APEX	949
BIOSONIC	920, 967
CINEVISION	375 & 256
CYBERCOM	338, 375 & 256
CYBERMAXX	338, 896, 906, 375 & 256
CYTRON	338, 896, 906, 375 & 256
DAEWOO	971
DUAL	338, 375 & 256
EMERSON	339 & 231, 375 & 256
FINN	339 & 231
GOVIDEO	338, 367, 971
GOLDSTAR	375 & 256
HITACHI	387 & 231
JVC	400
LG	907, 375 & 256
LIFTEC	338, 896, 906, 375 & 256
MAGNAVOX	914 & 285
MEDION	338, 896, 906, 375 & 256
MICROMAXX	338, 896, 906, 375 & 256
MICROSTAR	338, 896, 906, 375 & 256
PHANSONIC	970
PHILIPS	949 & 285
POLAROID	949
PROZ	338, 896, 906, 375 & 256
SAMSUNG	338, 963
SANSUI	920
SANYO	378 & 258
SONY	402
STYHMA	339 & 231
TCM	338, 375 & 256
TEVON	338, 896, 906, 375 & 256
ZENITH	375 & 256



AUDIO codes

Laser Disc Players

DELON	352, 318
GRUNDIG	318
HITSUBISHI	318
NAD	318
PIONEER	318
TELEFUNKEN	318
THORN	322

CD Players

ALCON	848
ANNA	849, 850, 851, 851
AKAI	853, 854, 855
ALBA	856
ARCAI	732
BESNR	859
BSR	860
BUSH	661
CARRERA	663
CLASSIC	663
CONCOR	860
CYBERCOM	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 818
CYBERMAXX	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 818
CYTRON	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 818
DELON	665, 666
DUAL	843, 848, 664, 668, 675, 694, 730, 742, 743, 744, 745, 746, 747, 798, 801, 802, 803
EMERSON	848, 859
ELEA	667, 668, 693, 694, 745
FISHER	669
GENCITA	859, 671, 672, 673, 675, 676, 677
GOLDSTAR	663
GOODMANS	678, 679
GRUNDIG	680, 697, 698, 732
HARMON/KARDON	683
HITACHI	848, 685, 686
INNOVATION	730, 742, 743, 744, 745, 746, 747
JVC	662, 687
KENWOOD	669, 688, 689, 690, 762
LIFTEC	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 818
LUXON	732
LG	663
LUXMAN	691
MAGNUM	730, 742, 743, 744, 745, 746, 747
MARANTZ	695, 732
MATSUI	696, 732
MEDION	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 818
MEDIONEX	848, 859, 677
MICROMAXX	732
MICROSTAR	732
MICROMAXX	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 818
MICROSTAR	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 818
MICROSTAR	732
NAD	671, 733, 735, 736, 737, 800
NAM	732
NAKAMICHI	699, 700
ONKYO	840, 701, 702, 703, 785, 792
PHANSONIC	661, 705
PHILIPS	847, 706, 732
PHILIPS CDV	840
PIONEER	673, 677, 753

PROZ	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 818
PROTON	732
QUAD	732
REALISTIC	848, 859, 675
ROADSTAR	706, 708
ROTEL	732
SABA	848
SAE	732
SAMSUNG	768
SANSUI	847, 709, 710, 711, 732
SCHNEIDER	860, 732
SCOTT	859
SHARP	672, 712, 713, 714
SHERWOOD	782
SINGER	803
SKYMASTER	778
SONY	671, 714, 717, 718, 741, 748, 749, 750
TANBERG	732
TCM	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809
TEAC	795
TECHNICS	705, 721, 763, 787
TELEFUNKEN	848
TEVON	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 813, 814, 816, 818
THEORE & ANWENDING	804
THOMSON	842, 848
TOSHIBA	722, 723
UNIVERSION	732
VECTOR RESEARCH	663
VICTOR	687
WELTECH	675, 694, 744
YAMAHA	712, 720, 725, 771
YORK	708

Audio Amplifiers/Tuners/Receivers

CENTRON	692
CYBERCOM	841, 775, 776
CYBERMAXX	841, 775, 776
CYTRON	841, 775, 776
DELON	779, 781
DUAL	841, 775, 797
ELEA	667, 668
GRUNDIG	697, 698, 727
HARMON/KARDON	682
KENWOOD	761
LIFTEC	841, 775, 776
LUXON	857
MARANTZ	727
MEDION	841, 775, 776
MICROSTAR	841, 775, 776
MICROMAXX	841, 775, 776
NAD	735, 736, 737, 738, 799, 800
ONKYO	785, 792, 793
PHILIPS	846, 727
PROZ	841, 775, 776
SANSUI	727
SCHNEIDER	791
SHERWOOD	782
SONY	739, 740, 755, 757, 758, 759, 760
TCM	841, 775, 776, 806
TEAC	794, 796
TECHNICS	764, 777, 788
TEVON	775, 776, 815, 817, 841
THEORE & ANWENDING	805
THOMSON	842, 866
YAMAHA	724, 752, 770, 771, 772

Audio Tape Players

ANNA	790
DELON	780
GRUNDIG	729, 698
HARMON KARDON	681
KENWOOD	761
MAGNAVOX	729
MARANTZ	729
NAD	799
ONKYO	784
PHILIPS	729
SANSUI	729
SHERWOOD	783
SONY	754, 755, 756
TEAC	794
TECHNICS	764, 777, 786
THOMSON	842
YAMAHA	724, 772

MINI Systems

ANNA	773, 774
CYBERCOM	852, 858, 704, 745, 808, 810
CYBERMAXX	852, 858, 704, 745, 808, 810, 811, 812
CYTRON	852, 858, 704, 745, 808, 810, 811, 812
DUAL	852, 858, 704, 745, 797
ELEA	693, 745
GRUNDIG	707
INTERTEC	811
LIFTEC	852, 858, 704, 745, 808, 810, 811, 812
MEDION	852, 858, 704, 745, 808, 810, 811, 812
MICROSTAR	852, 858, 704, 745, 808, 810, 811, 812
MICROMAXX	852, 858, 704, 745, 808, 810, 811, 812
PIONEER	753
PROZ	852, 858, 704, 745, 808, 810, 811, 812
SAMSUNG	748
SHARP	789
SONY	741
TCM	852, 858, 704, 745, 808, 810
TEVON	852, 858, 704, 745, 808, 810, 811, 812
WELTECH	852, 810

Misc.

Video CD	840
Audio Cambi	844
DBS	845
CDR	847, 675
Switch Box	684


Home Automation

HOME AUTOMATION	998
X-10 (NEC)	999



CODE 570
(Logo registered by TPS)

 ROC 2206

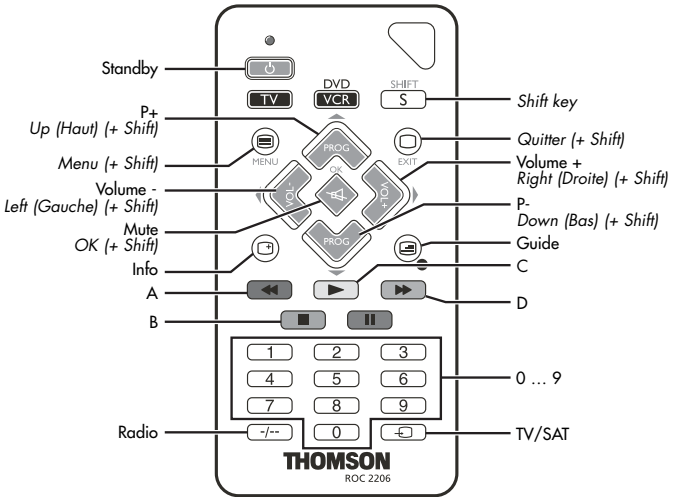

CANAL SATELLITE


TELE +

PREMIERE

CODE 569

(Logo registered by CANAL SAT)
(Logo registered by PREMIERE)

 
ROC 2206

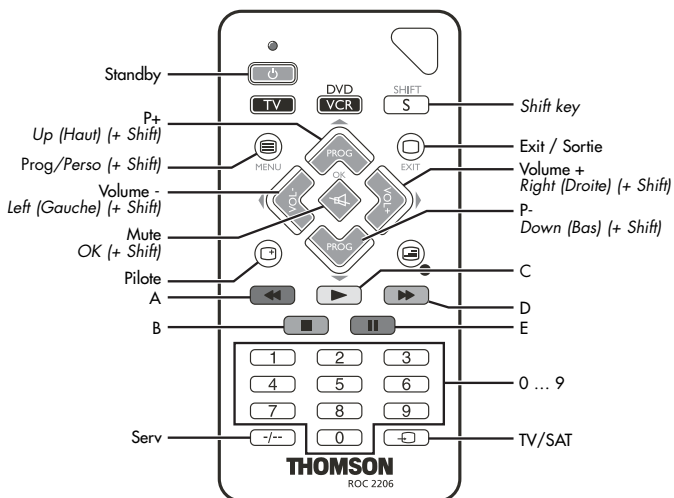

VIA

CODE 568
(Logo registered by VIA DIGITAL)

 
ROC 2206

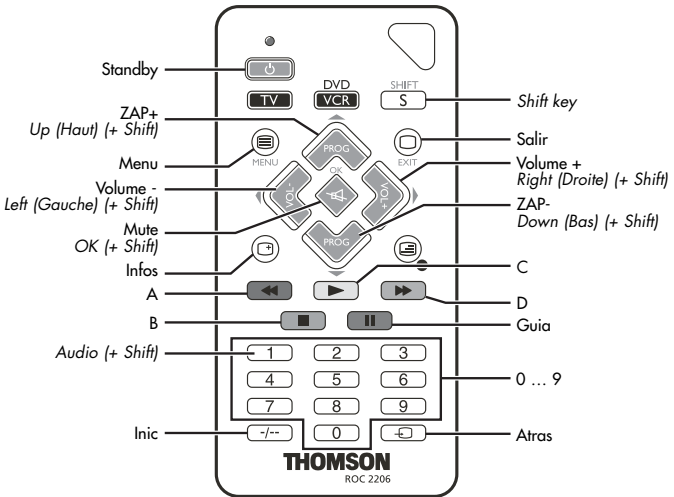

SKY



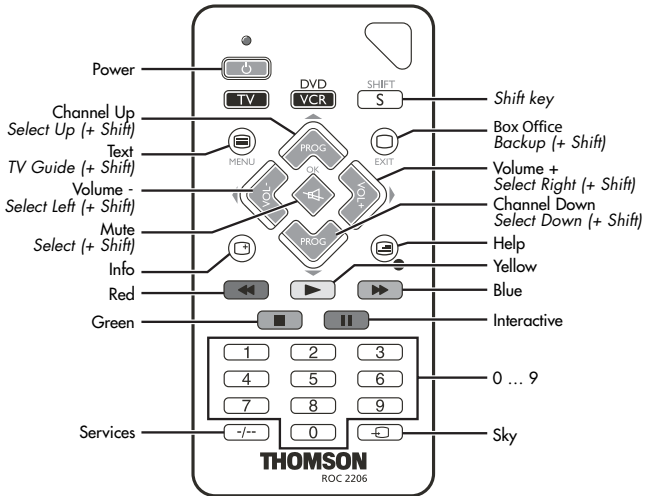 

CODE 584
(Logo registered by SKY DIGITAL)

ROC 2206







TÉLÉTEXTE / VIDEOTEXT / FASTEXT / TOP TEXT / FLOF TEXT





GB

-  Access the contents
-  Back to TV programme
-  Info key
-  Videotext inlay on TV picture





I

-  Accesso al sommario
-  Ritorno al programma TV
-  Tasto info
-  Sovrapposizione del televideo all'immagine del televisore





F

-  Télétexte Oui/Non
-  Retour au programme TV
-  Touche info
-  Superposition du télétexte sur l'image du téléviseur





E

-  Acceso al índice
-  Regreso al programa de TV
-  Tecla de información
-  Intercalación de teletexto en la imagen del televisor





D

 
-  Zugriff auf den Inhalt
-  Zurück zum Fernsehprogramm
-  Info-Taste
-  Überlagerung des Teletextes über das Fernsehbild

NL






-  Toegang tot de inhoudsopgave
-  Terug naar het TV-programma
-  Toets info
-  Teletext over het beeld van het televisietoestel zetten

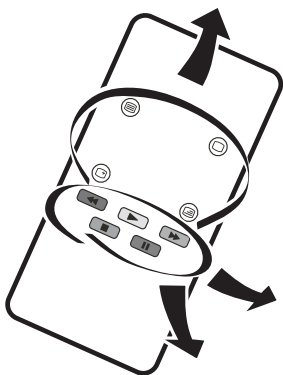P

-  Acesso ao índice
-  Retorno ao programa TV
-  Tecla informação
-  Superposição do teletexto à imagem do televisor



FASTEXT

-     
- GB** Access to headings
 - F** Accès aux rubriques
 - D** Zugriff auf die Rubriken
 - I** Accesso alle rubriche
 - E** Acceso a las rúbricas
 - NL** Toegang tot de rubrieken
 - P** Acesso às rubricas

TOPTXT



- GB**  Blue: Access to headings
 Yellow: Access to articles
- F**  Bleu : Accès aux rubriques
 Jaune : Accès aux articles
- D**  Blau: Zugriff auf die Rubriken
 Gelb: Zugriff auf die Artikel
- I**  Blu : Accesso alle rubriche
 Giallo : Accesso agli articoli
- E**  Azul: Acceso a las rúbricas
 Amarillo: Acceso a los artículos
- NL**  Blauw: Toegang tot de rubrieken
 Geel: Toegang tot de artikelen
- P**  Azul: Acesso às rubricas
 Amarela: Acesso aos artigos

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>