 
 


BEFORE YOU START


Remove all the packaging and protective films. Before setting up your video recorder, you should have all the following elements in your possession.

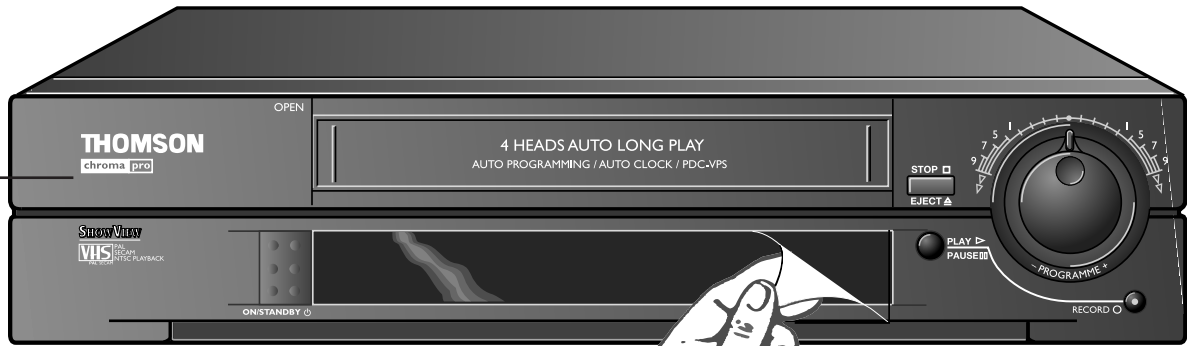

VP2850F
VP4850F

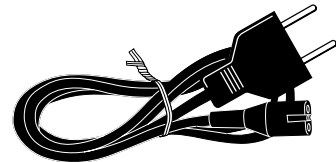

 Mains lead

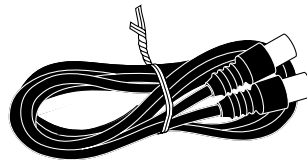

R.F. lead



 
 
Remote control
and batteries



Set up and user manuals


These documents have been printed on environmentally-friendly recycled, non-bleached paper.

1 Remove the cover.

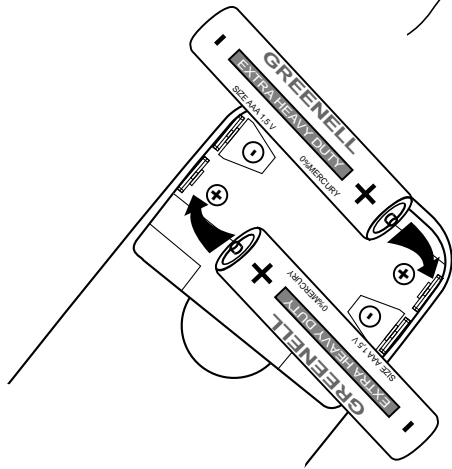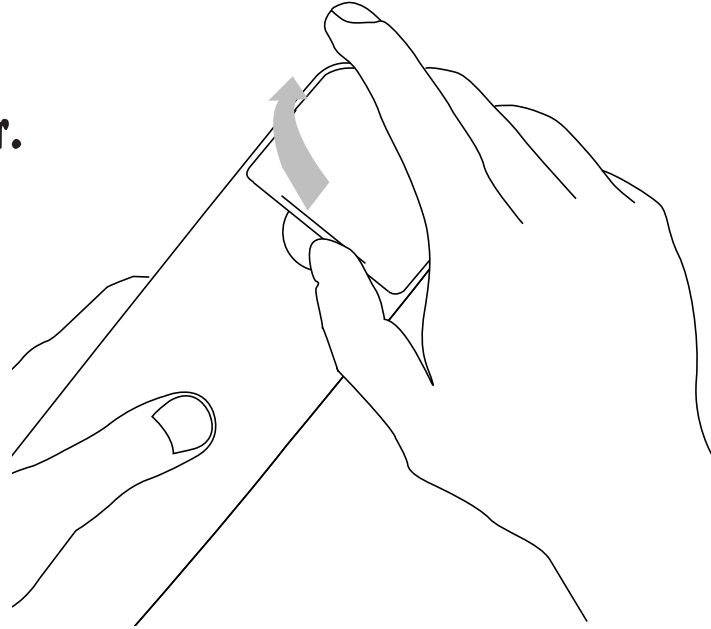

2 Insert the batteries according to this drawing.

 
3 Replace the cover.

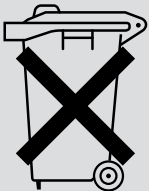

Please respect the environment! Before throwing any batteries away, consult your distributor who may be able to them back for specific recycling.



 - 1** Disconnect the outside aerial cable from the TV set and reconnect it to the (📡 IN socket) on your video recorder.
- 2** Connect the TV set to the video recorder (📡 OUT socket) with the supplied aerial cable.
- 3** Connect the video recorder to a mains socket with the mains lead. The display on the video recorder comes on.

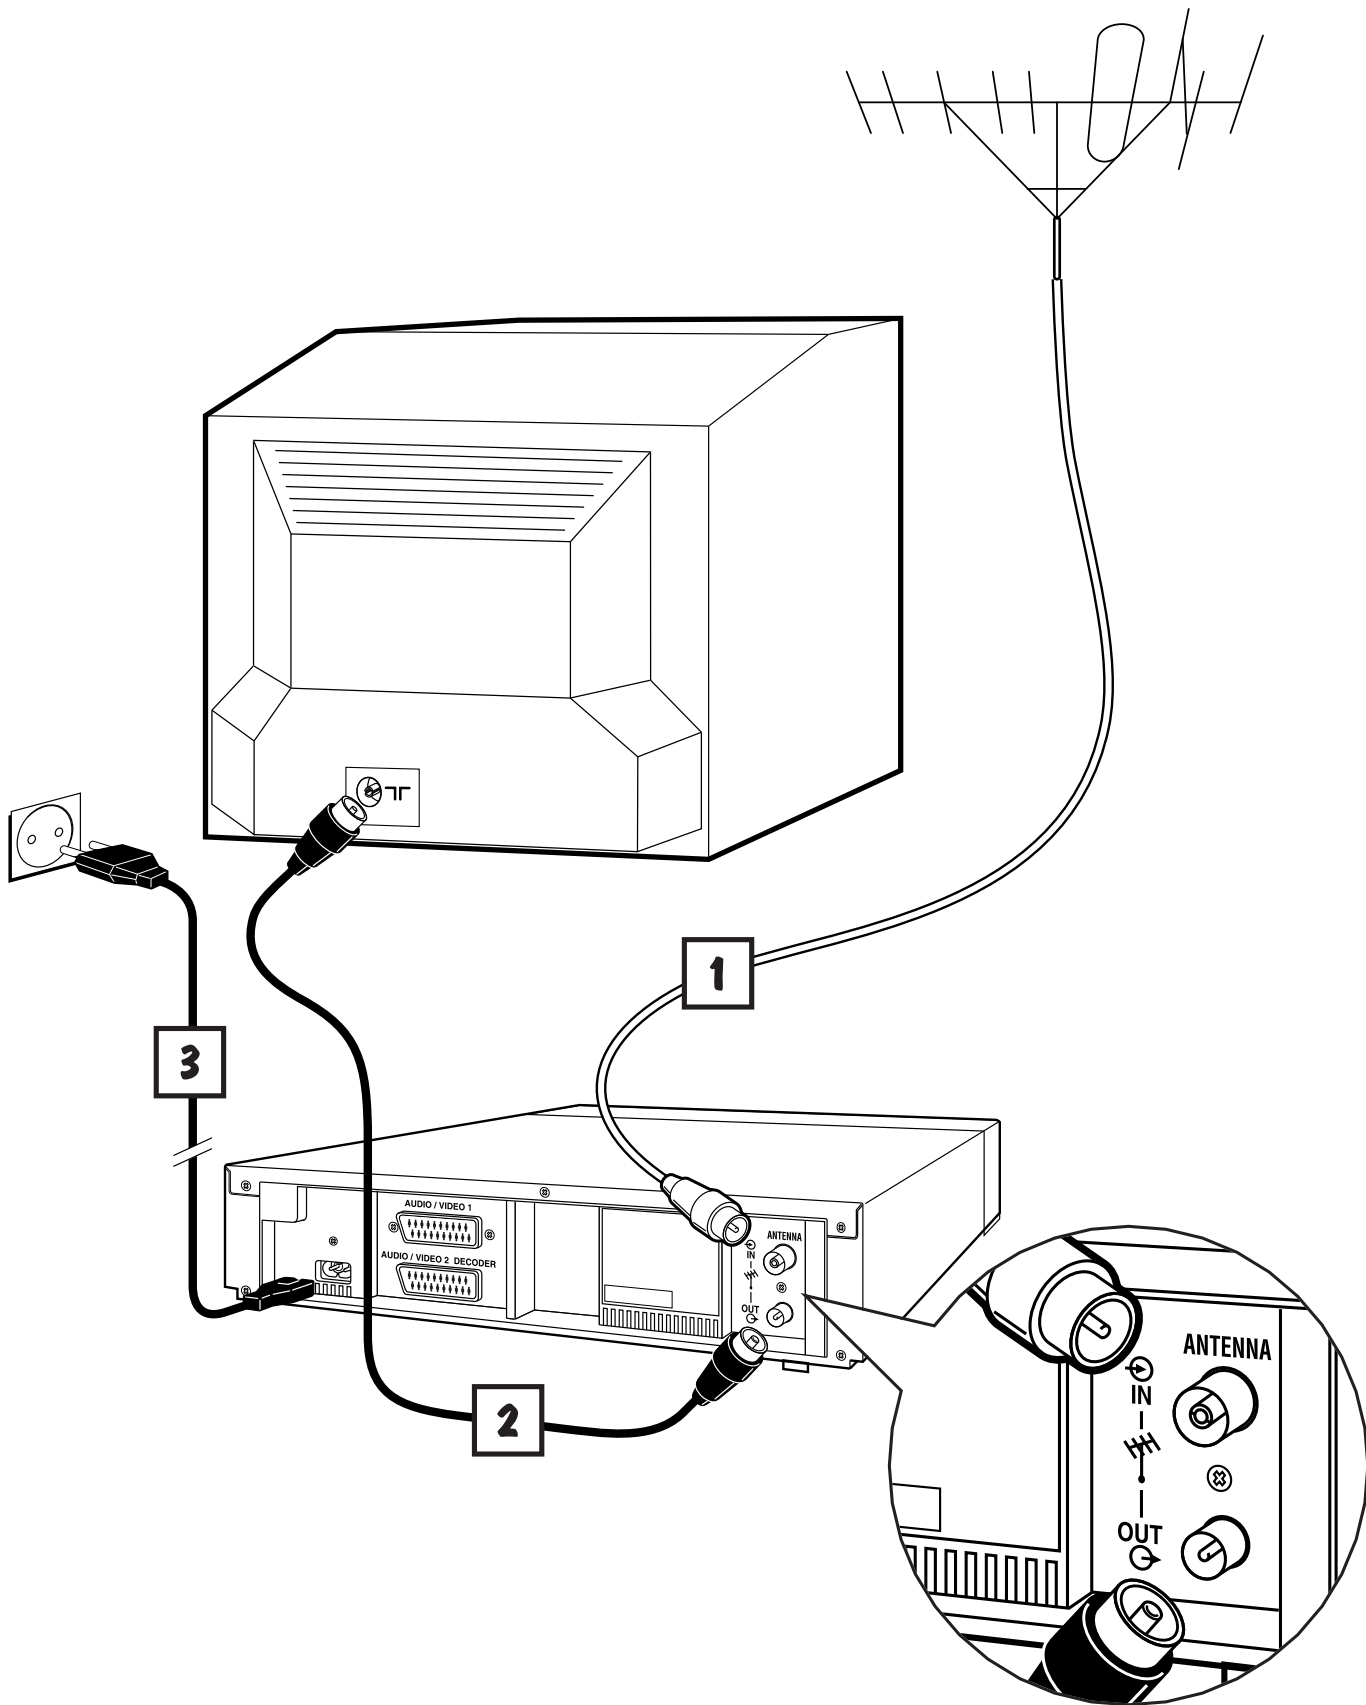


SETTING UP THE VIDEO RECORDER

To set your video recorder up, you will need the User Manual of your TV set. We recommend that you perform all set-up steps up to page 7 inclusive in one go.

The menu language on your video recorder has been preset in the factory in French.


1

 Start by pressing the **VCR** key on your remote control.

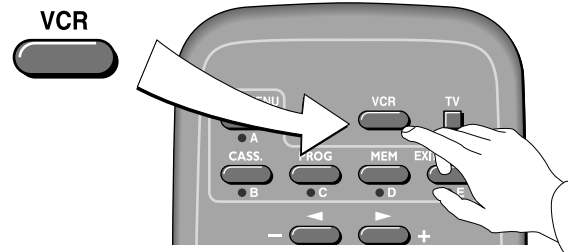


2

 Press **A** until **5 45 1** appears on the display.

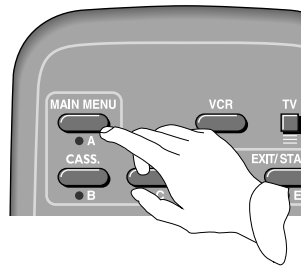

3

 Press **AV** to select the standard of your TV set. Press **A** to continue.

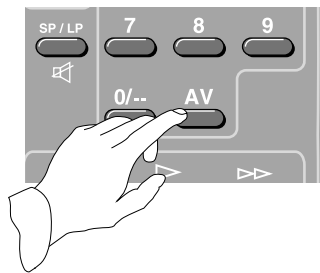

5 45 1 : standard L (France)
5 45 2 : standard BG (Western Europe)
5 45 4 : standard DK (Eastern Europe)

4

Wait, the video recorder is searching the channel range from 21 to 69 for an available channel to transmit pictures to the TV set.



5

After a while, the video recorder indicates the TV channel setting to be used for the video.



From **21** to **69**

 
It is necessary to tune the TV set to enable it to communicate with the video recorder via the supplied aerial cable.

TUNING THE TV SET

ENGLISH


1

Switch on your TV set and refer to its user manual to tune the channels.

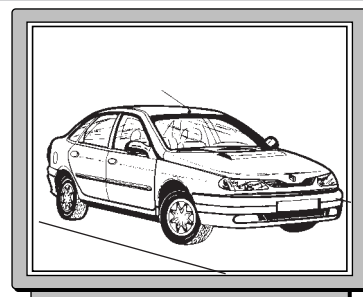


2

 Choose a programme number without a picture. This programme will be reserved for pictures from the video recorder.




TV remote control

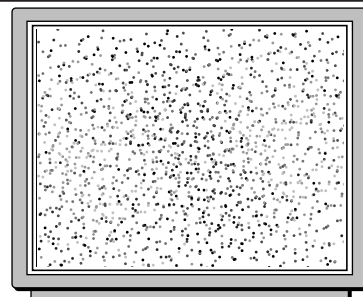 


3

 Tune this programme on the TV set to the communication channel of your video recorder.


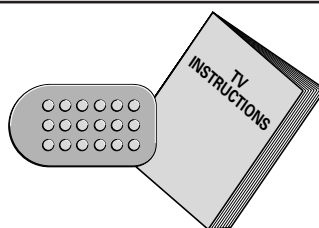


TV remote control

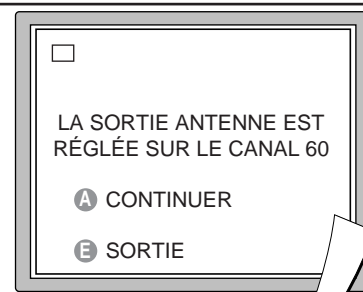 


4

  If you want to change the menu language, press **B** (French, English, German, Italian).

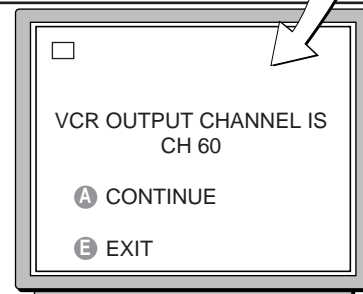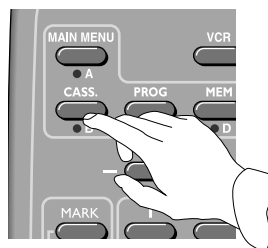

5

 
If the picture is poor (snow, tearing...), change the video recorder communication channel with the **-/+** keys. The picture disappears, return to stage 3 to find the new channel.

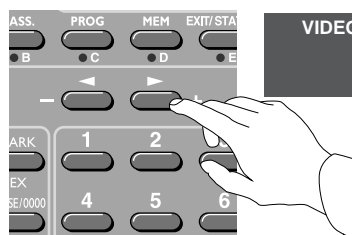


from 21 to 69

6

 If the picture is good, store the setting on the TV set and continue to the next page.

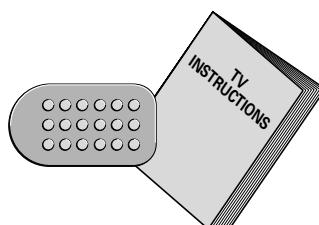

TV remote control

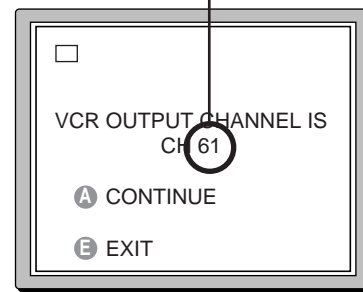 



You will now be able to view pictures from the video recorder by selecting the channel chosen during stage 2 with the TV set.

AUTOMATIC SET-UP

The settings on this page allow you to search and automatically store the channels in your region. To help identify the programmes, we suggest that you have to hand a TV guide or daily newspaper.

1

 
 
Press **A**.

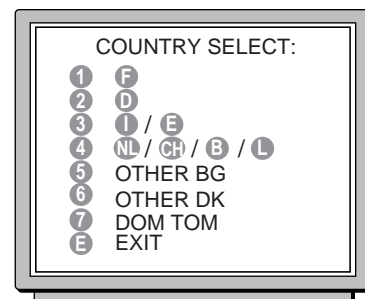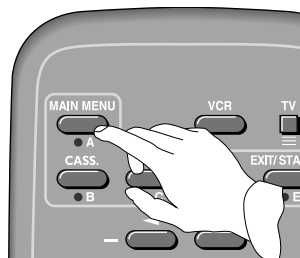

2


Choose your country.
Enter **5** for **Others BG**.

  The video recorder looks for the channels you can receive in your region and stores them.

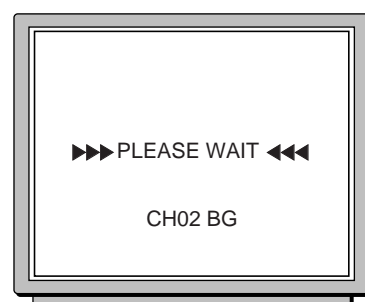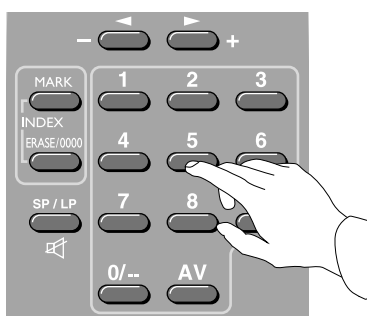



3

 Wait a moment until the following menu appears.

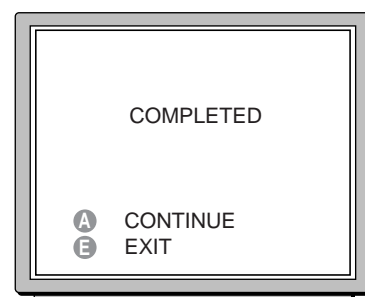

4

  Press **A** to continue.

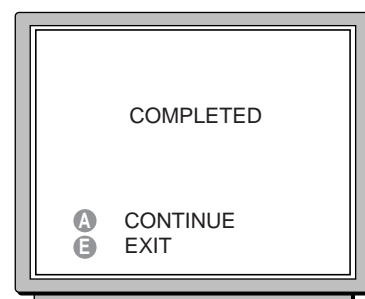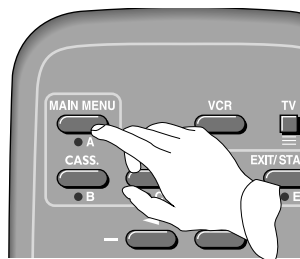

To check the automatic channel set up, please turn to pages 8 and 9.

It is essential that the time and date are correctly set in order to successfully programme recordings.

 
SETTING THE CLOCK

Your video recorder recognises the automatic time setting signals transmitted by certain channels. Once the automatic set up of the channels is complete, check the information displayed.

1

When date and time are set correctly, press **E** several times to leave the menus.

If not press **+** to continue.

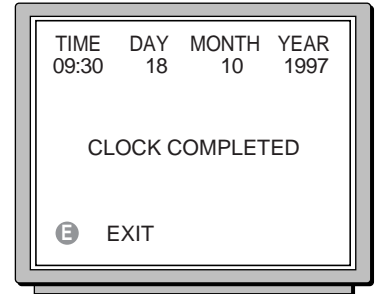


2

If the time is incorrect or has not been transmitted:
Set the clock with the digital keys.



Example: 09, 30, 18, 10 and 7 for 9.30 a.m., 18th October 1997.

 Press **B** to switch off the automatic clock (on/OFF)

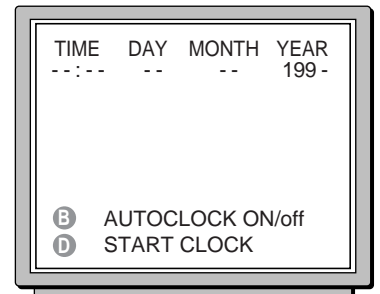



3

  Press **D** to store the time setting.

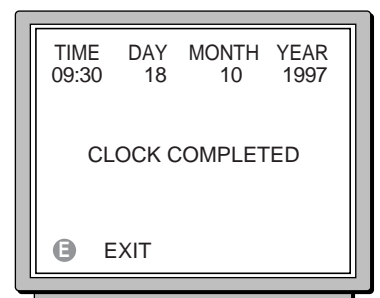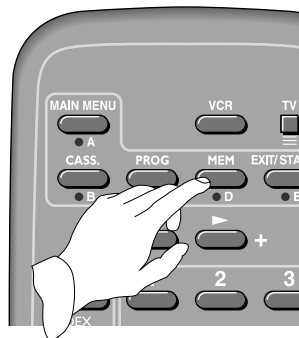

4

  Press **E** several times to leave the menus.

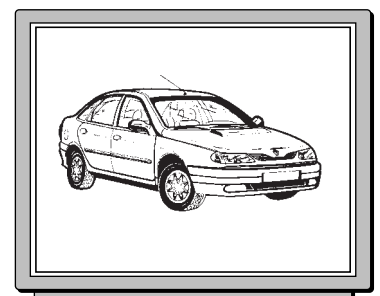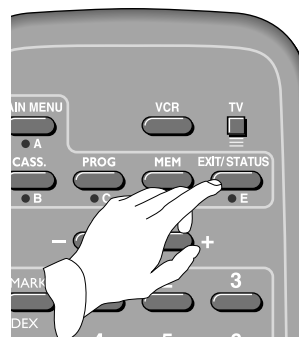

CHECKING THE AUTOMATIC CHANNEL SET UP

After the automatic set up, some channels may not have the right number. Follow the steps given below to correct the set-up by changing the channel numbers or by fine tuning.

 
 
Press the **VCR** key on your remote control.

VCR





1

Press **A**, then select **SET UP** by pressing key 2.

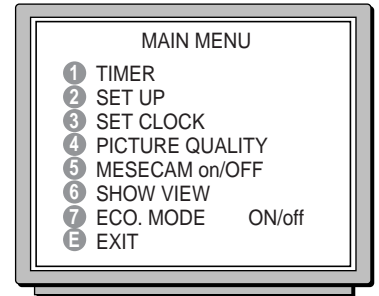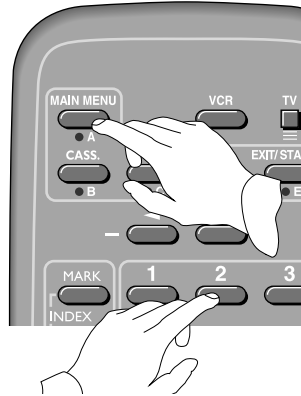

2

  Select **PROG. REVIEW** with key 4.


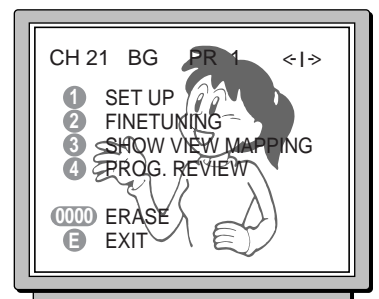
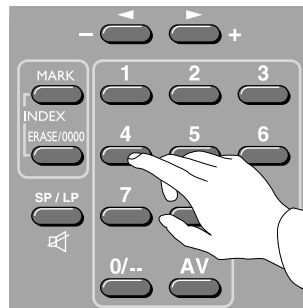


If the programme number (PR-) corresponds to the picture on the screen, go to the next channel using key **D**.

If the programme number (PR-) does not correspond to the picture, enter the correct programme number and validate by pressing key **D**.

Go to the next channel by pressing **D**.

 
 
 
For 2-digit channels, press **0/--** first (example: 0, 1, 2 for Pr12).

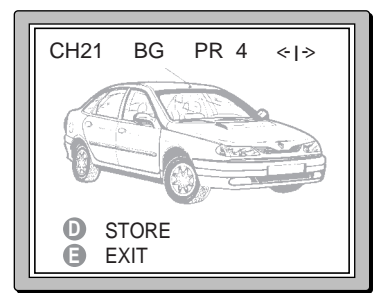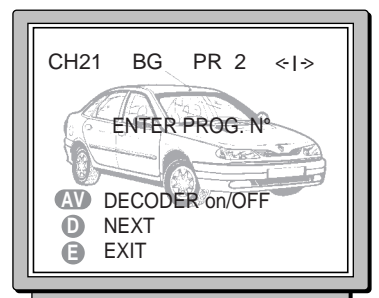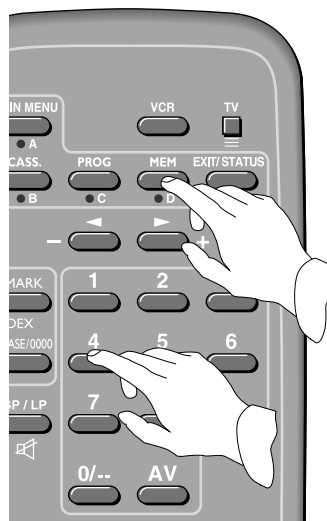

Your video recorder automatically attributes TV channel number 99 to channel 38. This channel is usually used by satellite receivers to transmit pictures through the aerial cable to another unit (TV or video recorder in this case).

4

   If the channel is scrambled, choose **DECODER ON** with **AV** and enter the number of the correct channel. Validate with **D**. Continue with **D**.


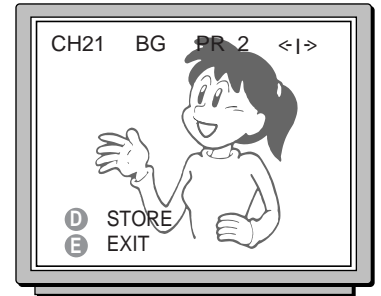
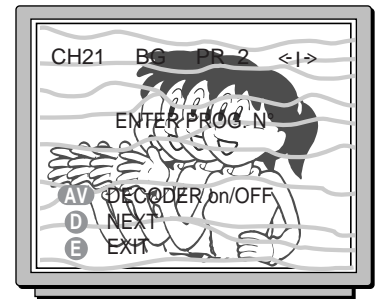
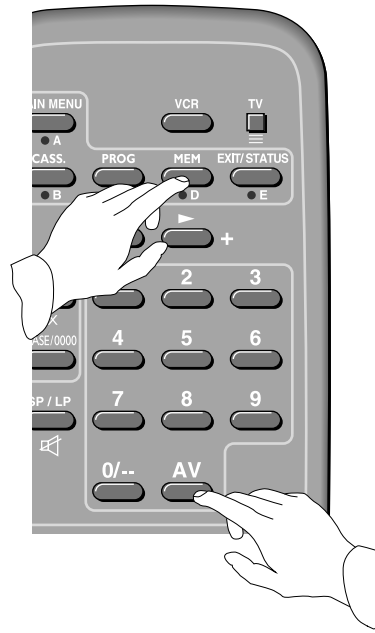


ENGLISH

5


If the picture is poor, press **EXIT** and select **réglage fin** (press key 2, then adjust with -/+) or erase the channel with key **0000**.

    Return to stage 2 to check all the programmes.

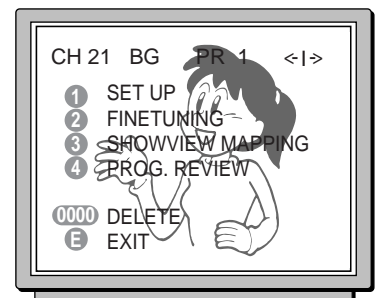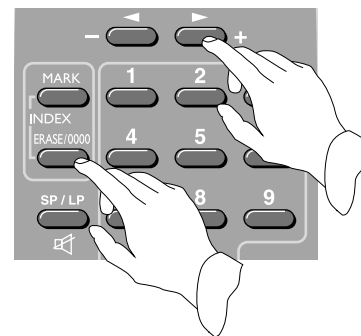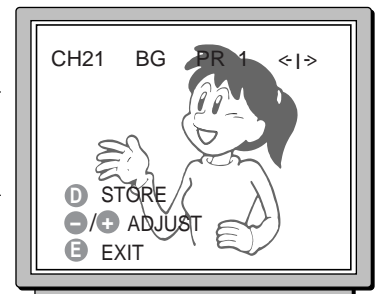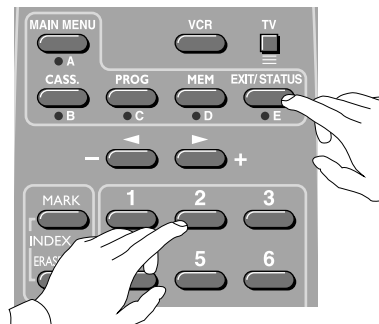

6

 When all the channels are checked, press **E** several times to leave the menus.

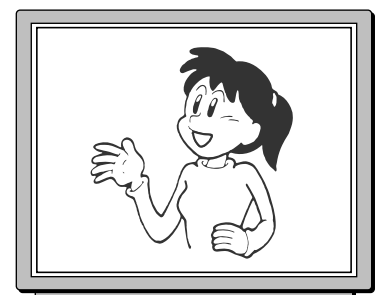

MANUAL CHANNEL SET UP

 
Press the **VCR** key on your remote control.



1


Press **A**.

Press button **2**
to select **SET UP**.

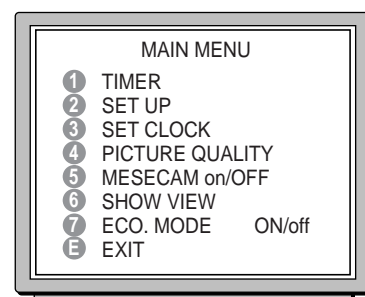



2

 Press **1**
to select **SET UP**.

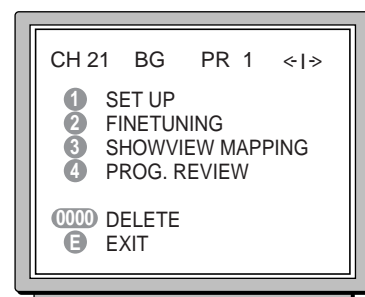



3

  Press **AV** to choose the
reception standard.
L = SECAM (France)
BG = Western Europe
DK = Eastern Europe

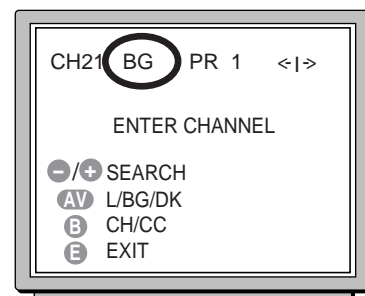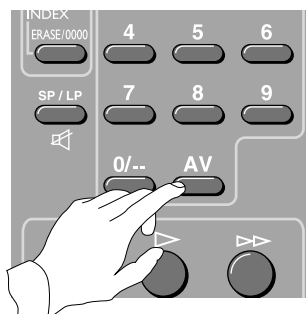



4

  Press **B** to choose the cable
channels (CC) or the
channels received via your
roof aerial (CH) (channel).

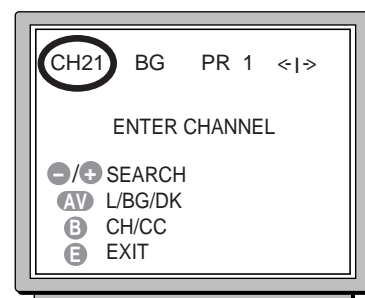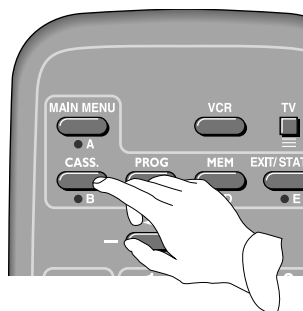

5

 
 
The channel set up starts
when you press - or + or
enter the channel numbers
(CH21).

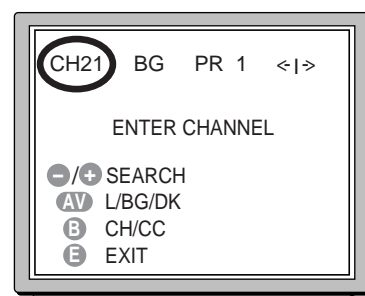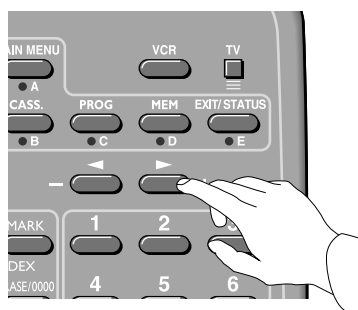

Some countries (Switzerland, Netherlands...) have staggered or half-channels. To receive the channels from your cable network, for each TV channel you should enter the nearest channel (e.g. 45 for 45.5) and use the fine tuning in stage 6. Consult your cable operator to obtain the list of the channels.



6

  When a channel is found, the pictures appear. If the pictures are poor, try **FINNETUNING** (press **B**, then adjust with **-/+**). If the adjustment is correct, press **B** to carry on with channel set-up. For 2-digit channels, press **0/--** first (example: 0, 1, 2 for Pr12). If you have a decoder connected to **AV2**, choose **DECODER ON** to turn the connection on and enter the channel number.

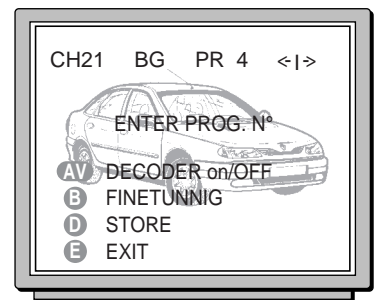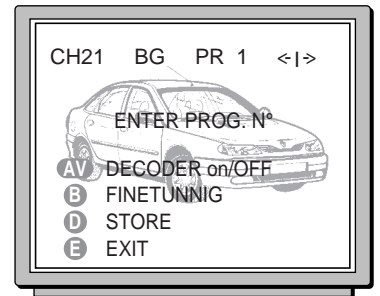



7

  Store this channel with **D**. To search for another channel, return to step 5.

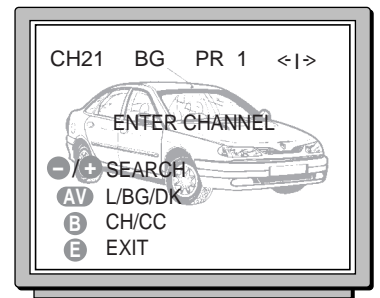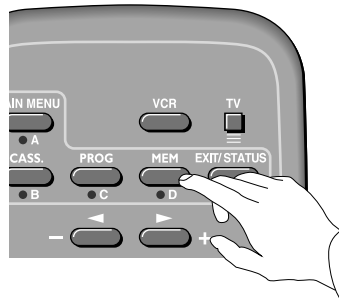


8

  When all the channels are set up, press several times on **E** to leave the menus.

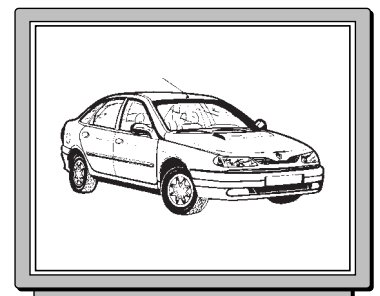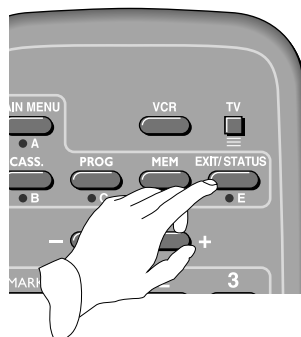


CONNECTING A SATELLITE RECEIVER

 
- 1** With a Scart cable the video recorder takes priority.

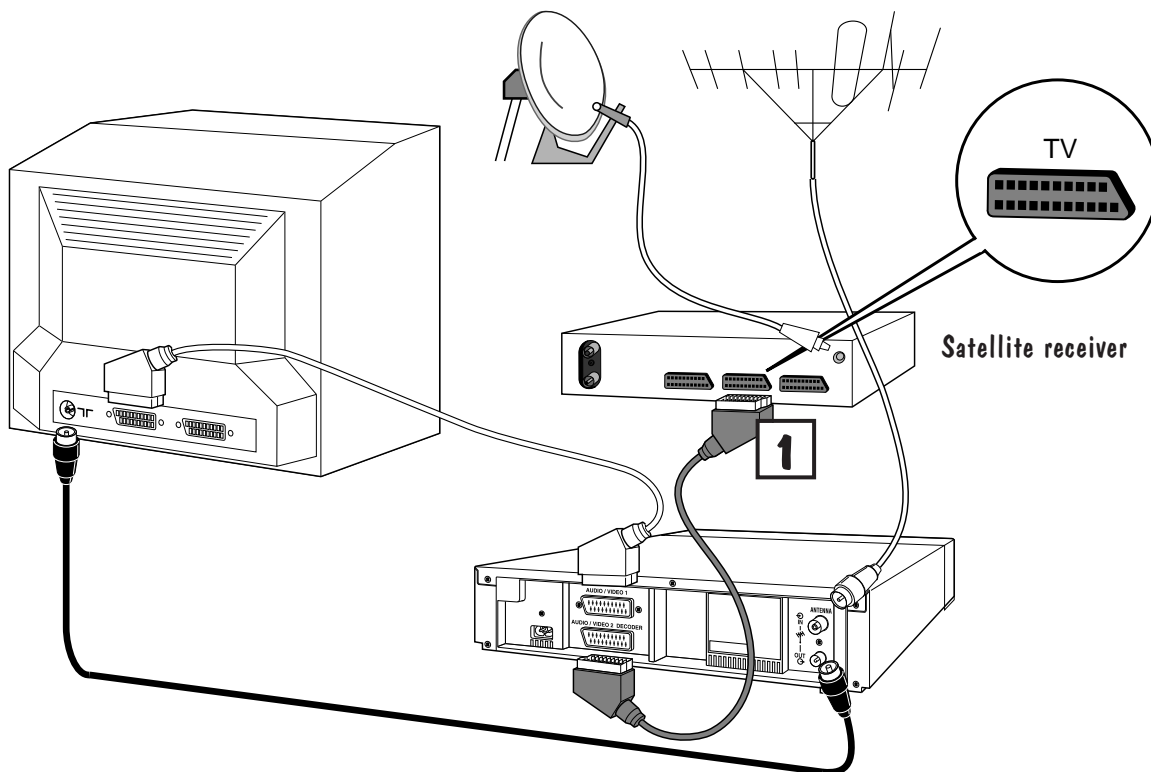

 
- 2** With an R.F. lead the video recorder takes priority.

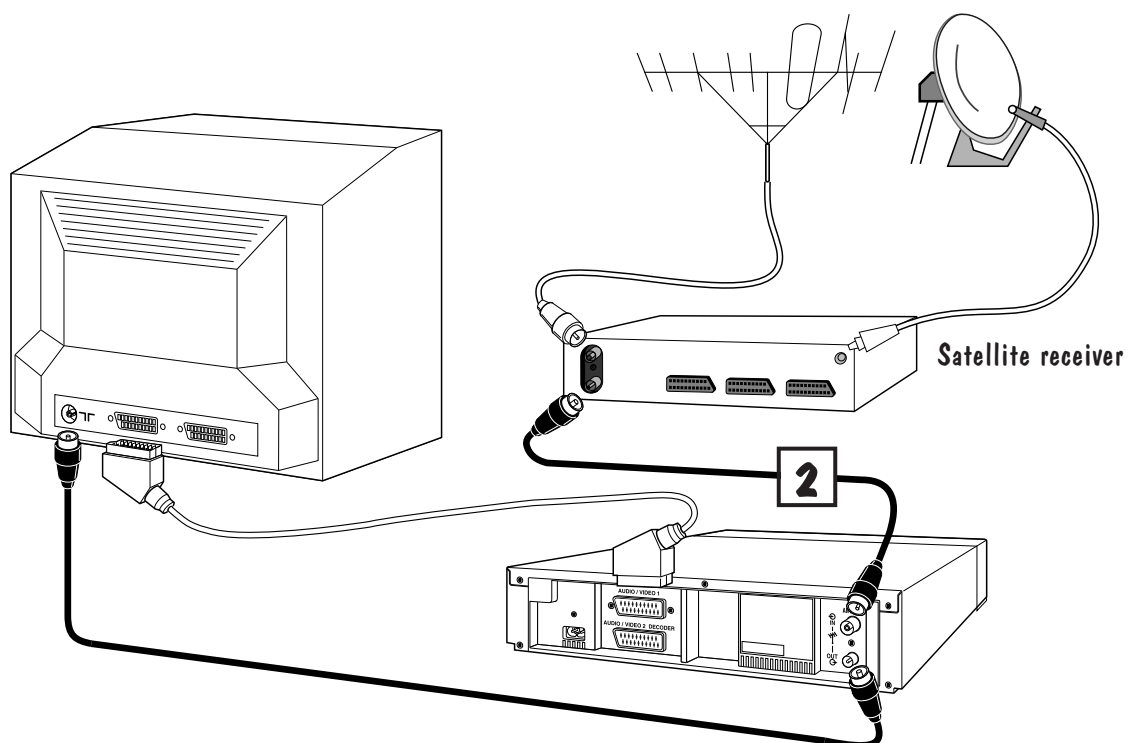

 3 With a Scart cable the satellite receiver takes priority.

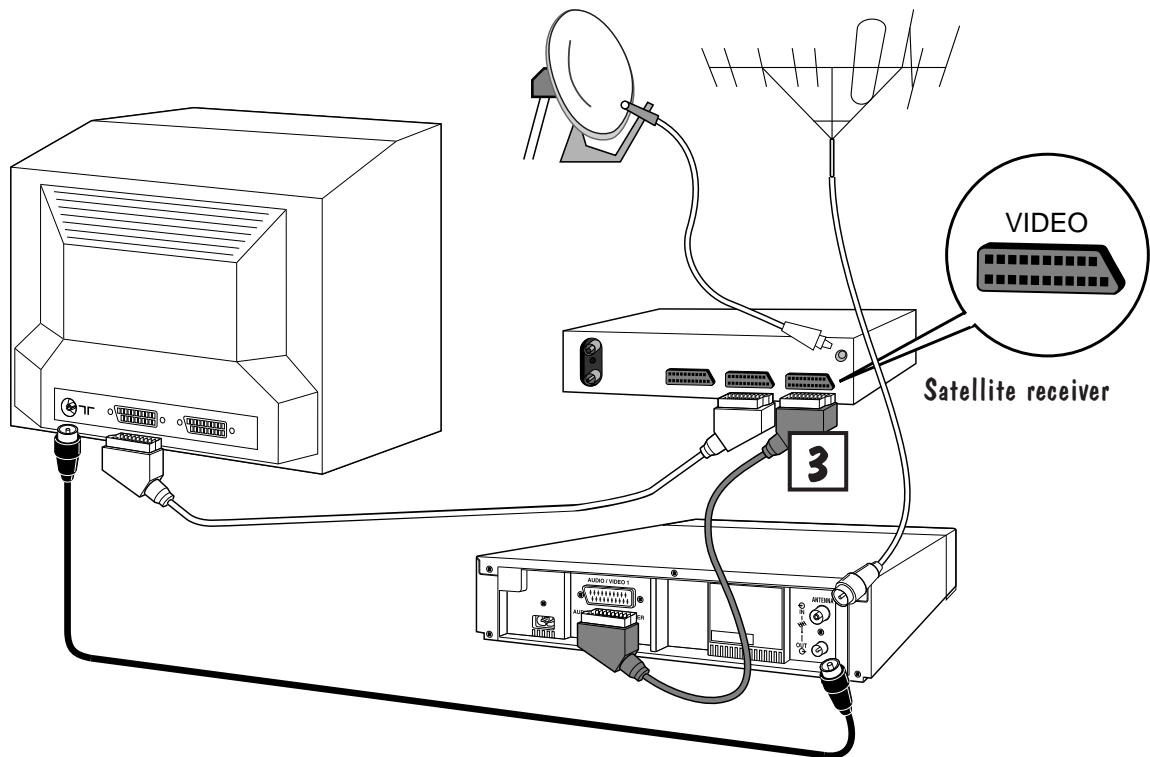

 4 With an R.F. lead the satellite receiver takes priority.

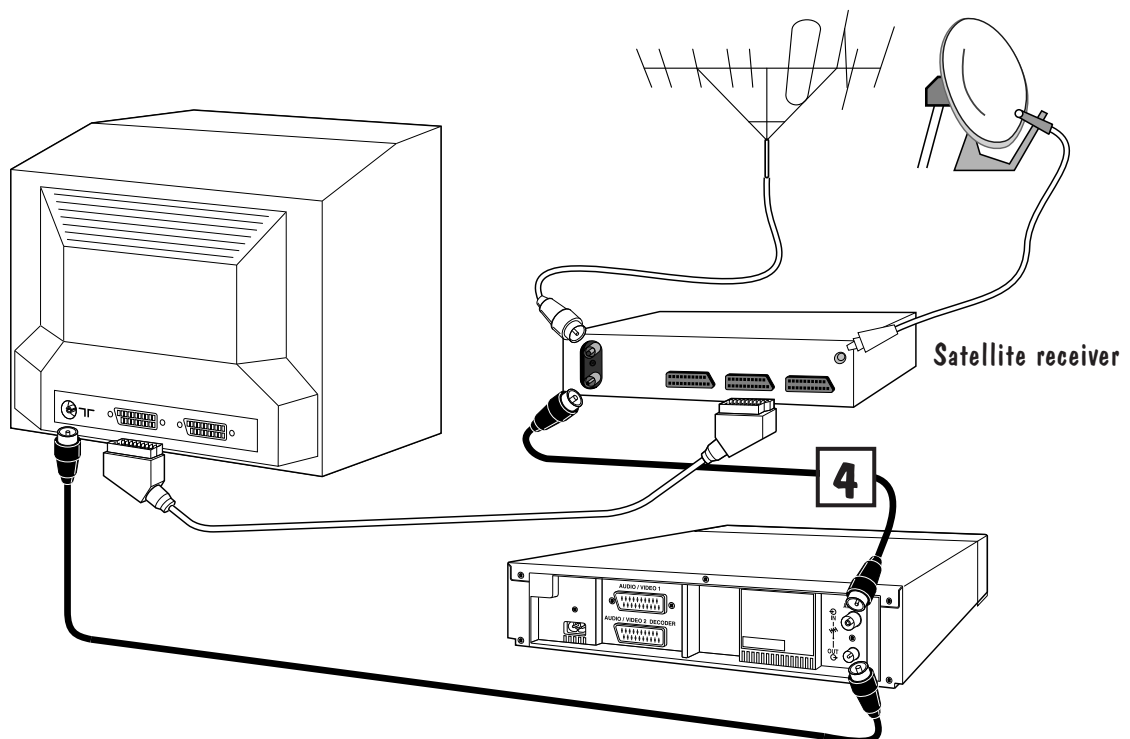

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>