
 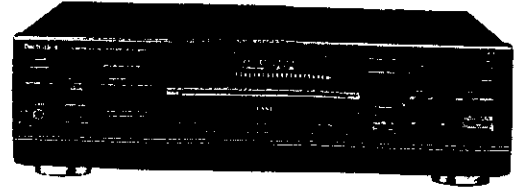


Technics

Compact Disc Player

SL-PS840

Operating Instructions



COMPACT
disc
DIGITAL AUDIO

Notes:

- Specifications differ according to the area code.
- The "EB" area code, for example, indicates United Kingdom specifications.
- The "EB" indication is shown on the packing case.

Before operating this unit, please read these instructions completely.

E EB GC GN

RQT1801-B
F0193L0

Thank you for purchasing this product.
 For optimum performance and safety, please read
 these instructions carefully.

Table of Contents

| | | | |
|--|----|------------------------------------|----|
| Caution for AC Mains Lead | 3 | Program Play | 14 |
| Suggestions for Safety | 4 | Search Function | 16 |
| Installation | 5 | Skip Function | 17 |
| Preparations | 5 | Special Features | 18 |
| Concerning the Remote Control | 7 | Recording from Compact Discs | 22 |
| Front Panel Controls and Functions | 8 | Concerning Compact Discs | 26 |
| Basic Operating Procedure | | Maintenance | 26 |
| (Sequential Play) | 10 | Technical Specifications | 26 |
| Direct Access Play | 12 | Troubleshooting Guide | 27 |
| Random Play | 13 | Before Transporting the Unit | 27 |

CAUTION:

The AC voltage is different according to the area.
 Be sure to set the proper voltage in your area before use.
 (For details, please refer to the page 6.)

CAUTION!

THIS PRODUCT UTILIZES A LASER.
 USE OF CONTROLS OR ADJUSTMENTS OR PER-
 FORMANCE OF PROCEDURES OTHER THAN THOSE
 SPECIFIED HEREIN MAY RESULT IN HAZARDOUS
 RADIATION EXPOSURE.
 DO NOT OPEN COVERS AND DO NOT REPAIR YOUR-
 SELF. REFER SERVICING TO QUALIFIED PERSONNEL.

SUOMI

VAROITUS!

LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ
 KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTA
 ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1
 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEI-
 LYLLE.

DANSK

BEMÆRK!

IDETTE APPARAT ANVENDES EN LASER.
 BRUG AF BETJENINGSKNAPPER ELLER REGULE-
 RINGER ELLER FREMGANGSMÅDER UD OVER DE I
 DENNE BETJENINGSVEJLEDNING ANGI VNE, KAN MED-
 FØRE FARE FOR BESTRÅLING. ÅBN IKKE KABE-
 NETTET OG FØRSØG IKKE AT UDFØRE REPARA-
 TIONER SELV. REPARATIONER MÅ KUN FORETAGES
 AF KVALIFICEREDE TEKNIKERE.

NORSK

ADVARSEL!

DETTE PRODUKTET ANVENDER EN LASER.
 BETJENING AV KONTROLLER, JUSTERINGER ELLER
 ANDRE INNGREP ENN DE SOM ER BESKREVENT I
 DENNE BRUKSANVISNING, KAN FØRE TIL FARLIG
 BESTRÅLING.
 DEKSLER MÅ IKKE ÅPNES, OG FØRSØK ALDRI Å
 REPARERE APPARATET PÅ EGENHÅND.
 ALT SERVICE OG REPARASJONSARBEID MÅ UT-
 FØRES AV KVALIFISERT PERSONELL.

DANGER-invisible
 laser radiation when
 open.
**AVOID DIRECT EX-
 POSURE TO BEAM.**

(Inside of product)

VARO! Avattaessa ja
 suojatikka ohitettaessa
 olet alttina näkymätön
 lasersäteilylle.
 Älä katso silmiesseen.

VARNING! Osynlig
 laserstråling når denne
 del er åpen og
 apparatet er utkoplet.
 Betrakt ej strålen.

ADVARSEL! Usynlig
 laserstråling når deksel
 åpnes og sikkerhedsdele
 brytes. Unngå
 eksponering for strålen.

(Tuotten sisällä)
 (Apparatens insida)
 (Produktets innsida)

**CLASS 1
 LASER PRODUCT**

(Back of product)

**ADVARSEL: USYNLIG LASERSTRÅLING
 VED ÅBNING, NÅR SIKKERHEDSAF-
 BRYDERE ER UDE AF FUNKTION.
 UNDGÅ UDSÆTTELSE FOR STRÅLING.**

(Indersiden af apparatet)

Caution for AC Mains Lead

(For United Kingdom)

("EB" area code model only)

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY.

THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted please observe the wiring code as shown below.

If in any doubt please consult a qualified electrician.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:


Blue: Neutral

Brown: Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:


The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

Under no circumstances should either of these wires be connected to the earth terminal of the three pin plug, marked with the letter E or the Earth Symbol .


Before use

Remove the connector cover as follows.

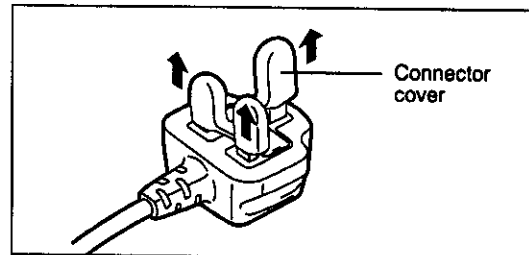


How to replace the fuse

1. Remove the fuse cover with a screwdriver.

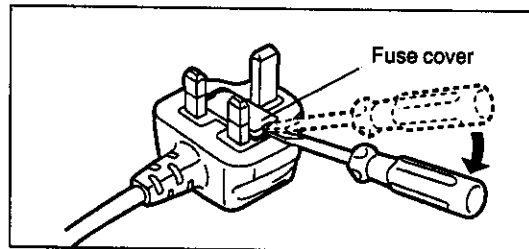

2. Replace the fuse and attach the fuse cover.

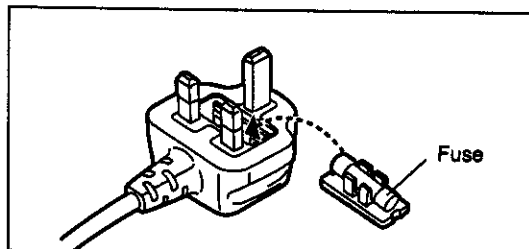

Suggestions for Safety

■ Use a standard AC wall outlet

1. **Use from an AC power source of high voltage, such as that used for an air conditioner, is very dangerous.**
A fire might be caused by such a connection.
2. **A DC power source cannot be used.**
Be sure to check the power source carefully, especially on a ship or other place where DC is used.

■ Grasp the plug when disconnecting the power supply cord

1. **Wet hands are dangerous.**
A dangerous electric shock may result if the plug is touched by wet hands.
2. **Never place heavy items on top of the power supply cord, nor force it to bend sharply.**

■ Place the unit where it will be well ventilated

Place this unit at least 10 cm (4") away from wall surfaces, etc.

■ Avoid places such as the following:

In direct sunlight or in other places where the temperature is high.

In places where there is excessive vibration or humidity.

Such conditions might damage the cabinet and/or other component parts and thereby shorten the unit's service life.

■ Be sure to place the unit on a flat, level surface

If the surface is inclined, a malfunction may result.

■ Never attempt to repair nor reconstruct this unit

A serious electric shock might occur if this unit is repaired, disassembled or reconstructed by unauthorized persons, or if the internal parts are accidentally touched.

■ Take particular care if children are present

Never permit children to put anything, especially metal, inside this unit. A serious electric shock or malfunction could occur if articles such as coins, needles, screwdrivers, etc. are inserted through the ventilation holes, etc. of this unit.

■ If water is spilled on the unit

Be extremely careful if water is spilled on the unit, because a fire or serious electric shock might occur. Immediately disconnect the power cord plug, and consult with your dealer.

■ Avoid spray-type insecticides

Insecticides might cause cracks or "cloudiness" in the cabinet and plastic parts of this unit. The gas used in such sprays might, moreover, be ignited suddenly.

■ Never use alcohol or paint thinner

These and similar chemicals should never be used, because they might cause flaking or cloudiness of the cabinet finish.

■ Disconnect the power supply cord if the unit will not be used for a long time

If the unit is left for a long time with the power ON, this not only will shorten its useful operation life, but also may cause other trouble.

■ If trouble occurs

If, during operation, the sound is interrupted or indicators no longer illuminate, or if an abnormal odour or smoke is detected, immediately disconnect the power cord plug, and contact with your dealer or an Authorized Service Center.

Installation

Notes of placement

- This unit is a precision instrument. Be sure to place it on a flat surface.
- Avoid places such as the following:
 - Near any equipment or device that generates strong magnetism.
 - On any heat-generating equipment or device, or in any place where the temperature is high (35°C or higher).
 - Extremely cold place (5°C or below).
 - Near a tuner or TV. (It may cause noise in the broadcast, or disturbance of the TV picture.)
- When carrying or storing the unit, handle it with care so it is not subjected to any strong bumps.

Always remove the disc before storing the unit for any period of time.

- To avoid problems due to vibration.
 - Do not place a book or similar object under this unit.
 - Do not route the connection cables (of this or other units) across the operation panel, across the top, or under the unit.

About moisture

Moisture may form on the lens in the following cases...

- Immediately after a heater has been turned on.
- In a steamy or very humid room.
- When the unit is suddenly moved from a cold environment to a warm one.

If moisture forms inside this unit, it may not work properly. In this case, turn on the power and wait about one hour for the moisture to evaporate.


Preparations

Supplied accessories


Check the packing carton for these accessories.

Note:


The configuration of the AC power supply cord differs according to area.

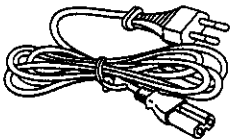


AC power supply cord 1

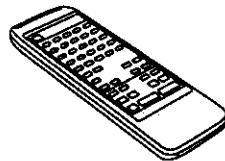

 
Remote control transmitter 1
(RAK-SL512W)



 Power plug adaptor 1
(For areas except Europe, Australia and New Zealand)



Stereo connection cable 1

 

Batteries 2
(UM-4, AAA, R03)

Preparations (continued)


Connections

Before making connections, be sure that the power of this unit and all other system components is first turned off. See the operating instructions of the amplifier or the cassette deck for details.

FOR UNITED KINGDOM ONLY
BE SURE TO READ THE CAUTION FOR AC POWER SUPPLY CORD ON PAGE 3 BEFORE PROCEEDING TO STEP 4.



LUOKAN 1 LASERLAITE
KLASS 1 LASER APPARAT

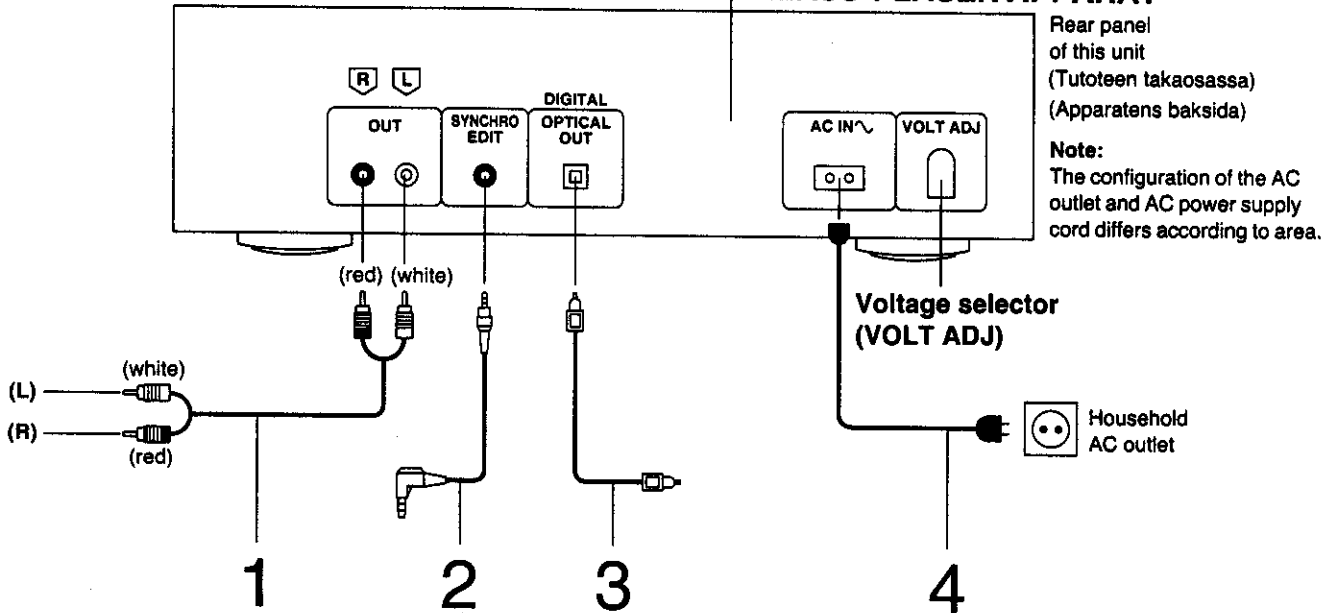


1 Connect the stereo connection cable (included) to the "CD" or "AUX" terminals of the amplifier.

When using the synchro edit function, be sure to connect the stereo connection cable to the amplifier even if the optical-fiber cable has been connected. (See pages 22-25.)

2 Connect the synchro edit cable (included with the cassette deck) to the "SYNCHRO EDIT" terminal of the Technics cassette deck.

3 Connect the optical-fiber cable (not included) to the "DIGITAL INPUT" terminal of the amplifier.

This terminal can be used for connection with other equipment that has a digital input terminal, such as an amplifier, by using an optical-fiber cable. A dust-protection cap is inserted in this terminal. Remove this cap only when a connection is to be made to this terminal.

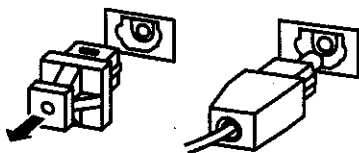


For areas except Europe, Australia and New Zealand
Set the voltage selector (VOLT ADJ) to the voltage setting for the area in which the unit will be used.

- Use a minus (-) screwdriver.
- Note that this unit will be seriously damaged if this setting is not made correctly.
- If the power supply in your area is 117 V or 120 V, set to the "127 V" position.


4 Connect the AC power supply cord (included) to the "AC OUTLET" of the amplifier or the household AC outlet.

 For areas except Europe, Australia and New Zealand
 If the power plug will not fit your socket, use the power plug adaptor (included).




For areas except Australia and New Zealand
Insertion of Connector

Even when the connector is perfectly inserted, depending on the type of inlet used, the front part of the connector may jut out as shown in the drawing. However there is no problem using the unit.

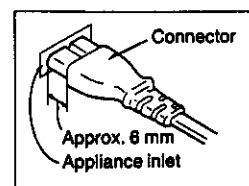

Concerning the Remote Control

Battery installation

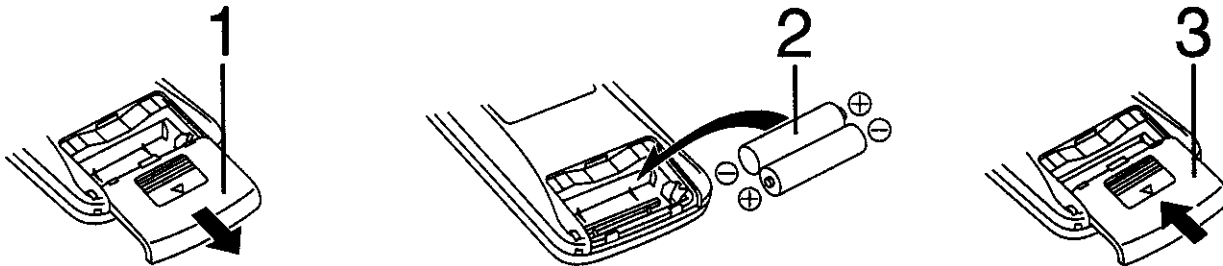

1 Open the cover.

Press gently and slide the cover out.

2 Insert the batteries included with this unit.

•When you need to replace these batteries, use two UM-4 "AAA", IEC R03 (1.5 V) or equivalent batteries.

•Be sure to insert batteries so that their positive (+) and negative (-) polarities match the indications in the compartment. Batteries installed incorrectly may leak and cause damage.

•Refer to "Use of batteries" below for additional information.


3 Close the cover.

Use of batteries



- Do not mix old and new batteries or batteries of different types (carbon and alkaline, etc.).
- The average battery life is about one year. Although the battery life varies depending on how often the device is used, you should generally replace the batteries about once a year.
- Replace the batteries if commands from the remote control transmitter do not operate the unit even when the transmitter is held close to the front panel.
- Never subject batteries to excessive heat or flame; do not attempt to disassemble them; and be sure they are not short-circuited.
- If you will not be using the remote control for a long period of time, remove the batteries and store in a cool, dark place.

- If a battery leaks, remove all batteries and dispose of them properly. Thoroughly clean the battery compartment before inserting new batteries.
- If the leaking electrolyte comes in contact with skin or clothes, flush with water immediately.
- Keep batteries out of reach of children.
- Do not use rechargeable-type (nickel-cadmium) batteries.
- Do not attempt to recharge alkaline or carbon batteries.
- Always remove old, weak, or worn-out batteries and dispose of them properly.
- Do not dispose of used batteries in household rubbish.

Operation notes

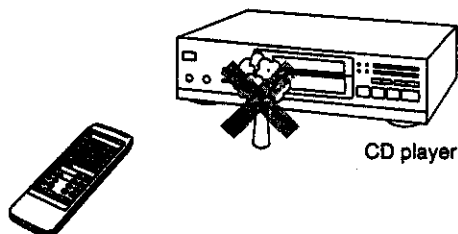


Aim the remote control's transmission window toward the CD player's sensor. Avoid any obstacles.

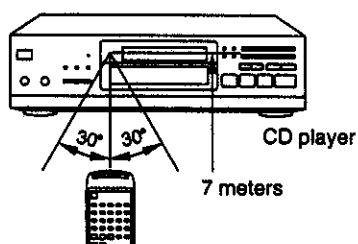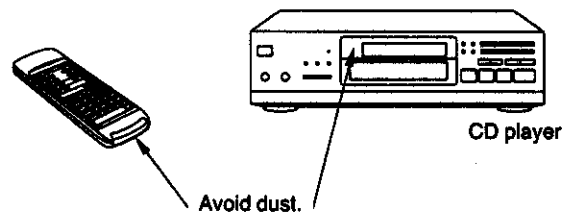

- Use the remote control with a 60-degree angle of the CD player.
- Maximum distance is within 7 meters directly facing toward the CD player.

- Be sure the transmission window and the CD player's sensor are free from dust. Excessive dust might prevent reception.
- If direct sunlight or another strong light source strikes the remote control signal sensor part of the CD player, it may impair the remote control's operation. If there is a problem, place the CD player away from the light source.
- If this unit is installed in a rack with glass doors, the glass doors' thickness or color might make it necessary to use the remote-control transmitter a shorter distance from the unit.



Front Panel Controls and Functions

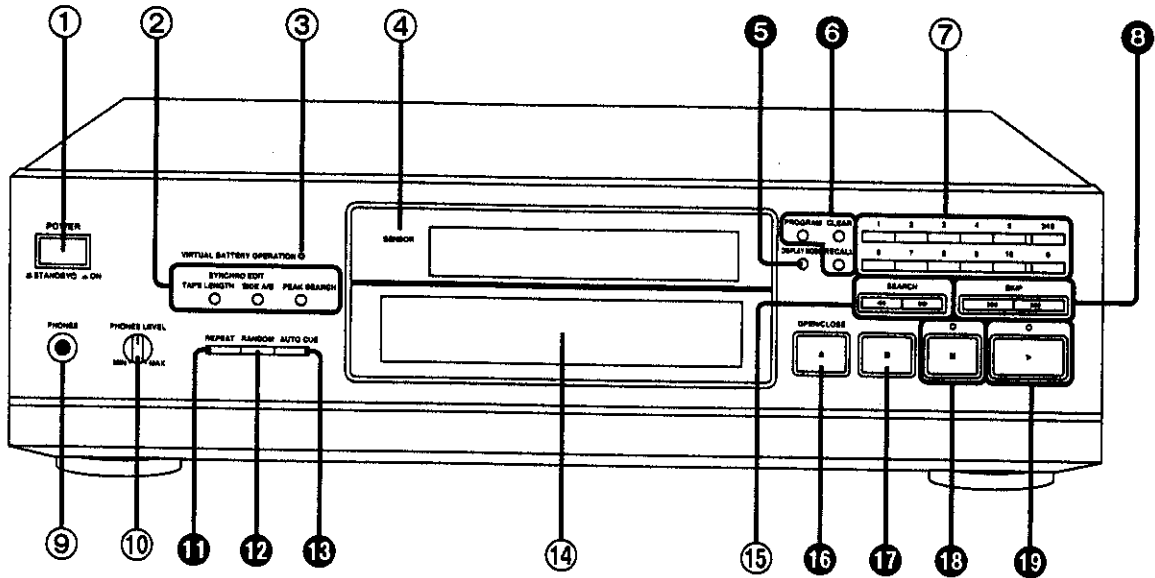

Control section

Numbers with black background (for example ⑤) indicate functions available on the remote control. (See page 9.)

- ① **Power "STANDBY $\text{\textcircled{O}}$ /ON" switch (POWER, $\text{\textcircled{O}}$ STANDBY $\text{\textcircled{O}}$ ON)**
This switch switches ON and OFF the secondary circuit power only. The unit is in the "standby" condition when this switch is set to the STANDBY $\text{\textcircled{O}}$ position. Regardless of the switch setting, the primary circuit is always "live" as long as the power cord is connected to an electrical outlet.
- ② **Buttons for CD-Edit function**
 - Tape length button (TAPE LENGTH)
 - Tape side select button (SIDE A/B)
 - Peak search button (PEAK SEARCH)
- ③ **Virtual Battery Operation indicator (VIRTUAL BATTERY OPERATION)**
- ④ **Remote control signal sensor (SENSOR)**
- ⑤ **Display mode button (DISPLAY MODE)**
- ⑥ **Buttons for program function**
 - Program button (PROGRAM)
 - Clear button (CLEAR)
 - Recall button (RECALL)
- ⑦ **Numeric buttons (1-10, >10, 0)**
- ⑧ **Skip buttons ($\text{\textcircled{O}}$ SKIP $\text{\textcircled{O}}$)**
- ⑨ **Headphones jack (PHONES)**
- ⑩ **Headphones volume control (PHONES LEVEL)**
- ⑪ **Repeat button (REPEAT)**
- ⑫ **Random button (RANDOM)**
- ⑬ **Auto cue button (AUTO CUE)**
- ⑭ **Disc tray**
- ⑮ **Search buttons ($\text{\textcircled{O}}$ SEARCH $\text{\textcircled{O}}$)**
- ⑯ **Disc tray open/close button ($\text{\textcircled{O}}$ OPEN/CLOSE)**
- ⑰ **Stop button ($\text{\textcircled{O}}$)**
- ⑱ **Pause button and indicator ($\text{\textcircled{O}}$)**
- ⑲ **Play button and indicator ($\text{\textcircled{O}}$)**

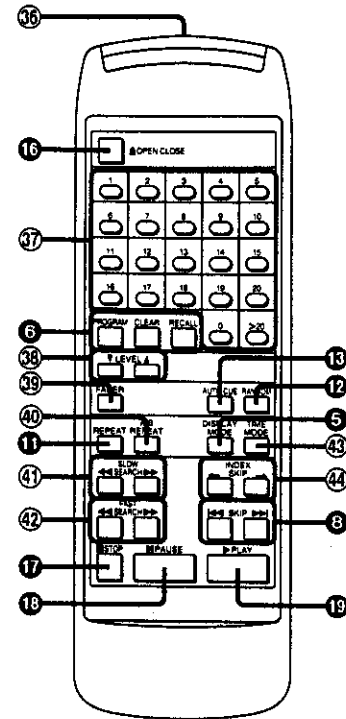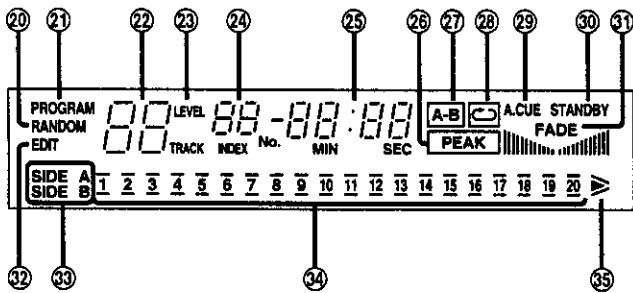

Display section


- ⑳ Random play indicator (RANDOM)
- ㉑ Program indicator (PROGRAM)
- ㉒ Track number display
- ㉓ Level control indicator (LEVEL)
- ㉔ Index/program sequence display
- ㉕ Time display
- ㉖ Peak search Indicator (**PEAK**)
- ㉗ A-B repeat Indicator (**A-B**)
- ㉘ Repeat indicator (**REPEAT**)
- ㉙ Auto cue indicator (A.CUE)
- ㉚ Standby Indicator (STANDBY)
- ㉛ Fade in/out Indicator (FADE)
- ㉜ Compact disc edit indicator (EDIT)
- ㉝ Tape side Indicator (SIDE A, SIDE B)
- ㉞ Track number indicator (**1-20**)
- ㉟ "Over" mark (**>**)

Remote control section

The functions ⑤, ⑥, ⑧, ⑩, ⑫, ⑬, ⑮, ⑯, ⑰ and ⑱ are described under "Control section" on page 8.

- ⑳ Remote control transmission window
- ㉑ Numeric buttons (1-20, 0, >20)
- ㉒ Level control buttons (**▼ LEVEL ▲**)
- ㉓ Fade In/out button (FADER)
- ㉔ A-B repeat button (A-B REPEAT)
- ㉕ Slow search button (**◀◀ SLOW SEARCH ▶▶**)
- ㉖ Fast search button (**◀◀ FAST SEARCH ▶▶**)
- ㉗ Time mode select button (TIME MODE)
- ㉘ Index skip button (**◀ INDEX SKIP ▶**)


Basic Operating Procedure (Sequential Play)

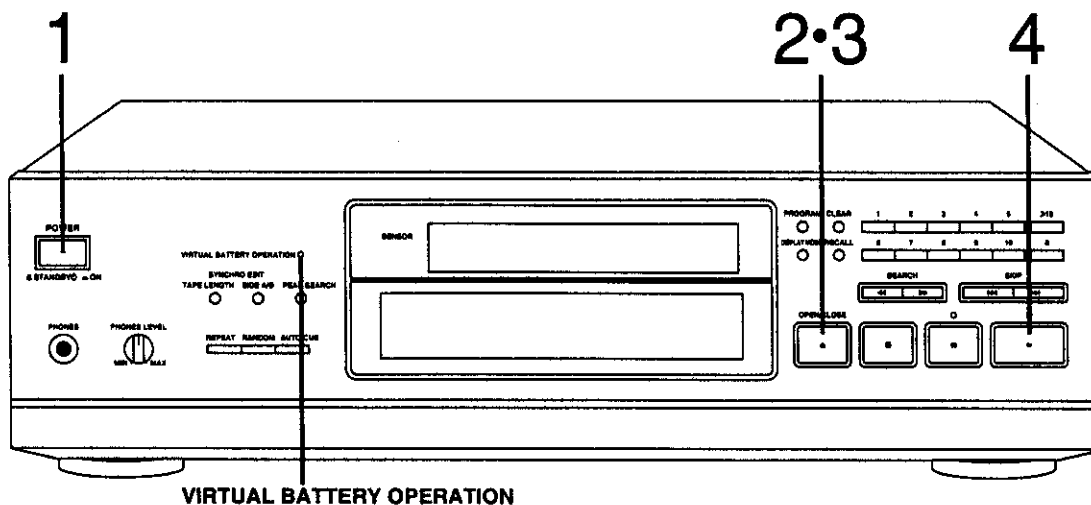

VIRTUAL BATTERY OPERATION

- 1 Press **POWER** to switch on the power.
If there is a disc in the disc tray, play will start from the first track.
- 2 Press **▲ OPEN/CLOSE** to open the disc tray and insert a disc.
(Also available from the remote control)


Label must face upward.

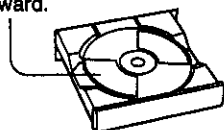

Before attempting to use the remote control transmitter to open the disc tray, make sure that there are no obstructions in front of the unit.

- 3 Press **▲ OPEN/CLOSE** again to close the disc tray.
(Also available from the remote control)

 
Total number of tracks Total playing time




Lights when the total number of tracks exceeds 20

- The total playing time displayed includes the silent sections between tracks. For this reason, it may be a few seconds longer than the playing time indicated on the disc.
- You can skip this step and press play button (▶). The disc tray will be automatically closed and then play will start from the first track.

- 4 Press play button (▶).
(Also available from the remote control)

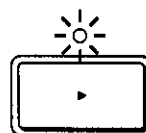

Track number in play Elapsed time

 


The unit stops automatically when the last track finishes playing.

■ VIRTUAL BATTERY OPERATION indicator

This indicates that the circuit (virtual battery) for eliminating the very faint noise contained in the power supply during play is now operating.

The indicator lights in both play and pause modes.

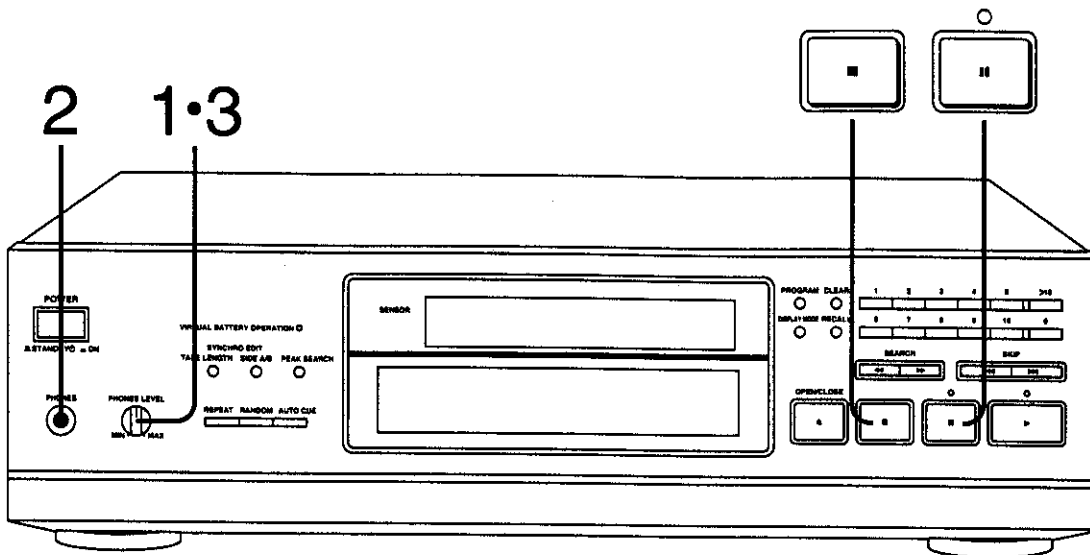

To stop disc play

(Also available from the remote control)

 
Press stop button (■).



To temporarily stop disc play

(Also available from the remote control)

Press pause button (⏸).



Press play button (▶) to resume play.


How to use headphones

- 1 Reduce the headphones volume level.
- 2 Connect the headphones (not included) to the headphones jack.
Plug type: Stereo large plug
- 3 Adjust the volume.

Note:

Avoid listening for prolonged periods of time to prevent hearing damage.

Direct Access Play

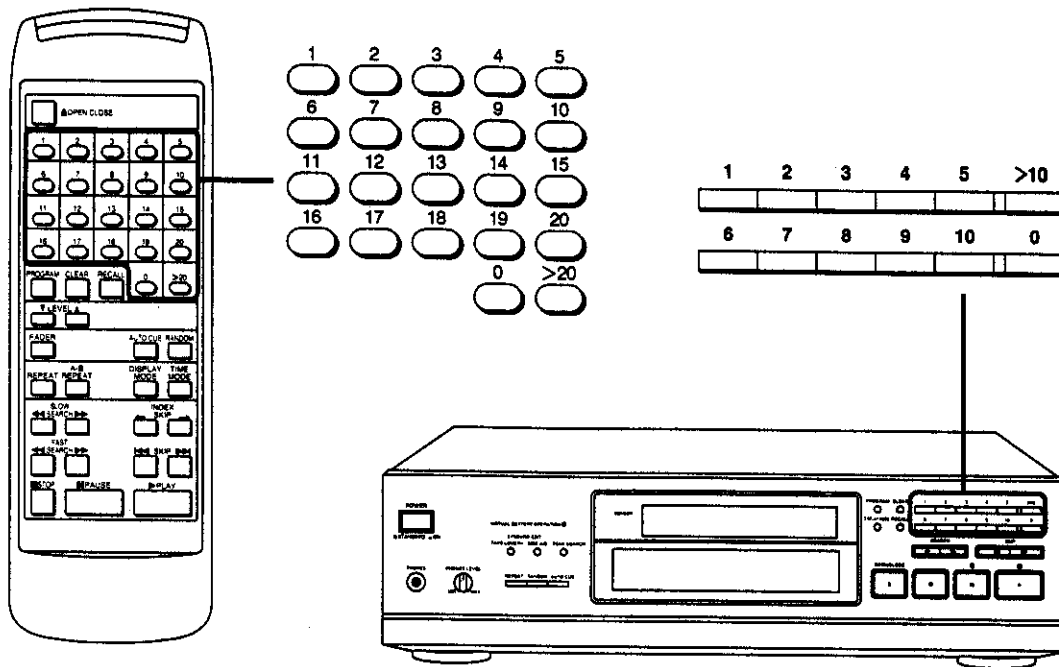

To start sequential play from a desired track. Play will progress to the last track of the disc.

Before beginning, follow steps 1–3 of “Basic Operating Procedure” on page 10.

From the remote control

Press the numeric button to select the track.

•To select a track between 1 and 20:

Press the corresponding number on the keypad.

•To select a two-digit track number over 20:

Press >20 then one of the buttons from 2 to 9 to select the “tens” digit. Then press one of the buttons from 0 to 9 to select the “unit” digit.

For example:

•To select track number 25: $\text{>20} \rightarrow 2 \rightarrow 5$

•To select track number 30: $\text{>20} \rightarrow 3 \rightarrow 0$

Play begins with the track selected and continues to the end of the disc. The unit will stop automatically when the last track finishes playing.

From the main unit

Press the numeric button to select the track.

•To select a track between 1 and 10:

Press the corresponding number on the keypad.

•To select a two-digit track number over 10:


Press >10 then one of the buttons from 1 to 9 to select the “tens” digit. Then press one of the buttons from 0 to 9 to select the “unit” digit.

For example:

•To select track number 17: $\text{>10} \rightarrow 1 \rightarrow 7$

•To select track number 20: $\text{>10} \rightarrow 2 \rightarrow 0$

Random Play

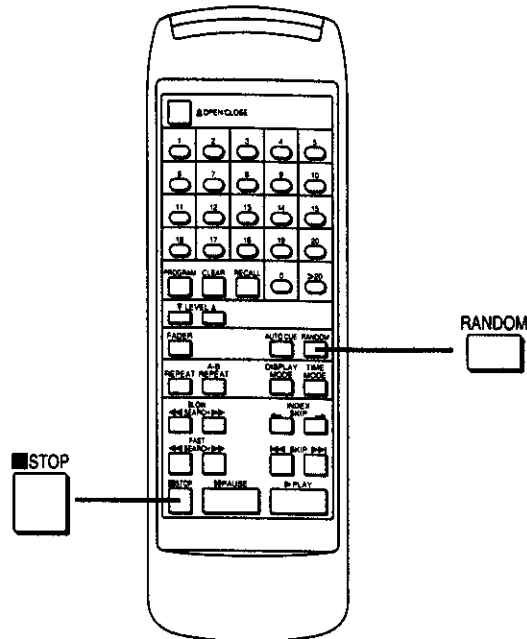


The unit will automatically select the sequence of selections to be played from the disc in a random manner.

(Also available from the main unit)

Before beginning, follow steps 1–3 of “Basic Operating Procedure” on page 10.

Press **RANDOM** in play or stop mode.

 Illuminates



The unit stops automatically when all tracks have played once.
(Random play mode will be cancelled.)

• **In the program play mode** (see page 14):
The unit plays only the programmed tracks in random manner.


To cancel random play

Press **STOP**.



When you press **RANDOM** in the play mode, play continues from subsequent tracks in the normal order to the end of the disc.

Program Play

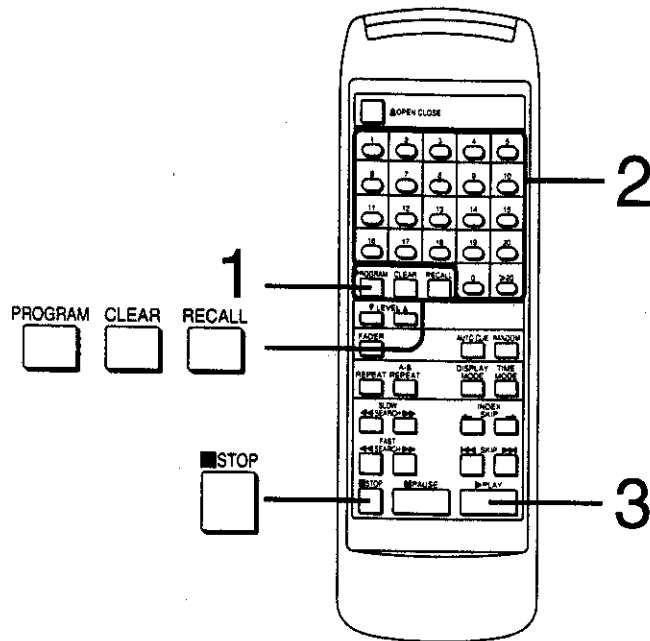


You can program up to 32 tracks in any order you desire.

(Also available from the main unit)

Before beginning, follow steps 1–3 of “Basic Operating Procedure” on page 10.

1 In the stop mode, press PROGRAM.

If you press this button in the play mode, the track in play will be programmed.

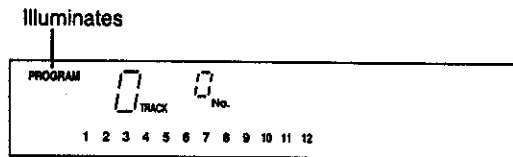

2 Press a numeric button to specify the track number.

•To select a track between 1 and 20:

Press the corresponding number on the keypad.

•To select a two-digit track number over 20:


Press >20 then one of the buttons from 2 to 9 to select the “tens” digit. Then press one of the buttons from 0 to 9 to select the “unit” digit.

For example:

•To select track number 25: $\overset{>20}{\text{0}}$ → 2 → 5


•To select track number 30: $\overset{>20}{\text{0}}$ → 3 → 0

For example, if you press $\overset{5}{\text{0}}$, $\overset{3}{\text{0}}$, $\overset{2}{\text{0}}$:

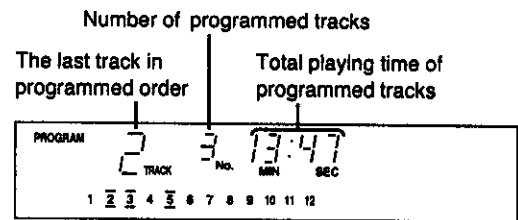


If you press a wrong number by mistake, press CLEAR.

 •When the 33rd program has been performed, the following display indicates that no more tracks can be added.



 •If the total playing time exceeds 99 minutes 59 seconds or if the track number 33 or higher has been specified, the display reads as follows:



3 Press ► PLAY to start.

•The unit stops automatically when all the programmed tracks have finished playing.

•Even after play is completed, the program sequence will remain in the unit's memory. You can play the sequence again by pressing ► PLAY.

To switch to sequential mode during play

Press **PROGRAM**.



This clears all programmed contents from memory.

To cancel the program play mode

Press **STOP**.



Press once in the stop mode and twice during play.
This clears all programmed contents from memory.
Turning off the power will also cancel the program play mode.

To confirm the program


Press **RECALL**.



Each time you press **RECALL**, the display shows programmed track number and its sequence, so that you can verify the entire program.

For example:

The diagram shows a program consisting of tracks 5, 3, 2.

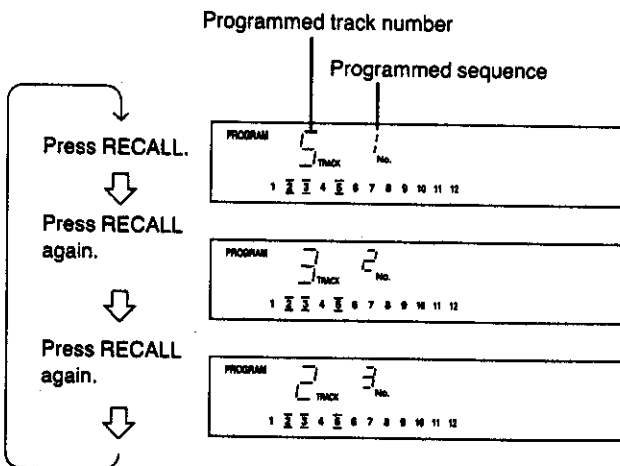

The normal display will resume in about 4 seconds.

To enter additional tracks

Press a numeric button to specify the track number.

(See page 14.)

To clear the entry

■ To clear the last track in the sequence, press **CLEAR** in the stop mode.




■ To cancel a track in the middle of the sequence, press **RECALL** repeatedly until the display shows the track number to be cancelled, then press **CLEAR**.



■ To cancel all the programmed tracks, press **PROGRAM** twice in the stop mode and return to step 2 on the previous page.



Search Function

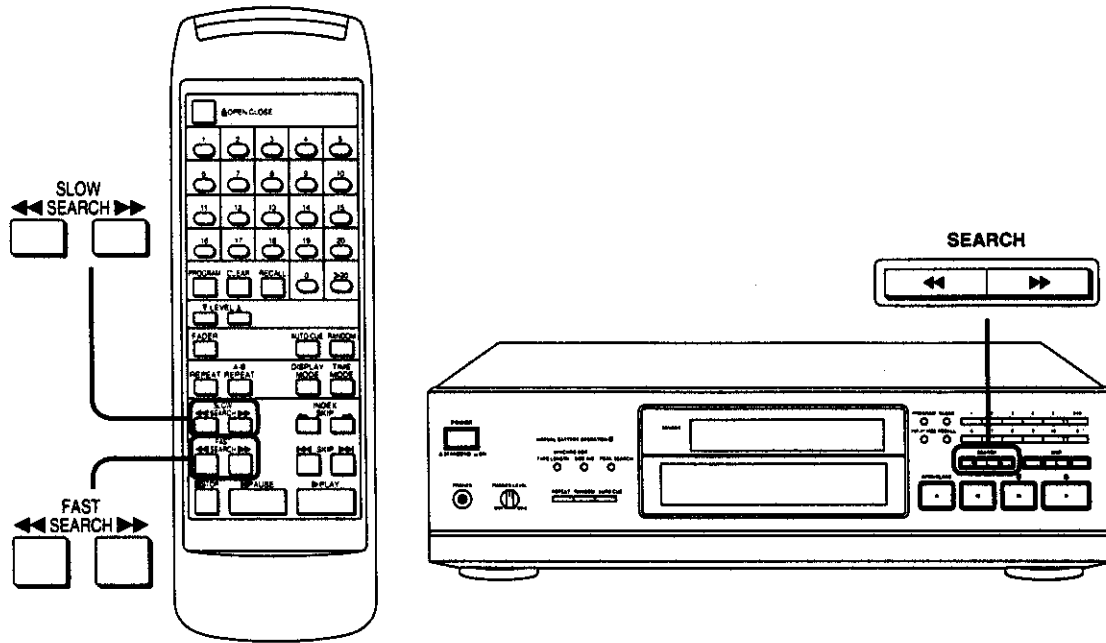

In play or pause mode, you can search rapidly forward or backward on the disc for specific sections.

From the remote control

To search at slow speed, press **◀◀ SLOW SEARCH ▶▶**.



(Backward) (Forward)

To search at high speed, press **◀◀ FAST SEARCH ▶▶**.



(Backward) (Forward)

- In the pause mode, no sound is heard. It remains at the point where you release the button.

- In the random and program play mode:

 
You can search forward and backward within the track in play.

- During A-B repeat play (see page 19):

You can search out of the range between A and B.

From the main unit


Press **◀◀ SEARCH ▶▶**.



(Backward) (Forward)

You can search slowly at first and then rapidly if the button is held down for more than about three seconds.

Skip Function

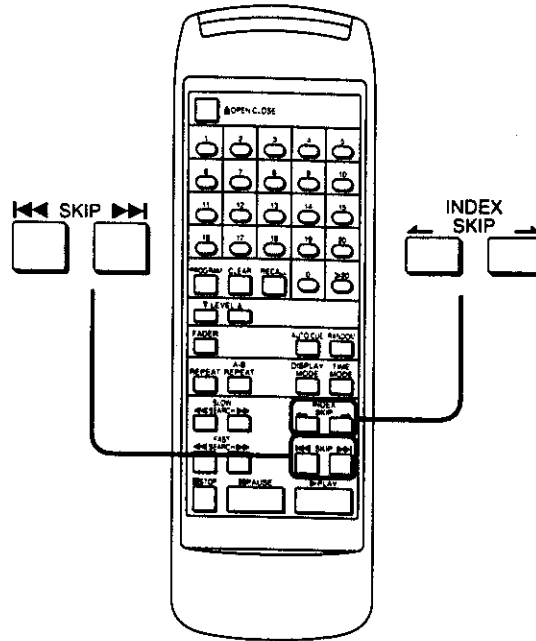

To skip tracks

(Also available from the main unit),

To skip forward, press SKIP ►►.



You can skip as many tracks as the number of times you press the button.

To skip backward, press ◀◀ SKIP.



You can skip to the beginning of the track being played. If you press this button again quickly, you can skip to the beginning of the previous track. Remember that in a backward skip, the track in play is included in the count.

● **In the pause mode:**

The unit will move to the beginning of the selected track and switch back to the pause mode.

● **In the stop mode:**

The unit displays only the selected track number. Press ► PLAY to start.

● **In the program play mode:**

You can skip forward and backward in the programmed sequence.

● **In the random play mode:**

►► : You can skip to the beginning of a track in random manner.

◀◀ : You can skip to the beginning of the track in play.

Index skip

Index skip works with discs which have the **(INDEX)** mark printed on their liner notes.

Press ◀ INDEX SKIP ►.

 


(Backward)


(Forward)

Index number

(For discs without index numbers, " / " will be continuously displayed.)



Special Features

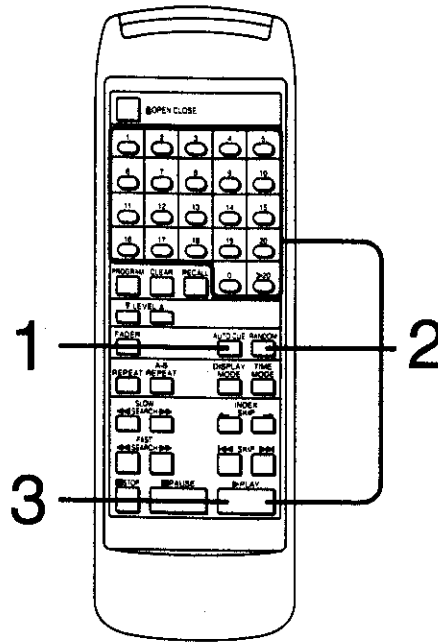


Auto cue

The auto cue function allows the unit to wait in a standby condition at the beginning of each track so as to start play right when you are ready.

When each track finishes playing, the unit skips to the beginning of the next track and switches to the play standby mode.

(Also available from the main unit)

1 Press AUTO CUE.

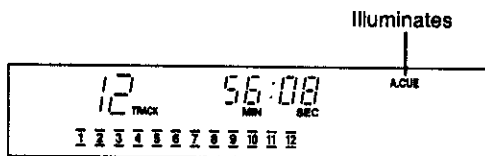


2 Select the desired play mode.


- To play desired track, press the numeric button.
 - To play the disc randomly, press RANDOM.
 - To play track 1, press ►PLAY.
- (Also available during program play. See page 14.)

The unit switches to the play standby mode.

 Illuminates



Flashes

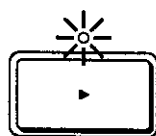

3 Press ►PLAY to start.

Press ►PLAY at the beginning of each track.


■ To cancel auto cue

Press AUTO CUE again.



Note:

The auto cue may fail to function at the proper point if the selected track begins with a very soft passage or if there is a lot of background noise.

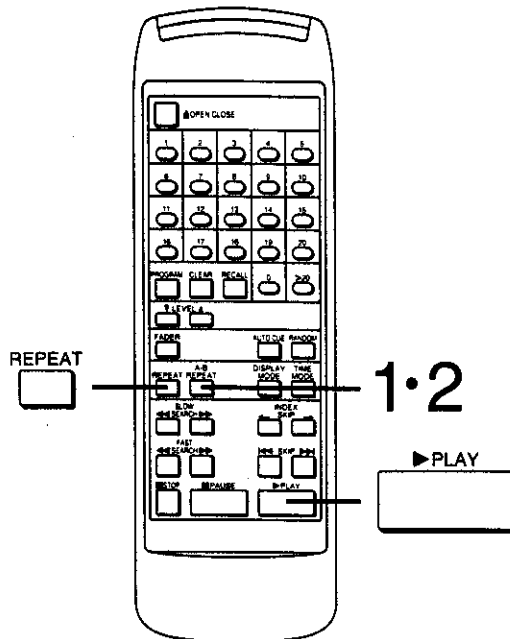


Repeat function

■ To repeat tracks

Press **REPEAT**.

(Also available from the main unit)

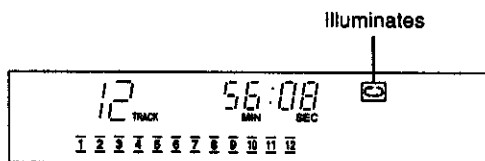

During program play, the unit plays only the programmed tracks repeatedly.

To cancel repeat function, press **REPEAT** again.




■ A-B repeat play

You can specify the beginning point (A) and the ending point (B) of the section and repeat only that section.


This function works during sequential and direct access play.

1 During play, press **A-B REPEAT** at the point where you want the repetition to begin.

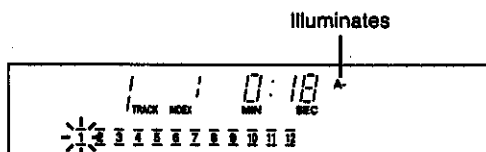

2 Press **A-B REPEAT** again at the point where you want the repetition to end.

The unit will play the section between A and B repeatedly.

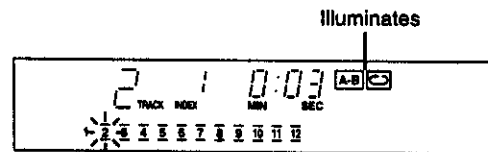

To cancel the A-B repeat, press **A-B REPEAT** again.




Hint:

To return to the (A) point during A-B repeat play, press **▶PLAY**. You can specify only the beginning point (A). Press **▶PLAY** to skip to (A) point. (Cue memory function)

Notes:

- A-B repeat function and cue memory function do not work on the program play and random play modes.
- A search can be conducted outside the A-B range during A-B repeat play. (The A-B repeat indicator remains lighted.)

Special Features (continued)

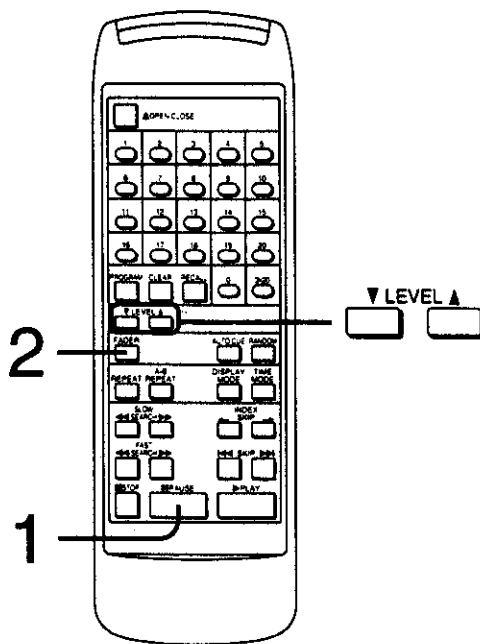


Fade In/out function

The fade in function enables the unit to start playing quietly, then gradually increase the volume. The fade out function enables the unit to end play with the sound gradually becoming smaller.

■ Fade in


- 1 Press **II PAUSE** at the point where you want to start play.
- 2 Press **FADER** to start.
The play begins with a 5-second fade-in.

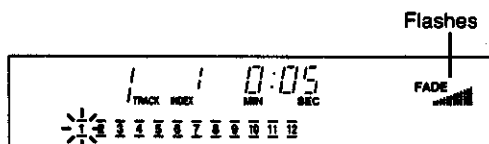

■ Fade out

Press **FADER** during play.

The play ends with fade out of 5 seconds, then the unit goes into the pause mode.

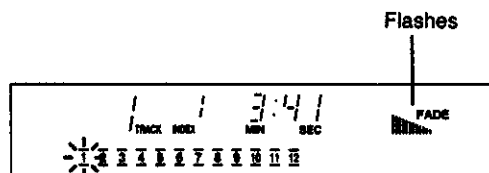

Note:

During auto cue mode, activating the fade in/fade out function will cancel the auto cue function.


Output level control

The output level can be temporarily decreased by this means, instead of adjusting the volume of the amplifier.

Press **▼ LEVEL** to lower the output level.



You can reduce the output level from 0 dB (normal level) down to -12 dB by 2 dB steps.

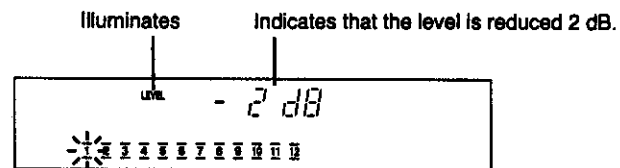


The display returns to the original state after about 2 seconds. When the power is switched off and then switched back on again, the level returns to 0 dB.

To raise the output level, press **LEVEL ▲**.



Note:


This unit is designed so that the output level cannot be adjusted in the edit mode to avoid changing the recording level.

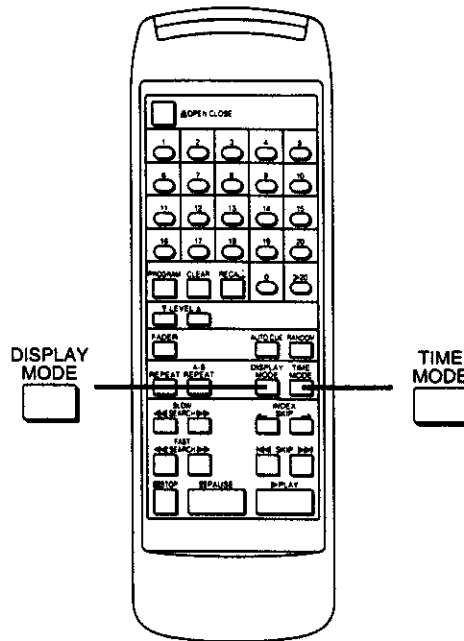

Display off/on

(Also available from the main unit)
Press DISPLAY MODE to turn off the indication.

 Lights only in the stop mode




If you press one of the function buttons, the normal display will resume for about 4 seconds.
 When the power is switched off and then switched back on again, the display will resume.

Press DISPLAY MODE to resume the indication.



Time mode selection

Press TIME MODE in the play or pause mode.
 Each time you press the button, the information will change as follows.

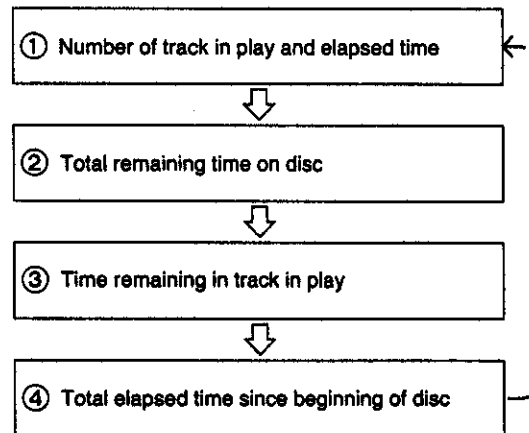


- When the track in play is number 33 or higher:
 The "----:--" indication will appear on display ③.
- In the random play mode:
 The "----:--" indication will appear on display ② and "----:--" on display ④.
- In the edit mode:
 The remaining time of each side of the tape will appear on display ②.
- In the program play mode:
 The information displayed on displays ② and ④ is only within the programmed tracks.

Recording from Compact Discs

The edit function of this unit is used when recording from compact discs to tape. Tracks can be recorded on both sides (sides A and B) of the tape, considering the length of the tape used, so that there is no interruption of tracks at the end of one tape side.

1 Prepare the cassette deck.

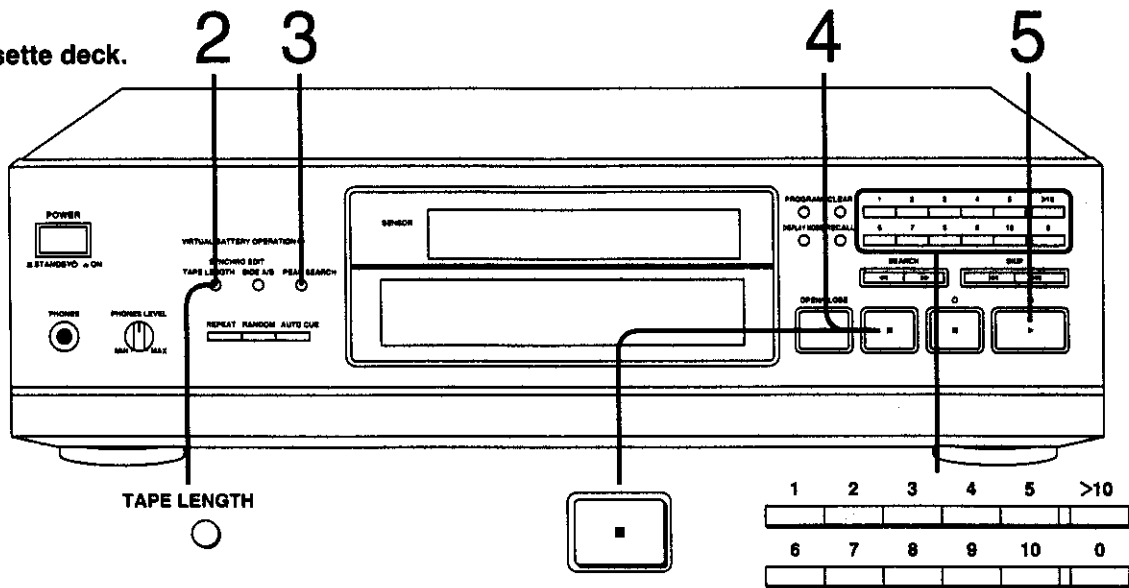

Sequential recording (Automatic editing)

If you use this unit in combination with the Technics cassette deck which has the SYNCHRO EDIT terminal, recording on the cassette deck will start automatically at the same time you start CD play. (Synchro recording function)

Also, if you set the cassette deck to the auto-reverse mode, both sides of the tape will automatically be recorded.

The maximum numbers of tracks allowable for editing is 32 and the biggest track number allowable for editing is 32. The edit function does not work for more than 32 tracks nor the track number over 32.

1 Prepare the cassette deck for recording.


(See next page.)

2 Press TAPE LENGTH to select the tape length.

Each time the button is pressed the tape length indicator changes as follows. Choose the length of the tape to be used.

→ C-46 ⇄ C-60 ⇄ C-90 ⇄ C--- ⇄


- To enter desired recording time, see next page.
- The unit will calculate how many tracks can be entered onto tape side A and B, and then program them automatically.

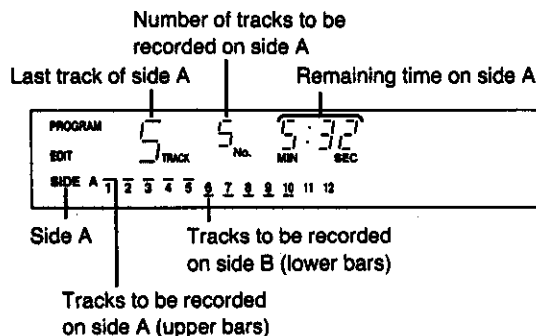

- In the edit mode, silent gaps of approximately 4 seconds will be automatically inserted between tracks automatically. (Auto space function)
- To enter additional tracks at the tape end of side B, see "To change the programmed contents" on page 25.

3 Press PEAK SEARCH to search for the peak point then adjust the recording level on the cassette deck.

It takes about 1.5 minutes to find the peak point for a 60-minute compact disc.

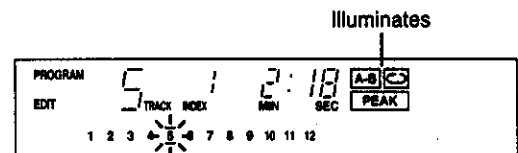

- When the peak point is found, the unit repeatedly produces the sound for about 6 seconds around the peak point.
- As there are many peak points on the disc, each time you make a new peak level search the unit might find a different point as the peak point. (Refer to operating instructions for the cassette deck to find out how to adjust the recording level.)

4 Press stop button (■).

5 Press play button (▶) to start.

Recording on the cassette deck will start at the same time.

- If the cassette deck is set to the auto-reverse mode, recording from tape side B will follow automatically.
- When recording from tape side B is finished, the CD player will automatically stop and the cassette deck will switch to recording standby mode.

To cancel the edit mode

Press stop button (■) after recording has finished.



How to prepare the cassette deck for recording

1. Insert the cassette tape into the cassette holder of the deck for the synchro-edit-recording. (Be sure the tape is rewound.)
2. Select the noise-reduction system and the reverse mode (↔).
3. Check to be sure that the forward-side indicator (▶) of the deck to be used is illuminated.
4. Set the cassette deck to the recording standby mode. (Refer to operating instructions for the cassette deck to be used.)

 
If the cassette deck has no SYNCHRO EDIT terminal

Press the play button of the cassette deck at the same time as pressing play button (▶) on the CD player to start recording.

- When the deck has reverse mode, set to one-way (→).
- When the recording for side A is finished, the CD player will go to the pause mode. The cassette deck will keep recording.
- To record on side B, first press the stop button on the cassette deck, then start recording again on side B while at the same time pressing play button (▶) on the CD player.

To enter desired recording time other than 46, 60 or 90 minutes

Press TAPE LENGTH to select "C----" then press the numeric buttons to enter the tape's total playing time in minutes.



For example:


 
To enter C-52, press → .

If you make a mistake, select "C----" again and enter the correct number.

Recording from Compact Discs (continued)

1 Prepare the cassette deck.

2 Enter the track numbers.

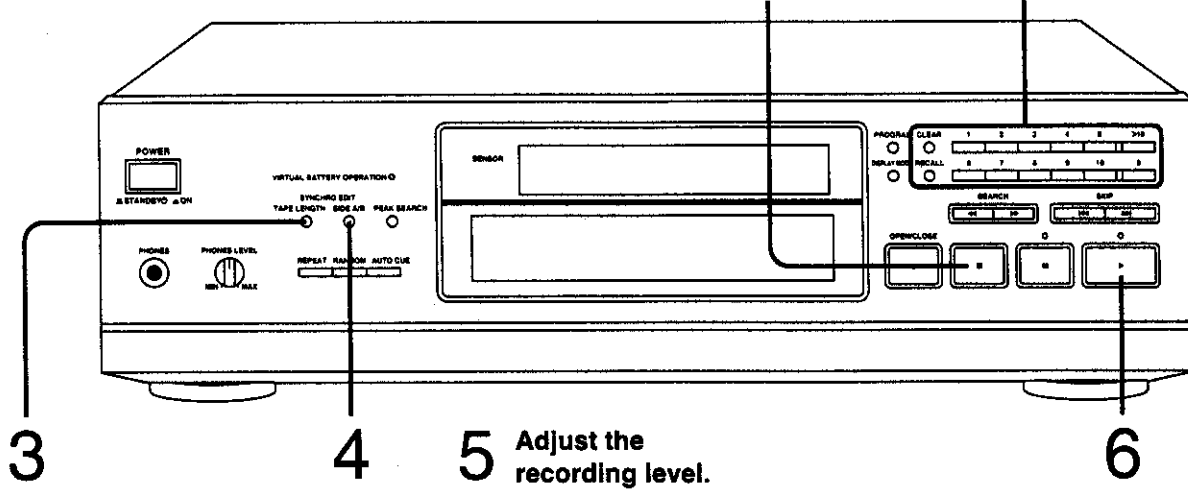

3

4

5 Adjust the recording level.

6


Program editing

You can make an original tape consisting of your favorite tracks, in any sequence desired.

The maximum number of tracks allowable for editing is 32 and the biggest track number allowable for editing is 32. The edit function does not work for more than 32 tracks nor the track number over 32.


1 Prepare the cassette deck for recording.
(See page 23.)

2 Enter the desired track numbers and the desired sequence.
(See page 14.)

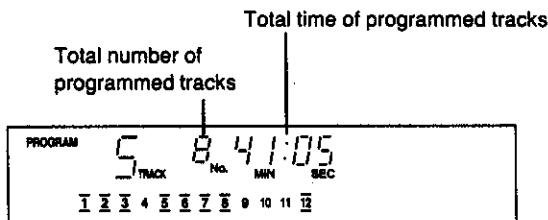


In the edit mode, silent gaps of approximately 4 seconds will be automatically inserted between tracks automatically. (Auto space function)

3 Press **TAPE LENGTH** to select the tape length.
(See step 2 on page 22.)

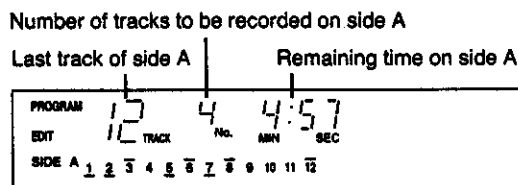

4 Press **SIDE A/B** to view the time remaining on side B.

A minus (-) sign on the remaining time display indicates that the total time of programmed tracks exceeds the tape length, and the programmed contents should be changed. (See page 25.)

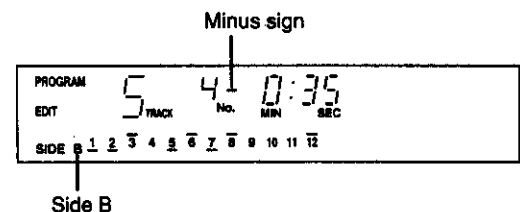

5 Adjust the recording level on the cassette deck.
(Follow steps 3 and 4 on page 22.)

6 Press **play button (▶)** to start.
Recording on the cassette deck will start at the same time.

- If the cassette deck is set to auto-reverse, recording on tape side B will begin automatically.
- When recording on tape side B has finished, the CD player will automatically stop and the cassette deck will switch to recording standby mode.

To cancel the edit mode

Press stop button (■) after recording has finished.



If the cassette deck has no SYNCHRO EDIT terminal

Press the play button of the cassette deck at the same time as pressing play button (▶) on the CD player to start recording.

- When the deck has reverse mode, set to one-way (⇄).
- When the recording for side A is finished, the CD player will go to the pause mode. The cassette deck will keep recording.
- To record on side B, first press the stop button on the cassette deck, then start recording again on side B while at the same time pressing play button (▶) on the CD player.

To change the programmed contents

- Press SIDE A/B to indicate the desired tape side.

SIDE A/B



- To enter additional tracks at the end of side A or B, press the numeric button.

(See page 14.)

 
- To clear the last track on the tape side A or B, press CLEAR.

CLEAR



- To clear and re-enter the last track on side A or B, press CLEAR and press the numeric button for the new track.

CLEAR



- To clear a track in the middle of the sequence, press RECALL to display the track number to be cleared and then press CLEAR.

RECALL



CLEAR





Concerning Compact Discs

Only compact discs having this mark can be used with this unit.





Handling precautions



To open the case, gently press the sides of the top, holding the top at both sides.

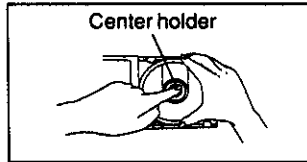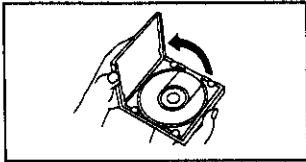

- To remove the disc from the case, press the center holder and lift the disc, holding by the edges.
- To return the disc to the case, insert the disc with label facing up and press downward at the center.
- Hold compact discs by the edges so the surface is not soiled with fingerprints. Fingerprints, dirt and scratches can cause skipping and distortion.

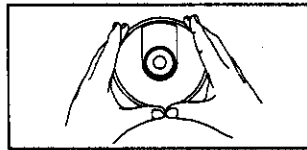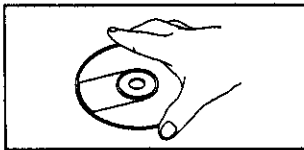

- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- If the surface is soiled, wipe gently with a soft, damp (water only) cloth.
- Always move the cloth directly outward from the center of the disc, not in a circular motion as with standard phonograph records.

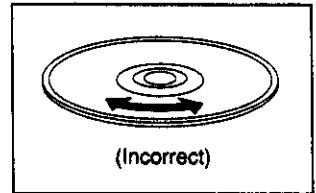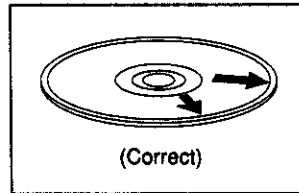

- If the disc is brought from a cold to a warm environment, moisture may form on the disc. Wipe this off with a soft, dry, lint-free cloth before using the disc.
- Do not write on the label side with a ball-point pen or other writing instrument.

Storage precautions

Be sure to store discs in their cases to protect them from dust, scratches and warping.

Do not place or store discs in the following places:

- 1) Locations exposed to direct sunlight.
- 2) Humid or dusty locations.
- 3) Locations directly exposed to a heat outlet or heating appliance.
- 4) In the glove compartment or rear ledge of an automobile.

Maintenance

To clean this unit, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth, dipped into a soap-and-water solution or weak detergent solution. Wring the cloth well before wiping the unit. Wipe once again with a soft, dry cloth.

Never use alcohol, paint thinner, benzene, nor a chemically treated cloth to clean this unit.

Such chemicals may damage the finish or your unit.

Technical Specifications

■ Audio

| | |
|---------------------------|-------------------------------------|
| No. of channels | 2 (left and right, stereo) |
| Frequency response | 2–20,000 Hz, ± 0.3 dB |
| Output voltage | 2.3 V (at 0 dB) |
| Dynamic range | 99 dB |
| S/N | 118 dB |
| Harmonic distortion | 0.0015% (1 kHz, 0 dB) |
| Total harmonic distortion | 0.0018% (1 kHz, 0 dB) |
| Channel separation | 110 dB |
| Wow and flutter | Below measurable limit |
| DA converter | Advanced MASH (1 bit) |
| Output impedance | Approx. 1 k Ω |
| Load impedance | More than 10 k Ω |
| Headphone output level | 15 mW max. 32 Ω (adjustable) |

■ Pickup

| | |
|-------------|--|
| Wavelength | 780 nm |
| Laser Power | No hazardous radiation is emitted (with safety protection) |

■ General

| | |
|--|--------------------------------------|
| Power consumption | 17 W |
| Power supply | |
| For Europe, Australia and New Zealand: | AC 50/60 Hz, 230–240 V |
| For others: | AC 50/60 Hz, 110 V/127 V/220 V/240 V |
| Dimensions (W×H×D) | 430×125×335 mm |
| Weight | 6.3 kg |

MASH is a trademark of NTT.

Note:

Specifications are subject to change without notice. Weight and dimensions are approximate.

For United Kingdom

This apparatus was produced to BS 800.

Troubleshooting Guide

Before requesting service for this unit, check the chart below for a possible cause of the problem you are experiencing. Some simple checks or a minor adjustment on your part may eliminate the problem and restore proper operation.

If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this unit) to locate a convenient service center, or consult your dealer for instructions.


| Problem | Probable cause(s) | Suggested remedy |
|--|---|---|
| The disc in the unit will not play. | Moisture has condensed in the unit. | • Switch ON and allow the unit to dry out for about one hour before using the unit. |
| | The disc is upside down. | • Be sure the label is facing upward. |
| | The disc is dirty. | • Wipe the disc with a soft cloth. |
| | The disc is scratched. | • Replace the disc with a new disc. |
| | The disc is warped. | |
| | The disc is not within specified standards. | |
| A certain music passage won't play correctly. | The disc is dirty. | • Wipe the disc with a soft cloth. |
| | The disc is scratched. | • Replace the disc with a new one. |
| There is noise from the tuner or disturbance on the TV screen. | Caused by high-frequency signals of this unit. | • Use the unit farther away from the tuner or TV. • If the tuner's or TV's antenna is the indoor type, use an outdoor one. |
| Remote control does not operate correctly. | The batteries are dead. | • Replace batteries with new ones. |
| | There is an obstruction between the remote control and the unit. | • Remove the obstruction. |
| | The batteries are inserted incorrectly. [The (+) and (-) polarities are reversed.] | • Reinsert batteries so that the polarities are correct. |

Before Transporting the Unit

To safeguard against damage in transit, be sure to secure the optical pickup by following the procedure below.

- 1 Remove the compact disc inside, and set the power switch to STANDBY \odot with the disc tray still open.**
- 2 Slowly push in the disc tray by hand.**
Do not tilt the unit while doing this.
If the disc tray is not pushed in slowly, the optical pick-up may not be secured properly.
- 3 Check that the lock mark can be seen in its entirety as shown in the figure on the right.**

The optical pickup will be automatically released when using the unit again.

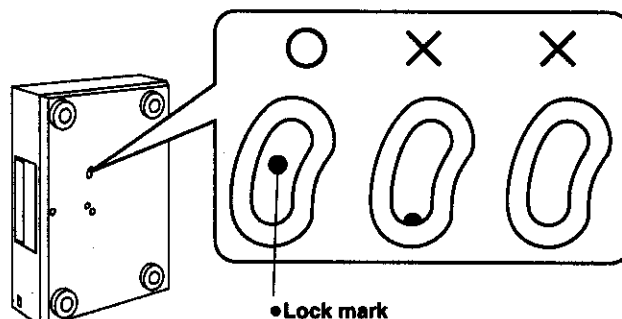

Matsushita Electric Industrial Co., Ltd.
Central P.O. Box 288, Osaka 530-91, Japan

Printed in Japan

RQT1801-B

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>