


The DC cable of the adaptor is terminated with a 2 pin socket.

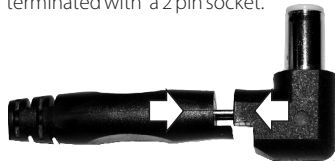

Offer the tip to the socket as shown and plug it in. The plug fits only one way!

Do not use force. If the plug tip is forcibly inserted the wrong way round you may damage the pins.

Always use the supplied cables and connectors as shown. Use of cables, connectors, or accessories not supplied with this product constitutes misuse and may result in injury or damage.

Connect the DC supply cord of the adaptor to the laptop.

Connect the mains power cord to the adaptor and plug the power cord into the mains supply.

Switch on at the mains. The power indicator on the adaptor will illuminate showing the unit is operational.

Now switch on the laptop. The laptop's indicator will show that the laptop is running on AC power.

After finishing your session: Check the battery charge level on the laptop. If the battery needs charging, switch the laptop off but leave the adaptor connected to charge the battery.

After use: Disconnect the adaptor from the laptop and the mains supply. Store the adaptor and accessories safely where they cannot be interfered with by children and pets.

Warranty

Your Technika appliance is covered by a warranty for 12 months from the date of purchase. If a fault develops during this period, please contact the TESCO electrical help line on 0845 456 6767. Please have your original purchase receipt with you when you call. This warranty in no way affects your consumer rights.

Specifications

Input: 100-240V AC 50/60Hz, 1.8 A

Output: DC 19V+/-5%, 4.74 A

Weight: 495 g (inc. accessories)



Class II double insulated. This appliance must not be connected to Earth.




UK: Waste electrical products should not be disposed of with household waste.

Separate disposal facilities exist. For your nearest facilities see www.recycle-more.co.uk or in-store for details.

ROI: Produced after 13th August 2005. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Technika

EXCLUSIVELY FROM TESCO

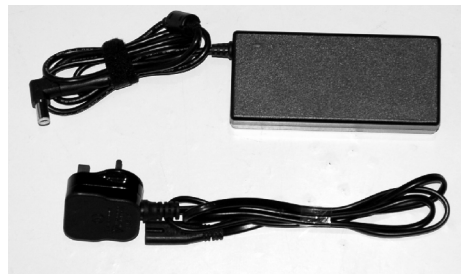

90W Laptop Power Adaptor

Owner's Handbook

Technika

Tesco Stores Ltd,
Delamare Road, Cheshunt, Herts, EN8 9SL



LPA111

▶ **Technika Helpline:** 0845 456 6767 (Calls cost up to 4p per minute from a BT landline, other providers may vary)



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

Important Safety Instructions: Please follow all the precautions listed below for safety and to reduce the risk of fire, injury or electrical shock.

Read these instructions. Keep these instructions.
Heed all warnings. Follow all instructions.
Do not use this apparatus near water.
Clean only with a dry cloth.
Install in accordance with the manufacturer's instructions.
Do not install or operate near any heat sources such as radiators, stoves, or other apparatus that produce heat.
Do not use near heat sensitive objects
Unplug this apparatus during lightning storms or when unused for long periods of time.
Refer all servicing to qualified service personnel.
Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
Warning: To reduce the risk of fire or electrical shock, do not expose this product to rain, sunlight or moisture. The product must not be exposed to dripping and splashing and no object filled with liquids should be placed on the product.
No naked flame sources such as candles should be

placed on the product.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device.

IMPORTANT

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Introduction

- The MPA111 is a 19VDC power adaptor with a universal mains input of 100-240VAC so you can operate it worldwide with a suitable mains power cord or adaptor. Included with the adaptor are several DC plug tips which will operate most currently available laptops.
- The unit features a power output of 4.74A. This output power will enable you to operate your laptop and charge the laptop during normal use.
- In periods of heavy use, especially if the laptop is powering several USB peripherals, the adaptor may not be able to power the laptop and charge the battery.
- It is safe to leave the unit connected to the mains supply for extended periods, so battery charging can take place in the laptop's "down time".
- It is normal for power adaptors to become warm during use. Avoid touching the device during use.
- As a precaution, unplug the unit from the mains supply when not in use.
- The means of disconnection from the mains is the mains plug on the power cord. This must be unobstructed and freely accessible at all times.

Unpacking

- Unpack the unit. In addition to this manual the packing contains:
- The power adaptor, with a mains power cord suitable for your area.
- A set of DC plug tips with a chart which will enable you to match a specific tip to your laptop model.

If any item is damaged or missing return the unit to your local Tesco store. Please have your receipt with you when you call. Dispose of the packing in full compliance with recycling regulations in your area.

Before you begin:

The adaptor has an output voltage of 19VDC +/- 5%.

Before you use this product you must verify that your laptop will operate at a nominal 19V DC. Your laptop manual or the rating plate under the laptop will tell you the operating voltage.

Operation

- Switch the laptop off.
- Using the supplied chart, determine which tip is suitable for your laptop.
- Plug the tip into the laptop's DC power supply input to verify that it fits properly.
- Unplug the tip. You can now connect the tip to the DC supply cable on the adaptor.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>