


Technika

EXCLUSIVELY FROM **TESCO**

MC-121IDAB

Owner's Handbook

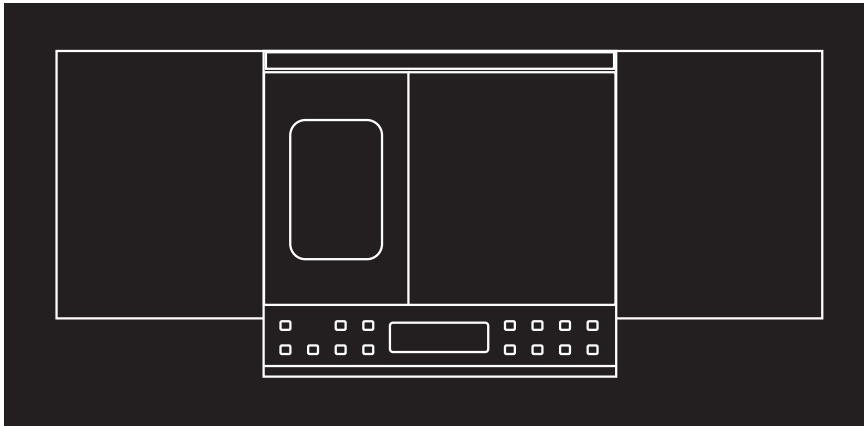

Vertical audio system

Download from www.Somanuals.com. All Manuals Search And Download.

Made for



iPod



iPhone

IMPORTANT SAFETY INFORMATION



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

Read these instructions.

Keep these instructions.

Heed all warnings.

Follow all instructions.

Do not use this apparatus near water.

Clean only with a slightly damp cloth.

Do not block any ventilation openings.

Install in accordance with the manufacturer's instructions.

Do not install or operate near any heat sources such as radiators, stoves, or other apparatus that produce heat.

Unplug this apparatus during lightning storms or when unused for long periods of time.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Warning: To reduce the risk of fire or electrical shock, do not expose this product to rain or moisture. The product must not be exposed to dripping and splashing and no object filled with liquids such as a vase of flowers should be placed on the product.

No naked flame sources such as candles should be placed on the product.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device.

Caution: Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous exposure.

IMPORTANT

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: DANGER OF RADIATION



These labels tell you that the unit contains a laser component. Opening the CD compartment lid and defeating the safety interlocks will expose the user to radiation from the laser beam. Do not stare into the laser while it is operating.

ELECTRICAL INFORMATION

Rating plate: The mains operating voltage of the unit is marked on a rating plate on the back panel.

The means of disconnecting this appliance from the mains supply is the AC mains plug. This should be unobstructed and readily operable at all times.

“Made for iPod/iPhone” means that an electronic accessory has been designed to connect specifically to iPod or iPhone and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPhone shown not included.

INDEX

INDEX

Introduction	2
Unpacking	2
Placement	3
Controls & connections	4
Remote control	5
Getting started	6
Setting the clock	6
Standby control, Volume	6
Listening to DAB radio	7
Listening to FM radio	7
DAB & FM Display modes	8
DAB Scanning and tuning	9
Listening to a CD	10
Listening to a MP3/WMA compilation	12
Program play	14
iPod adaptors	15
iPod/iPhone docking bay	16
Playing an iPod	17
Playing via the AUX jack	18
Timer & Sleep functions	18
Equaliser	19
Headphones	19
System reset	19
Care & maintenance	20
Specifications	20
Warranty	20

INTRODUCTION

Introduction

DAB (Digital Audio Broadcasting) technology allows many more radio stations compared to FM. DAB transmissions do away with problems of hiss and fade that plague AM and FM broadcasts and are less likely to be affected by adverse weather conditions or other sources of interference. In addition to speech and music DAB transmissions carry high levels of data - far greater than the limited RDS information available on FM stations.

Unlike FM, DAB is broadcast on many frequencies. Many countries in Europe, including the UK use Band III (174-230 MHz); others, France for example, use the L-Band (1452-1492 MHz). Germany uses both bands.

Your radio can tune Band III. Countries in Europe that use Band III include: Belgium, Denmark, Holland, Italy, Norway, Portugal, Spain, Sweden, Switzerland. Your radio will tune stations in all these countries.

Your radio cannot receive French or German stations broadcasting in the L-Band though FM services are available all over Europe.

Being digital, DAB transmissions can have a wider frequency range and greater dynamics than that available with FM technology.

FM reception is available on your system for use in those locations where there is no usable DAB service.

A headphone output is provided for personal listening.

PRELIMINARIES

UNPACKING

Carefully unpack the unit. If it is damaged, please return it to your nearest Tesco store for replacement. Remember to take your purchase receipt with you.

Retain the User Handbook. If you pass the unit on to a third party make sure you pass on the handbook.

We suggest you retain the packaging. If you dispose of it, do so having regard to any recycling regulations in your area.

CONTENTS

The carton should contain:

- The MC-121DAB audio system
- Remote control with battery
- Operating Manual

If any items are missing or damaged, contact your nearest TESCO store for a replacement. Have your receipt ready when you call. Retain the packaging. If you dispose of it, do so having regard to any recycling regulations in your area.

PREPARATION FOR USE

PROTECTIVE FILM

Some of the panels on this unit are protected by plastic film for protection in shipping. Remove all of this film and any tape securing it before use.

NOTE: Damage may result if film or tape is left in place on the sliding front panel and power is connected to the unit.

PLACEMENT

Placement on a table or shelf:

Place the unit on a sturdy table or shelf where it cannot get knocked over and where there is a clear line of sight to the remote handset.

Make sure that there is a clearance of 10cm (4 inches) above the unit for ventilation.


Optional wall-mounting:

The MC-121DAB system has back panel fixings for optional wall-mounting.

If you plan to wall-mount the system, you will need to fix two screws into the wall.

Before fixing the screws, plan the location carefully, ensuring that mains power is accessible.

Once you have planned the location, fix two screws (not supplied) into the wall to support the main unit, spaced by 240mm. Before mounting the screws, check the fit of the heads in the back panel keyhole slots to ensure that the screw heads will not pull out of the slots.

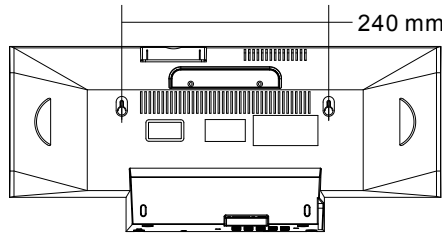

Use a spirit level to ensure that the screws will be level and check that the unit will be fixed at the height you require.

When you have mounted the screws, mount the unit carefully onto the screw heads. Check that the mounting is secure before use.

NOTE:- Most walls will require the use of wall-plugs when mounting the fixing screws. If you are in any doubt concerning the type of fixing required or the security of wall-mountings, consult a building professional.


Important notes for wall-mounting:

- Tesco accepts no liability for damages caused by incorrect assembly, installation or improper use.
- Ensure that the wall has sufficient strength to hold the weight of the system.
- If there is any doubt regarding the condition or the load bearing of the wall, please consult a specialist from the building trade.
- The wall fixings used must be suitable for the type of wall (materials, thickness, condition), so that the maximum load bearing of the wall can be guaranteed.
- Ensure that no electrical cables, water pipes or gas pipes are located within the wall.
- Before mounting, check the location of the nearest mains socket.
- Wear safety goggles when drilling.
- Keep small parts out of reach from children.



CONTROLS & CONNECTIONS

FRONT VIEW

TOP VIEW (under flap)

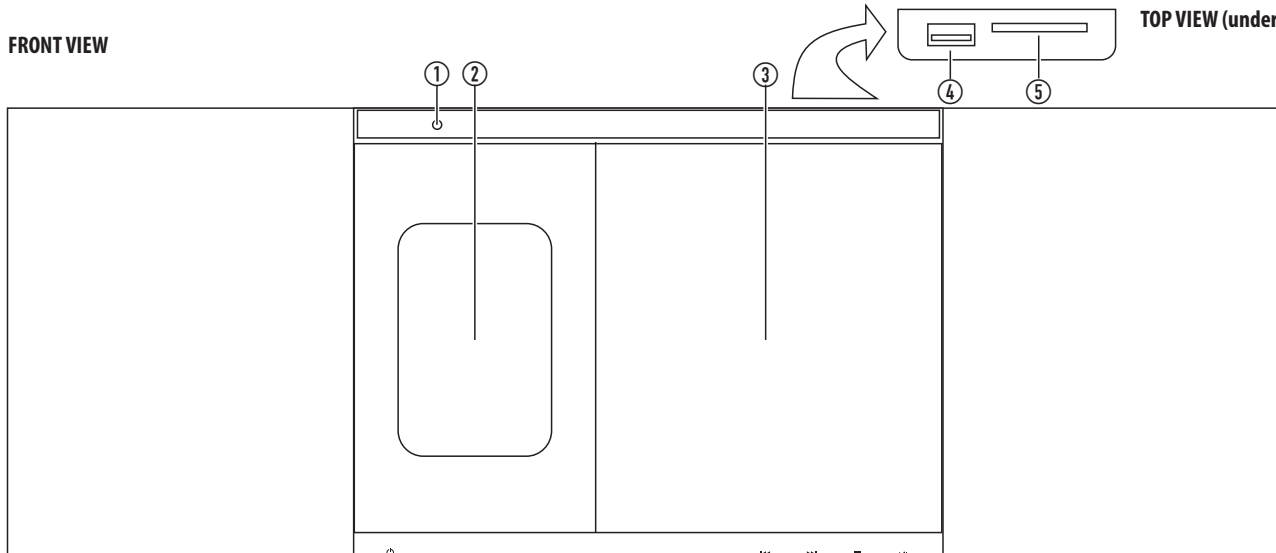

LEFT SIDE VIEW

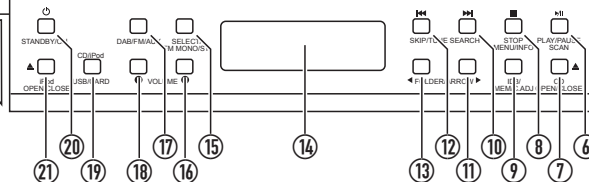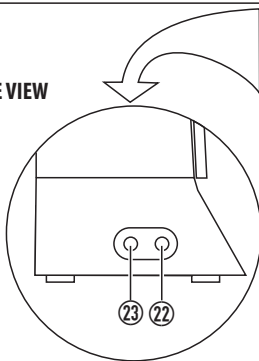


- ① Standby indicator
- ② iPhone/iPod compartment lid
- ③ CD/CD-ROM door
- ④ USB drive dock
- ⑤ SD Card dock
- ⑥ Play/Pause/Scan button

- ⑦ CD door open/close button
- ⑧ Stop/Menu/Info button
- ⑨ ID3/Memory/Clock adjust button
- ⑩ Skip/Search up button
- ⑪ Next folder/Cursor up button
- ⑫ Skip/Search down button

- ⑬ Previous folder/Cursor down button
- ⑭ Display
- ⑮ Select/FM Stereo button
- ⑯ Volume up button
- ⑰ DAB/FM/Aux mode select button
- ⑱ Volume down button
- ⑲ CD/iPod/USB/SD-Card mode select button
- ⑳ Standby/On button
- ㉑ iPhone/iPod door open/close button
- ㉒ Headphone jack
- ㉓ Aux/Line in jack

REMOTE CONTROL

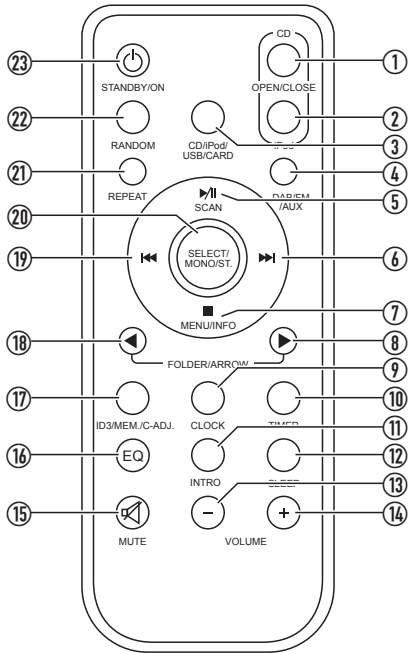


- ① CD door button
- ② iPhone/iPod door button
- ③ CD/iPod/USB/Card mode select button
- ④ DAB/FM/Aux mode select button
- ⑤ Play/Pause/Scan button
- ⑥ Skip/Search up button
- ⑦ Stop/Menu/Info button
- ⑧ Next folder/Cursor up button
- ⑨ Clock button
- ⑩ Timer button
- ⑪ Intro button
- ⑫ Sleep button
- ⑬ Volume down button
- ⑭ Volume up button
- ⑮ Mute button
- ⑯ EQ button
- ⑰ ID3/Memory/Clock adjust button
- ⑱ Previous folder/Cursor down button
- ⑲ Skip/Search down button
- ⑳ Select/FM mono/stereo button
- ㉑ Repeat button
- ㉒ Random button
- ㉓ Standby/On button

REMOTE CONTROL BATTERY

BEFORE FIRST USE


To prepare the remote control for first use, pull out the safety strip to activate the battery.

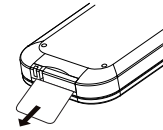

REPLACING THE BATTERY

When replacing the battery in the remote control, refer to the diagram below.

1. Slide out the battery holder.

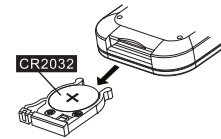

2. Remove the battery. Replace the battery, observing polarity as shown. Use only the same CR2032 type specified.
3. Slide the battery holder back into place.

BATTERY DISPOSAL

Dispose of used batteries with regard to the recycling regulations in your area. Do NOT short circuit batteries or throw them into water, the general rubbish or in a fire.

Weak batteries can leak and damage the remote control. Replace them in good time!

GETTING STARTED

DAB/FM RADIO AERIAL

Before using your radio for DAB or FM reception, unwrap and fully extend the aerial wire. You may need to adjust the position of the aerial wire for maximum signal strength.


CONNECTING POWER

- Check that the mains voltage marked on the rating plate on the back of the unit is the same as the voltage in your area.
- Remove any protective packing from the mains plug pins.
- Plug the mains plug into the wall socket and switch the mains power on.

MAINS POWER SWITCH

There is a mains power switch located under the unit. Check that this is set to the ON position.

UNDERSIDE VIEW

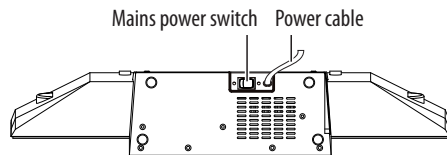

In normal use this may be left in the ON position. When the unit is to be unattended for an extended period (for example, holidays) set the mains power switch to the OFF position or disconnect the system from the mains.

SETTING THE CLOCK

Automatic clock setting:

The clock time will set automatically when a DAB station is first tuned.

Manual clock setting:

The clock can also be set manually if you live in an area where it is not possible to receive DAB broadcasts.

- Check that the system is set to Standby.
- Press and **hold** the ID3/MEM./C ADJ. button.

The hours digits will flash.

- Press the ►► or ◀◀ button to set the hour digits.
- Press the ID3/MEM./C ADJ. button.

The minutes digits will flash.

- Press the ►► or ◀◀ button to set the minutes digits.
- Press the ID3/MEM./C ADJ. button.

The clock time will be set and the unit will return to Standby mode.

NOTE: When a DAB station is tuned, the clock will always be set automatically.

STANDBY CONTROL

STANDBY CONTROL

To turn the system on:

- Press the STANDBY/ON button.

The display will light and the system will set to play the last function used.

To turn the system off:

- Press the STANDBY/ON button.

The system will switch off and the display light will dim. The clock will continue to run whilst mains power is connected.

ADJUSTING THE VOLUME

VOLUME CONTROL

To increase the volume:

- Press the VOLUME + button.

To decrease the volume:

- Press the VOLUME - button.

The volume level will be displayed on a scale from 0 to MAX (40).

MUTE

You can use the Mute function to instantly set the volume to minimum.

To mute the volume:

- Press the MUTE button on the remote control to set mute at any time.
- Press the MUTE button again to restore the volume to its previous setting.

LISTENING TO DAB RADIO

SELECTING DAB RADIO OPERATION


To select DAB radio operation:

- Press the **DAB/FM/AUX** button repeatedly until 'Welcome to Digital Radio' is displayed.

After a few seconds, the radio will tune to the last-used station.

When DAB radio is used for the first time:

The system scans all usable stations (full scan) and stores them alphanumerically -1 Radio, 2 Radio, AA Radio, AB Radio... The initial scan will take a few minutes and a progress bar will be displayed with the number of services found.

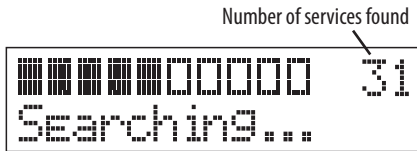

After the scan, the clock will be set, and the system will begin playing.

Note: If no stations are found after the scan, it may be that the signal in your current location is too weak. If this happens, switch the system off and move it to a location with a stronger signal. Repeat the scan process in the new location.

The stations found will be stored in an alphanumeric list.

SELECTING A STATION

TO SELECT ANOTHER STATION

- Press the **▶▶** or **◀◀** button to browse the list of stations on the display.
- When you find the station name you want to listen to, press the **SELECT/MONO/ST.** button.

The radio will re-tune to the station displayed.

FM RADIO

To change to the FM band:

- Press the **DAB/FM/AUX** button repeatedly until 'Radio Initialize Please Wait' is displayed.

After a short delay, the system will tune to FM radio.

To manually tune to FM stations

- Press the **▶▶** or **◀◀** button repeatedly to tune up or down the band one frequency step at a time.

To auto-tune to FM stations

- Press and **hold** the **▶▶** or **◀◀** button to tune to the next or previous station in the band.

Tuning will stop automatically when the station is reached.

STATION PRESETS

DAB and FM presets

Your radio can store up to 30 of your favourite stations as presets on both the DAB and FM bands for quick recall.

To store a preset

- Tune to the station you want to store as a preset.
- From the remote control, press and **hold** the **ID3/MEM./C-ADJ.** button until the preset store display shows with the preset number flashing.



- Press the **▶▶** or **◀◀** button repeatedly until the preset location you want to store is displayed.
- Press the **ID3/MEM./C-ADJ.** button to store the station in this preset number location.

The display will confirm that the station has been stored in this preset number.

To recall a preset

- Press the **ID3/MEM./C-ADJ.** button.

The display will switch to show presets.

- Press the **▶▶** or **◀◀** button repeatedly until the preset you want to play is displayed.
- Press the **ID3/MEM./C-ADJ.** button to recall the station in this preset number location.

After a short delay the radio will re-tune to the selected preset.


DAB & FM DISPLAY MODES

DAB DISPLAY MODES

When playing a DAB station you can change the information on the display by changing the display mode.

To change the display mode:

Press the **MENU/INFO** button repeatedly to cycle through the options listed in the chart below.

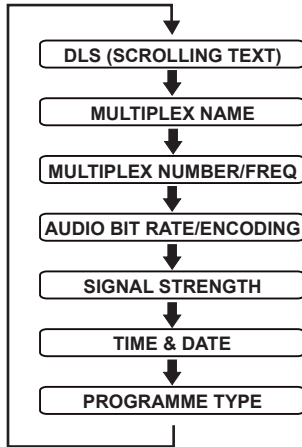

DLS (SCROLLING TEXT): This is a scrolling message giving real-time information - song titles, news headlines, etc.

MULTIPLEX NAME (GROUP NAME): is the name of the DAB Multiplex that is currently tuned.

MULTIPLEX NUMBER/FREQ: The Multiplex number and Frequency display shows the multiplex channel number and the multiplex frequency for the station currently tuned.

BIT RATE: DAB allows broadcasters to vary the BIT RATE (or the amount by which an audio signal can be compressed) depending on the type of broadcast. This enables the amount of stations on a multiplex to be maximised. Speech and News are often broadcast at a lower Bit Rate; music needs a higher Bit Rate for good fidelity.

SIGNAL STRENGTH: This setting will display a signal strength bargraph. The longer the bargraph, the stronger the signal. Setting the display to show signal strength is useful when setting up the aerial for the strongest signal.

TIME AND DATE: Time and date are updated by broadcasted information.


PROGRAMME TYPE: This describes (when available) the style of the programme being broadcast.

FM DISPLAY MODES

When playing an FM station you can change the information on the display by changing the display mode.

To change the display mode:

Press the **MENU/INFO** button repeatedly to cycle through the options listed in the chart below.

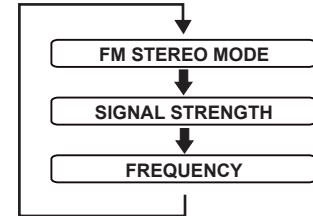

FM STEREO MODE: In this mode the current FM stereo mode is shown, Mono or Auto (Stereo).

SIGNAL STRENGTH: This setting will display a signal strength bargraph. The longer the bargraph, the stronger the signal. Setting the display to show signal strength is useful when setting up the aerial for the strongest signal.

FREQUENCY: The Frequency display shows the frequency for the station currently tuned.

DAB SCANNING

DAB SCANNING

When first used, your audio system scanned the DAB band for available stations. The station services found were then stored in your system's memory.

You can re-scan the band at any time if you move to a different area or just to refresh the stored list of available stations.

To start a scan:

- Select the DAB band.
- Press the **PLAY/PAUSE/SCAN** button to start the scan.

The unit will now display the legend 'SCANNING' and a bargraph to show scan progress.



The number of services found during the scan will be shown at the right side of the display.

LISTENING TO A CD

REMOVING THE PACKING FROM THE CD PLAYER

Before connecting power to your audio system, the protective packing should be removed from the CD compartment.

To remove the protective packing:

- Follow the instructions in the next section to open the CD door.
- Remove the cardboard protective packing from the CD compartment.

LOADING DISCS

To select CD disc operation:

- Press the **CD/USB/iPod/CARD** button repeatedly until 'CD' is displayed.

Loading a disc:

- Open the CD compartment by pressing the **CD Door CD OPEN/CLOSE** button.

The lid will open.

- Holding the disc by the edges, place the disc on the turntable in the centre of the CD loading bay with the label facing outward, pressing the centre of the disc to click it into place.
- Close the CD compartment by pressing the **CD Door CD OPEN/CLOSE** button.

After a few seconds the disc will read and the disc data will be displayed.

Unloading a disc:

- If the disc is playing, press the **STOP/MENU/INFO** button and wait a few seconds for the disc to stop.
- Press the **CD Door CD OPEN/CLOSE** button.

The door will open.

Grip the disc at the sides and lift it off the turntable and out of the disc compartment.

CD PLAYBACK, PAUSE:

- Load the CD.
- Press the **PLAY/PAUSE/SCAN** button to start the CD playing.

The display will show the track number playing and the elapsed time for the track.



- When a CD is playing, pressing the **PLAY/PAUSE/SCAN** button at any time will pause playback.

Selecting tracks:

- Press the **▶▶** or **◀◀** button **briefly** to select the next or previous track from the disc.

NOTE: The first press of the **◀◀** button will replay the current track.

Fast search:

- To fast search through a track, press and **hold** the **▶▶** or **◀◀** button.

The player will fast search through the track at high speed in the chosen direction until the button is released.

LISTENING TO A CD

REPEAT

You can repeat a single track or the whole disc.

To set a repeat mode:

- Press the **REPEAT** button on the remote control to step through the options of REP_1 (repeat current track) and REP_ALL (repeat all tracks).

REP_1 or REP_ALL will be displayed.

RANDOM PLAY

You can play the tracks on the disc in a random order.

To set random mode:

- Press the **RANDOM** button on the remote control repeatedly to switch Random mode on or off.

RANDOM will be displayed and the tracks on the CD will play in a random sequence.

INTRO

You can play the intro (first 10 seconds of each track) to find a track that you like.

- Press the **INTRO** button on the remote control to play the intro of each track in the compilation.

INTRO will be displayed.

- If you hear a track you want to play, press the **INTRO** button again.

Intro mode will be cancelled and normal play will start from the track you selected.

LISTENING TO MP3/WMA COMPILATIONS STORED ON CD-ROM, USB DRIVE OR SD-CARD

MP3/WMA PLAYBACK:

Your system can also play MP3 or WMA music compilations recorded onto a CD-ROM or saved to a USB flash drive or SD-card.

File organisation:

The files may all be stored in the 'root' directory of the disc/drive or organised in a set of sub-folders.

LOADING A CD-ROM COMPILATION DISC

CD-ROM discs are loaded and unloaded in the same way as CD discs.

- Follow the instructions in the section 'Listening to a CD' to load or unload a CD-ROM disc.

DOCKING A USB FLASH DRIVE OR FLASH SD-CARD

The docking connectors for USB flash drives and SD-cards are located under a cover on the top of the system.

- Open the cover.
- Dock the USB flash drive or SD-card.

NOTE: Both docks are polarised so Flash drives and cards can only be inserted when correctly polarised.

SELECTING THE CORRECT MODE:

To play a compilation from a CD-ROM:

- Press the CD/iPod/USB/CARD button repeatedly until 'CD' is displayed.


To play a compilation from a docked USB drive:

- Press the CD/iPod/USB/CARD button repeatedly until 'USB' is displayed.

To play a compilation from a docked SD-Card:


- Press the CD/iPod/USB/CARD button repeatedly until 'CARD' is displayed.

Once the mode has been selected, the compilation will be read and the contents of the disc/drive/card will be displayed.

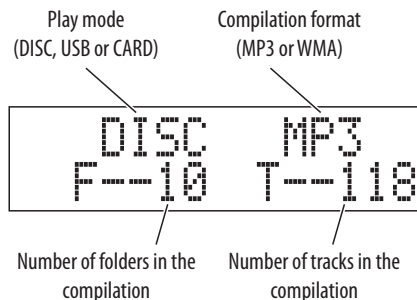

MP3/WMA PLAYBACK, PAUSE:

- Press the PLAY/PAUSE/SCAN button to start playing.
- When a compilation is playing, pressing the PLAY/PAUSE/SCAN button at any time will pause playback. Press the button again to cancel pause.

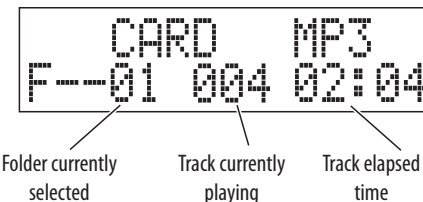

Selecting tracks:

- Press the ►► or ◀◀ button **briefly** to select the next or previous track.

NOTE: The first press of the ◀◀ button will replay the current track.

To change folders (if there are more than 1):

If the music files are organised into folders (each folder is usually an album) you can change between folders.

- Press the FOLDER/ARROW ◀ or ► button to step through the folders.
- You can then search for tracks within the folder using the ►► or ◀◀ button.

LISTENING TO MP3/WMA COMPILATIONS STORED ON CD-ROM, USB DRIVE OR SD-CARD

Fast search:

- To fast search through a track, press and hold the ►► or ◀◀ button.

The player will fast search through the track at high speed in the chosen direction until the button is released.

REPEAT

To set a repeat mode:

- Press the REPEAT button on the remote control to step through the options of 'REP_1' (repeat current track), 'REP_ALL' (repeat all tracks) and 'REP_ALBUM' (folder).

The Repeat mode will be displayed.

RANDOM PLAY

You can play the tracks in a random order.

To set random mode:

- Press the RANDOM button on the remote control repeatedly to switch Random mode on or off.

RANDOM will be displayed.

INTRO

You can play the intro (first 10 seconds of each track) to search for a track that you like.

- Press the INTRO button on the remote control to play the intro of each track in the compilation.

INTRO will be displayed.

- If you hear a track you want to play, press the INTRO button again.

Intro mode will be cancelled and normal play will start from the track you selected.

ID3 TAGS

If your compilation tracks include ID3 tag information (artist, album, track etc), you can display this in place of the track and time display.

To display ID3 tags:

- Press the ID3/MEM/C.ADJ button to switch the ID3 display on or off.

If ID3 information is available for the files in your compilation, this will scroll across the display.

PROGRAM PLAY

PROGRAMMING


When playing a CD or a MP3/WMA compilation, you can store a random sequence of up to 32 tracks (CD) or 64 tracks (MP3/WMA compilation) to play in your preferred order.

STORING A PROGRAM (CD)

To store a program:

- Load the CD that you want to play.
- Press the **ID3/MEM/C-ADJ.** button.

The Program Entry display will appear, prompting for the first track number to program (P-01).

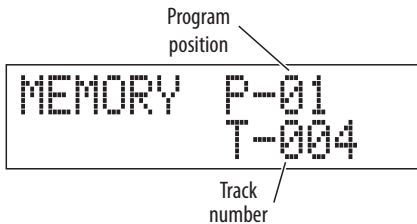

- Press the **▶▶** or **◀◀** button to select the track number for the first track you want to program.
- Press the **ID3/MEM/C-ADJ.** button to store this track into the program memory.

The track will be stored and the program counter will increase to P-02.

- Repeat the above two steps to store the next and subsequent tracks in your program sequence.

Playing the program

- When you have finished entering all tracks in your program, press the **PLAY/PAUSE/SCAN** button to start the program playing.

Navigating the programmed tracks:


When the program is playing, the play and pause functions work as normal and you can skip between tracks in the program by pressing the **▶▶** or **◀◀** button. Repeat functions may also be set.

STORING A PROGRAM (MP3/WMA)

- Load the disc/drive/card you want to play, and wait for it to read.
- Press the **ID3/MEM/C-ADJ.** button.

The Program Entry display will appear, prompting first for a folder number.

- Press the **FOLDER/ARROW ◀** or **▶** button to select the folder number containing the first track you want to program.

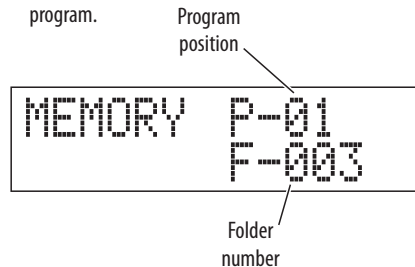


NOTE: If all tracks are arranged in the 'root' directory of the disc, only 'Folder 1' (F 001) will be selectable at this stage.

- Press the **ID3/MEM/C-ADJ.** button on the remote control to select this folder.

You can now select the track you want within this folder.

- Press the **▶▶** or **◀◀** button to select the track number within this folder for the track you want to program.

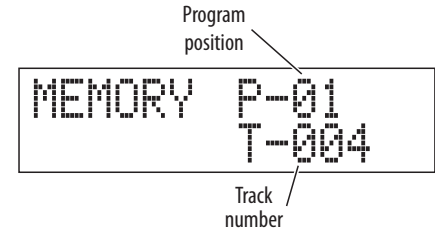

- Press the **ID3/MEM/C-ADJ.** button on the remote control to store this track into the program memory.

The track will be stored and the program counter will increase to P-02.

- Repeat these steps to store the next and subsequent tracks in your program sequence.

Playing the program

The program will play in the same way as the CD program, described in the previous section.

CLEARING A PROGRAM

To clear a program:


- Press the **STOP/MENU/INFO** button to stop playback (if necessary).

- Press the **STOP/MENU/INFO** button once more.

The program will be cleared from memory.


iPod ADAPTORS

Before docking your iPod you must first check if your iPod has a docking connector. Early iPod models do not have one and cannot be docked to your unit. The docking connector is located on the base of the iPod as shown below.

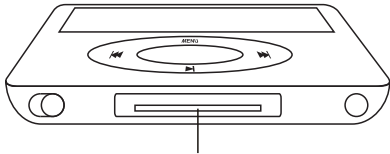

Docking Connector

Before docking your iPod, you must first fit the correct iPod adaptor to the docking bay. Each iPod adaptor matches the shape of a particular iPod and is necessary to ensure that your iPod is securely held when docked.

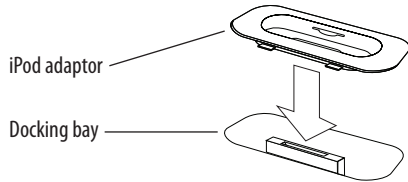

FITTING THE iPod ADAPTOR

When your iPod was new it may have been supplied with a standard dock adaptor in the packaging. If so, refer to the next page for instructions to open the iPod dock and press the adaptor gently into the Docking Bay as shown above.

NOTE: Do not dock an iPod without fitting the correct adaptor, you may damage the iPod and your unit.


FINDING AN ADAPTOR

If you don't have a dock adaptor

If your iPod was not supplied with a standard dock adaptor, or if you have lost the adaptor, you can buy one from Apple on-line. To determine the exact model of your iPod, refer to this web-link - <http://support.apple.com/kb/HT1353>. You can then browse the iPod accessories page on the Apple website to find an adaptor for your iPod model that can be purchased on-line.

CONNECTING OTHER iPod MODELS (INC SHUFFLE)

If you own an iPod Shuffle, a model without dock connector or prefer to connect your iPod by cable, you can connect the sound output to the Aux/Line In jack on the side panel.

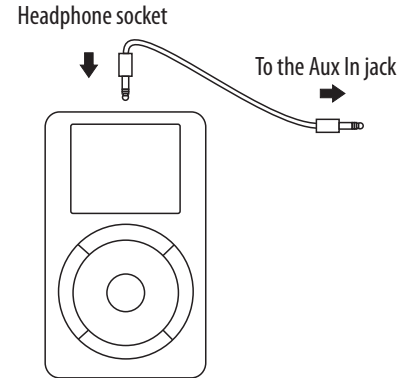

- Using a 3.5mm stereo jack to jack cable (not supplied), connect one end of the cable to the headphone socket of the iPod, and the other end to the Aux/Line In jack on the back panel.
- To listen to your iPod, follow the instructions on page 18 for playing equipment connected to the Aux In jack.

NOTE:- The volume control of the iPod must be turned up when playing through the Aux/Line In jack.

iPod/iPhone DOCKING BAY


Your system includes a built-in dock for an iPod or iPhone.
NOTE: iPod in the text of this section refers to both iPod and iPhone models.

To open the iPod dock:

- Press the **CD/iPod/USB/CARD** button until 'iPod' is displayed.
- Press the **iPod OPEN/CLOSE** button.


The door will slide open to reveal the iPod dock.

- Press the dock tilt lever.

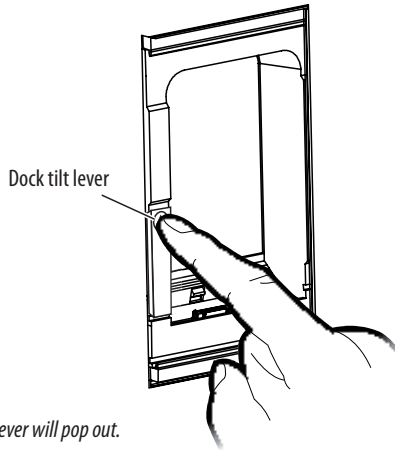

To tilt the dock forward:


- You can now pull the lever to tilt the dock connector forward.

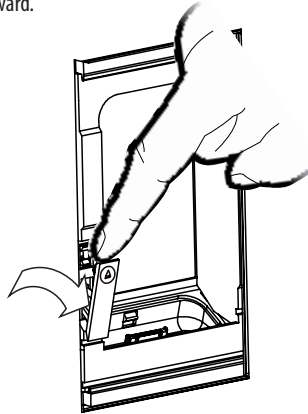

With the dock tilted forward, it is much easier to dock or remove an iPod.

To lock the dock in place:

- Once you have docked your iPod, press the lever to close the dock.

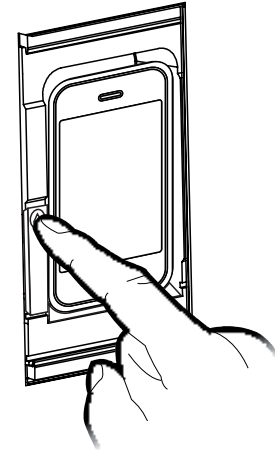

- Press the **iPod OPEN/CLOSE** button to close the door over the dock.

NOTE: There is an interlock on the door to prevent it closing when the lever is tilted forward.

DOCKING AN iPod

DOCKING YOUR iPod

To dock your iPod:

Referring to the diagrams on the previous page -

- Press the **iPod OPEN/CLOSE** button.

The door will slide open to reveal the iPod dock.

- Press the dock tilt lever.

The lever will pop out.

- Pull the lever to tilt the dock connector forward.
- Check that the correct iPod adaptor is fitted to the docking bay.
- Dock the iPod onto the docking connector.
- Press the lever to close the dock.
- Press the **iPod OPEN/CLOSE** button to close the door over the dock.

To remove your iPod from the dock:

Referring to the diagrams on the previous page -

- Press the **iPod OPEN/CLOSE** button.

The door will slide open to reveal the iPod dock.

- Press the dock tilt lever.

The lever will pop out.

- Pull the lever to tilt the dock connector and iPod forward.
- Grip the iPod at the sides.
- Lift the iPod gently from the dock.
- Press the lever to close the dock.
- Press the **iPod OPEN/CLOSE** button to close the door over the dock.

PLAYING FROM AN iPod

To play music from your iPod

- Press the **CD/iPod/USB/CARD** button repeatedly until 'iPod' is displayed.

You can now operate your iPod from the controls on the front panel or remote control.

Playback functions:

- Press the **PLAY/PAUSE/SCAN** button to toggle the iPod between Play and Pause mode at any time.
- Press the **▶▶** or **◀◀** button to select the next or previous track.
- Press and **hold** the **▶▶** or **◀◀** button to fast search through a track.

iPod menu functions:

You can also navigate the menu on a docked iPod from the controls on the front panel or the remote control.

- To move up through the iPod menus, press **STOP/MENU/INFO**.
- To scroll up and down menu options, press the **FOLDER/ARROW ◀** or **▶** buttons.
- To select menu items, press the **SELECT/MONO/ST.** button.

Repeat and random:

- You can set the repeat and random modes available on your iPod by pressing the **REPEAT** or **RANDOM** button on the remote control.

The repeat or random modes set will be displayed on the iPod.

CHARGING AN iPod

When an iPod is docked and the unit is switched on, the iPod will begin to charge automatically.

NOTE:- The iPod will stop charging if the unit is set to Standby.

PLAYING VIA THE AUX JACK

To play music from an iPod or Personal Audio player connected to the AUX/LINE IN jack -

- Press the **DAB/FM/AUX** button repeatedly until **AUX** is displayed.
- Set the iPod or Personal Audio player to play.
- Turn the volume level on your Personal Audio player up to about half level.
- Set the volume on your system to the level you require. If the volume will not set high enough you may need to increase the volume setting on the player.

NOTE:- It is not possible to navigate the menu system of an iPod or other personal audio player with the remote control of the audio system if it is connected via the **AUX/LINE IN** jack.

SETTING THE TIMER


Your system includes a timer that enables you to set times for the system to switch on and switch off automatically.

To set the timer:

- Set the unit to Standby.
- Press and **hold** the **TIMER** button on the remote control.

'On Timer' is displayed with the hours digits flashing.

You can now set in the sequence below the times for timer on and timer off operation, also the timer source mode and volume level.

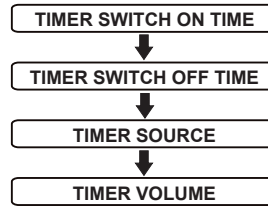

- To change the digits or option displayed, press the **▶▶** or **◀◀** button.
- To save a setting and move on to the next setting, press the **TIMER** button.

Activating the timer:

- When timer setting is complete, the timer can be switched on or off by pressing the **TIMER** button **briefly**.



The Timer symbol shows on the display when the timer is activated.

SLEEP MODE

THE SLEEP FUNCTION

The Sleep function allows you to program your system to switch itself off after a set period in 10 minute steps from 90 minutes down to 10 minutes.

To activate the Sleep function:

- Press the **SLEEP** button.

The display will show SLEEP-OFF.

- Now press the **SLEEP** button repeatedly until your required sleep time appears on the display.

When sleep mode is set, the display will regularly switch to show a count-down of the sleep time remaining.

Your system will continue to play, then will set to Standby when the sleep time expires.

To cancel Sleep mode:


- Now press the **SLEEP** button repeatedly until the display shows 'SLEEP-OFF'.

EQUALISER

You can change the equalisation of the sound to suit your taste.

To select an EQ response:

- Press the EQ button on the remote control repeatedly to cycle through the EQ options shown below.

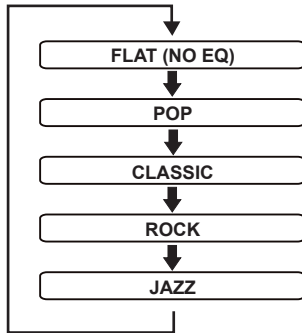

As each setting is selected, the sound EQ will change.

HEADPHONES

There is a headphone output socket on the side panel of the unit. If headphones are connected to this socket for private listening, the speakers will cut out automatically.

SYSTEM RESET

DAB is a terrestrial system and frequencies in different areas vary. If you move the system to another part of the country performing a Full Scan may not be enough to re program the radio. You may therefore need to reset the radio.

NOTE: If you reset the radio all preset station memories and timer settings will be lost.

To reset the system:

- Set the system to Standby.
- Press and **hold** the STOP/MENU/INFO button on the front panel.

After a short delay the unit will reset all settings.

When next used the system will scan the DAB band and store all stations found.

TROUBLESHOOTING

No power

Check that the mains power switch (located underneath the unit) is turned on.

Poor quality radio reception

The aerial signal may not be adequate. Try repositioning the aerial while watching the signal strength. Signal strength can be displayed by setting the display mode to display signal strength.

Timer not sounding

Check that you activated the timer. When the timer is on, the timer symbol will be displayed.

Timer sound not audible or too loud:

Change the timer volume setting. This setting is changed in the 'timer setting' sequence.

No sound/low volume from AUX source:

Check that the volume control is turned up on the AUX source.

Poor quality radio reception when an iPhone is docked:

You may need to set the iPhone to 'airplane' mode when docked.

CARE AND MAINTENANCE

AFTER USING YOUR SYSTEM

- Set to Standby.
- Switch the unit off at the mains and unplug it if you are leaving it unattended for a long period (holidays etc).

CARE AND CLEANING

All care and cleaning operations should be carried out with the unit unplugged from the mains power.

Occasionally wipe the cabinet with a lint free duster. Never clean the unit with liquids or solvents.

Loudspeaker grilles can be cleaned carefully with a soft brush.

SPECIFICATIONS

SPECIFICATIONS

Supply Voltage :230 - 240 V~, 50 Hz

Power Consumption23 W

Tuning rangeFM: 87.5-108 MHz

DAB: 174-240 MHz

Net Weight:2.4 kg



Class II construction double insulated.

This product must not be connected to earth.

WARRANTY

Your Tesco appliance is covered by a warranty for 12 months from the date of purchase. If a fault develops during this period, please contact the TESCO electrical help line on 0845 456 6767. Please have your original purchase receipt with you when you call. This warranty in no way affects your consumer rights.



UK: Waste electrical products /batteries should not be disposed of with household waste. Separate disposal facilities exist, for your nearest facilities. See www.recycle-more.co.uk or in-store for details.

ROI: Produced after 13th August 2005. Waste electrical products/batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Technika

Tesco Stores Ltd,
Delamare Road, Cheshunt, Herts, EN8 9SL

► **Technika Helpline: 0845 456 6767** (Calls cost up to 4p per minute from a BT landline, other providers may vary)

MC121DAB V0.1

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>