




INSTRUCTION MANUAL

Warming Tray with Detachable Cord Item/Model# 7255-05

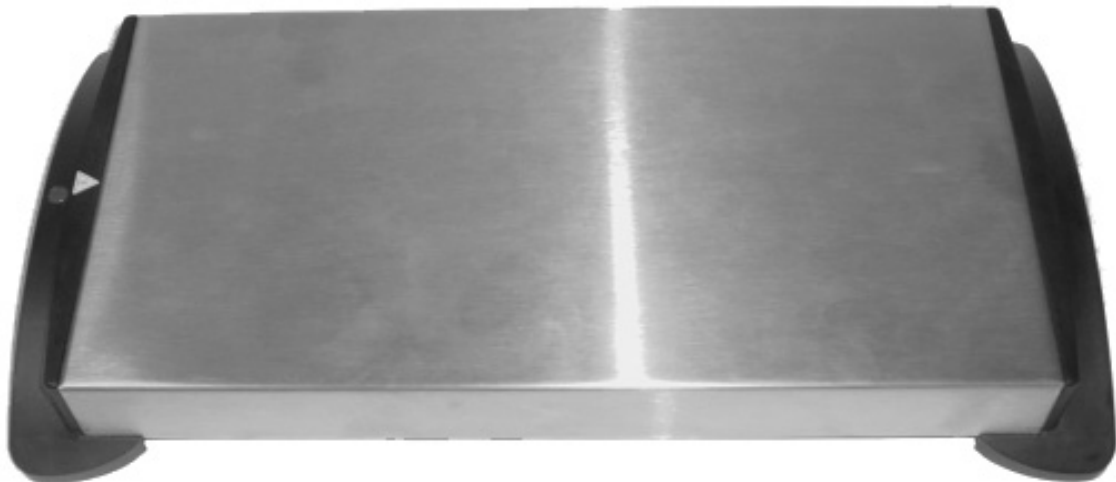

**PLEASE READ AND SAVE ALL INSTRUCTIONS CAREFULLY TO ENSURE
THE SAFE AND EFFECTIVE USE OF THIS APPLIANCE.**

TABLE OF CONTENTS

Index	P. 1
Important Safety Instructions	P. 2
General Safety Rules	P. 3
List of Main Parts, Tech. Specifications, Contents of Packaging	P. 4
Operation	P. 5
Maintenance	P. 6
Warranty Information	P. 7
Warranty Card	P. 8



IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed.

Please read and save all instructions.

1. Do not touch hot surface, instead use handles.
2. To protect against electrical shock, do not immerse power cord, plug or appliance in water or any other liquid.
3. If the power cord is damaged, the manufacturer or qualified electrician must replace it in order to avoid hazard.
4. Do not use outdoors. Household use only.
5. Close supervision is necessary when any appliance is being used by or near children.
6. Avoid contact with moving parts.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
8. Unplug from the outlet when not in use and before cleaning. Allow appliance to cool completely before putting on or taking off parts.
9. Do not operate any appliance with a damaged power cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to warranty center for examination, repair or electrical or mechanical adjustment. See warranty page.
10. Do not let the power cord hang over the edge of a table or counter or touch any hot surface.
11. Do not use the appliance for other than intended use.
12. Do not place on or near hot gas or electric burner, or in a heated oven.
13. To disconnect, remove the plug from the wall outlet.
14. Do not clean the appliance with metal scouring pads. Pieces can break off from the pad and touch electrical parts, creating a risk of electrical shock.

SAVE THESE INSTRUCTIONS!

GENERAL SAFETY RULES



WARNING! Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury. The warnings, cautions, and instruction discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are a factor which cannot be built into this product, but must be supplied by the operator.

SAVE ALL INSTRUCTIONS!

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125 V, and at least 13 A., 1625 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

ELECTRIC POWER

If electric circuit is overloaded with other appliances, your appliances may not operate properly. The appliances should be operated on a separate electrical circuit from other operating appliances.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SAFETY WARNING


Although your appliance is easy to operate, for your safety, the below warnings must be followed:

1. Do not place the appliance near a heat source.
2. Never leave the appliance unattended while connected to the electrical outlet.
3. To avoid any accidental burns, never put a hand over a steam vent or cover when the appliance is in operation.
4. Use the appliance on a stable work surface away from water.
5. Do not unplug from the wall socket by pulling on the supply cord.
6. The appliance must be unplugged:
 - A. After use
 - B. If it appears to be faulty
 - C. before cleaning or maintenance

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.

LIST OF MAIN PARTS

1. Warming Tray
2. Power Cord
3. Power ON Indicator Light

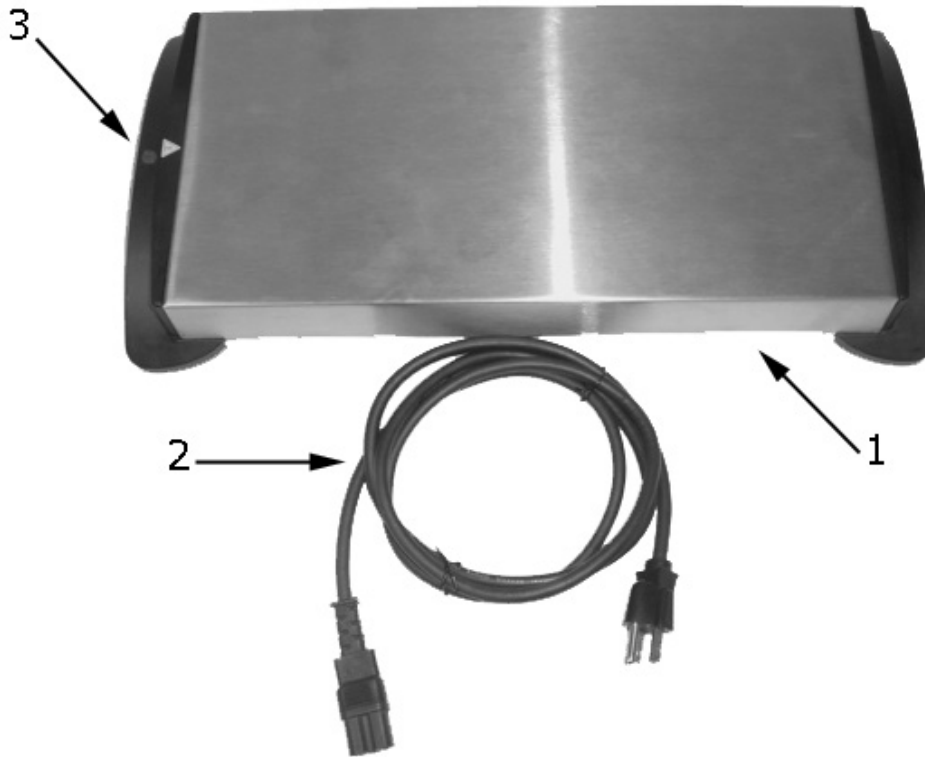

TECHNICAL SPECIFICATIONS:

Model/Item Number	7255-05
Rating Voltage	120 V, 60Hz
Nominal power	1100 Watt
Weight	8 Lbs

CONTENTS OF PACKAGING

- a. Warming Tray
- b. Power Cord
- c. Instruction manual

If any of the above items are missing, please contact our service department at 1-888-367-7373 (<http://wwwk.wk-usa.com>) for replacement.

FEATURES

For holiday parties, family gatherings and other social events throughout the year, this warming tray rests elegantly on your buffet or table, keeping appetizers, casseroles or desserts warm. Suitable for elegant buffets and entertaining, this warming tray ensures that your food stays tastefully warm throughout your meal.

Warming Tray can be used two ways

1. When you are ready to serve but still want to keep the food warm and accessible, plug in the warming tray. Once warming tray is plugged in, the Power Indicator Light will turn on indicating that the tray is warming up. The indicator light will stay on until tray is unplugged. Warming tray will maintain a temperature of approximately 250-275°F while plugged into power source.
2. After heating up for approximately 10 minutes warming tray can be unplugged and brought to a buffet table to keep food dishes warm. The detachable cord and stay-cool handles help make moving the warming tray safe and easy. **DO NOT MOVE WARMING TRAY WITH FOOD ON TRAY.** Once unplugged warming tray will maintain a temperature of 200°F for 15 – 20 minutes and a temperature of 125°F for one hour.

OPERATION

1. Move the warming tray only when it is empty. Do not carry the warming tray with food on it.
2. Place warming tray on a dry, level surface.
3. Attach cord to the side of tray, then plug into a 120 Volt AC electrical outlet.
4. Preheat for 10 minutes. Power Indicator light will stay on while plugged into power source.
5. Warming tray will reach approximately 250-275°F when plugged into power source. **CAUTION:** This item is hot and may cause a burn if touched.
6. Food warmed on tray should be fully cooked and already hot. Tray is designed for keeping food warm only, not for heating it from cold or frozen state.
7. Never use the top of the tray as a cutting surface.
8. Place hot foods into heat-resistant, smooth, flat-bottomed serving pieces. Do not use plastic, paper or other non heat-resistant dishes. Avoid dishes with plastic wrap which may melt if it gets in contact with the heated surface. Do not place food directly on top of the tray. Only heat resistant serving pieces must be used (heat resistant glass, ceramic and metal).
9. When done using warming tray, unplug unit and allow item to cool for approximately 90 minutes before you store appliance. Item **must cool** completely before cleaning or attempting to store unit.

SUGGESTIONS FOR USE

- The warming tray surface is ideal for placing your pans or casseroles dishes right out of the oven to keep foods warm and ready to serve.
- Keep entrees warm while preparing other foods.
- An attractive alternative for serving warm desserts.
- Warming tray can be unplugged (cord detached) and brought to a buffet table to keep food dishes warm. Warming tray once unplugged will maintain a temperature of 200°F for 15 – 20 minutes and a temperature of 125°F for one hour.



MAINTENANCE AND CLEANING

CAUTION:

Always be sure that the appliance is unplugged before cleaning or attempting to store the item.

1. When performing any cleaning or maintenance to this unit, **be sure to unplug from power outlet first, and allow to cool.**
2. Do not immerse warming tray or plug in water.
3. The most effective and safe way to clean the warming tray is with a mild detergent and a soft moist cloth. **Do not use any scouring agents! Do not allow water to spill or seep into frame.**
4. To polish use non-abrasive glass cleaner.

STORING

Allow the appliance to cool completely before storing. Store the appliance in a dry location. Do not place any heavy items on top of appliance during storage as this may result in possible damage of appliance.

Store the cord in a clean, dry location away from metal objects. Always check the plug before use to assure metal items have not become attached.

SERVICE CENTER

If you have any question in regards to the operation of this appliance or are in need of a spare part please contact our service center at:

Wachsmuth & Krogmann, Inc.
Tel: 1-888-367-7373
(Business hours Mon-Fri 9:00am - 4:00pm CT)
Website: <http://www.wk-usa.com>



ENVIRONMENTAL PROTECTION

If the appliance should no longer work at all, please make sure that it is disposed in an environmentally friendly way. Please do not put it with your household waste.

LIMITED WARRANTY

Thank you for purchasing a top quality **Crofton** product. This **Warming Tray with Detachable Cord** item #7255-05 was tested and meets our stringent quality standards. This product is warranted to be free from manufacturing defects in original materials, including original parts, and workmanship until **November 8, 2006** or 1 year with proof of purchase.

The warranty is void if the defect is due to accidental damage, misuse, abuse, neglect, improper repair or alteration by unauthorized persons or failure to follow operation instructions provided with the product. This warranty does not apply to commercial use.

The warranty is non-transferable and applies only to the original purchase and does not extend to subsequent owners of the product. Liability under this warranty is limited to repair, replacement or refund. In no event shall liability exceed the purchase price paid by the purchaser of the product. Under no circumstances shall there be liability for any loss, direct, indirect, incidental, special or consequential damage arising out of in connection with use of this product. This warranty is valid only in the United States of America. This Warranty gives you specific legal rights. However you may have other rights that vary from state to state. Some states do not allow limitation on implied warranties or exclusion of consequential damages therefore these restrictions may not apply to you.

In case you find the product to be defective please send it within the warranty period to our service center. To avoid transport damages please send the product in the original packaging. In return you will either receive your repaired item, a new product or a refund. Please fill out the Warranty Card and send it together with the product and purchase receipt

To arrange pick-up of the defective item please call our service center:

Wachsmuth & Krogmann Inc.

Tel: 1-888-367-7373 (Business hours Mon-Fri 9:00am-4:00 pm CT)

Website: <http://www.wk-usa.com>

**123 Sivert Court,
Bensenville, IL 60106,
USA**

WARRANTY INFORMATION

WARRANTY CARD



Warming Tray with Detachable Cord, Item/Model # 7255-05

In case you find this product to be defective please send it within the warranty period to our service center. To avoid transport damages please send the product in the original packaging. In return you will receive your repaired item, a new product or a refund.

This Cordless Warming Tray was tested and meets our stringent quality standards. This product is warranted to be free from manufacturing defects in original materials, including original parts, and workmanship until Nov. 8th, 2006 or 1 year with proof of purchase.

Please fill in your details below and send it together with the product and purchase receipt. Please read the Limited Warranty conditions mentioned in this instruction manual.

Customer Name	
Street	
City	
State	
ZIP Code	
Purchase Date	
Description of Defect :	

To arrange pick-up of the defective item please call our service center:

Wachsmuth & Krogmann Inc.
Tel: 1-888-367-7373 (Business hours Mon-Fri 9:00am-4:00 pm CT)
Website: <http://www.wk-usa.com>
123 Sivert Court,
Bensenville, IL 60106,
USA

PLEASE DETACH THIS SECTION AND RETURN IT WITH YOUR PRODUCT

WARRANTY CARD



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>