 


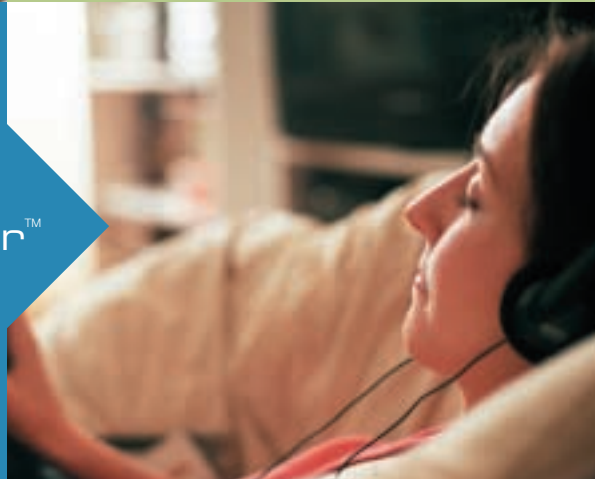

SCHOLAR™

digital talking book player™



Telex has designed and built Talking Book Players for the last 30 years. We are proud of our commitment to the blind/dyslexic and print disabled market, and the durable, easy-to-use players that we manufacture. We have just expanded our talking book player line to include the Scholar™, our first Digital Talking Book Player and the first portable player for Daisy Talking Books. The Scholar™ was designed for easy upgrades to the latest Daisy and NISO Digital Talking Book standards.

MAKING YOUR WORLD
MORE ACCESSIBLE WITH
EASY-TO-USE DIGITAL
TALKING BOOK PLAYERS

Designed for people who have a visual impairment or learning disability, this DAISY CD Player also accepts standard audio and talking book CDs and MP3 CDs. The Scholar is lightweight and sleek in appearance with the primary controls easily identified by their larger size and tactile rubber construction, while secondary controls are smaller and feature a silver finish. The player will provide instant access to specific page numbers and chapters in the DAISY structure, and includes a full numeric keypad with bookmarking feature. An LCD screen displays disc details for "at a glance" teacher monitoring, and lightweight headphones are included.



See reverse side for complete details.

TELEX®

Features:

- Each function has its own control button including: primary controls: volume, variable speed, play/stop, rewind, fast forward, and undo/redo
- Secondary controls: go to, bookmark, set, and page
- Player is compatible with DAISY CDs, standard CDs, and MP3 CDs. The player automatically detects which type of media is in play.
- Designed for blind/dyslexic users of all ages, as well as those with physical disabilities
- Only portable player that will retain its location in a commercially available CD talking book when paused or stopped
- Upgradable to latest DAISY and NISO standards so what is acquired today will not be obsolete tomorrow
- LCD screen displays disc details (i.e. teacher can walk by and see what page the student is on)
- Player is designed to provide instant access to specific page numbers and chapters in the DAISY structure
- An I/O interface anticipates upgrades and future products
- Also operates with four AA batteries for hours of portable reading enjoyment
- Sturdy, impact-resistant case features snap lock clamshell design
- Skip protection allows for smooth, uninterrupted reading
- Battery pack is located inside the clamshell, to prevent battery door from popping open
- Lightweight headphones are included. Also allows for connection to external speakers if desired
- AC wall adapter is included

Product Catalog Number
Scholar™ 301267-XXX

TELEX

 
Telex Communications, Inc.
12000 Portland Avenue South
Burnsville, MN 55337
1-800-828-6107 Ext. 7498
Fax: 866-292-7707
www.telex.com/duplication



Telex designed its Scholar Digital Talking Book Player for individuals who qualify for blind and physically handicapped Talking Book Programs worldwide. Contact Telex or www.daisy.org for information on organizations that provide recorded books on CD (using the DAISY and NISO standards) to qualified users.

SCHOLAR™
Digital Talking Book Player™

Dimensions: 5.25"(133.4mm)W x 6.0"(152.4 mm)L x 1.59"(40.4 mm)H
Weight: 0.65 lb (0.3 Kg)
Batteries: 4 "AA" Batteries
DC Input: 4.5 Vac, 500 mA
CD Player Formats: CD-DA
CD-ROM with MP3 files, capable of MP3 compression rates of 32 kbps to 256 kbps constant bit-rate playback (mono or stereo)
CD-ROM with DAISY 2.0 to DAISY 2.02

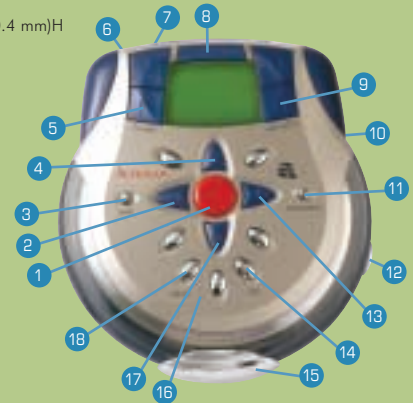

| | | |
|----|----------------------------|---|
| 1 | Play/Stop | Press to Power the unit and to begin playback/Press to stop playback/Hold down with the power on to shut off the Unit |
| 2 | Skip/Search Reverse | Press Momentarily to Play the Previous Tracks or Hold to Review Audio Backward |
| 3 | Page | Use this Key to End a Page Number Entry |
| 4 | Up Arrow | Navigate to a Higher Book Level (i.e. from Section Level to Main Chapter Level) |
| 5 | Volume Up/Down | Increase or Decrease Volume to Headphones |
| 6 | DC Input | Jack for DC Input |
| 7 | I/O Port | Used for future upgrades |
| 8 | Undo/Redo | Press to Return to the Previous Navigation Point/Press Again to Return to the Navigation Point Entered |
| 9 | Variable Speed | Increases or Decreases Playing Speed |
| 10 | Headphone Jack | Jack for Headphones |
| 11 | Bookmark | Use this Key to End a "Set" or "Go To" Bookmark Entry |
| 12 | Hold Switch | In "Hold" Prevents Unit from Accidental Power when Unit is Off or Interrupting Playback when Unit is Playing |
| 13 | Skip/Search Forward | Press Momentarily to Play the Next Track/Hold to Preview Audio Forward |
| 14 | Set | Press this Button to Begin the Entry of a Numbered Bookmark |
| 15 | Door Clamp | Allows Access to the CD and the Internal Battery Compartments |
| 16 | Numeric Key Pad | |
| 17 | Down Arrow | Navigate to a Lower Book Level (i.e. from Main Chapter Level to Section Level) |
| 18 | Go To | Press this Button to Begin the Sequence of a Page or Bookmark Entry |

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>