


# Clueless™ Hands Free Phone

**A REAL Phone  
With Special Features!**

This essential girls' accessory – the **Clueless Hands Free Phone** – gives her a cool way to punch the digits. The unique design allows it to function as a compact, hi-tech handset or transform it into a hands-free version by detaching the ear piece and flexible microphone and clipping the base to your waistband. In addition, the phone has the latest hi-tech features including a security alert to stop eavesdroppers, three **Clueless** phrases, and a five-position voice morphing effect.

## TELEPHONE CONTROLS AND FEATURES

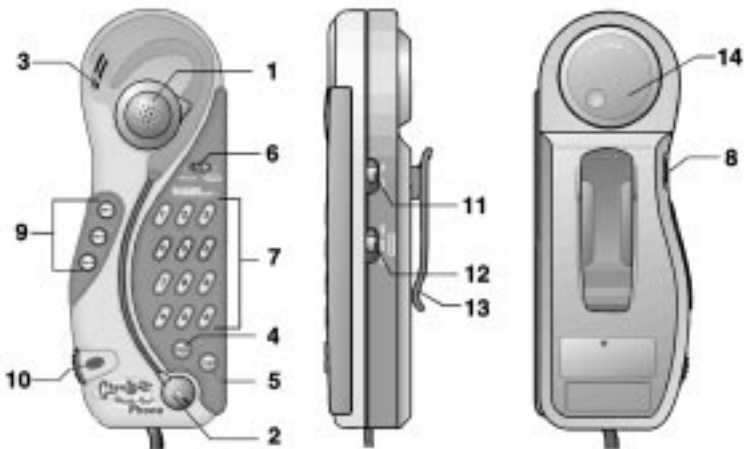

1. **EAR PIECE/SPEAKER**
2. **MICROPHONE**
3. **HEADSET CORD**
4. **REDIAL BUTTON**  
-- redials the last number called
5. **FLASH BUTTON**  
-- lets you retrieve a dial tone after ending a call
6. **TALK/OFF SWITCH**  
-- turns the phone on and off
7. **DIALING KEYS**
8. **VOLUME CONTROL**  
-- controls the reception volume
9. **SOUND EFFECT BUTTONS**  
-- three **Clueless** phrases – AS IF, WHATEVER, I'M OUTIE – can be inserted during your conversation
10. **VOICE CHANGER SELECTOR**  
-- turn it off for your normal voice or choose one of four different settings to change the tone of your voice – VHI (highest), HI (high), LO (low), VLO (lowest)
11. **EAVESDROPPER DETECTOR SWITCH**  
-- turns on and off the Eavesdropper Detector that lets you know if "SOMEONE IS LISTENING" and when it is "SAFE TO TALK."
12. **RINGER VOLUME SELECTOR**  
-- controls ringer volume OFF, LOW, or HIGH
13. **WAISTBAND CLIP**
14. **CORD RETRACTOR DIAL**  
-- retracts the cord into the base to switch from headset to handset mode

## INSTALLATION

### Line Cord Connection

With a modular telephone system, connect the 10 feet of straight telephone line cord included with the phone, to the modular jack located on the bottom of the handset (Figure 1). Insert the other end of the cord into a modular wall jack (Figure 2). Make sure all plugs snap firmly in place.



(Figure 1)



(Figure 2)

## OPERATION

### Receiving a Phone Call

When your phone rings, pick up the handset, slide the **TALK/OFF** switch to **TALK**, and use it like any basic telephone. Or if you are using the hands-free version, detach the ear piece and flexible microphone and place it comfortably around your ear, slide the **TALK/OFF** switch to **TALK** and clip the base to your waistband. Slide the **TALK/OFF** switch to **OFF** to "hang up" the telephone when you have completed your conversation.


### Dialing a Call

Pick up the handset, slide the **TALK/OFF** switch to **TALK**, and wait for a dial tone. Or if you are using the hands-free version, detach the ear piece and flexible microphone and place it comfortably around your ear, clip the base to your waistband, slide the **TALK/OFF** switch to **TALK**, and wait for a dial tone. Press the dialing keys for the number you want.

## KEY FEATURES

### Handset/Headset

This two-in-one phone converts from a regular phone (handset) to a hands-free version (headset), simply by detaching the ear piece and flexible microphone from the base (Figure 3), placing it comfortably around your ear and clipping the base to your waistband. To return the phone to a handset, rewind the cord into the base by pressing down on the retractor dial and turning it in a clockwise direction (Figure 4).

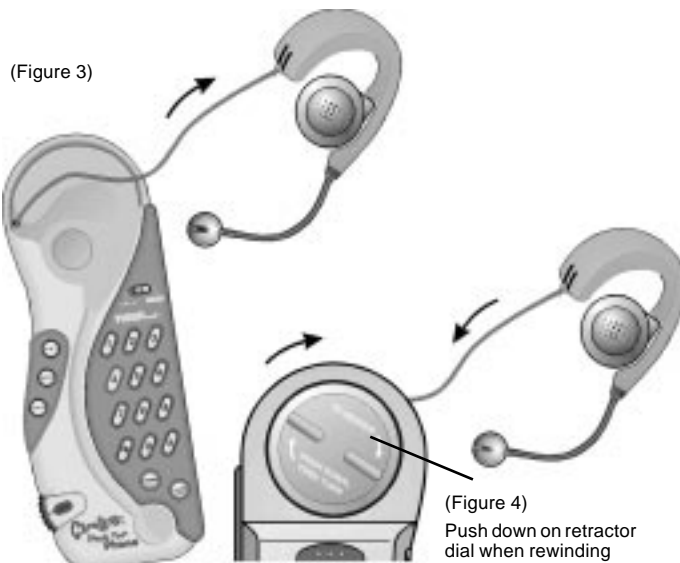

(Figure 3)

(Figure 4)

Push down on retractor dial when rewinding

### Eavesdropper Detector

When the Eavesdropper Detector is turned on, a security alert is activated so you hear "SOMEONE IS LISTENING" when an unwanted third party picks up an extension on the same line. When the unwanted party hangs up, the phone lets you know that it is "SAFE TO TALK." The Eavesdropper Detector can be turned off so that other extensions on the same line can be used during a conversation.

### Clueless Phrases

There are three buttons each activating a **Clueless** phrase. Push the appropriate button to insert, "AS IF," "WHATEVER," or "I'M OUTIE," into your conversation.

### Voice Changer

This voice morphing feature gives your conversation more attitude by allowing you to change your voice from high to low. Move the dial to the off position for your normal voice or select one of four different ranges -- VHI, HI, LO, VLO.

### Redial

If the line is busy when you call someone, or you want to call someone you just called, there is no need to dial the number again manually. When pressed, the **REDIAL** button automatically redials the most recently dialed number. Slide the **TALK/OFF** switch to **TALK**. When you hear a dial tone press **REDIAL** instead of dialing the number.

### Ringer Volume Selector

Your **Clueless Phone** features a harmonic ringer which can be adjusted to a loud (**HIGH**) or soft (**LOW**) sound level. When you do not want to be disturbed, slide the switch to the **OFF** position. You will not hear the phone ring if the ringer switch is in the **OFF** position. You can still make outgoing calls without being disturbed by incoming calls.

### Flash

The **FLASH** button is used to retrieve a new dial tone after ending a call.

**NOTE:** The **FLASH** button is also a useful feature for special telephone services such as call waiting, if you subscribe to this service. Press **FLASH** briefly, release and perform the custom call procedure.

### Volume Control

Your **Clueless Phone** features a dial control to regulate the volume of the reception. If you are having trouble hearing the person you are talking to, increase the volume until it is at a desirable level. If the reception is too loud, decrease the volume until it is at a desirable level.

## TROUBLESHOOTING

### No Dial Tone

- Check all modular plug connections to make sure they are securely connected.
- Problem with the wiring. Try another phone jack. If the phone works on another jack, you may have a problem with your wiring. Contact your local phone company.

### Redial Function Does Not Operate

- Check if the last number you intended to call was really the last number you dialed.

### Phone Does Not Ring

- Check to see if the ringer switch is set correctly. Make sure **RINGER VOLUME SELECTOR** is in either the LOW or HIGH position.
- Too many telephones may be installed on the same line. Contact your local telephone company to determine the maximum number of extensions for your calling area.

### Sound Volume Is Too Low

- Check the **VOLUME CONTROL DIAL** to make sure it is not turned down too low.
- Another extension may be off the hook. Hang up extension.

## IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

Read and understand all instructions.

Follow all warnings and instructions marked on the product.

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.

Do not place this product on an unstable cart, stand, or table. The product may fall causing serious damage to the product.

Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.

Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.

To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified service person when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions.

When the power supply cord is damaged or frayed.

If liquid has been spilled into the product.

If the product has been exposed to rain or water.

If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.

If the product has been dropped or the cabinet has been damaged.

If the product exhibits a distinct change in performance.

Avoid using a telephone (other than a cordless type) during an electrical storm. There may be risk of remote electric shock from lightning.

Do not use the telephone to report a gas leak in the vicinity of the leak.

## SAVE THESE INSTRUCTIONS

## FCC REQUIREMENTS

This equipment complies with Part 68 of the FCC Rules. On the base unit of this equipment is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. If requested, this information must be given to the telephone company.

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN's of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

If your equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice isn't practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operations or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.

The telephone company may ask that you disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

If you experience trouble with this telephone equipment, please contact the following address and phone number for information on obtaining service or repairs.

Company: Tiger Electronics, Ltd. Repair Dept.

Address: 980 Woodlands Parkway  
Vernon Hills, IL 60061, U.S.A.

Tel. No.: 847-913-8100

This equipment is hearing aid compatible.

## 90-DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (Tiger) warrants to the original consumer purchaser of this product that the product will be free of defects in material or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S.\$18.00. Payments must be by check or money order payable to Tiger Electronics, Ltd.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned must be shipped prepaid and insured for loss or damage to:

**Tiger Electronics, Ltd. Repair Dept.  
980 Woodlands Parkway  
Vernon Hills, Illinois 60061 U.S.A.**

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

**THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.**

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.



**TIGER**  
ELECTRONICS, LTD.

CLUELESS TM & © 1997 Paramount Pictures. All Rights Reserved.  
Tiger Electronics, Ltd., Authorized User.  
Visit the CLUELESS website at [www.paramount.com/clueless](http://www.paramount.com/clueless)

©, TM, & © 1998 Tiger Electronics, Ltd.  
All rights reserved. 980 Woodlands Parkway,  
Vernon Hills, Illinois 60061, U.S.A.  
[www.tigertoys.com](http://www.tigertoys.com)

MADE AND PRINTED IN CHINA

71531WTIE-4

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>