 


TIMEX®

Model T205

Color Changing Alarm Clock

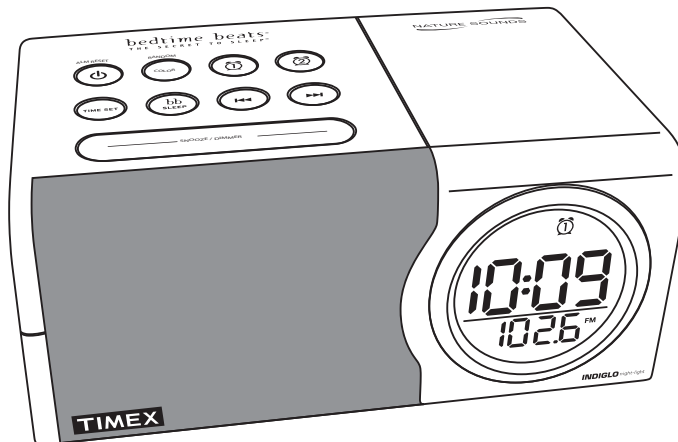

For additional information, online registration, and exclusive special offers please visit our website:

www.timexaudio.com

Table of Contents

Quick start	1
Controls and Indicators	2
Display	3
Installing the Backup Batteries	4
Getting started	5
Operating the Dual Alarm System	6
Color Change	6
Listening to Auxiliary Audio Devices	7
Listening to Radio	8
Sleep Operation: Bedtime Beats and Radi	8
Dimmer Operation	8
A Consumer Guide to Product Safety	9
Limited 90-Day Warranty Information	10

A Consumer Guide to Product Safety

IMPORTANT SAFETY INFORMATION: IT IS THE USER'S RESPONSIBILITY TO USE THIS PRODUCT PRUDENTLY, RESPONSIBLY AND IN A SAFE, NON-DISTRACTED MANNER AT ALL TIMES. FAILURE BY THE USER TO PAY FULL ATTENTION TO THE PROPER OPERATION OF ANY EQUIPMENT BEING USED ALONG WITH THIS PRODUCT COULD RESULT IN AN ACCIDENT AND/OR PERSONAL INJURY.

Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzine, thinner or similar materials can damage the surface of the unit.

FCC Information

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.


Quick start

1: power

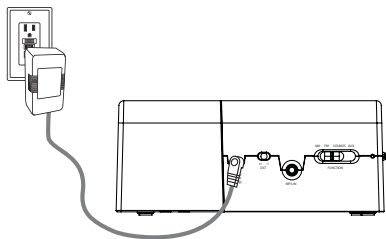


Connect the AC adaptor cord into the DC jack on the back of the unit and plug the other end into a working wall socket.

 2: clock battery backup

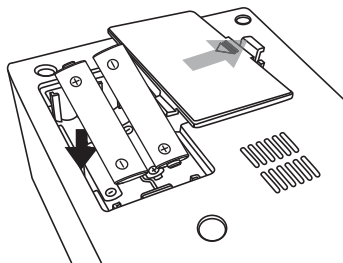


Insert 2 x "AA" battery as indicated into battery compartment. Replace battery compartment cover.

 3: clock & calendar setting

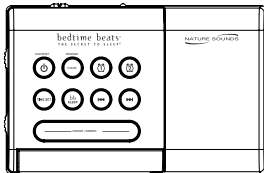

Press and hold the **Time Set Button** on the top of the T205 until the time display flashes. Press the **<< or >> Button** to adjust the time (hold for rapid adjustment). A PM indicator appears for PM setting; there is no AM indicator. Press the **Time Set Button** then **<< or >> Button** adjust the year. Press the **Time Set Button** then **<< or >> Button** adjust the date. Press the **Time Set Button**. Two beeps will confirm clock setting is complete.

 4: alarm setting

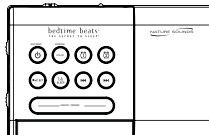


Press and hold the **Alarm 1 Button** on the top of the unit until the alarm time display flashes. Press the **<< or >> Button** to adjust the alarm time (hold for rapid adjustment). A PM indicator appears for PM setting; there is no AM indicator. When the correct alarm time is set, press the **Alarm 1 Button** to exit setting. The alarm 1 icon will appear.


Follow the same steps using the **Alarm 2 Button** to set Alarm 2. Note that the alarm source for either alarm is determined by the function switch.

Controls and Indicators

 
Back of Clock

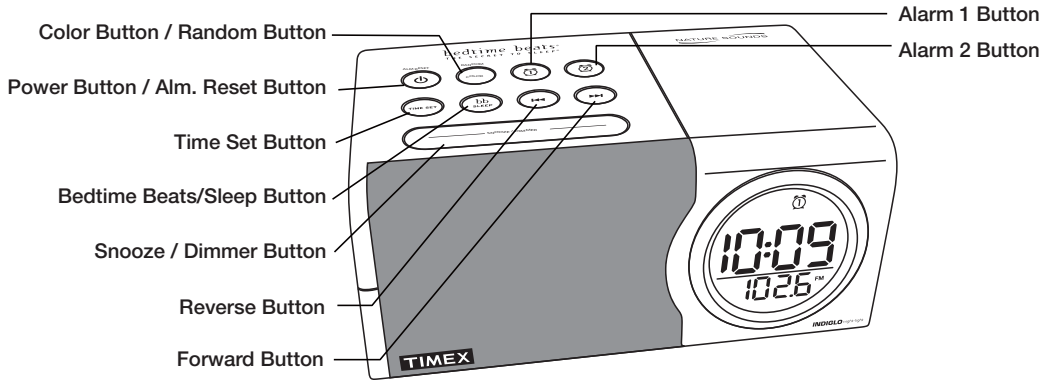


Back of Clock

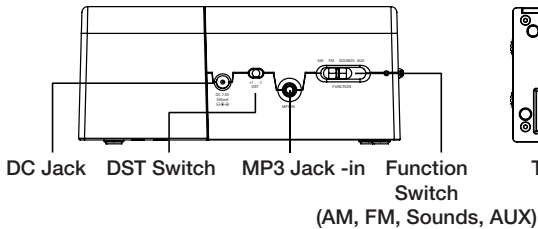 


Bottom of Clock

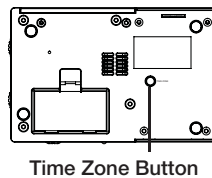 

Side of Clock

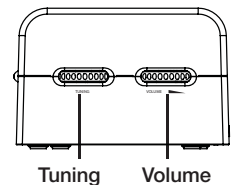 

Display

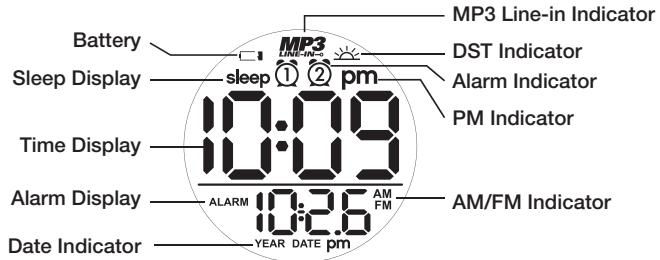 

Installing the Backup Batteries

Installing the Backup Batteries

If the backup batteries have been installed and a power failure occurs or the AC cord is accidentally disconnected, the current time and alarm time settings will be temporarily maintained.

 
If the backup batteries have not been installed or are dead, when the AC power resumes the display will show 12:00 and you must reset the time and alarm settings.

1. Open the battery compartment cover located on the bottom of the unit.
2. Install 2 x "AA" battery.
3. Close the battery cover.

AC adaptor

The unit comes with an AC adaptor that must be used to power the unit (unit will not run on back up battery).

Plug the cable into the DC jack located inside battery compartment on the bottom of unit and plug the other end into AC wall outlet.

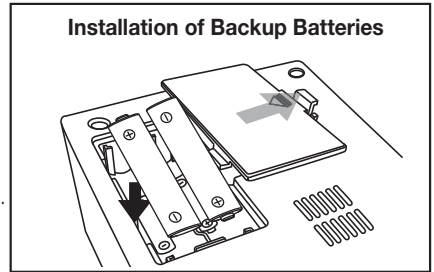

Getting Started

Daylight-Saving Time

This unit is a preset Clock: the clock is already preset to Eastern Standard Time. It's simple to match settings to where you live. For daylight saving time:

1. Set the **DST Switch** to +1. The DST icon will appear on top of display and the time will advance 1 hour.
2. Set the **DST Switch** to -1 to set the time back 1 hour.

Pre-Set Time and Date Settings

This model is equipped with a preset feature; the time and date have been set for Eastern Standard Time at the factory.

1. To change your time zone setting, press and hold the **Time Zone Button**. The current time zone will flash briefly at the bottom of the display.
2. While the Time Zone is flashing, press the **<<** or **>>** **Button** to select your time zone. The time display will show the current time for the selected time zone. There are seven zones to choose from:

ATL	Atlantic Standard Time
EAS	Eastern Standard Time
CEN	Central Standard Time
MTN	Mountain Standard Time
PAC	Pacific Standard Time
ALS	Alaskan Standard Time
HAI	Hawaiian Standard Time

Setting Time and Calendar

1. Press and hold the **Clock Adjust Button** located on the back of the unit for 2 seconds until the time display flashes. If the time is correct, press the **Clock Adjust Button** again to accept the setting. Otherwise, press the **<<** or **>>** **Button** to adjust the time (hold for a few seconds to advance or reverse rapidly). Remember to set the correct AM or PM time. (An icon at the upper right hand corner of the display is the **PM Indicator**; **there is no AM indicator**). When the correct time is displayed, press the Clock Adjust button to confirm. The year display will flash.
2. Press the **Clock Adjust Button** to accept the current year setting or press the **<<** or **>>** **Button** until the correct year is displayed. Press the **Clock Adjust Button** to confirm year setting after adjustment.
3. The display will change to show the date flashing. Press the **Clock Adjust Button** to accept the current date setting or press the **<<** or **>>** **Button** until the correct date is displayed (holding the button for a few seconds will advance or reverse rapidly). Press the **Clock Adjust Button** to confirm the date setting after adjustment. You will hear 2 beeps indicating that clock and calendar setting is complete and it will exit the setting mode.

Operating the Dual Alarm System

Note: The T205 has a dual alarm feature allowing you to wake to Nature Sounds or Radio. A buzzer alarm will still sound in the event of power failure (if backup batteries are installed).

Setting the Alarm(s)

1. Press and hold the **⏰ Button** until the display flashes. Press the **<<** and **>>** **Button** to set the alarm time. Remember to set the correct AM or PM time.
2. Press the **⏰ Button** again or wait for 10 seconds. Alarm 1 is now armed, indicated by the numbered alarm clock icon.
3. To set Alarm 2, just repeat steps 1 and 2 above but using **⌚ Button**.
4. Set the **Function Switch** located on the back of the unit to wake to AM/FM radio or Nature Sounds. Both alarms (1 and 2) will wake you to the same sound source.

NOTE: The radio alarm will wake you to the currently tuned band and station.

Review, Arming and Disarming Alarm (Turn Alarm Function On and Off)

1. Press the **⏰** (or **⌚**) **Button** once. The display will show the current alarm time on the bottom part of the display for alarm time review.
2. During alarm review, press the button again to arm or disarm the alarm. When the alarm is armed, the related alarm icon appears in the display.

Resetting the Alarm to Come on the Next Day

1. When the alarm is sounding, press the **⏸ Button** to silence the alarm and reset it to come on the following day.

Snooze

1. Press the **Snooze/Dimmer Button** after the alarm sounds. The alarm will be silenced and come on again about 9 minutes later. Snooze can be pressed several times during the 1 hour alarm cycle.

Color Change

1. During normal mode, press and hold the **Color Button** on top of the unit to activate the random color sequence (the color of the cabinet and display backlight will fade from one color into the next). There are seven colors. To stop on a particular color, press the **Color Button** when the desired color is displayed.
2. You can control the brightness by pressing the **Snooze/Dimmer Button** as needed.

Listening to Auxiliary Audio Devices

If you are using another MP3 player or other portable audio device, you can play it through the T205 via the Line-in Jack.

1. Plug one end of an audio patch cord (available at www.timexaudio.com) into the headphone or line-out jack on your device and the other end of the patch cord into the T205 **MP3 Line-in Jack** located on the back of the unit.
2. Set the Function Switch to AUX. The **MP3 Icon** appears on the top of the display, indicating Line-in playing mode.
3. Turn on and play your device.
4. Adjust the **Volume Dial** on the left of the T205.
5. To turn off the unit, press the **⏻ Button** on the T205. Please remember to turn off your device, too.

Listening to Radio

Tuning and Playing the Radio

1. Press the **⏻ Button** to turn the unit on.
2. Move the **Function Switch** as needed to select AM or FM radio band. The currently tuned station frequency will appear at the bottom of the display, with FM or AM icon showing the radio band setting.
3. Turn the **Tuning Dial** to tune the radio to a desired station.
Extend the FM antenna as far from unit as possible and position for best reception. Do not strip or alter the antenna wire. The unit has an internal AM antenna. Position the unit as needed for best AM reception.
4. Turn the **Volume Dial** to adjust the volume.
5. To turn off the unit, press the **⏻ Button**.

Sleep Operation: Bedtime Beats and Radio

Sleep mode lets you sleep to Bedtime Beats or the radio until the T205 shuts off at your selected time.

1. Move the **Function Switch** as needed to select your sleep source: Sounds for Bedtime Beats, or select AM or FM radio band. Do not set source to AUX.
2. Press the **Sleep Button** to enter sleep mode. The **Sleep Icon** will appear on top of the display to indicate the unit is in sleep mode. You can adjust the sleep timer from 90, 60, 30, 15 minutes or OFF by pressing the **Sleep Button** as needed. The unit will automatically turn off after the selected time.
3. When the display changes from the sleep time setting, if you have selected Sound as your sleep source, the currently selected Bedtime Beat (bb1 = classical, bb2 = jazz, bb3 = new age, bb4 = selections from beats 1-3) will be displayed. Press the << or >> **Button** to cycle to your preferred Bedtime Beat.
During sleep mode, press the **Sleep Button** once to show the sleep time remaining. Pressing it again will change sleep time to the next lowest increment.
4. Turn the **Volume Dial** to adjust the sleep volume. The volume will remain at that level the next time the unit is activated by alarm or by pressing the **⏻ Button**.
5. To stop listening at any time, press the **⏻ Button** on the T205 to turn the unit off.

Dimmer Operation

During normal operation, press the **Snooze/Dimmer Button** to control the brightness of the LCD display.

IMPORTANT SAFETY INSTRUCTIONS

This unit has been designed and manufactured to assure your personal safety. Improper use can result in potential electrical shock or fire hazards. Please read all the safety and operating instructions carefully before installation and use. Keep these instructions handy for future reference. Take special note, adhere to all warning, and always follow the instructions on the unit and in the instruction and service manuals.

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance itself.
5. **Power-cord Protection** – Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
6. **Cleaning** – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
7. **Non-Use Periods** – The power cord of the unit should be unplugged from the outlet when it is to be left unused for a long period of time.
8. **Object and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into an enclosure through openings.
9. **Attachments** – Do not use attachments not recommended by the product manufacturer as they may cause hazards.
10. **Lightning** – For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
11. **Overloading** – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
12. **Damage Require Service** – The unit should be serviced by qualified service personnel when:
 - A. The power supply cord or plug has been damaged.
 - B. Objects have fallen into or liquid has been spilled into the enclosure.
 - C. The unit has been exposed to rain.
 - D. The unit has been dropped or the enclosure damaged.
 - E. The unit does not appear to operate normally or exhibits a marked change in performance.
13. **Service** – The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.
14. **Safety Check** – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

For questions or comments regarding this or other products, please call our toll-free number 1-800-888-4491.

Limited 90-Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should service be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$3.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is \$6.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of SDI Technologies, Inc. for the sum of \$3.00 (or \$6.00 if after the warranty period or without proof of purchase).
4. Send the unit prepaid to the Factory Service Center listed below:

Consumer Repair Department

SDI Technologies Inc.
Timex Audio Products Division
1330 Goodyear Drive
El Paso TX 79936-6420

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

© 2008 SDI Technologies, Inc. All rights reserved

TIMEX is a registered trademark of Timex Corporation the United States and other countries

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>