


Analog Watches with alarm

User's Manual

 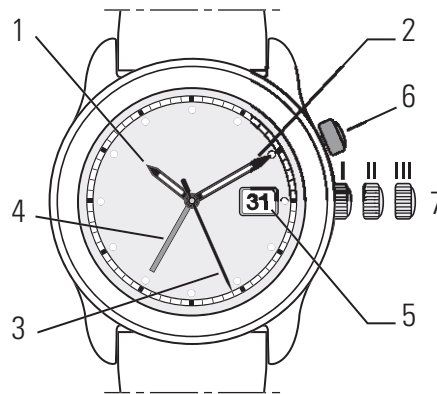


Display and functions

- ❶ Hour hand
- ❷ Minute hand
- ❸ Seconds hand
- ❹ Alarm hand
- ❺ Date indicator
- ❻ Alarm switch

Crown with 3 positions (7):

- I Neutral position (not pulled out)
- II Setting position for date (unscrewed*, half pulled out)
- III Setting position for time (unscrewed*, completely pulled out).



Congratulations

We would like to congratulate you on having chosen a watch from TISSOT®, one of the most highly renowned Swiss brands in the world. Meticulously designed, using only the highest quality materials and components, your watch is protected against shock loads, variations in temperature, water and dust.

Unusually easy to set and use, your watch is fitted with a quartz movement with an hours-minutes-seconds-date display and a rare and refined alarm function.

To ensure that your watch operates with perfect precision for many years to come, we advise you to pay very careful attention to the advice provided hereafter. This user's manual is applicable to all analog quartz watches **TISSOT® fitted with an alarm**.



Setting the time

Crown in position III

To set the time forwards or backwards, simply turn the crown in the appropriate direction. The date changes just after midnight is reached.

Notes:

The seconds hand is stopped whenever the crown is in position II.

The crown **must not** be left in position III: this increases power consumption!



Rapid correction of the date

Crown in position II

The date can be corrected rapidly by turning the crown backwards (counter-clockwise).



Setting the alarm time

Crown in position II

The alarm time is set by turning the crown forwards (clockwise).



Switching ON / OFF the alarm

Crown in position I

OFF

Neutral position: alarm off.

ON

Pulled out position: alarm on (confirmed by a beep).

Care and maintenance

We would advise you to clean your watch regularly (except for the leather strap) using a soft cloth and warm soapy water. After immersion in salty water, rinse it in fresh water and leave it to dry completely.

Do not leave it anywhere where it might be subjected to major variations in temperature or humidity, in direct sunlight or near strong magnetic fields.

To benefit from the highest standards of service and to ensure your guarantee remains in force, please always contact an approved TISSOT® representative or retailer.

TISSOT® Quartz watches benefit from the incomparable precision of quartz. Their power reserve usually enables them to operate for more than 2 years in continuous use.

Replacing the battery

Once the battery has run flat, it must be replaced without delay by an approved TISSOT® representative or retailer.

Battery type: button-type zinc-silver oxide primary battery cell, Renata 396 / Service life: about 3 years.

Collection and treatment of end of life quartz watches*



This symbol indicates that this product should not be disposed with household waste. It has to be returned to a local authorized collection system. By following this procedure you will contribute to the protection of the environment and human health. The recycling of the materials will help to conserve natural resources.

* valid in the EU member states and in any countries with corresponding legislation.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>