

FARBERWARE® MILLENNIUM®



USE & CARE INSTRUCTIONS Electric Warming Tray

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Do not cook on broken warming plate. If warming plate should break, cleaning solutions and spillovers may penetrate the broken warming plate and create a risk of electric shock.
15. Clean warming plate with caution. If a wet sponge or cloth is used to wipe spills on a hot cooking area, be careful to avoid steam burn. Some cleaners can produce noxious fumes if applied to a hot surface.

SAVE THESE INSTRUCTIONS

For Household Use Only

ADDITIONAL IMPORTANT SAFEGUARDS

CAUTION HOT SURFACES: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. **Do not reach into the water!**
3. When using this appliance, provide adequate air space above and on all sides for air circulation. Do not operate this appliance while it is touching or near curtains, wall coverings, clothing, dishtowels or other flammable materials.
4. To reduce the risk of fire, do not leave this appliance unattended during use.
5. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair a malfunctioning appliance!
6. The cord to this appliance should only be plugged into a 120V AC electrical wall outlet.
7. Do not use this appliance in an unstable position.

Short Cord Instructions

A short detachable power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.

Electric Power

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

Plasticizer Warning

CAUTION: To prevent Plasticizers from migrating from the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top.

Failure to do so may cause the finish to darken. Permanent blemishes may occur or stains can appear.

Getting to Know Your Electric Warming Tray

Product may vary slightly from illustration.




1. Stay-Cool Handles
2. Warming Plate
3. "Hot Spot" Circle
4. Power Cord Socket
5. Temperature Control
6. Detachable Power Cord (P/N 1-1424)

OPERATING INSTRUCTIONS

CAUTION: Do not immerse Warming Tray, Cord or Plug into water or any other liquid.

IMPORTANT: Please treat the glass surface of this tray as you would any fine glass table top. Glass will scratch if not handled carefully. To prevent scratching, do not slide serving pieces on the glass. Care should be taken when using serving pieces or dishes that have a rough bottom. This is particularly true of ceramic ware. **DO NOT use the glass as a cutting surface.**

1. Before using for the first time: Carefully wipe the Warming Plate surface with a dampened cloth and mild detergent. Wipe dry with a soft cloth.
2. Place the tray on a flat, hard surface—like a countertop, buffet or table—at least 2 inches away from the wall and other surfaces. **DO NOT** place on an unsteady or cloth-covered surface. **Air must circulate freely under the Warming Plate.**
3. Insert the Detachable Power Cord into the Power Cord Socket (see FIGURE 1); then plug into a 120V electrical outlet. **The Warming Tray will start heating up as soon as the unit is plugged in.**
4. Put the foods to be warmed into a warming/serving dish before placing onto the Warming Tray. **DO NOT place food directly onto the glass Warming Plate surface.**

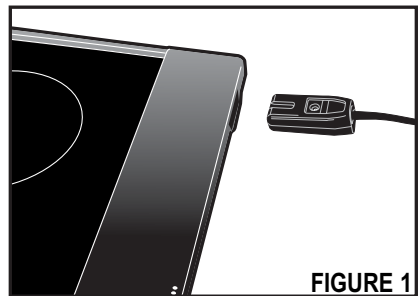

NOTE: Silver, china, pottery, ovenware, glass, and metal serving pieces are all appropriate. However, a flat-bottom dish will transfer the heat from the tray to the food more readily. **DO NOT use plastic dishware!**

NOTE: To keep foods from drying out, cover with aluminum foil until serving time. Be sure the foil cover does not drape over the sides and onto the Warming Tray.

5. Slide the Temperature Control to the desired temperature setting (see FIGURE 2). Surface temperature will range from approximately 180°F/82°C (■), to 300°F/149°C (■■■).

NOTE: The correct temperature setting will vary depending on the food and type of dish-ware being used.

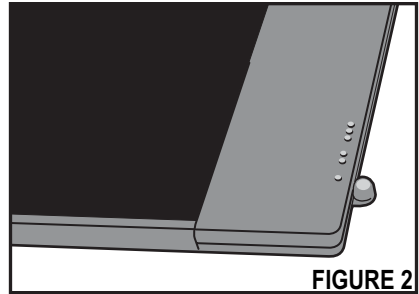


FIGURE 2

Using the “Hot-Spot”: This is the area within the red circle on the Warming Plate. The “Hot-Spot” circle is approximately 40°F/22°C warmer than the surrounding area and is intended for keeping coffee, tea, soups, gravies, etc., piping hot.

6. To turn the Warming Tray OFF, first unplug the appliance from the wall outlet; then detach the power cord from the unit. **Unplug the Warming Tray immediately after use.**

CAUTION: Use care when wiping spills with a wet sponge or cloth on a hot cooking area. Be careful to avoid steam burn. Also, some cleaners can produce noxious fumes if applied to a hot surface.

USER MAINTENANCE INSTRUCTIONS

This Warming Tray requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

CAUTION: Do not immerse Warming Tray, Cord or Plug in water or other liquid.

Care and Cleaning

1. First unplug the appliance from the wall outlet; then detach the power cord from the unit. **ALLOW ALL PARTS TO COOL COMPLETELY BEFORE CLEANING.**
2. Once the Warming Tray has cooled completely, use a sponge or cloth moistened with any mild household detergent to clean the glass surface and plastic Stay-Cool Handles.

CAUTION: Do not use scouring pads or harsh or abrasive cleansers to clean the glass Warming Plate. These could scratch the Warming Plate surface.

NOTE: Glass cleaner may be used on the Warming Plate surface to remove detergent streaks and to enhance shine.

LIMITED ONE-YEAR WARRANTY

Warranty Coverage: This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

Warranty Service: To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

To return the appliance, ship to:

ATTN: Repair Center
708 South Missouri Street
Macon, MO 63552 USA

To contact us, please write to, call, or email:

Consumer Relations Department
PO Box 7366
Columbia, MO 65205-7366 USA
Phone: 1-800-233-9054
Email: consumer_relations@toastmaster.com

What Is Not Covered: This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

LIMITATION ON DAMAGES: THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website: www.maxim-toastmaster.com.

Farberware is a registered trademark of Farberware Licensing Company, LLC.
Manufactured and sold pursuant to a license from Farberware Licensing Company, LLC.

©2006 Farberware Licensing Company, LLC. All rights reserved.
Made in China

6/06

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>