

# 1 Litre Electric Kettle

USE AND CARE GUIDE  
MODEL TJK1CAN



# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- ◆ Read all instructions.
- ◆ Do not touch hot surfaces. Use handles or knobs.
- ◆ To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or appliance in water or other liquid.
- ◆ Close supervision is necessary when any appliance is used by or near children.
- ◆ Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- ◆ Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
- ◆ The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- ◆ Do not use outdoors.
- ◆ Do not let cord hang over edge of table or counter, or touch hot surfaces.
- ◆ Do not place on or near a hot gas or electric burner, or in a heated oven.
- ◆ To disconnect, remove plug from wall outlet.
- ◆ Do not use appliance for other than intended use.
- ◆ Be certain Lid is securely in place before operating appliance.
- ◆ Scalding may occur if the Lid is lifted or opened during heating.

## SAVE THESE INSTRUCTIONS

**For Household Use Only**



# ADDITIONAL IMPORTANT SAFEGUARDS

**WARNING: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.**

- ◆ All users of this appliance must read and understand this Use and Care Guide before operating or cleaning this appliance.
- ◆ The cord to this appliance should be plugged into a 120 V AC electrical outlet only.
- ◆ Use **water only** in this appliance! Do not put any other liquids or food products in this appliance. Do not mix or add anything to the water placed in this appliance, except as instructed in the User Maintenance Instructions to clean the appliance.
- ◆ To avoid accidental scalding or burns, use extreme caution while moving this appliance when it contains hot water, and while pouring hot water from this appliance.
- ◆ Keep appliance at least 4 inches away from walls or other objects during operation. Do not place any objects on top of appliance while it is operating. Place the appliance on a surface that is resistant to heat.
- ◆ If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
- ◆ If this appliance falls or accidentally becomes immersed in water or any other liquid, unplug it immediately. **Do not reach into the water! Do not use this appliance after it has fallen into or has become immersed in water.** Contact Consumer Service for examination and repair.
- ◆ Do not leave this appliance unattended during use.
- ◆ Always pour water into Kettle before plugging in and heating up the appliance. **Never pour water into heated Kettle.**
- ◆ Be sure Kettle is filled with water to at least a minimum level to cover the Heating Element. Do not operate appliance without water or with an insufficient amount of water. Also, do not fill above the 1 LITRE water level. If the Kettle is over filled, there is a risk that boiling water may be ejected.

# ADDITIONAL IMPORTANT SAFEGUARDS (Cont.)

- ◆ Do not block the steam from emitting from the Spout during use.
- ◆ Do not use this appliance if it is cracked or damaged. Contact Consumer Service for examination and repair.
- ◆ Do not place this appliance in a microwave oven.

## Grounded 3-Conductor Plug

This appliance is equipped with a grounded-type 3-wire cord (3-prong plug). This plug will only fit into an electrical outlet made for a 3-prong plug. This is a safety feature. If the plug should fail to fit the outlet, contact an electrician to replace the obsolete outlet. Do not attempt to defeat this safety feature.

## Short Cord Instructions

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.


## Electric Power

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.



# Getting To Know Your 1 Litre Electric Kettle

Your product may vary slightly from illustration.

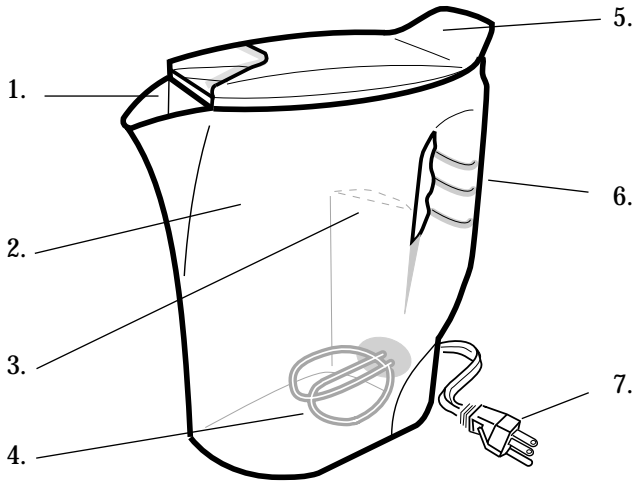

- |                                      |                                |
|--------------------------------------|--------------------------------|
| 1. Spout                             | 5. Lid (P/N 31132)             |
| 2. Main Body                         | 6. Handle                      |
| 3. 1 LITRE MAX FILL<br>Line (inside) | 7. Grounded-Type, 3-Prong Plug |
| 4. Heating Element (inside)          |                                |

## Before Using For The First Time

Clean Kettle by boiling a Kettle of water, following instructions below. Then discard the water and rinse thoroughly with cold water.

**CAUTION:** After boiling, the water is extremely hot. When pouring to discard the water, pour slowly and carefully and keep hands away from the Lid and Spout.

# To Boil Water

**CAUTION: Always make sure the Kettle is unplugged before filling the Kettle.**

1. Lift the Lid and fill the Kettle with water above the Heating Element but not over the 1 LITRE MAX FILL line.
2. Always hold the Kettle level when filling.

**CAUTION: Always add sufficient water to the Kettle to ensure that the water level is well above the Heating Element. This will prevent the Kettle from automatically shutting off due to the Boil Dry Protection feature. As a guide, we recommend that you always begin with at least 350 ml (1½ Cups) of water.**

**CAUTION: Do not overfill your Kettle or water may boil over. The 1 LITRE MAX FILL line is inscribed on the inside of the Kettle and can be viewed with the Lid in the open position. If the Kettle is overfilled there is a risk that boiling water may be ejected from the Spout or it may boil over.**

3. Set on a level, dry surface. Do not place the Kettle on any hot surface. Make sure the Lid is closed and in place.
4. Plug the unit into a grounded 120V AC electrical outlet. The heating process will begin immediately.

**CAUTION: Do not plug in the Kettle when it is empty. When the water is actively boiling, it will evaporate quickly in the production of steam. Unplug the Kettle promptly to avoid it boiling dry.**

**WARNING: Steam will escape from the Spout while the water is heating. Do not touch the Pouring Spout, Lid, or the Main Body while the Kettle is ON.**

**NOTE: If the Kettle boils dry, the safety thermostat will automatically cycle OFF to prevent overheating. Should cycling occur, unplug the Kettle and allow to cool before refilling with water.**



## To Boil Water (Cont.)

5. Once the water is actively boiling, promptly unplug the Kettle to turn it OFF.
6. Before pouring or moving the Kettle, unplug the cord from the outlet. Using the Handle, carefully lift the Kettle and pour the hot water. Pour slowly and carefully and keep hands away from the Lid and Spout.
7. Before next use, make sure the Kettle is unplugged. Allow to cool completely before cleaning.

**NOTE: To interrupt the boiling process, simply unplug from outlet.**

**CAUTION: DO NOT TOUCH HOT SURFACES.**

## Boil Dry Protection

A safety thermostat will automatically shut the Kettle OFF if your Kettle is accidentally plugged in without any water, or if the Kettle is without sufficient water to cover the Heating Element, or if the Kettle is allowed to boil dry. Should cycling occur, disconnect the Kettle and allow to cool before refilling with water.

## To Boil A Second Pot Of Water

Unplug the Kettle for 15 minutes and allow to cool.

**WARNING: Failure to allow Kettle to cool may cause water to overheat and spray hot steam when filled. The hot steam can cause severe burns.**

## User Maintenance Instructions

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

# To Clean Outside of Kettle

It is recommended that you clean your Kettle regularly.

1. Make sure the Kettle is unplugged and has cooled completely.
2. Clean the outside of the Kettle by wiping with a damp sponge and a little mild liquid soap, if necessary. Do not use abrasive cleansers, scouring pads or steel wool as they may scratch the surface.
3. Rinse by wiping with a damp cloth or sponge.

**CAUTION: Do Not Immerse the Kettle in Water!**

# To Remove Mineral Deposits

1. Unplug the Kettle from the outlet and allow to cool before cleaning.
2. Do not immerse the Kettle or any part of the Kettle in water or any other liquid.
3. There may be deposits of minerals that form inside the Kettle and flake off during use. Rinse out as needed.
4. Mineral deposits can form a coating over the heating elements and may cause an "off" flavor in the water and may lengthen boiling time. In a bowl, mix a diluted solution of one part vinegar to 4 parts water and pour into Kettle.
5. Plug cord into a grounded 120V AC electrical outlet and allow water to boil. Unplug Kettle.
6. Pour out hot water and allow to cool. Repeat process with clean water to rinse.

# To Store

Unplug unit and allow to cool. Store in its box or in a cool, dry place. Never store Kettle while it is still plugged in. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the appliance as it may cause the cord to fray and break.





## LIMITED ONE YEAR WARRANTY

**Warranty:** This Toastmaster® product is warranted to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

**Warranty Coverage:** This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Implied Warranties:** ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

**Service and Repair:** Should the appliance malfunction, you should first call toll-free 1 (800) 947-3744 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number **TJK1CAN** when you call.

**In-Warranty Service (USA):** For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization (1 800 947-3744).

**Out-of Warranty Service:** A flat rate charge by model is made for out-of-warranty service. **Include \$ 8.00 (U.S.)** for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

**For Products Purchased in the USA, but Used in Canada:** You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

**Risk During Shipment:** We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

### To return the appliance, ship to:

Attn: Repair Center  
Toastmaster Inc.  
708 South Missouri Street  
Macon, MO 63552  
Email: [consumer\\_relations@toastmaster.com](mailto:consumer_relations@toastmaster.com)  
[www.toastmaster.com](http://www.toastmaster.com)

### To contact us, please write to or call:

Toastmaster Inc.  
P.O. Box 6916  
Columbia, MO 65205-6916  
1 (800) 947-3744

**Limitation of Remedies:** No representative or person is authorized to assume for us any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and in no event shall we be liable for any incidental or consequential damages, losses or expenses. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**Legal Rights:** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

© 2004 Toastmaster Inc.  
All Rights Reserved

P/N 61478  
Printed in China

## Keep Dated Sales Receipts for Warranty Service.

Keep this booklet. Record the following for reference:

Date purchased \_\_\_\_\_

Model number \_\_\_\_\_

Date code (stamped on bottom) \_\_\_\_\_

EVERYBODY EATS. It's a fact of life.  
But sometimes preparing  
meals can become a chore.  
That's why TOASTMASTER has been invited  
into millions of kitchens just like yours  
so we can HELP YOU MASTER your  
mixing, baking, grilling, toasting,  
brewing, heating and serving  
tasks WITH EASE AND STYLE.  
The TOASTMASTER name stands for a  
CELEBRATION of INNOVATION designed  
to serve your life and keep you  
COOKIN' IN STYLE.





**toastmaster®**

- **Cool Touch Handle**
- **Safety Shut off and Reset when Boils Dry**
- **Easy to flip open/close**
- **Hinged fill Lid**
- **Easy to Clean inside and out**



## **Questions**

Call toll free 1-800-947-3744

Monday – Friday, 8:00 a.m. - 5:30 p.m. CST

[www.toastmaster.com](http://www.toastmaster.com)

**TJK1CAN**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>