


Electric Carving Knife

USE AND CARE GUIDE
MODELS 6102 & 6102CAN

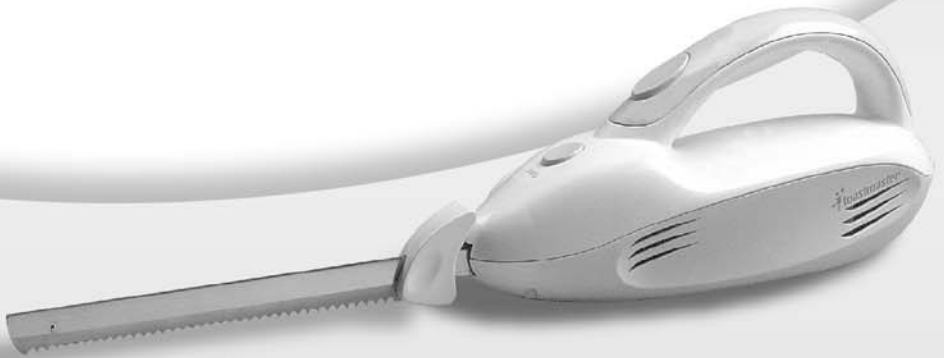

READ AND SAVE THESE INSTRUCTIONS

WARNING: A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- ◆ Read all instructions before using knife.
- ◆ To protect against the risk of electric shock, do not immerse cord, plug, or knife in water or other liquid. Do not operate knife in water or under running water. See instructions for cleaning.
- ◆ Close supervision is necessary when this appliance is used near children.
- ◆ This appliance is not for use by children.
- ◆ Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. Disconnect when changing blades.
- ◆ Avoid contacting moving parts.
- ◆ Do not operate any damaged appliance. Do not operate with a damaged cord or plug, or after the appliance malfunctions, or has been dropped or damaged in any manner. Contact Consumer Service for return authorization, examination, repair or adjustment.
- ◆ Use attachments only if recommended by Toastmaster Inc. to avoid electric shock or injury.
- ◆ Do not use outdoors or while standing in a damp area.
- ◆ Do not place on or near a hot gas or electric burner, or in a heated oven.
- ◆ Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
- ◆ Blades are sharp. Handle carefully. Always handle blades with hand away from cutting edge. Always store blades with cutting edge away from you and covered with protective sleeve.
- ◆ Do not insert knife blades in any way other than recommended in these instructions.
- ◆ Use knife only as indicated in these instructions.



SAVE THESE INSTRUCTIONS

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125 V. and at least 10 A., 1250 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

POLARIZED PLUG: This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

This product is for household use only.

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS.

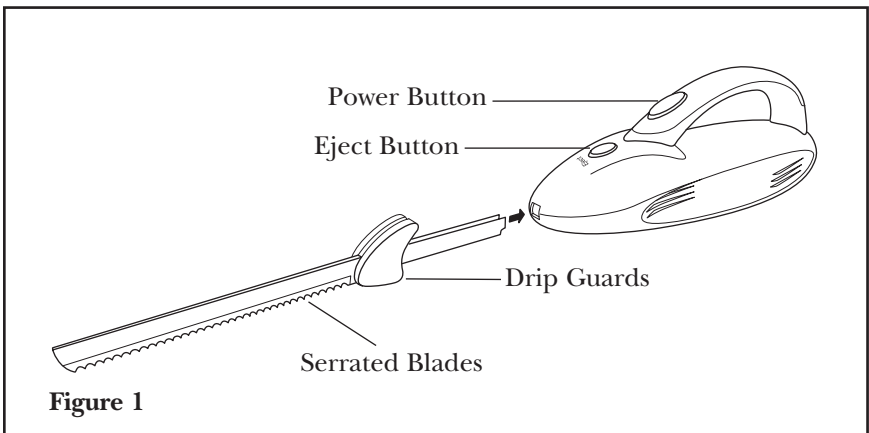


Figure 1

Electric Knife

1. Remove all packaging materials before using.
2. Unplug knife from outlet.
3. Attach the two blades together by inserting the knob on one blade into the keyhole slot on the other and sliding them together. With the protective sleeve on the blades, carefully grasp the blades, serrated side down, at the drip guards. Push into position until both blades click into place (see Figure 1).
4. Remove the protective sleeve from blades and save for storage of blades.
5. Plug into a 120 V ~ 60 Hz outlet.
6. To slice, press the power button (see Figure 1).

Removing The Blades

1. Unplug unit from outlet before removing blades.
2. Carefully grasp the blades (serrated side down) at drip guards. Press eject button and carefully remove blades from knife.

Hints

- ◆ Use a carving board to avoid damage to blades and countertops. As with any sharp knife, the blades will scratch most surfaces.
- ◆ When the meat contains a bone, cut down to the bone, but do not attempt to cut through it.
- ◆ When slicing, gently guide the knife through the food. Excessive sawing or pressure is unnecessary.
- ◆ Do not use knife to cut frozen food packages or any other hard foods.



Care And Cleaning

CAUTION: ALWAYS UNPLUG UNIT BEFORE CLEANING. NEVER IMMERSE UNIT IN WATER OR OTHER LIQUIDS.

Clean knife exterior by wiping with a soft damp cloth. The knife blades should be separated before washing. Slide the knob down to the keyhole and lift apart. Wash stainless steel blades in hot soapy water. Rinse well and dry thoroughly. Replace the protective sleeve.

Any servicing requiring disassembly other than the above cleaning must be performed by a qualified appliance repair technician.

In-Warranty Service Information

Please refer to warranty statement to determine if in-warranty service applies. This appliance must be serviced by a Toastmaster authorized service center. Unauthorized service will void warranty.

If an authorized service center is not available locally, your appliance may be returned postage prepaid to our National Service Center at the address shown on the back of this book. Call Consumer Service for return authorization.

Products must be adequately protected to avoid shipping damage. Surround your appliance with three inches of protective padding and include a copy of your dated sales receipt and a note explaining the problem you have experienced. We recommend insuring your package. No CODs accepted.

Keep Dated Sales Receipts for Warranty Service.

Keep this booklet. Record the following for reference:

Date purchased _____

Model number _____

Date code (stamped on bottom) _____

LIMITED ONE-YEAR WARRANTY

Warranty Coverage: This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

Warranty Service: To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

To return the appliance, ship to:

ATTN: Repair Center
708 South Missouri Street
Macon, MO 63552 USA

To contact us, please write to, call, or email:

Consumer Relations Department
PO Box 7366
Columbia, MO 65205-7366 USA
1-800-233-9054
E-mail: consumer_relations@toastmaster.com

What Is Not Covered: This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

LIMITATION ON DAMAGES: THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website: www.maxim-toastmaster.com.





toastmaster®

- 8" stainless steel blades
- Comfort-grip handle
- Convenient thumb-tip control button
- Convenient power and blade release button



Questions

Call toll free 1-800-947-3744

Monday–Friday, 8:00 a.m.-5:30 p.m. CST

www.toastmaster.com

6102 & 6102CAN

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>