

HOT AIR POPCORN POPPER



MODEL WST3022ZE

OWNER'S MANUAL



Westinghouse

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs. Use oven mitts or potholders.
3. To protect against electric shock do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. A popper that is plugged into an outlet should not be left unattended.
15. This popper will not shut off automatically. To avoid overheating, add corn before operating.

SAVE THESE INSTRUCTIONS

For Household Use Only

ADDITIONAL IMPORTANT SAFEGUARDS

CAUTION HOT SURFACES: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires or other damage to persons or property.

CAUTION: This appliance is hot during operation and retains heat for some time after turning off. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Do not place anything on top of the appliance while it is operating or while it is hot.

1. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
4. Do not leave this appliance unattended during use.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a longer detachable power-supply cord or extension cord is used, (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and (2) the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.


PLASTICIZER WARNING

CAUTION: To prevent Plasticizers from migrating from the finish of the countertop or tabletop or other furniture, place **NON-PLASTIC** coasters or placemats between the appliance and the finish of the countertop or tabletop.

Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.

GETTING TO KNOW YOUR WESTINGHOUSE WST3022ZE HOT AIR POPCORN POPPER

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

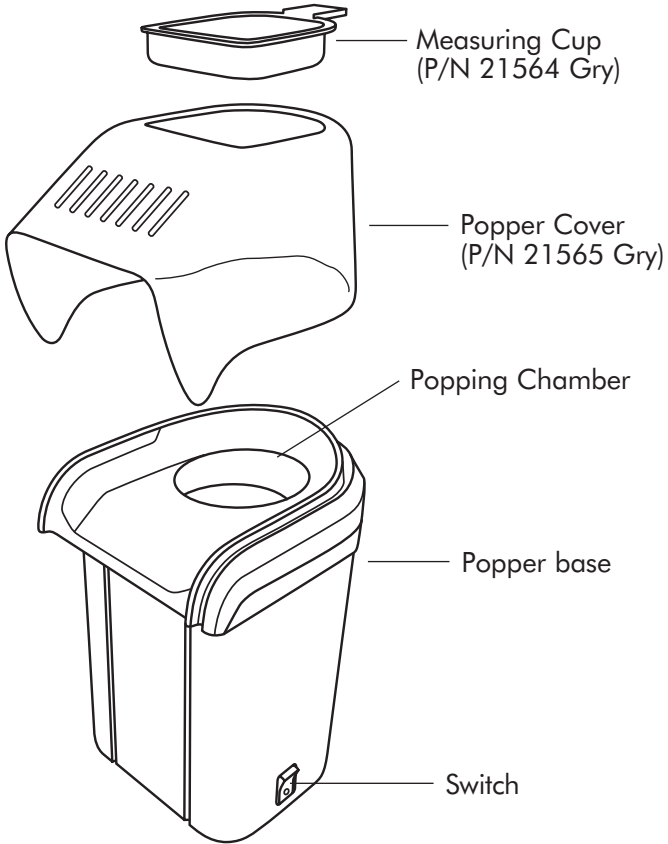

BEFORE USING FOR THE FIRST TIME

1. Wash popper cover and measuring cup in warm, soapy water; rinse and dry thoroughly.

OPERATING INSTRUCTIONS

1. Remove popper cover and measuring cup from popper base. Fill the measuring cup with kernels and add to popping chamber. Do not overfill measuring cup - kernels should be level in measuring cup. Measuring cup = $\frac{1}{2}$ cup. Never add more than $\frac{1}{2}$ cup of popcorn kernels to the popping chamber at one time. Do not put any other ingredients such as oil, shortening, butter, margarine, salt and sugar into popping chamber as damage will occur.
2. Place popper cover onto base, positioning bottom edge of cover into groove of base. Place measuring cup onto popper cover. Never pop corn without popper cover and measuring cup in position.
3. Plug unit into a 120V ~ 60 Hz outlet and press the On/Off Switch to On (I). *Note: The measuring cup may be used to melt butter while the unit pops the kernels. Never add more than $\frac{1}{2}$ cup of butter to the measuring cup. For best results, cut butter into $\frac{1}{4}$ slices before placing in measuring cup. When using the measuring cup to measure kernels, always wash and dry the measuring cup after each batch of popcorn when melting butter.*
4. Press the On/Off Switch to Off (O) and unplug the unit when popping is complete. Do not operate this unit empty. Due to variances in the popcorn type, freshness and moisture content, some popped or unpopped kernels may remain in the chamber after the popping has stopped. To prevent scorching, unplug the popper without waiting for this corn to clear the unit.

CAUTION: AS KERNELS MAY CONTINUE TO POP EVEN AFTER UNIT IS UNPLUGGED, MAKE SURE ALL POPPING HAS STOPPED BEFORE REMOVING COVER.

CAUTION: USE OVEN MITTS WHEN HANDLING HOT SURFACES OF THE UNIT. TO AVOID TEMPORARY MALFORMATION OF THE COVER, ALLOW IT TO COOL ON THE UNIT BASE AFTER POPPING.

5. For additional batches, unplug unit. Make sure the popping chamber is empty. Carefully remove excess popcorn or left over unpopped kernels. Then repeat steps 1 through 5. *Note: When popping more than one or two batches of corn, allow the popper to cool down for at least 10 minutes.*

HELPFUL HINTS

1. This popcorn popper is designed to pop regular and premium brands of popcorn. Try different brands to find the one you like best. Yellow kernels generally pop larger than white. One half cup unpopped kernels will yield approximately 3 quarts of popcorn.
2. Always use fresh popcorn. Stale or dried-out popcorn pops poorly and may cause scorching or smoking.
3. Carefully select the bowl you will be using to collect popped corn. A metal bowl may become very hot to the touch due to the flow of hot air from the chute and must be handled carefully. It will, however, tend to keep the popcorn warm. If a plastic bowl is used, be certain it can withstand the heat caused by the warm air flow without melting.
4. Never use more than $\frac{1}{2}$ cup of kernels per batch.
5. Never add salt, sugar or other flavorings into popping chamber.
6. This is an AIR corn popper. Popcorn will pop by circulating hot air. Oils, fats or shortening are not needed and should never be used. Do not use microwave popcorn in this appliance.

USER MAINTENANCE INSTRUCTIONS

1. Unplug and allow unit to cool before cleaning.
2. Wash the popper cover and measuring cup in warm, soapy water. Rinse and dry thoroughly. Do not wash in dishwasher. Wipe the corn popper base, including the popping chamber, clean and dry with a soft dry cloth. Never immerse the corn popper base in water or other liquid. Do not scour surfaces with steel wool or abrasive cleaners.
3. Store fully assembled with cover in place.

Any servicing requiring disassembly other than the above cleaning must be performed by a qualified appliance repair technician.

LIMITED ONE-YEAR WARRANTY

Warranty Coverage: This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

Warranty Service: To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

To return the appliance, ship to:

ATTN: Repair Center
708 South Missouri Street
Macon, MO 63552 USA

To contact us, please write to, call, or email:

Consumer Relations Department
PO Box 7366
Columbia MO 65205-7366 USA
1-800-233-9054
E-mail:
consumer_relations@toastmaster.com

What Is Not Covered: This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

LIMITATION ON DAMAGES: THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website: www.maxim-toastmaster.com.

© 2003

P/N 61263

All Rights Reserved"

Printed in China

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>