

READ AND SAVE THESE INSTRUCTIONS

WARNING: A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instruction.



ToasterMaster®

Waffle Baker

Use and Care Guide Models 245 and 244S

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all instructions before using appliance.
- To reduce the risk of electrical shock, do not immerse the waffle baker in water or other liquids. See instructions for cleaning.
- This appliance not for use by children.
- Close supervision is necessary when this appliance is used near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not touch hot surfaces. Use handles with care.
- Do not operate any damaged appliance. Do not operate with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service center for examination, repair, electrical or mechanical adjustment.
- When using this appliance, provide 4 to 6 inches air space above,

behind, and on both sides for air circulation. Do not use on surfaces where heat may cause a problem.

- To reduce the risk of injury, use accessory attachments only if recommended by the appliance manufacturer.
- Do not use outdoors, or while standing in damp area.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oils or other hot liquids.
- Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

THIS PRODUCT FOR HOUSEHOLD USE ONLY.

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125V, and at least 13A., 1625 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

ELECTRIC POWER: If electric circuit is overloaded with other appliances, your waffle baker may not operate properly. The waffle baker should be operated on a separate electric circuit from other operating appliances.

USING YOUR WAFFLE BAKER

1. Before use, wipe cooking surface with a damp cloth and dry. Lightly coat grids with cooking oil and close lid. Condition the grids before each use and if waffles begin to stick.
2. Plug into 120 V ~ 50-60 Hz outlet. This unit may emit an odor and/or smoke during the first few uses from oils used in manufacturing. This

is normal for newly manufactured appliances.

3. After approximately 5 minutes, the indicator light will go off. Raise lid and pour in 1/3 cup batter ; close lid. Any waffle recipe or mix may be baked in waffle baker. The amount of batter may vary with the recipe or brand of mix.

The flexible hinge on the waffle baker permits the waffle to expand during cooking.

4. When the light goes off, gently lift lid to check color. If lid shows resistance to lifting, close top and watch for steaming to stop before checking again.
5. Remove waffle when browned using only plastic, nylon or wooden utensils.
6. When finished baking, unplug and cool before cleaning.

WAFFLES

flour	1 3/4 cups	egg yolks, beaten	3
baking powder	2 tsp	vegetable oil	1/3 cup
sugar	1 TBL	milk	1 1/2 cups
salt	1/2 tsp	egg whites, stiffly beaten	3

Sift together dry ingredients in mixing bowl. Combine egg yolks, oil and milk and stir into dry ingredients. Carefully fold in egg whites, do not over mix. Pour approximately 1/3 cup batter onto the preheated grid. Close and bake.

Yields approximately 10 waffles.

CLEANING INSTRUCTIONS

CAUTION:Unplug from electrical outlet before cleaning. Never immerse appliance in water. Allow waffle baker to cool before cleaning.

1. After each use, wipe cooking surface with a damp cloth and dry. To remove stubborn stains use a damp plastic pad or mesh puff and mild soap. Rinse with a damp cloth and dry. Do not use steel wool or coarse scouring pads.
2. The exterior finish should be cleaned with a non-abrasive cleaner and a soft, damp cloth.

Any servicing requiring disassembly other than the above cleaning must be performed by an authorized service center.

SERVICE INFORMATION

Please refer to warranty statement to determine if in-warranty service applies. This appliance must be serviced by a Toastmaster authorized service center. Consult your phone directory under "Appliances-Household-Small-Service and Repair," or call 1-800-947-3744.

If an authorized service center is not available locally, your appliance may be returned postage prepaid to our National Service Center at the address shown in the warranty statement.

Products must be adequately protected to avoid shipping damage. Surround your appliance with three inches of protective padding and include a note explaining the problem you have experienced. We recommend insuring your package. No C.O.D. shipments accepted.

ONE YEAR LIMITED WARRANTY

Toastmaster Inc. warrants this product, to original purchaser, for one year from purchase date to be free of defects in material and workmanship.

This warranty is the only written or express warranty given by Toastmaster Inc. This warranty gives you specific legal rights. You may have other rights which vary from state to state. ANY OTHER RIGHT WHICH YOU MAY HAVE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Defective product may be brought or sent (freight prepaid) to an authorized service center listed in the phone book, or to Service Department, Toastmaster Inc., 708 South Missouri St., Macon, MO 63552 for free repair or replacement at our option.

Your remedy does not include: cost of inconvenience, damage due to product failure, transportation damages, misuse, abuse, accident or the like, or commercial use. IN NO EVENT SHALL TOASTMASTER INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts, or allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

For information, write Consumer Claims Manager, at the Macon address. Send name, address, zip, telephone area code and daytime number, model, serial number, and purchase date.

KEEP DATED SALES RECEIPT FOR WARRANTY SERVICE.

Keep this booklet. Record the following for reference:

Date purchased _____ Model Number _____

Code Number (stamped on bottom) _____



Toastmaster Inc.

National Service Center

708 South Missouri St.

Macon, MO 63552

Telephone:

Consumer Service 1-800-947-3744

Parts 1-800-947-3745

Hours: 8:00 a.m. - 4:30 p.m. CST

This symbol on the product's nameplate
means it is Listed by
UNDERWRITERS LABORATORIES INC.



PART NO. 30724P02

Download from www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>