

# Pizzelle Maker

USE AND CARE GUIDE

MODELS TWB2PIZ, TWB2PIZCAN AND TWB2PIZT



**toastmaster®**

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- ◆ Read all instructions.
- ◆ Do not touch hot surfaces. Use handles or knobs. Use oven mitts or potholders.
- ◆ To protect against electric shock do not immerse cord, plug or appliance in water or other liquid.
- ◆ Close supervision is necessary when any appliance is used by or near children.
- ◆ Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- ◆ Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
- ◆ The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- ◆ Do not use outdoors.
- ◆ Do not let cord hang over edge of table or counter, or touch hot surfaces.
- ◆ Do not place on or near a hot gas or electric burner, or in a heated oven.
- ◆ Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- ◆ To disconnect, remove plug from wall outlet.
- ◆ Do not use appliance for other than intended use.

## SAVE THESE INSTRUCTIONS

For Household Use Only



# ADDITIONAL IMPORTANT SAFEGUARDS

**CAUTION HOT SURFACES:** This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

**CAUTION:** This appliance is hot during operation and retains heat for some time after turning off. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Do not place anything on top of the appliance while it is operating or while it is hot.

- ◆ All users of this appliance must read and understand this Use and Care Guide before operating or cleaning this appliance.
- ◆ The cord to this appliance should be plugged into a 120V AC electrical outlet only.
- ◆ If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
- ◆ Do not leave this appliance unattended during use.

## Short Cord Instructions

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.

## Polarized Plug

Some models have a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

# Grounded-Type Plug

Some models have a 3-prong grounded-type plug. This plug will only fit into an electrical outlet made for a 3-prong plug. This is a safety feature. If the plug should fail to fit the outlet, contact an electrician to replace the obsolete outlet. Do not attempt to defeat this safety feature.

# Electric Power

If the electric circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

# Conditioning Grids

The grid surfaces should be conditioned before each heating that follows a cleaning. To condition, lightly coat the grid surfaces with solid vegetable shortening. Do not use spray-on oil products. Plug into any 120 V ~ 60 Hz outlet. The red power-on light will come on and stay on during use. The green light comes on indicating that the unit is heating (for models TWB2PIZ and TWB2PIZCAN). Allow to preheat approximately 5 minutes. For model TWB2PIZT, the green light will come on when unit is preheated. The green light will continue to come on and go off during use. When the green light turns off, unit is preheated (for models TWB2PIZ and TWB2PIZCAN). The grids are ready to use.

To protect the premium quality non-stick surfaces, use only plastic, nylon or wooden utensils. Carefully follow suggested cleaning procedures. After a time, if pizzelles show signs of sticking, carefully recondition your unit.



# Using Your Pizzelle Maker

**CAUTION: Never place any part of appliance in water or other liquids.**

1. Before using your pizzelle maker for the first time, wipe the grids with a damp cloth to remove all dust and dry. Follow instructions for **CONDITIONING GRIDS**.
2. Unwrap the cord completely from unit, close lid and plug into 120 V ~ 60 Hz outlet. The red power light will come on and stay on during use. The green light will come on indicating that the unit is heating (for models TWB2PIZ and TWB2PIZCAN). Allow to preheat approximately 5 minutes. For model TWB2PIZT, the green light will come on when unit is preheated. The green light will continue to come on and go off during use. Initially, some smoking may occur. This is normal for newly manufactured appliances and will not occur after the first few uses. When preheated, the green light will turn off (for models TWB2PIZ and TWB2PIZCAN). The grids are ready to use.

**CAUTION: Appliance surfaces are hot during use.**

3. Raise lid and carefully drop approximately a heaping teaspoon of batter onto the center of each cookie section. Close the lid; do not latch. The green light will cycle on and off while maintaining proper cooking temperatures. While cooking, the red power on light will be on.
4. Allow to bake for 45-60 seconds. The exact baking time will be a matter of recipe, taste, and your preference for browning.
5. Gently lift the lid to check for doneness. If lid shows resistance to lifting, the cookies may not be quite done. Close lid and watch for steaming to stop before checking again. Remove cookies with the help of a plastic spatula.
6. When finished baking, unplug from the wall outlet and allow to cool before cleaning. See **CARE AND CLEANING**.

# Pizzelles

6 eggs	2 tsp baking powder
¼ cup vegetable oil	¼ tsp salt
¼ cup butter, softened	1½ tsp flavoring (anise, lemon, vanilla or almond extract)
1½ cups sugar	2-2½ cups flour
¼ cup shortening	

Blend ingredients together, adding one at a time. Drop approximately a heaping teaspoon of batter onto center of each cookie section. Close lid and allow to cook 45-60 seconds or until lightly brown. Allow to cool on a wire rack or towels. Dust with powdered sugar. Cookies may be served flat or rolled tightly into a cylinder. Cookies must be hot during rolling and held in shape until cool.

Makes 6 dozen.

## User Maintenance Instructions

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Contact a qualified appliance repair technician if the product requires servicing.

## Care and Cleaning

**CAUTION: Unplug from electrical outlet and allow to cool thoroughly before cleaning. Never immerse appliance in water or other liquids.**

1. Brush grids with clean, soft pastry brush or cloth.
2. Do not use steel wool or coarse scouring pads. Remove stubborn stains with a plastic mesh puff or pad. For best results, use only products with directions stating that it is safe for cleaning non-stick surfaces.
3. The exterior finish should be cleaned with a non-abrasive cleaner and a soft, damp cloth; dry thoroughly.
4. When finished cleaning, close grids, latch and wrap cord around the Cord Wrap. Stand on end for storage.



## LIMITED ONE-YEAR WARRANTY

**Warranty Coverage:** This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

**Warranty Service:** To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

**To return the appliance, ship to:**

ATTN: Repair Center  
708 South Missouri Street  
Macon, MO 63552 USA

**To contact us, please write to, call, or email:**

Consumer Relations Department  
PO Box 7366  
Columbia MO 65205-7366 USA  
1-800-233-9054  
E-mail:  
consumer\_relations@toastmaster.com

**What Is Not Covered:** This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

**LIMITATION ON DAMAGES:** THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

**DURATION OF IMPLIED WARRANTIES:** EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website: [www.maxim-toastmaster.com](http://www.maxim-toastmaster.com).

## Keep Dated Sales Receipts for Warranty Service.

Keep this booklet. Record the following for reference:

Date purchased \_\_\_\_\_

Model number \_\_\_\_\_


Date code (stamped on bottom) \_\_\_\_\_

**EVERYBODY EATS. It's a fact of life.**

**But sometimes preparing  
meals can become a chore.**

**That's why TOASTMASTER has been invited  
into millions of kitchens just like yours  
so we can HELP YOU MASTER your  
mixing, baking, grilling, toasting,  
brewing, heating and serving  
tasks WITH EASE AND STYLE.**

**The TOASTMASTER name stands for a  
CELEBRATION of INNOVATION designed  
to serve your life and keep you  
COOKIN' IN STYLE.**

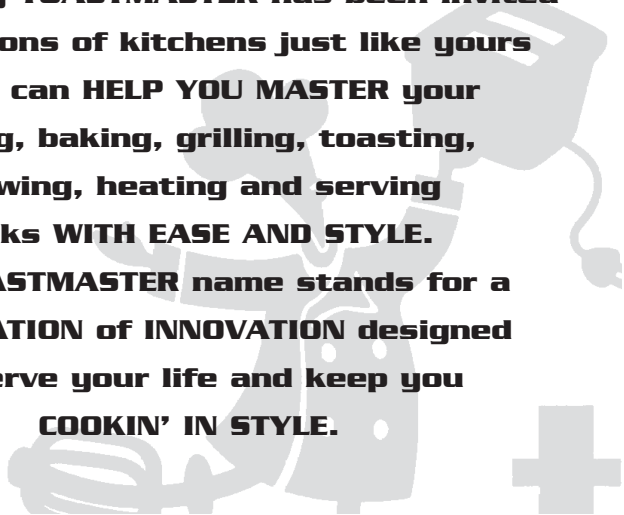





**toastmaster®**

- Bakes two 4- inch cookies in 45-60 seconds
- Choice of two gourmet cookie styles
- Cool-touch exterior
- Easy to clean non-stick surfaces
- Automatic temperature control



## Questions

Call toll free 1-800-947-3744

Monday – Friday, 8:00 a.m. -5:30 p.m. CST

[www.maxim-toastmaster.com](http://www.maxim-toastmaster.com)

**TWB2PIZ, TWB2PIZCAN AND TWB2PIZT**

Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>