

# Waffle Baker

USE AND CARE GUIDE

MODELS TWB2WREG, TWB2WREGCAN AND TWB2REGT



# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- ◆ Read all instructions.
- ◆ Do not touch hot surfaces. Use handles or knobs. Use oven mitts or potholders.
- ◆ To protect against electric shock do not immerse cord, plug or appliance in water or other liquid.
- ◆ Close supervision is necessary when any appliance is used by or near children.
- ◆ Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- ◆ Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
- ◆ The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- ◆ Do not use outdoors.
- ◆ Do not let cord hang over edge of table or counter, or touch hot surfaces.
- ◆ Do not place on or near a hot gas or electric burner, or in a heated oven.
- ◆ Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- ◆ To disconnect, remove plug from wall outlet.
- ◆ Do not use appliance for other than intended use.

## SAVE THESE INSTRUCTIONS

For Household Use Only



# ADDITIONAL IMPORTANT SAFEGUARDS

**CAUTION HOT SURFACES:** This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

**CAUTION:** This appliance is hot during operation and retains heat for some time after turning off. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Do not place anything on top of the appliance while it is operating or while it is hot.

- ◆ All users of this appliance must read and understand this Use and Care Guide before operating or cleaning this appliance.
- ◆ The cord to this appliance should be plugged into a 120V AC electrical outlet only.
- ◆ If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
- ◆ Do not leave this appliance unattended during use.

## Short Cord Instructions

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.

## Polarized Plug

Some models have a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

# Grounded 3-Conductor Plug

Some models have a 3-prong grounded-type plug. This plug will only fit into an electrical outlet made for a 3-prong plug. This is a safety feature. If the plug should fail to fit the outlet, contact an electrician to replace the obsolete outlet. Do not attempt to defeat this safety feature.

## Electric Power

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

## Conditioning Grids

The grid surfaces should be conditioned before each heating that follows a cleaning. To condition, lightly coat the grid surfaces with solid vegetable shortening. **Do not use spray-on oil products.** Plug into any 120 V ~ 60 Hz outlet. The red power on light will come on and stay on during use. The green light will come on indicating that the unit is heating (for models TWB2WREG and TWB2WREGCAN). Allow to preheat approximately 5 minutes. For model TWB2REGT, the green light will come on when unit is preheated. The green light will continue to come on and go off during use. When the green light turns off, unit is preheated (for models TWB2WREG and TWB2WREGCAN). The grids are ready to use.

To protect the premium quality non-stick surfaces, use only plastic, nylon or wooden utensils. Carefully follow suggested cleaning procedures. After a time, if waffles show signs of sticking, carefully recondition your unit.



# Using Your Waffle Baker

**CAUTION: Never place any part of appliance in water or other liquids.**

1. Before using your waffle baker for the first time, wipe the grids with a damp cloth to remove all dust and dry. Follow instructions for **CONDITIONING GRIDS**.
2. Unwrap the cord completely from unit, close lid and plug into 120 V ~ 60 Hz outlet. The red power light will come on and stay on during use. The green light will come on indicating that the unit is heating (for models TWB2WREG and TWB2WREGCAN). Allow to preheat approximately 5 minutes. For model TWB2REGT, the green light will come on when unit is preheated. The green light will continue to come on and go off during use. Initially, some smoking may occur. This is normal for newly manufactured appliances and will not occur after the first few uses. When preheated, the green light will turn off (for models TWB2WREG and TWB2WREGCAN). The grids are ready to use.

**CAUTION: Appliance surfaces are hot during use.**

3. Raise lid and carefully pour approximately  $\frac{1}{2}$  cup of batter evenly onto lower grid. Close the lid; do not latch. The green light will cycle on and off while maintaining proper cooking temperatures. The amount of batter required may vary with recipe or brand of mix. Any waffle recipe or mix may be used. While cooking, the red power on light will be on.
4. Allow waffle to bake for 2-4 minutes. The exact baking time will be a matter of recipe, taste, and your preference for browning.
5. Gently lift the lid to check for brownness. If lid shows resistance to lifting, the waffle may not be quite done. Close lid and watch for steaming to stop before checking again. Remove waffle when browned using a plastic spatula. If a second waffle is desired, pour batter immediately and close lid.
6. When finished baking, unplug from the wall outlet and allow to cool before cleaning. See **CARE AND CLEANING**.

# Waffles

Measure dry ingredients into mixing bowl. Blend. Combine egg yolks and milk. Stir into dry ingredients. Stir in cooking oil. Carefully fold in egg whites. Do not over mix. Pour approximately ½ cup of batter onto the preheated, conditioned waffle grid. Close and bake.

1¾ cups all-purpose flour  
1 TBL. sugar  
½ tsp. salt  
2 tsp. baking powder

3 egg yolks, beaten  
1½ cups milk  
½ cup vegetable oil  
3 egg whites, beaten stiff

Makes about 4 waffles

## User Maintenance Instructions

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Contact a qualified appliance repair technician if the product requires servicing.

## Care and Cleaning

**CAUTION: Unplug from electrical outlet and allow to cool thoroughly before cleaning. Never immerse appliance in water or other liquids.**

- ◆ **Brush grids** with clean, soft pastry brush or cloth.
- ◆ Do not use steel wool or coarse scouring pads. Remove stubborn stains with a plastic mesh puff or pad. For best results, use only products with directions stating that it is safe for cleaning non-stick surfaces.
- ◆ The exterior finish should be cleaned with a non-abrasive cleaner and a soft, damp cloth, dry thoroughly.
- ◆ **When finished cleaning, close grids, latch and wrap cord around the Cord Wrap.** Stand on end for storage.



## LIMITED ONE YEAR WARRANTY

**Warranty:** This Toastmaster® product is warranted to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

**Warranty Coverage:** This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Implied Warranties:** ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

**Service and Repair:** Should the appliance malfunction, you should first call toll-free 1 (800) 947-3744 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number **TWB2WREG**, **TWB2WREGCAN** or **TWB2REGT** when you call.

**In-Warranty Service (USA):** For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization (1 800 947-3744).

**Out-of Warranty Service:** A flat rate charge by model is made for out-of-warranty service. **Include \$ 8.00 (U.S.)** for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

**For Products Purchased in the USA, but Used in Canada:** You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

**Risk During Shipment:** We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

**To return the appliance, ship to:**

Attn: Repair Center  
Toastmaster  
708 South Missouri Street  
Macon, MO 63552  
Email: [consumer\\_relations@toastmaster.com](mailto:consumer_relations@toastmaster.com)  
[www.Toastmaster.com](http://www.Toastmaster.com)

**To contact us, please write to or call:**

Toastmaster  
P.O. Box 6916  
Columbia, MO 65205-6916

**Limitation of Remedies:** No representative or person is authorized to assume for us any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and in no event shall we be liable for any incidental or consequential damages, losses or expenses. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**Legal Rights:** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

© 2003 Toastmaster Inc.  
All Rights Reserved

P/N 60928 Rev.01  
Printed in China

## Keep Dated Sales Receipts for Warranty Service.

Keep this booklet. Record the following for reference:

Date purchased \_\_\_\_\_

Model number \_\_\_\_\_

Date code (stamped on bottom) \_\_\_\_\_

EVERYBODY EATS. It's a fact of life.  
But sometimes preparing  
meals can become a chore.  
That's why TOASTMASTER has been invited  
into millions of kitchens just like yours  
so we can HELP YOU MASTER your  
mixing, baking, grilling, toasting,  
brewing, heating and serving  
tasks WITH EASE AND STYLE.  
The TOASTMASTER name stands for a  
CELEBRATION of INNOVATION designed  
to serve your life and keep you  
COOKIN' IN STYLE.







**toastmaster®**

- *Cool-touch case*
- *Non-stick grids*
- *Dual ready lights*
- *Automatic temperature control*



## **Questions**

Call toll free 1-800-947-3744

Monday – Friday, 8:00 a.m. - 5:30 p.m. CST

[www.toastmaster.com](http://www.toastmaster.com)

**TWB2WREG, TWB2WREGCAN AND TWB2REGT**

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>